

VOLVO V70 (08-) & S80 (07-)
WIRING DIAGRAM 2008



TP 39115202

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)

Warning!

Extra caution must be exercised when working on vehicles equipped with SRS/SIPS bag/IC in order to avoid:

1. Personal injuries when performing repair work.
2. Damage or malfunction of the SRS/SIPS bag/IC system.

Work involving the SRS/SIPS bag/IC systems or other components in the vehicle that may affect the SRS/SIPS bag/IC systems must always be performed by an authorized Volvo workshop.

In case of doubt, consult the SRS and SIPS bag/IC service manual.

Is the vehicle equipped with SRS/SIPS bag/IC?

Vehicles with SRS are most easily recognized by the letters SRS in the center of the steering wheel. If the vehicle also has a passenger side airbag, the letters SRS are stamped on the dashboard above the glove compartment. SRS vehicles from 1993 and onward also have explosive seat belt tensioners. SIPS bags are only installed on SRS vehicles from 1995 and onward. SIPS bag decals are located on the windshield and seat compartment. Vehicles with IC can be recognized by the letters IC on the C/D panel (4 door) or the B panel (5 door).

General recommendations

- Be especially careful when working on or around SRS, SIPS, and IC components.
- Make sure that no wires are pinched, frayed, or pierced.
- Never fit accessories by the sensors.
- Where applicable, work on the steering wheel, steering shaft, or steering gear must be done in accordance with the methods in the SRS section of VIDA.
- Certain components of the aforementioned systems must be grounded while working. Read the appropriate sections in VIDA.
- Install no accessories in the areas between the A and B-posts, the B and C-posts, and the C and D-posts.

Test terminal

Fuse in cargo compartment auxiliary fuse box

Changes implemented up to and including April 2007

Any changes made to the vehicle after this date are not included in the manual. If necessary, refer to service bulletins.

Volvo models are sold in versions adapted for different markets. These adaptations depend on factors such as legal requirements, taxation, and market demands.

This manual may therefore include illustrations and text that do not apply to the vehicles in your country.

Order number: 39115202

Replaces earlier publication 39115201 of Electronic Wiring Diagram (EWD)
TP 39118001. Also found on Electronic Wiring Diagram (EWD)
TP 39120002.

We retain the right to make modifications.

© Volvo Car Corporation

Table of Contents 1:3

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)	2
Explanations	7
Abbreviations	7
How to use the wiring diagrams 1:2	8
Electrical distribution 1:2	10
 Fuses	
Engine compartment electrical center F1-F7	12
Engine compartment electrical center F9-F21	13
Engine compartment electrical center F22-F34	14
Engine compartment electrical center F35-F38	15
Engine compartment electrical center F39-F44	16
Central Electronic Module (CEM) F1-F15	17
Central Electronic Module (CEM) F17-F28	18
Rear electrical center FA1-FA12	19
Distribution box in cargo compartment FB1-FB12	20
Rear electrical center FD1-FD7	21
Battery PF1-PF2	22
 Relays	
Relays in the engine compartment R2	23
Relays in the engine compartment R8-R9	24
Relays in the engine compartment R10-R13	25
Distribution box in cargo compartment RA1-RD1	26
Central Electronic Module (CEM)	27
 Ground connections	
Overview	28
31/1 - 31/7	29
31/10 - 31/15	30
31/47 - 31/66	31
31/67 - 31/84	32
31/88 - 31/95	33
31/96 - 31/TRM	34
31/INFOT - 31/AL	35
 Control modules	
Overview of locations	36
Overview of designations	37
Central electronic module (CEM) 1:3	38
Data communication high speed CAN	41
Midspeed CAN data communication, LHD	42
Midspeed CAN data communication, RHD	43
Data communication LIN 1:2	44
Data communication MOST	46
Steering Wheel Module (SWM)	47
 Group 23 Fuel system	
Engine management system, 5 Cyl. Turbo 1:2	48
Engine management system, 6 cyl. 1:2	50
Engine management system, 6-cyl. Turbo 1:2	52
Engine management system, 8 cyl. 1:2	54
Engine management system 5 Cyl. Diesel 1:3	56
Emission control 5 Cyl. Turbo	59
Emission control, 6 cyl.	60
Emission control, 8 cyl.	61
 Group 26 Cooling system	
Cooling fan, 5 cyl. & 6 cyl.	62
Cooling fan, 5 Cyl. Diesel	63
Cooling fan, 8 cyl.	64
 Group 27 Engine controls	
Cruise control, 5 Cyl. & 6 Cyl.	65
Cruise control, Diesel	66
Cruise control, 8 Cyl.	67
 Group 32 Alternator and voltage regulator	
Power supply	68
 Group 33 Starting system	
Starting system	69
 Group 35 Lighting	
High and low beam	70
High and low beam (Bi-Xenon)	71
Beam length adjustment, manual	72
Beam length adjustment, automatic (Bi-Xenon)	73
Running/parking lights, Tail lights V70	74
Running/parking lights, Tail lights S80	75
Running/parking lights, Tail lights (Bi-Xenon) V70	76
Running/parking lights, Tail lights (Bi-Xenon) S80	77
Fog lights V70	78
Fog lights S80	79
Brake light V70	80
Brake light S80	81
Reversing lights V70	82
Reversing lights S80	83
Follow-me-home lighting, LHD	84
Follow-me-home lighting, RHD	85
Interior lighting, LHD 1:2	86
Interior lighting, RHD 1:2	88
Active headlights	90
Lighting in sill moldings	91
Auxiliary lights	92

Table of Contents 2:3

Group 36 Additional electrical equipment

Rain sensor.....	93
Direction indicator and Hazard warning flashers	
LHD V70	94
Direction indicator and Hazard warning flashers	
LHD S80	95
Direction indicator and Hazard warning flashers	
RHD V70.....	96
Direction indicator and Hazard warning flashers	
RHD S80.....	97
Windshield wiper/washer	98
High-pressure headlight washer	99
Wiper/washer rear window	100
Horn	101
Keyless vehicle 1:2	102
Anti-theft alarm	104
Parking assistance.....	105
Collision warning with brake servo	106
Tire pressure warning (TPMS).....	107

Group 37 Wiring and fuses

Diagnostics system.....	108
12V outlet	109
Tow hitch cable harness, 4-pin V70.....	110
Tow hitch cable harness, 4-pin S80.....	111
Tow hitch cable harness, 7-pin V70.....	112
Tow hitch cable harness, 7-pin S80.....	113
Tow hitch cable harness, 13-pin V70.....	114
Tow hitch cable harness, 13-pin S80.....	115
Accessory USB unit (AUU).....	116

Group 38 Instruments

Seat belt reminder	117
Driver information module.....	118

Group 39 Other

Audio Premium 1:3	119
Audio 1:2	122
Cellular phone 1:2.....	124
Bluetooth phone system	126
Bluetooth Handsfree	127
Multimedia & Traffic information	128
Rear seat entertainment	129
Satellite radio.....	130
Parking camera.....	131
Navigation system, portable	132

Group 43 Transmission

M66 transmission.....	133
Automatic transmission TF-80SC AWD.....	134
Differential Electronic Module (DEM).....	135

Group 55 Parking brake

Electronic parking brake	136
--------------------------------	-----

Group 59 Brake system

Brake control system & DSTC	137
-----------------------------------	-----

Group 64 Steering

Electronic power steering.....	138
--------------------------------	-----

Group 76 Shock absorbers

Four-C	139
--------------	-----

Group 83 Doors and openings

Central locking, front doors, LHD.....	140
Central locking, front doors, RHD	141
Central locking, rear doors.....	142
Central locking, trunk lid V70	143
Central locking, trunk lid S80	144
Central locking, fuel filler flap	145
Signal receiver, central locking	146
Front door power windows, LHD.....	147
Front door power windows, RHD	148
Rear door power windows	149
Power sunroof.....	150

Group 84 Exterior decorative elements etc.

Power door mirrors, LHD	151
Power door mirrors, RHD.....	152
Heated door mirrors, LHD.....	153
Heated door mirrors, RHD	154
Blind spot information system LHD.....	155
Blind spot information system RHD	156
Rear window defroster.....	157

Group 85 Interior equipment

Power driver's seat with memory function, LHD	158
Power driver's seat with memory function, RHD.....	159
Power passenger seat, LHD	160
Power passenger seat, RHD	161
Heated power front seats with fans.....	162
Heated power front seats without fans.....	163
Electrically heated rear seat.....	164

Table of Contents 3:3

Group 87 Climate control system	
Climate control system PTC elements.....	165
Climate control system 5, 6 & 8 cyl. 1:2.....	166
Climate control system 5 Cyl. Diesel 1:2	168
Parking heater, auxiliary heater	170
Parking heater, remote start	171
Refrigeration box rear seat.....	172
Group 88 Internal equipment	
Automatic anti-dazzle rearview mirror	173
Supplemental Restraint System (SRS) 1:2.....	174
Electrically adjustable head restraint	176
Remote garage door opener.....	177
Connectors	178
Branching points	209
Cable harness routing in vehicle	
Engine harness, 5 cyl.	225
Engine harness, 6 cyl.	225
Engine harness, 6 cyl. Turbo	226
Engine harness, 8 cyl.	226
Engine harness, Diesel.....	227
Harness engine compartment.....	228
Dashboard harness, LHD	229
Dashboard harness, RHD.....	230
Harness Floor, LHD S80.....	231
Harness Floor, RHD S80	232
Harness floor, LHD V70	233
Harness floor, RHD V70	234
Harness infotainment, LHD S80	235
Harness infotainment, RHD S80.....	236
Harness Infotainment, LHD V70	237
Harness Infotainment, RHD V70.....	238
Harness ceiling, S80	239
Harness ceiling, V70	239
Harness center console	240
Harness tunnel.....	240
Harness front door, left	241
Right front door harness	241
Harness rear door, left	242
Right rear door harness	242
Harness trunk lid/tailgate, S80	243
Harness trunk lid/tailgate, V70	243
Harnesses rear axle.....	244
Component illustrations	245
Index 1:2	303
List of components 1:7	305

Explanations

Abbreviations

Groups

Group 23	= Fuel system
Group 26	= Cooling system
Group 27	= Engine controls
Group 32	= Alternator and voltage regulator
Group 33	= Starting system
Group 35	= Lighting
Group 36	= Additional electrical equipment
Group 37	= Wiring and fuses
Group 38	= Instruments
Group 39	= Other
Group 43	= Transmission
Group 59	= Brake system
Group 64	= Steering
Group 83	= Doors and openings
Group 84	= Exterior decorative elements etc.
Group 85	= Interior equipment
Group 87	= Climate control system
Group 88	= Internal equipment

Ignition switch symbols

X	= Accessories (audio position)
S	= Powered upon insertion of key
15	= Contact remains connected during start
15I	= Contact is broken while starting
30	= Constant power from the battery
50	= Start

Countries/Markets

A	= Austria
AUS	= Australia
B	= Belgium
CDN	= Canada
CH	= Switzerland
D	= Germany
DK	= Denmark
E	= Spain
EU/OS	= Markets outside USA and Canada
FIN	= Finland
GB	= Great Britain
ISR	= Israel
J	= Japan
KOR	= Korea
N	= Norway
NL	= Netherlands
S	= Sweden
USA	= United States of America
WEU	= Western Europe

Other

ACC	= Adaptive Cruise Control
AUTO	= Automatic transmission
BLIS	= Blind spot information system
CAN	= CAN communication
DPY	= Display
ECC	= Electronic climate control system
ETA	= Electronic throttle actuator
GDL	= Gas discharge lamp
HISPEED	= High speed data bus
IR	= Infrared sensor
LIN	= LIN communication
LH	= Left-hand side
LHD	= Left-hand drive
MAN	= Manual transmission
MEMORY	= Memory driver's seat
MIDSPEED	= Midspeed data bus
MMS	= Mass movement sensor
PETROL	= Gasoline
RH	= Right-hand side
RHD	= Right-hand drive
SCR	= Screening
SRS	= Airbag
T	= Turbo engine
W/O	= Without
2WD	= Two wheel drive
5CYL, I5	= 5-cylinder engine
6CYL, I6	= 6-cylinder engine
8CYL, V8	= 8-cylinder engine

Colors

BK, SB	= Black
BN	= Brown
BU, BL	= Blue
GN	= Green
GY, GR	= Gray
LGN	= Light Green
NL	= Natural
OG, OR	= Orange
PK, P	= Pink
RD, R	= Red
VT, VO	= Violet
WH, W	= White
YE, Y	= Yellow

How to use the wiring diagrams 1:2

The descriptions below apply in general to all wiring diagram manuals, although not all sections are necessarily contained in this manual.

A. Component designation

Every component has a component designation that consists of two parts.

The first part is a type number that describes the type of component in question, for example 3/xx.

The second part of the designation is a serial number, for example x/2.

Combined these give a component designation, for example 3/2.

At the end of the manual is a list of components, where, with the help of the component designation, you can read off the name of the component, for example, 3/2 = light switch.

List of type numbers

The list shows which type of component that respective type numbers refer to, for example, 3/x = switch, 6/x = electric motor, etc.

- 1 Battery
- 2 Relay
- 3 Switch
- 4 Control module
- 5 Driver Information Module
- 6 Electric motor
- 7 Sensor
- 8 Actuator
- 9 Heating element
- 10 Light
- 11 Fuse
- 15 Electrical distribution rail/box
- 16 Audio
- 17 Service/diagnostics
- 18 Contact reel
- 19 Meter
- 20 Ignition component/shunt
- 27 Optics
- 31 Ground connection
- 73 Branching point
- 74 Connector

B. Branching points

The wiring diagrams contain numbered branching points, for example 73/5035.

This manual contains a section with a list of branching points. This list shows all the components which are connected to each branching point.

The location of the branching points is shown in the "Cable harness routing in vehicle" section.

C. Connectors

Connectors provide a bridge between two cable harnesses and are described in the "Connectors" section.

D. Electrical distribution

Operation of the fuses and relays is shown in the "Electrical distribution" section.

E. Data communication

Today's cars contain CAN, LIN and MOST networks that transfer information. Connections to these networks are not shown in their entirety in the respective wiring diagram. Complete information on CAN, LIN and MOST communication is found in the section "Control modules".



F. Abbreviations

A number of different abbreviations are used in the manual. These are explained in the section "Abbreviations".

G. Component location

The end of the manual contains a section that describes component appearance and location in numerical order.

How to use the wiring diagrams 2:2

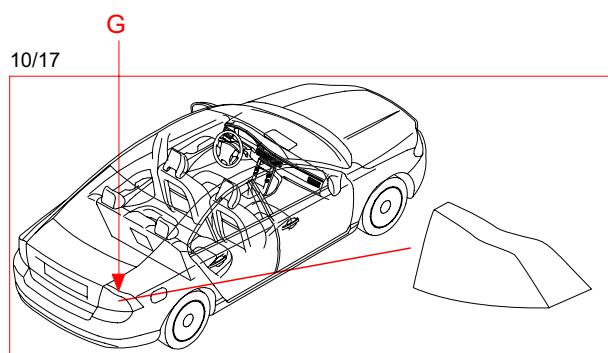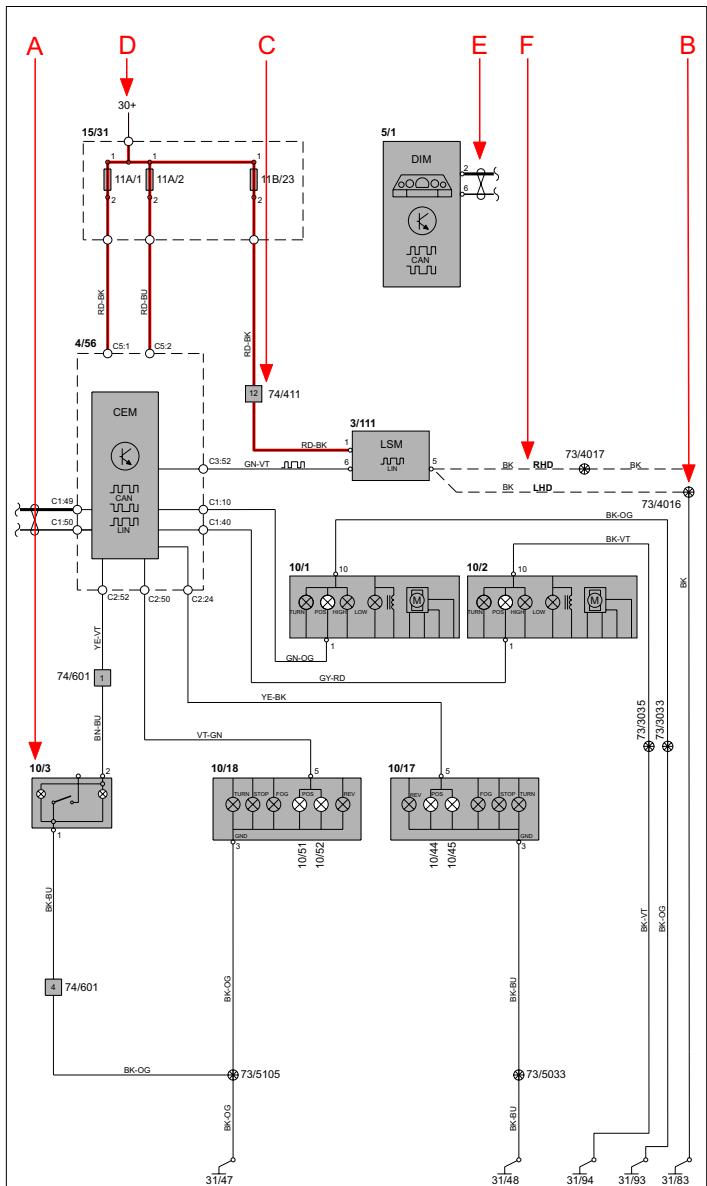


List of symbols

- = System voltage
- = Ground connection via cable
- = Ground connection in component/chassis
- = Screened wire
- = Branching point
- = Twisted cable
- = Electrical connection
- = Variant
- = CAN communication
- = CAN high data signal (CAN H)
- = CAN low data signal (CAN L)
- = LIN communication
- = LIN communication
- = DIN cable, coaxial cable, etc.
- = Data communication
- = CAN communication
- = MOST communication
- = MOST communication
- = Connection with distribution box
- = Further connection to...
- = Connector between cable harnesses
- = Connector connected in component


Electrical distribution 1:2

Overview, Electrical center and Cold zone in engine compartment

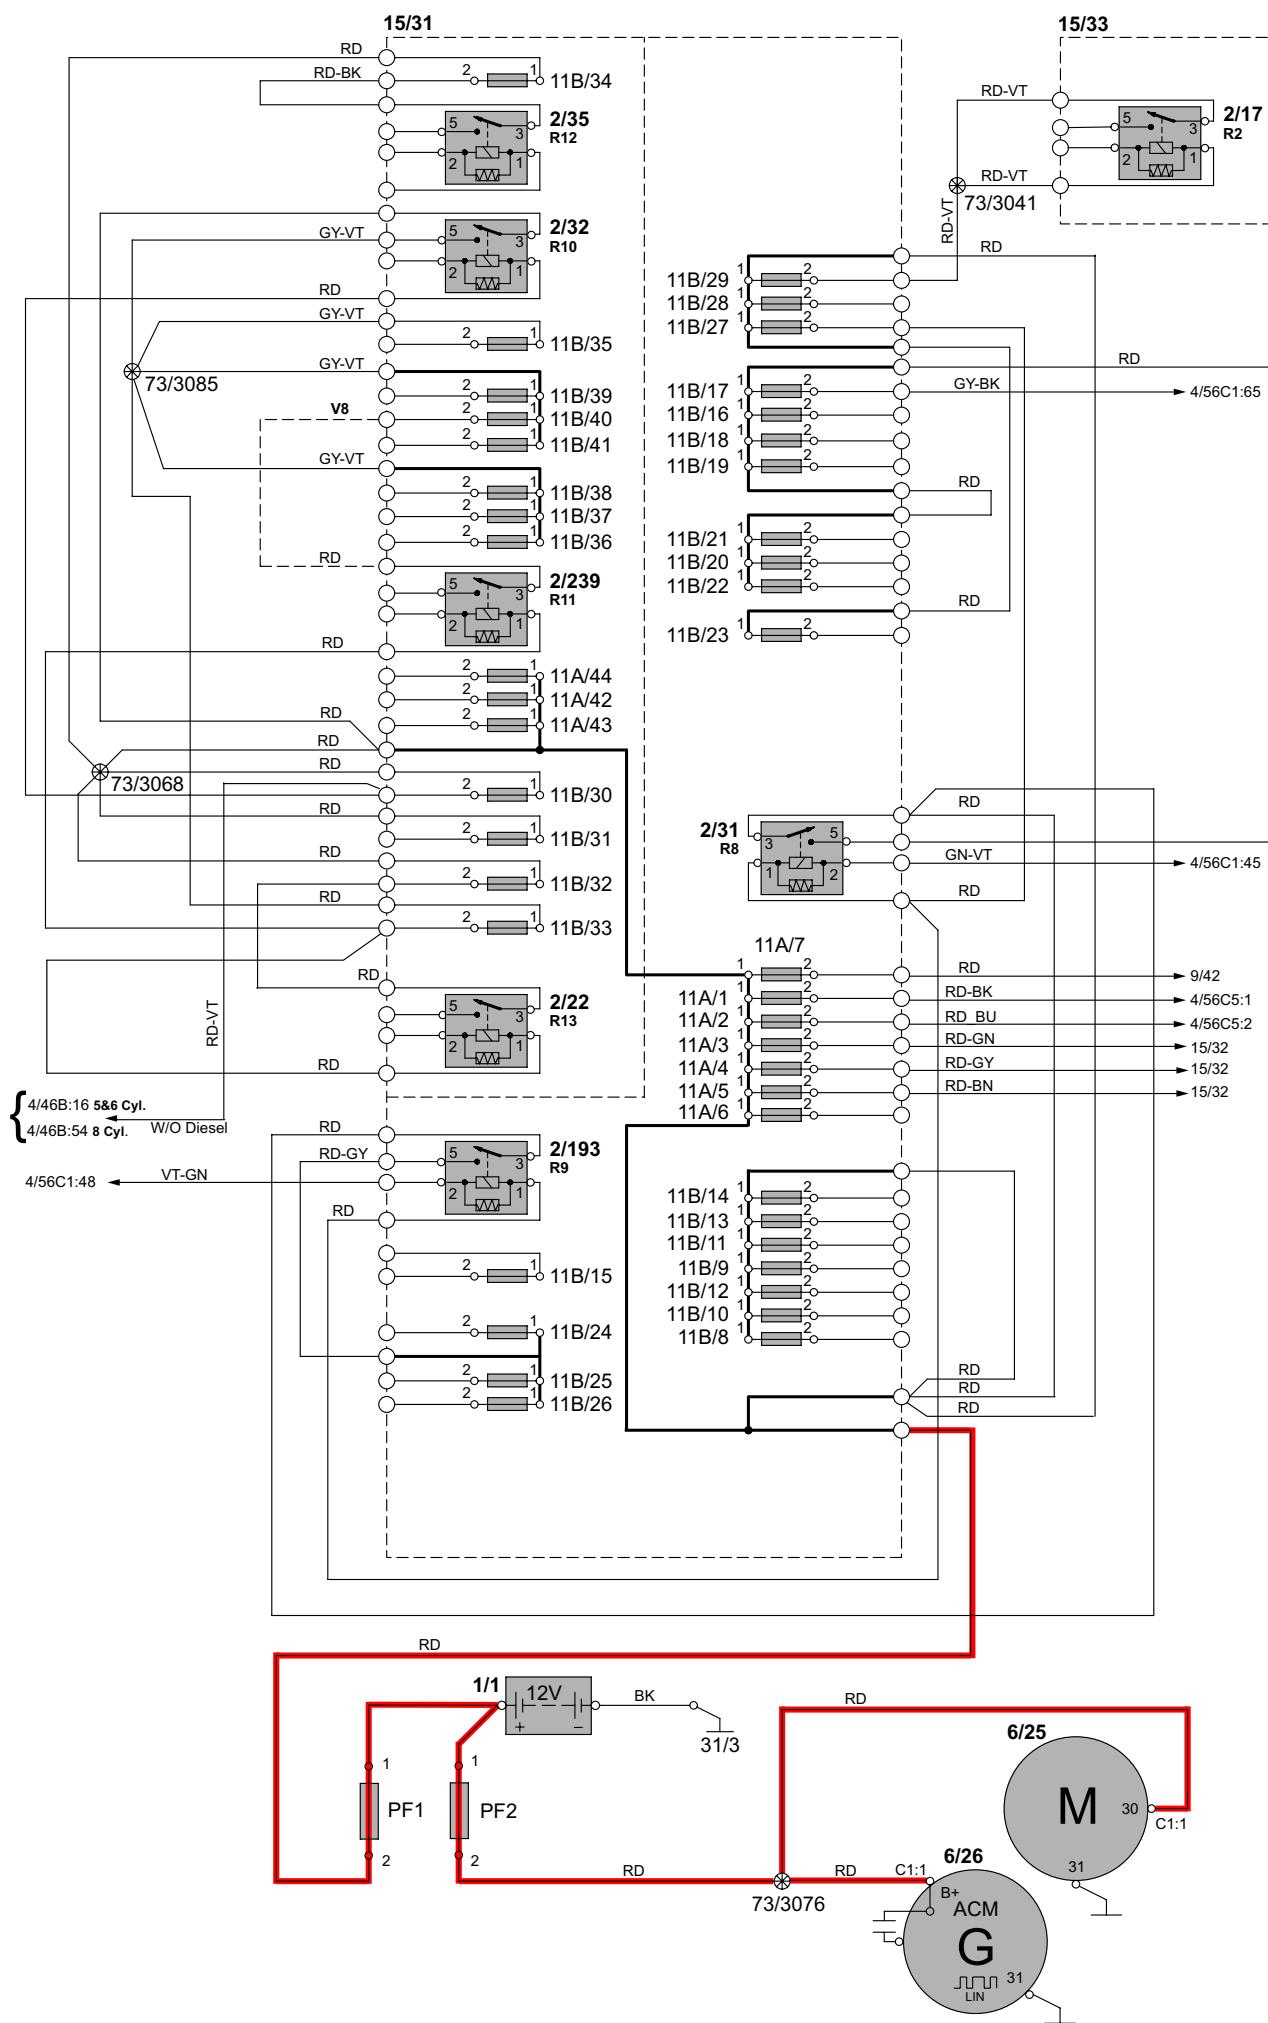


Electrical distribution 2:2

Overview, rear electrical center

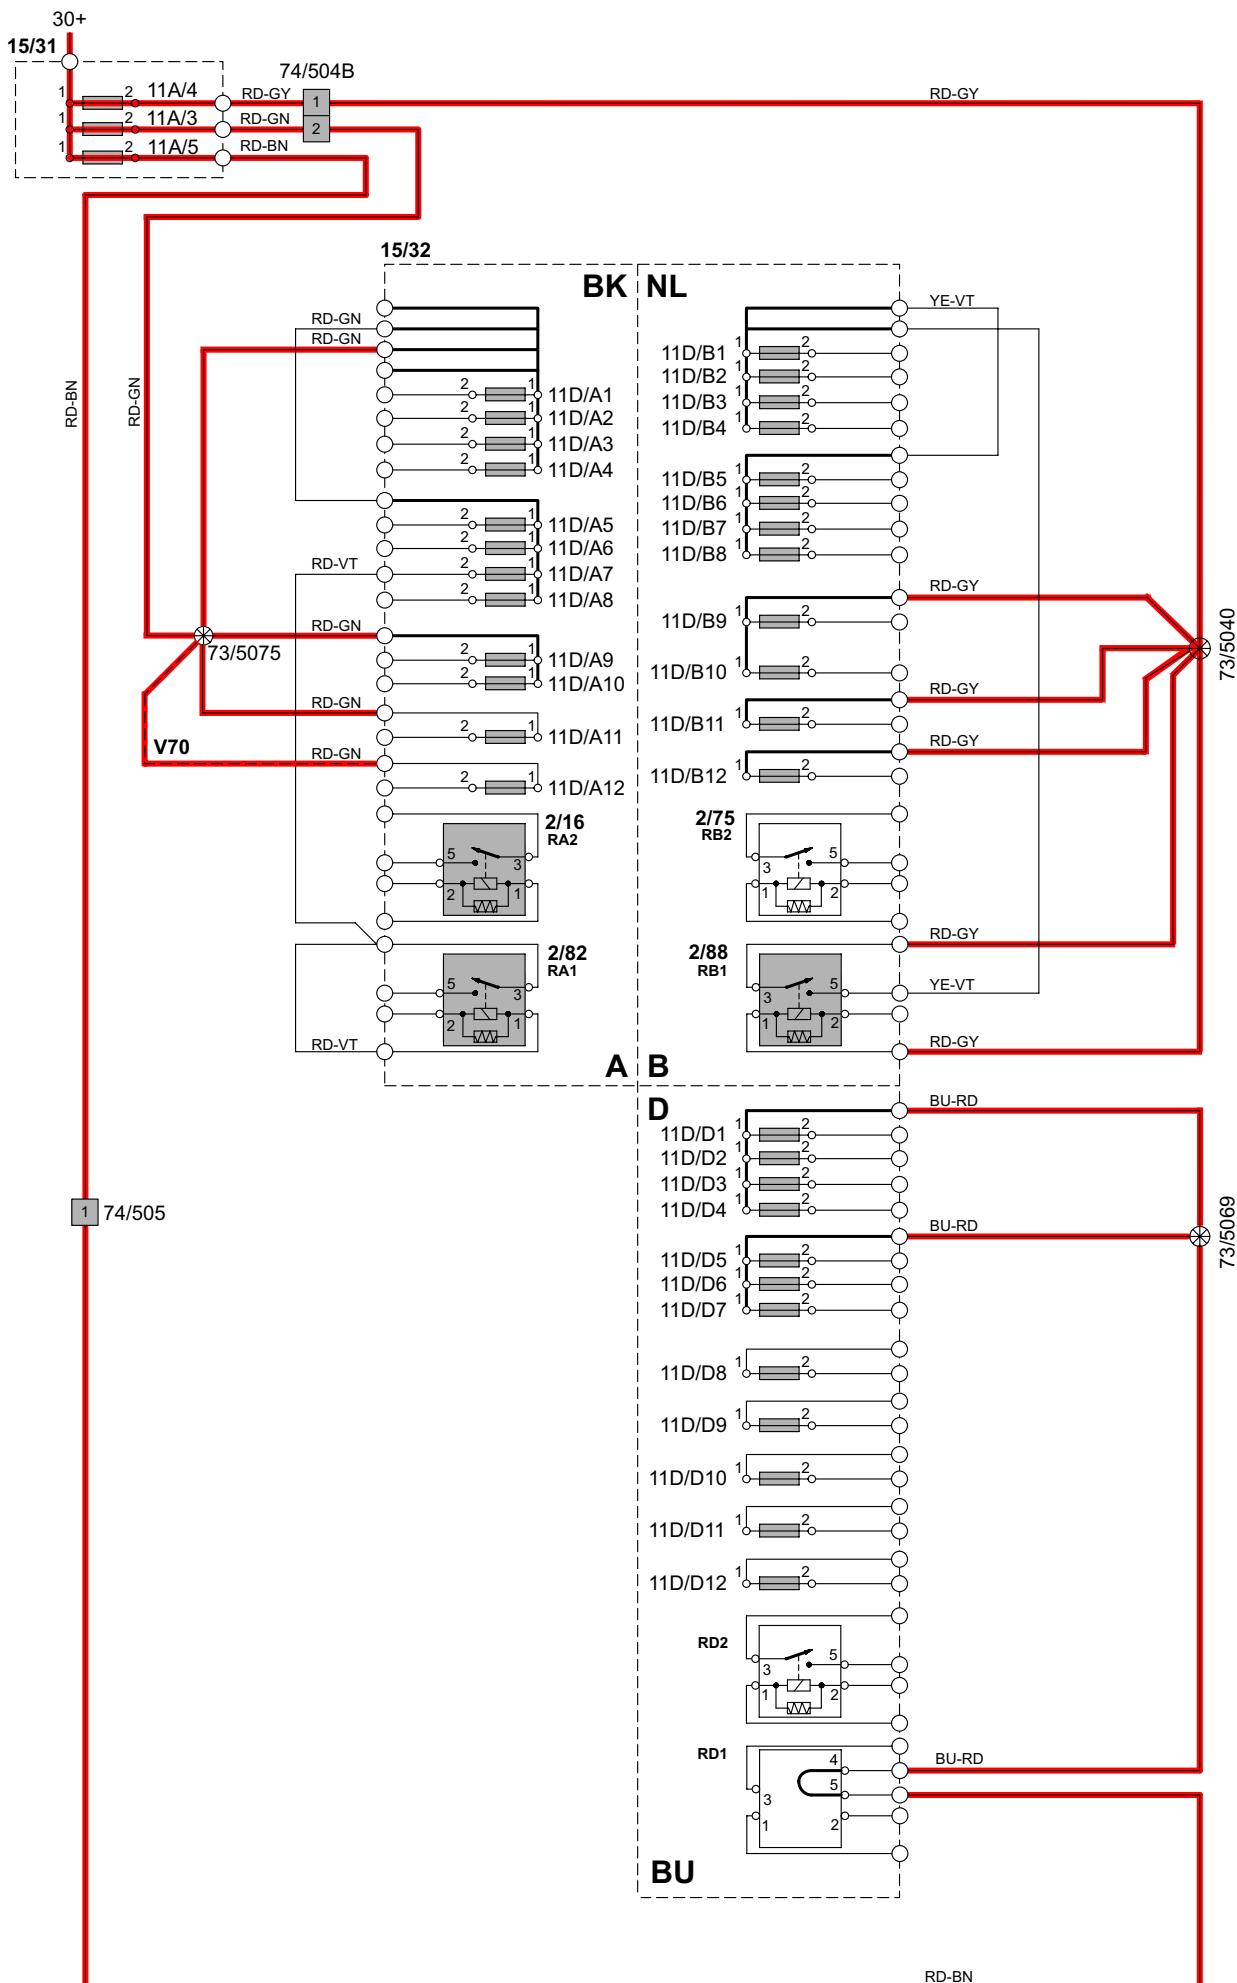

Fuses

Engine compartment electrical center F1-F7

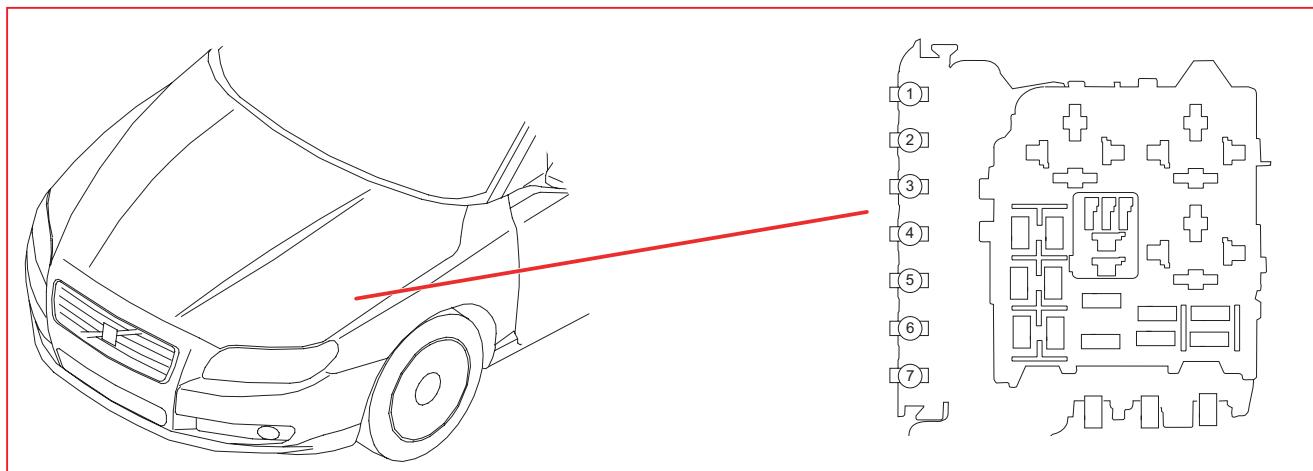


15/31 Engine compartment electrical center

No.	No.	Fuse function	via	A
F1	11A/1	Main fuse for fuses in CEM	4/56	50
F2	11A/2	Main fuse for fuses in CEM	4/56	50
F3	11A/3	11D/A1-11D/A12 Fuses in cargo compartment 15/32	-	60
F4	11A/4	11D/B1-11D/B12 Fuses in cargo compartment 15/32	-	60
F5	11A/5	11D/D1-11D/D7 Fuses in cargo compartment 15/32	-	50
F7	11A/7	9/42 PTC element	-	100

continues

Fuses

Engine compartment electrical center F9-F21

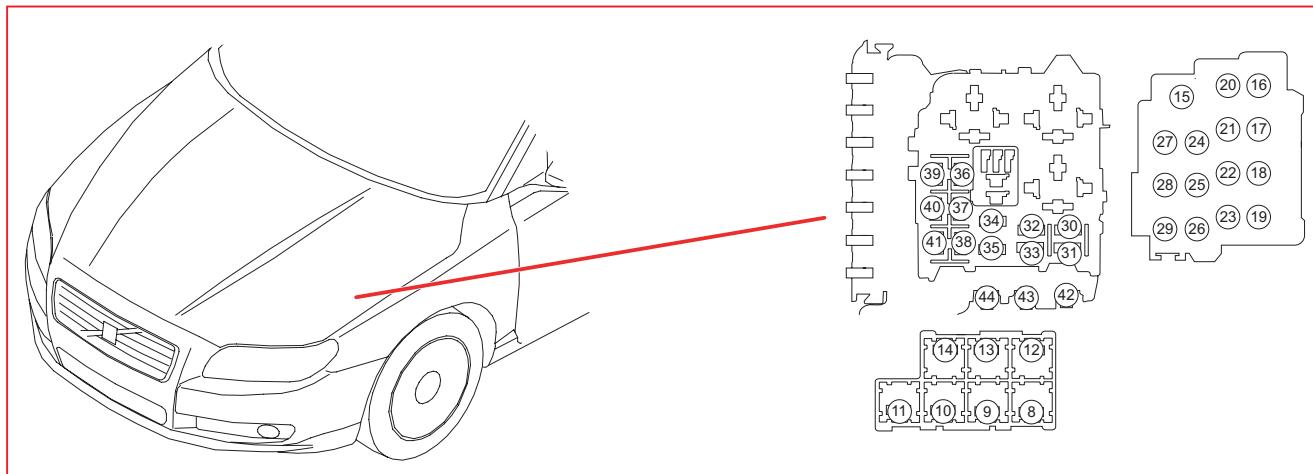


15/31 Engine compartment electrical center

No.	No.	Fuse function	via	A
F9	11B/9	6/1 Wiper Motor Module (WMM)	-	30
F10	11B/10	4/7 Combustion Preheater Module (CPM)		25
F11	11B/11	4/31 Fan control module 6/28 Motor, passenger compartment fan	-	40
F13	11B/13	4/16 Brake Control Module (BCM), pump	-	40
F14	11B/14	4/16 Brake Control Module (BCM), valves	-	20
F16	11B/16	4/118 Headlamp Control Module (HCM) 10/1 Left-hand front lamp housing 10/2 Right-hand front lamp housing	-	10
F17	11B/17	F3-F4 Fuses in the Central Electronic Module (CEM)	-	20
F18	11B/18	4/80 Forward Sensing Module (FSM) 7/203 Forward-aimed radar (FLR)	-	5
F19	11B/19	4/99 Electronic power steering control module	-	5
F20	11B/20	4/28 Transmission Control Module (TCM) 4/46 Engine Control Module (ECM) 4/9 Supplemental restraint system module (SRS)	-	10
F21	11B/21	9/43 Heated windshield washer nozzle, left 9/44 Heated windshield washer nozzle, right	-	10

continues

Fuses

Engine compartment electrical center F22-F34

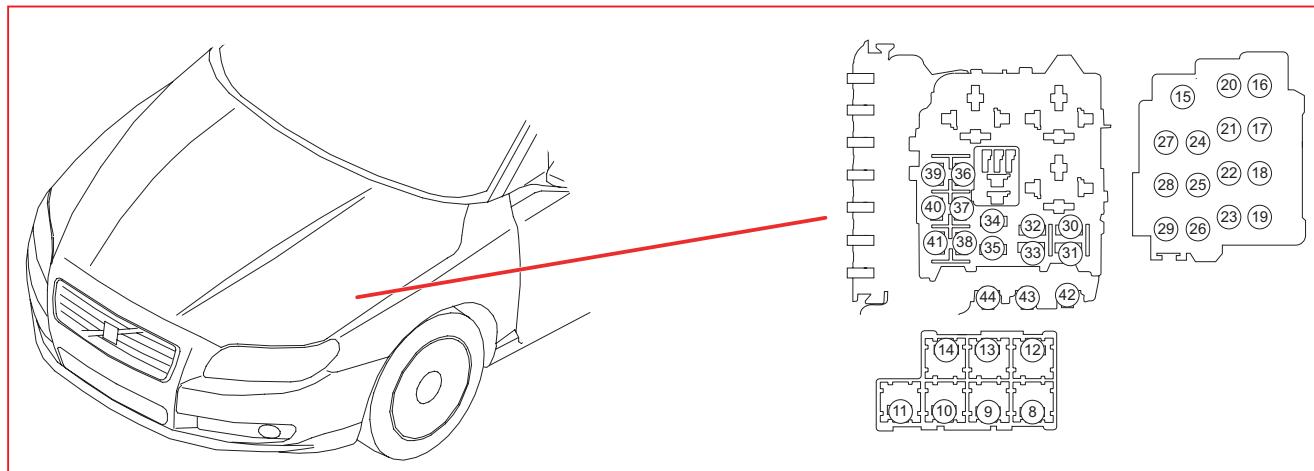


15/31 Engine compartment electrical center

No.	No.	Fuse function	via	A
F22	11B/22	6/114 Vacuum pump, 5 Cyl. T.	8/84	20
F23	11B/23	3/111 Light Switch Module (LSM)	-	5
F24	11B/24	6/104 High pressure headlight washer motor	-	15
F25	11B/25	9/1 Front 12V outlet 9/25 Rear 12V outlet 16/45 Navigation system portable 16/109 DVD player/control module	- - - -	15
F26	11B/26	3/117 Switch unit, dome light 4/33 Sunroof module 6/48 Damper Motor Module (DMM), recirculation 6/95 Damper Motor Module (DMM), temperature, left side 6/96 Damper Motor Module (DMM), temperature, right side 6/102 Damper Motor Module (DMM), defroster 6/103 Damper Motor Module (DMM), floor/ventilation 7/159 Air Quality Sensor (AQS) 16/159 Control module, mobile phone handsfree	- - 3/112 3/112 3/112 3/112 3/112 3/112 -	10
F27	11B/27	2/31 Relay, 15-feed 2/193 Relay, comfort functions	- -	5
F28	11B/28	2/64 Relay auxiliary lights 10/65 Auxiliary light, front right 10/69 Auxiliary light, front left	- 2/64 2/64	20
F29	11B/29	2/17 Relay, horn 16/10 Horn 1 16/11 Horn 2	- 2/17 2/17	15
F30	11B/30	2/32 Main relay, engine management system 4/46 Engine Control Module (ECM), not Diesel	- -	10
F31	11B/31	4/28 Transmission Control Module (TCM)	-	15
F32	11B/32	8/3 Electromagnetic clutch, climate control system	2/22	15
F33	11B/33	2/22 Relay, climate control system 2/239 Relay, coolant pump, 8 Cyl.	- -	5
F34	11B/34	6/25 Starter motor	2/35	30

continues

Fuses

Engine compartment electrical center F35-F38

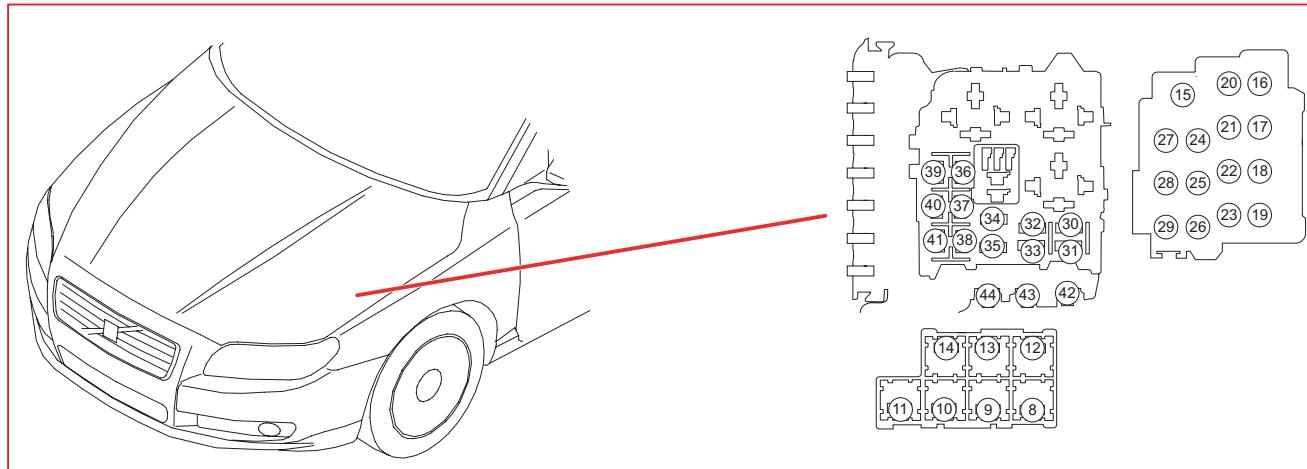


15/31 Engine compartment electrical center

No.	No.	Fuse function	via	A
F35	11B/35	20/3-8 Spark plug and ignition coil, gasoline 20/12-13 Spark plug with ignition coil, 8 cyl. 20/22-26 Glow plug, diesel	- - 4/109	20 10
F36	11B/36	6/120 Throttle body motor 4/46 Engine Control Module (ECM), 6, 8 Cyl., & Diesel 6/118 Regulator motor, swirl throttle, 5 Cyl., T., & Diesel 6/120 Throttle body motor, 5 Cyl., Diesel 8/111 Control valve, fuel flow 8/98 Control valve, fuel pressure, 5 Cyl. T., & Diesel	4/46 - 4/46 4/46 4/46 4/46	10 15
F37	11B/37	4/46 Engine Control Module (ECM), 6 Cyl., & Diesel 8/6-11 Injectors 8/115 Injector 8/116 Injector 7/17 Mass air flow sensor (MAF)	- - - - -	15
F38	11B/38	8/3 Electromagnetic clutch climate control system, 5 Cyl. T. 8/28 Turbocharger control valve, 5 Cyl. T. 8/81 Solenoid, variable valve timing, exhaust, 5 Cyl. T. 8/117 Solenoid, variable valve timing, intake, 5 Cyl. T. 6/143 Regulator motor, turbo, 5 Cyl., T., Diesel 8/3 Electromagnetic clutch climate control system, 5 Cyl. T. Diesel 8/113 Bypass valve, EGR cooling, 5 Cyl. T., Diesel 8/120 EGR valve, 5 Cyl., Diesel 4/46 Engine Control Module (ECM), 6 Cyl. 6/139 Upper actuating motor, intake manifold, 6 Cyl. 6/140 Lower actuating motor, intake manifold, 6 Cyl. 8/3 Electromagnetic clutch climate control system, 6 Cyl. 8/117 Solenoid, variable valve timing, intake, 6 Cyl. 8/125 Solenoid front cam profile, 6 Cyl. 8/126 Solenoid rear cam profile, 6 Cyl. 4/46 Engine Control Module (ECM), 8 Cyl. 8/3 Electromagnetic clutch climate control system, 8 Cyl. 8/19 Solenoid, variable valve timing, intake, bank 2, 8 Cyl. 8/81 Solenoid, variable valve timing, exhaust, bank 2, 8 cyl. 8/117 Solenoid, variable valve timing, intake, bank 1, 8 Cyl. 8/118 Solenoid, variable valve timing, exhaust, bank 1, 8 Cyl.	- - - - - - - - - - - - - - - - - - - - - - - - - - - - -	10

continues

Fuses

Engine compartment electrical center F39-F44

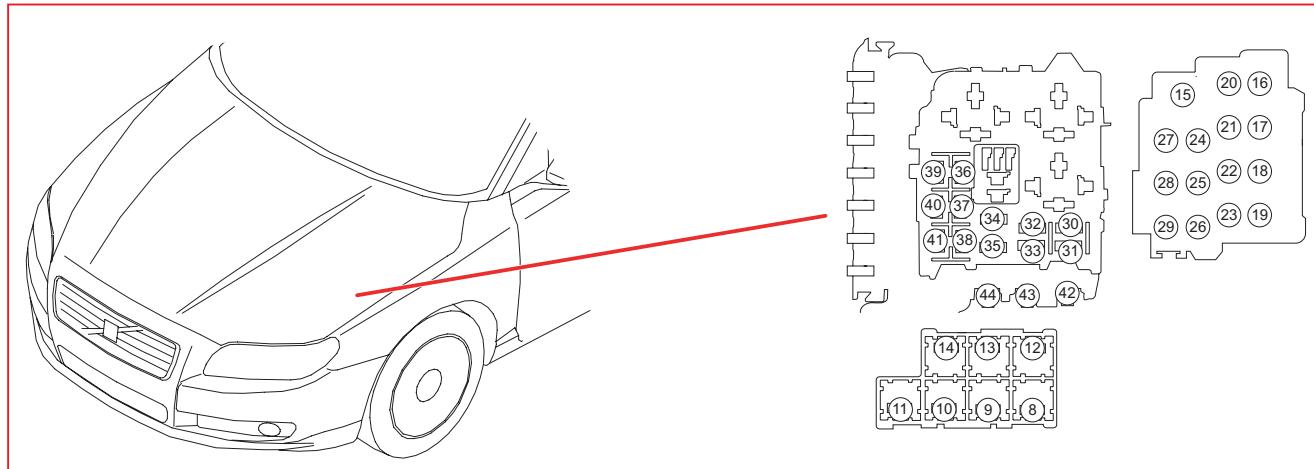


15/31 Engine compartment electrical center

No.	No.	Fuse function	via	A
F39	11B/39	7/15 Heated oxygen sensor, front, 5 Cyl. T.	-	15
		7/103 Rear heated oxygen sensor, 5 Cyl. T.	-	
		8/18 EVAP valve, 5-Cyl. T.	-	
		7/15 Front oxygen sensor, bank 1, 6 Cyl.	-	
		7/82 Rear oxygen sensor, bank 1, 6 cyl.	-	
		7/103 Front oxygen sensor, bank 2, 6 Cyl.	-	
		7/104 Rear oxygen sensor, bank 2, 6 cyl.	-	
		8/18 EVAP valve, 6 Cyl.	-	
		7/15 Front oxygen sensor, bank 2, 8 Cyl.	-	
		7/82 Front oxygen sensor, bank 1, 8 Cyl.	-	
		7/103 Rear oxygen sensor, bank 2, 8 Cyl.	-	
		7/104 Rear oxygen sensor, bank 1, 8 Cyl.	-	
		8/107 Variable intake valve, 8 Cyl.	-	
		8/118 Solenoid, variable valve timing, exhaust, bank 1, 8 Cyl.	-	
		7/15 Heated oxygen sensor, front, 5 Cyl. T., Diesel	-	
				10
F40	11B/40	9/32 PTC resistor crankcase ventilation 5 Cyl. T., Diesel	-	20
		9/38 Heated fuel filter, 5 Cyl. T., Diesel	-	
		9/47 PTC resistor crankcase ventilation in hose, Diesel	-	
		6/73 Coolant pump, 8 Cyl.	2/239	10
F41	11B/41	6/67 Fuel leakage control pump, not Diesel & 5-Cyl., T.	-	5
F42	11A/42	20/22-26 Glow plug	4/109	70
F43	11A/43	4/121 Control module cooling fan, not 5 Cyl. T.	-	50
F44	11A/44	4/71 Cooling fan control module	-	60

Fuses

Central Electronic Module (CEM) F1-F15

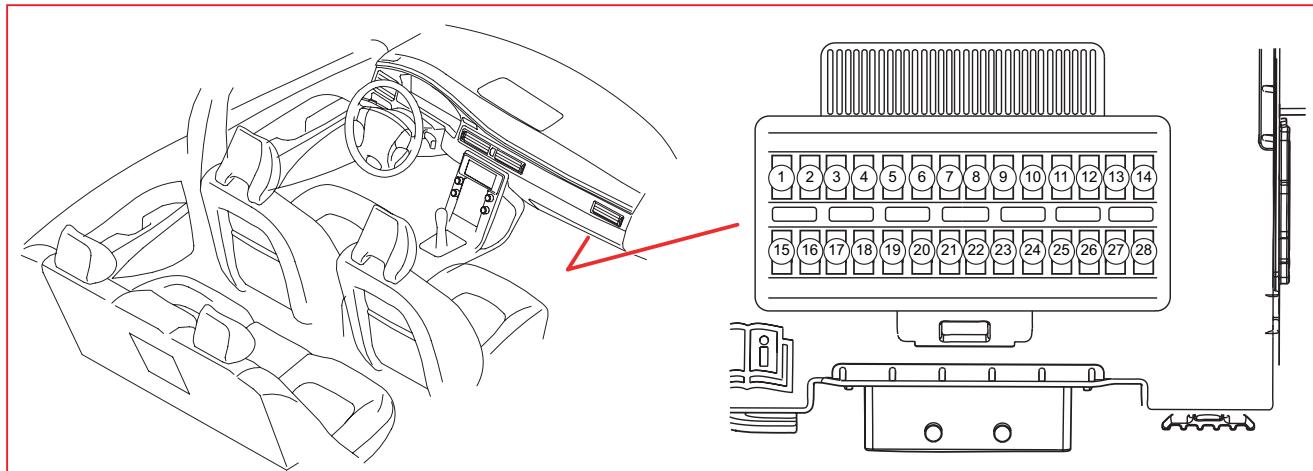


4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F1	7/149 Rain Sensor Module (RSM)	4/56	5
F2	4/9 Supplemental restraint system module (SRS) 7/93 Occupant Weight Sensor (OWS)	-	10
F3	4/16 Brake Control Module (BCM)	-	5
F4	3/65 Switch, heated rear seat 7/51 Accelerator pedal sensor 8/48 Automatic anti-dazzle rearview mirror 9/42 PTC element	- - - -	7.5
F6	3/281 Infotainment Control Module (ICM) 16/1 Integrated Audio Module (IAM) 16/109 DVD player/control module 4/124 Accessory USB unit (AUU)	- - - -	15
F7	3/4 Steering wheel switch left (SWSL) 3/131 Steering wheel switch right (SWSR) 3/135 RTI switch	3/130 3/130 3/131	7.5
F9	10/1 Left-hand front lamp housing 10/2 Right-hand front lamp housing	K2 K2	15
F10	4/33 Sunroof Module (SRM)	-	20
F11	10/48 Right-hand reversing light 10/55 Left-hand reversing light	K3 K3	7.5
F13	10/5 Front left fog light 10/6 Front right fog light	K1 K1	15
F14	6/127 Washer motor	K5A, K5B	15
F15	4/80 Forward Sensing Module (FSM)	-	10

continues

Fuses

Central Electronic Module (CEM) F17-F28

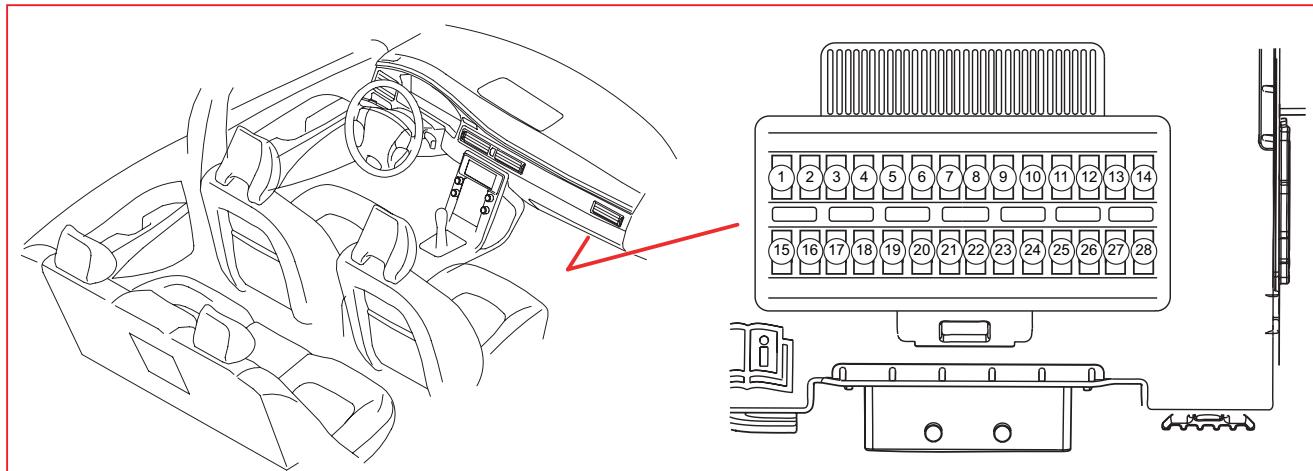


4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F17	3/27 Switch unit, power passenger seat 3/176 Switch, driver's door power window 3/291 Tailgate closing switch 4/76 Remote control unit for garage door opener 10/25 Ceiling light, cargo compartment, V70 10/29 Glove compartment lighting 10/114 Left-hand vanity mirror lighting 10/115 Right-hand vanity mirror lighting 10/125 Left-hand front courtesy lighting 10/126 Right-hand front courtesy lighting 10/127 Lighting, cargo compartment, left-hand side, S80 10/128 Lighting, cargo compartment, right-hand side, S80 10/150 Rear reading light 26/6 Converter/control module, sill moldings, driver's side 26/7 Converter/control module, sill moldings, passenger side	-	7.5
F18	5/1 Driver Information Module (DIM)	-	5
F19	4/52 Power Seat Module (PSM)	-	5
F20	6/32 Rear window wiper motor, V70	2/16	15
F21	4/119 Remote Keyless Entry (RKE) 4/119.2 Remote Receiver Module (RRX) 7/199 Ultrasonic sensor (IMS) 7/214 Heartbeat sensor	-	5
F22	6/33 Fuel pump	K8, 4/83	20
F23	4/102 Steering Column Lock module (SCL)	K9	20
F25	K6-B Relay, soldered K12 Relay, soldered 3/78 Lock unit, tailgate V70 6/8 Lock motor central locking, trunk lid/tailgate, S80 6/37 Lock motor, fuel filler cover	- - K6-B K6-B K12	10
F26	4/6 Climate Control Module (CCM) 16/35 Siren Control Module (SCM) 17/13 Data link connector	- - -	5
F27	3/132 Start Control Unit (SCU)	-	5
F28	4/93 Keyless Vehicle Module (KVM) 10/19 Auxiliary brake light 10/43 Right brake light 10/50 Left brake light	3/9 3/9, 4/56 3/9, 4/56 3/9, 4/56	5

Fuses

Rear electrical center FA1-FA12

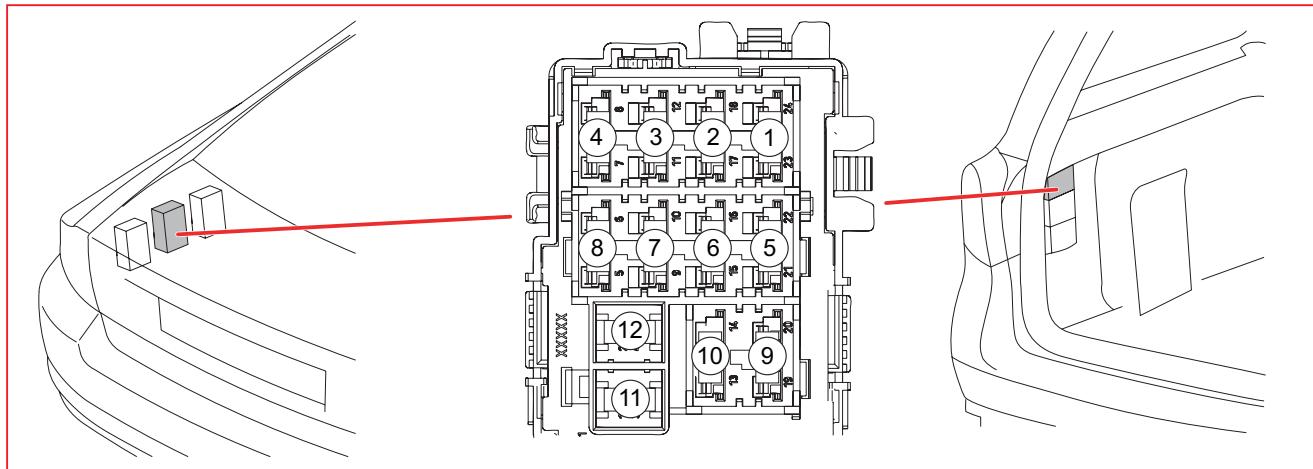


15/32 Rear electrical center

No.	No.	Fuse function	via	A
FA1	11D/A1	3/126 Driver's Door Module (DDM)	-	25
FA2	11D/A2	3/127 Passenger Door Module (PDM)	-	25
FA3	11D/A3	3/128 Left rear Door Module (LDM)	-	25
FA4	11D/A4	3/129 Right rear Door Module (RDM)	-	25
FA6	11D/A6	9/24 Refrigeration box 17/19 12V outlet, cargo compartment	2/141 -	15
FA7	11D/A7	2/82 Relay, rear window defroster 9/2 Rear window defroster	- 2/82	30
FA8	11D/A8	8/59 Rear left head restraint solenoid, S80 8/60 Rear right head restraint solenoid, S80	2/75 2/75	15
FA9	11D/A9	17/39 13-pin outlet, tow hitch cable harness	-	15
FA10	11D/A10	4/52 Power Seat Module (PSM)		25
FA11	11D/A11	4/110 Trailer Module (TRM), Accessory	-	40
FA12	11D/A12	4/116 Power Operated Tailgate Module (POT), V70	-	30

Fuses

Distribution box in cargo compartment FB1-FB12

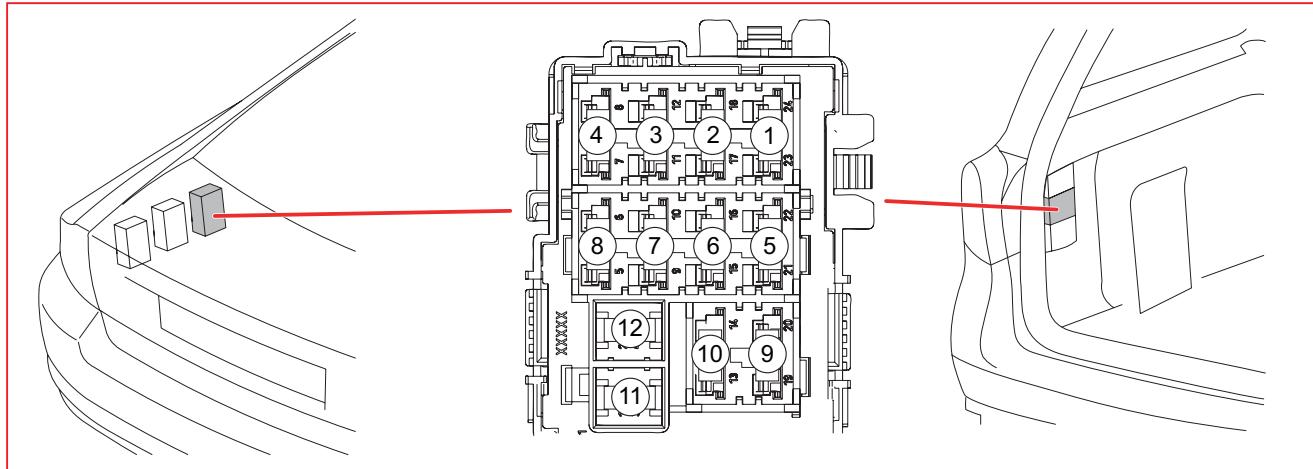


15/32 Rear electrical center

No.	No.	Fuse function	via	A
FB1	11D/B1	-	-	
FB2	11D/B2	4/84 Suspension Module (SUM)	-	15
FB3	11D/B3	9/12 Seat Heating Module (SHM), left	-	15
FB4	11D/B4	9/13 Seat Heating Module (SHM), right	-	15
FB5	11D/B5	9/15 Control module, rear right seat heater	-	15
FB6	11D/B6	4/82 Differential Electronic Module (DEM)	-	10
FB7	11D/B7	9/14 Control module, rear left seat heater	-	15
FB9	11D/B9	3/27 Switch unit, power passenger seat	-	25
FB10	11D/B10	4/93 Keyless Vehicle Module (KVM)	-	20
FB11	11D/B11	6/146 Lock motor, rear left brake disc	4/115	30
FB12	11D/B12	6/147 Lock motor, rear right brake disc	4/115	30

Fuses

Rear electrical center FD1-FD7

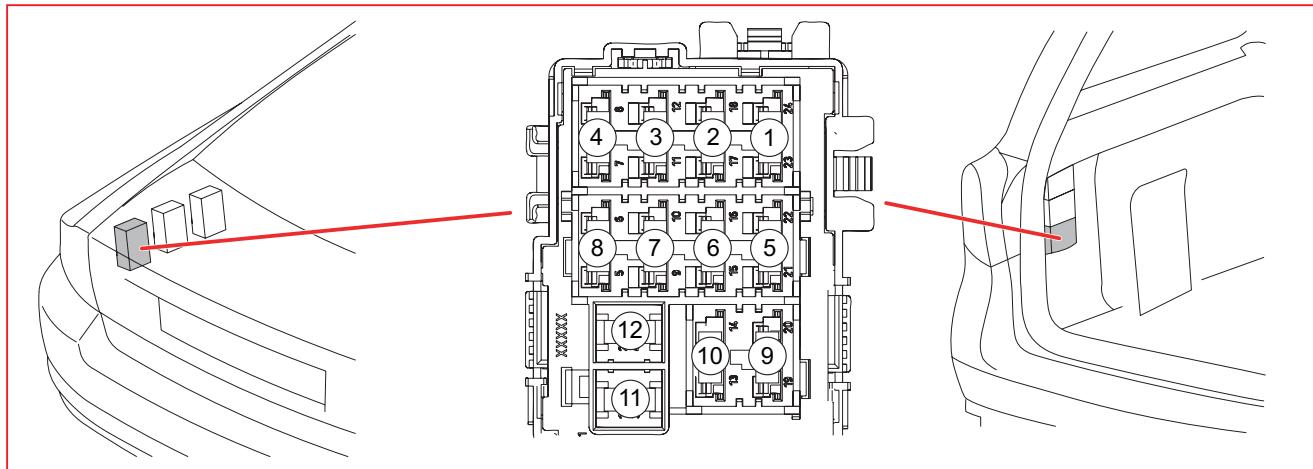


15/32 Rear electrical center

No.	No.	Fuse function	via	A
FD1	11D/D1	16/46 High Level Display Front module (HLDF) 16/108 Multimedia Module (MMM)	-	10
FD3	11D/D3	16/79 Subwoofer Module (SUB), V70		25
FD4	11D/D4	16/145 Remote digital audio receiver (RDAR)	-	5
FD5	11D/D5	16/105 Audio module (AUD)	-	25
FD6	11D/D6	3/281 Infotainment Control Module (ICM) 16/1 Integrated Audio Module (IAM) 4/124 Accessory USB unit (AUU)	-	15
FD7	11D/D7	16/60 Phone Module (PHM) 16/147 Bluetooth Phone Module (BPM)	-	5

Fuses

Battery PF1-PF2

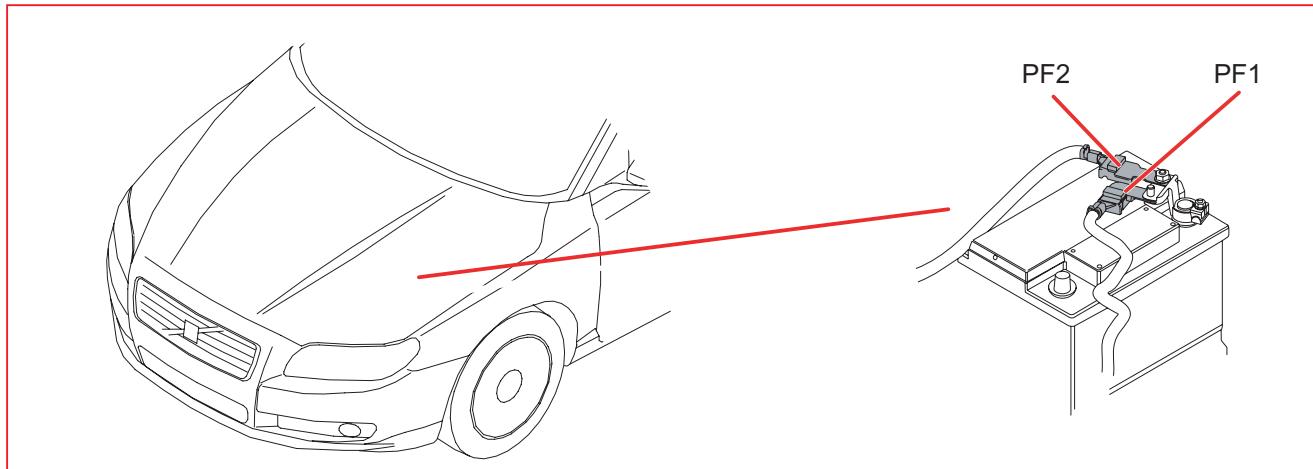


1/1 Battery

No.	Fuse function	via	A	
PF1	11A/1-11A/7 11B/8-11B/14 11B/16-11B/21 11B/22-11B/24 11B/25-11B/27 11B/28-11B/29 11B/30-11B/34 11B/35-11B/41 11A/42-11A/44	Fuses in the engine compartment electrical center Fuses in the engine compartment electrical center	- - 2/31 - 2/193 - - 2/32 -	150
PF2	6/25 6/26	Starter motor Alternator Control Module (ACM)	- -	150

Relays

Relays in the engine compartment R2

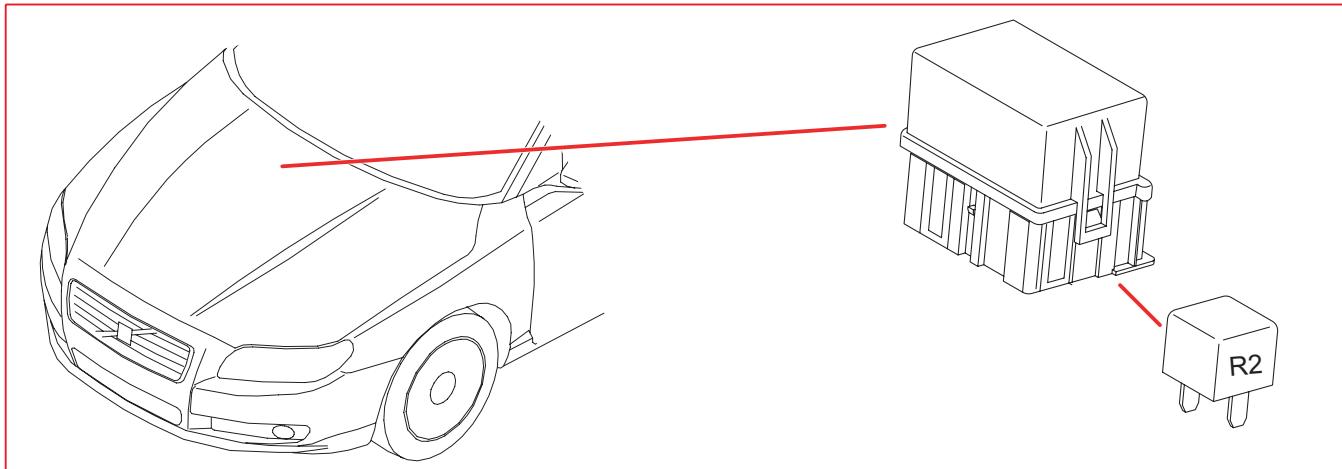


15/33 Engine compartment cold zone

Pos	Relay function	
R2	2/17	Relay, horn

Relays

Relays in the engine compartment R8-R9

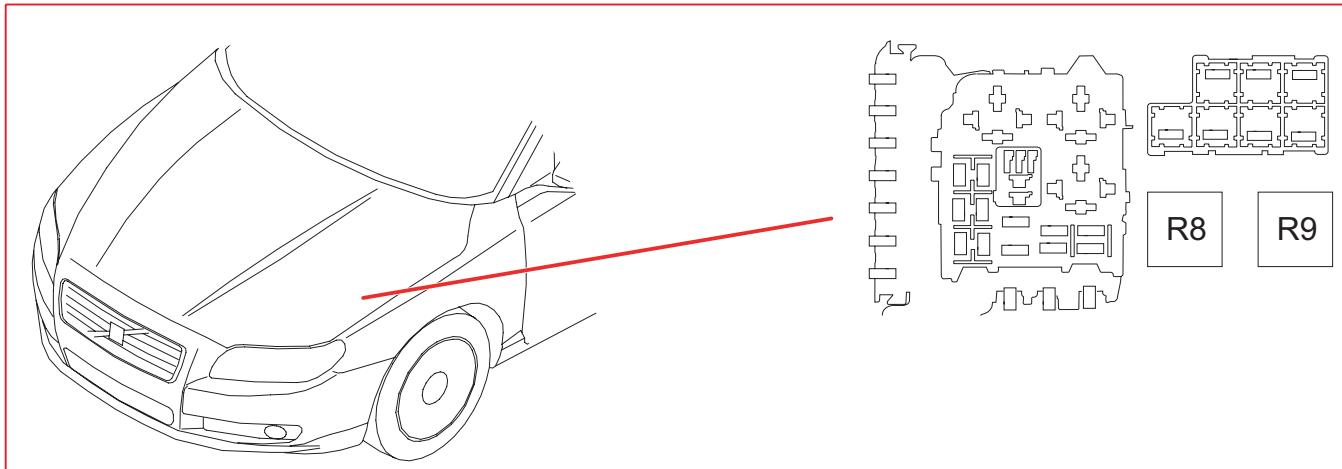


15/31 Engine compartment electrical center

Pos	Relay function	
R8	2/31	Relay, 15-feed
R9	2/193	Relay, comfort functions

Relays

Relays in the engine compartment R10-R13

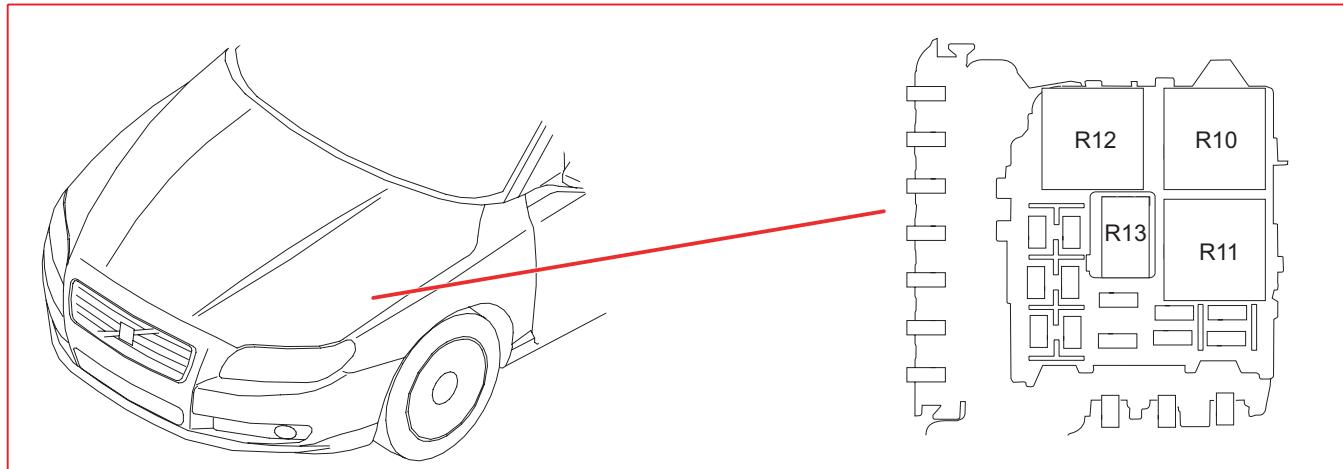


15/31 Engine compartment electrical center

Pos	Relay function
R10	2/32 Main relay, engine management system
R11	2/239 Relay, coolant pump, 8 cyl.
R12	2/35 Starter motor relay
R13	2/22 Relay, climate control system

Relays

Distribution box in cargo compartment RA1-RD1

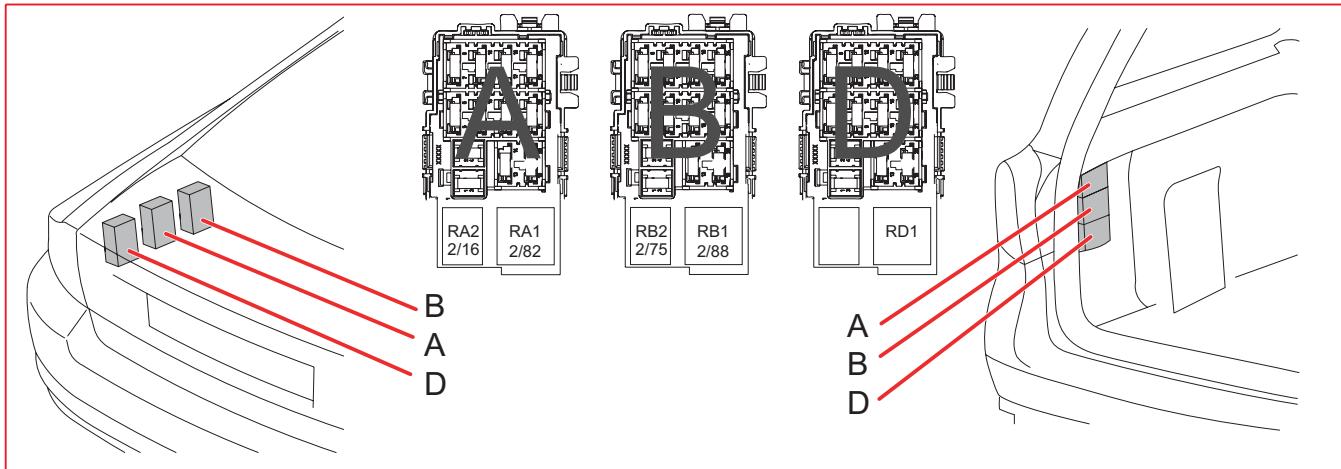

15/32 Rear electrical center

Pos	Relay function	
RA1	2/82	Relay, rear window defroster
RA2	2/16	Rear window wiper relay
RB1	2/88	Relay, 15-feed rear
RB2	2/75	Rear adjustable head restraint relay
RD1		Mounting


Relays, soldered Central Electronic Module (CEM)

4/56 Central Electronic Module (CEM)

Pos	Relay function
K1	Front fog lights
K2	High beam
K3	Reversing lights
K5-A	Washer motor
K5-B	Washer motor
K6-B	Central locking motor, trunk lid
K8	Fuel pump
K9	Steering Column Lock module (SCL)
K10-A	Seat Heating Module (SHM), interior lighting
K12	Lock motor, fuel filler cover

Ground connections

Overview

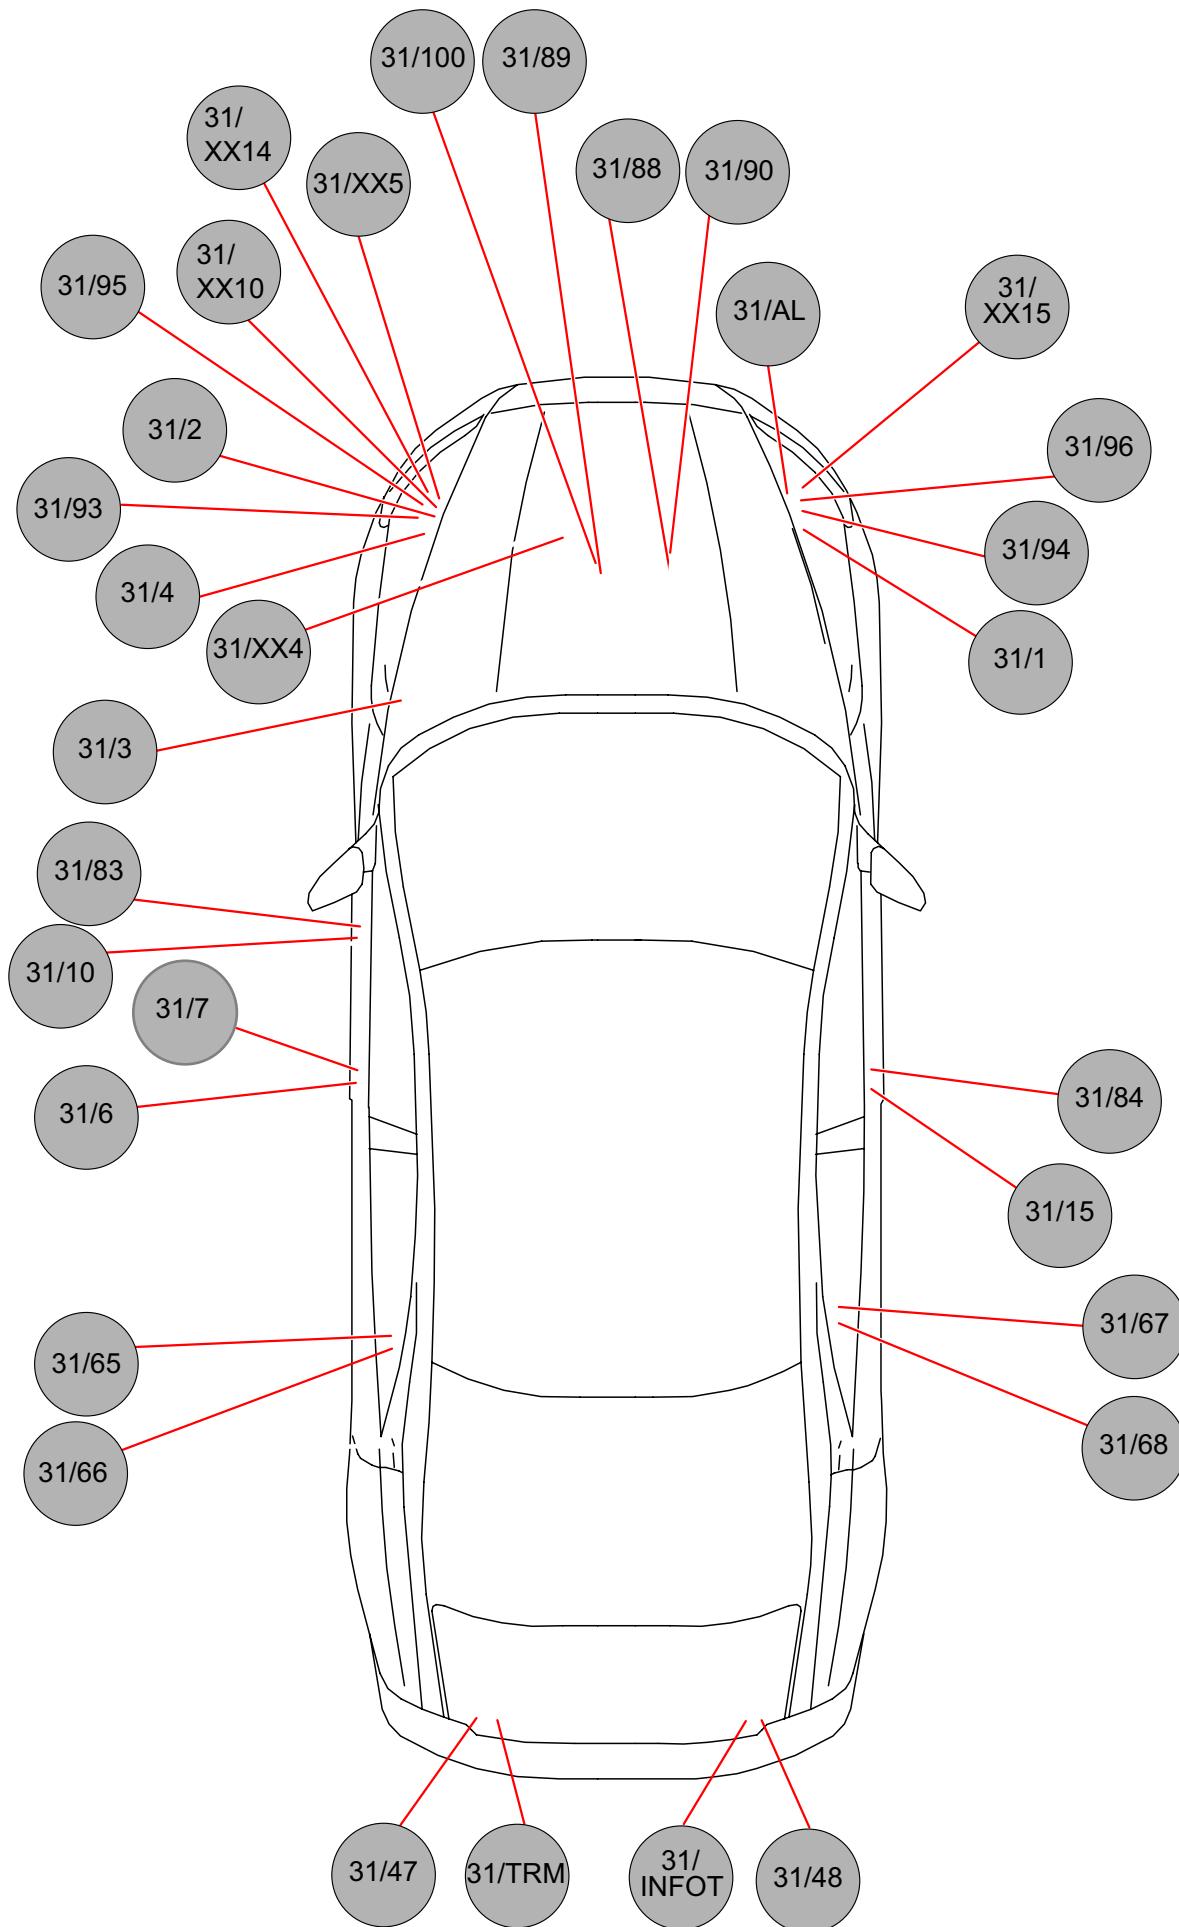

Ground connections

31/1 - 31/7

31/1	Ground connection, PTC
9/42	PTC element
31/2	LH wheel housing
4/71	Cooling fan control module
4/121	Cooling fan control module
6/73	Coolant pump, 8 Cyl.
6/114	Vacuum pump
9/32	PTC resistor, crankcase ventilation
9/47	PTC resistor crankcase ventilation in hose
31/3	Body, battery
1/1	Battery
31/4	Engine
31/XX4	Engine compartment
31/6	Bottom rail, left
3/27	Switch unit, power passenger seat, RHD
3/65	Switch, heated rear seat, LHD
3/126	Driver's Door Module (DDM)
3/127	Passenger Door Module (PDM)
3/128	Left rear Door Module (LDM)
3/156	Gear Selector Module (GSM), LHD
3/176	Switch, driver's door power window, LHD
3/273	Lock contact, LH front door
3/275	Lock contact, LH rear door
4/52	Power Seat Module (PSM), LHD
6/36	Lock motor, central locking, LH front door
6/57	Lock motor, central locking, LH rear door
8/134	Solenoid, reverse interlock, manual, LHD
9/1	Front 12V outlet, LHD
9/12	Seat Heating Module (SHM), driver's side, LHD
9/13	Seat Heating Module (SHM), passenger side, RHD
9/25	Rear 12V outlet, LHD
10/72	Front ashtray lighting, LHD
16/45	Navigation system portable, LHD
16/109	DVD player/control module, LHD
16/111	Rear headphone sockets, LHD
31/7	Bottom rail, left
3/271	Contact, immobilizer, clutch pedal, LHD
3/284	Diagnostic contact, brake light, LHD
4/56	Central Electronic Module (CEM), RHD
7/51	Accelerator pedal sensor, LHD

Ground connections

31/10 - 31/15

31/10 Bottom rail, left	
3/6	Hazard warning flasher switch
3/117	Switch unit, dome light
3/173	Switch, trunk lid private lock
4/31	Fan control module
4/33	Sunroof module
4/76	Remote control unit for garage door opener
4/102	Steering Column Lock module (SCL)
4/119	Remote Keyless Entry (RKE)
4/119.2	Remote Receiver Module (RRX)
6/48	Damper Motor Module (DMM), recirculation
6/95	Damper Motor Module (DMM), temperature, left side
6/96	Damper Motor Module (DMM), temperature, right side
6/102	Damper Motor Module (DMM), defroster
6/103	Damper Motor Module (DMM), floor/ventilation
7/149	Rain Sensor Module (RSM)
7/159	Air Quality Sensor (AQS)
7/199	Ultrasonic sensor
8/48	Automatic anti-dazzle rearview mirror
10/19	Auxiliary brake light, S80
10/22	Ceiling light
10/29	Glove compartment lighting
10/114	Left-hand vanity mirror lighting
10/115	Right-hand vanity mirror lighting
10/150	Rear reading light
17/13	Data link connector

31/15 Bottom rail, right	
3/27	Switch unit, power passenger seat, LHD
3/65	Switch, heated rear seat, RHD
3/126	Driver's Door Module (DDM)
3/127	Passenger Door Module (PDM)
3/129	Right rear Door Module (RDM)
3/156	Gear Selector Module (GSM), RHD
3/176	Switch, driver's door power window, RHD
3/274	Lock contact, RH front door
3/276	Lock contact, RH rear door
4/52	Power Seat Module (PSM), RHD
6/55	Lock motor, central locking, RH front door
6/56	Lock motor, central locking, RH rear door
8/134	Solenoid, reverse interlock, manual, RHD
9/1	Front 12V outlet, RHD
9/12	Seat Heating Module (SHM), driver's side, RHD
9/13	Seat Heating Module (SHM), passenger side, LHD
9/25	Rear 12V outlet, RHD
10/72	Front ashtray lighting, RHD
16/45	Navigation system portable, RHD
16/109	DVD-player/control module S80, RHD
16/111	Rear headphone sockets, RHD

Ground connections

31/47 - 31/66

31/47 Rear bumper abutment, left

2/16	Rear window wiper relay, V70
3/35	Trunk handle switch
3/78	Lock unit, tailgate V70
4/110	Trailer Module (TRM), S80
4/115	Parking Brake Module (PBM)
4/116	Power Operated Tailgate Module (POT), V70
6/8	Lock motor central locking, trunk lid/tailgate, S80
6/32	Rear window wiper motor, V70
6/149	Tailgate closing motor, V70
7/227A	Tailgate pinch sensor, right, V70
7/227B	Tailgate pinch sensor, left, V70
9/2	Heated rear window, V70
10/3	License plate lighting
10/17	Lamp housing, rear right V70
10/18	Lamp housing, rear left
10/19	Auxiliary brake light V70

31/48 Rear bumper abutment, right

2/141	Refrigeration box relay
4/86	Parking Assistance Module (PAM)
6/37	Lock motor, fuel filler cover
7/214	Heartbeat sensor
9/24	Refrigeration box
10/17	Lamp housing, rear right
17/19	12V outlet, cargo compartment

31/65 Rear seat riser, LH side

4/82	Differential Electronic Module (DEM)
4/110	Trailer Module (TRM), V70
4/120	Parking Assistance Camera module (PAC)
7/175	Weight sensor passenger seat, seat belt reminder, RHD
8/51	Front left side airbag igniter
8/59	Rear left head restraint solenoid, S80
9/14	Control module, rear left seat heater

31/66 Rear seat riser, LH side

4/83	Fuel pump control module
6/33	Fuel pump

Ground connections

31/67 - 31/84

31/67 Rear seat riser, right-hand side 1

4/84	Suspension Module (SUM)
4/93	Keyless Vehicle Module (KVM)
7/175	Weight sensor passenger seat, seat belt reminder, LHD
8/51	Front left side airbag igniter, RHD
8/52	Front left side airbag igniter, LHD
8/60	Rear right head restraint solenoid, S80
9/15	Control module, rear right seat heater

31/68 Rear seat riser, RH side 2

6/35	Fuel pump, auxiliary heater
9/38	Heated fuel filter

31/83 Bottom rail, left

3/4	Steering wheel switch left (SWSL)
3/37	Horn contact
3/47	Parking brake contact
3/111	Light Switch Module (LSM)
3/130	Steering Wheel Module (SWM)
3/131	Steering wheel switch right (SWSR)
3/132	Start Control Unit (SCU)
3/272	Parking brake contact
3/281	Infotainment Control Module (ICM)
3/293	Handsfree control panel cellular phone
4/6	Climate Control Module (CCM)
4/80	Forward Sensing Module (FSM)
4/124	Accessory USB unit (AUU)
5/1	Driver Information Module (DIM)
7/10	Interior temperature sensor
9/42	PTC element
10/1	Left-hand front lamp housing
10/2	Right-hand front lamp housing
16/1	Integrated Audio Module (IAM)
16/60	Phone Module (PHM)
16/147	Bluetooth Phone Module (BPM)
16/159	Control module, mobile phone handsfree
17/13	Data link connector

31/84 Bottom rail, right

3/271	Contact, immobilizer, clutch pedal, RHD
3/284	Diagnostic contact, brake light, RHD
4/56	Central Electronic Module (CEM), LHD
7/51	Accelerator pedal sensor, RHD

Ground connections

31/88 - 31/95

31/88 Engine ignition coils	
20/3	Spark plug with ignition coil, 5-Cyl. Turbo
20/4	Spark plug with ignition coil, 5-Cyl. Turbo
20/3	Spark plug with ignition coil, 6 cyl.
20/4	Spark plug with ignition coil, 6 cyl.
20/3	Spark plug with ignition coil, 8 cyl.
20/5	Spark plug with ignition coil, 8 cyl.

31/89 Engine ignition coils	
20/5	Spark plug with ignition coil, 5-Cyl. Turbo
20/6	Spark plug with ignition coil, 5-Cyl. Turbo
20/7	Spark plug with ignition coil, 5-Cyl. Turbo
20/5	Spark plug with ignition coil, 6 cyl.
20/6	Spark plug with ignition coil, 6 cyl.
20/7	Spark plug with ignition coil, 6 cyl.
20/8	Spark plug with ignition coil, 6 cyl.
20/16	Capacitor
20/7	Spark plug with ignition coil, 8 cyl.
20/12	Spark plug with ignition coil, 8 cyl.

31/90 Engine ignition coils	
20/4	Spark plug with ignition coil, 8 cyl.
20/6	Spark plug with ignition coil, 8 cyl.

31/93 LH wheel housing 2	
6/104	High pressure headlight washer motor
7/5	Washer fluid level sensor
9/43	Heated windshield washer nozzle, left
9/44	Heated windshield washer nozzle, right
10/1	Left-hand front lamp housing
10/5	Front left fog light

31/94 RH wheel housing 2	
10/2	Right-hand front lamp housing
10/6	Front right fog light
16/10	Horn 1
16/11	Horn 2

31/95 LH wheel housing 3	
4/56	Central Electronic Module (CEM), RHD
4/99	Electronic power steering control module
4/118	Headlamp Control Module (HCM)
7/4	Brake fluid level sensor
16/35	Siren Control Module (SCM)

Ground connections

31/96 - 31/TRM

31/96 RH wheel housing 3	
3/62	Hood alarm contact
4/56	Central Electronic Module (CEM), LHD
7/73	Coolant level sensor
7/203	Forward-aimed radar (FLR)

31/100 Engine ignition coils	
20/8	Spark plug with ignition coil, 8 cyl.
20/13	Spark plug with ignition coil, 8 cyl.

31/XX4 Engine - Body	
31/4	Ground connection

31/XX5 Ground connection, ECM	
4/46	Engine Control Module (ECM)

31/XX10 LH wheel housing 1	
3/10	Reversing light contact
3/282	Switch indicator 1st gear, I5D
4/28	Transmission Control Module (TCM)
6/139	Upper actuating motor, intake manifold
6/140	Lower actuating motor, intake manifold

31/XX14 LH wheel housing 3 (ABS)	
4/16	Brake Control Module (BCM)

31/XX15 RH wheel housing	
6/1	Wiper Motor Module (WMM)
4/7	Combustion Preheater Module (CPM)

31/TRM Accessory	
17/37	4-pin outlet, tow hitch cable harness
17/38	7-pin outlet, tow hitch cable harness
17/39	13-pin outlet, tow hitch cable harness

Ground connections


31/INFOT - 31/AL

31/INFOT Infotainment	
16/46	High Level Display Front module (HLDF)
16/79	Subwoofer Module (SUB), V70
16/105	Audio module (AUD)
16/108	Multimedia Module (MMM)
16/145	Remote digital audio receiver (RDAR)

31/AL Auxiliary lights	
10/65	Auxiliary light, front right
10/69	Auxiliary light, front left

Control modules

Overview of locations

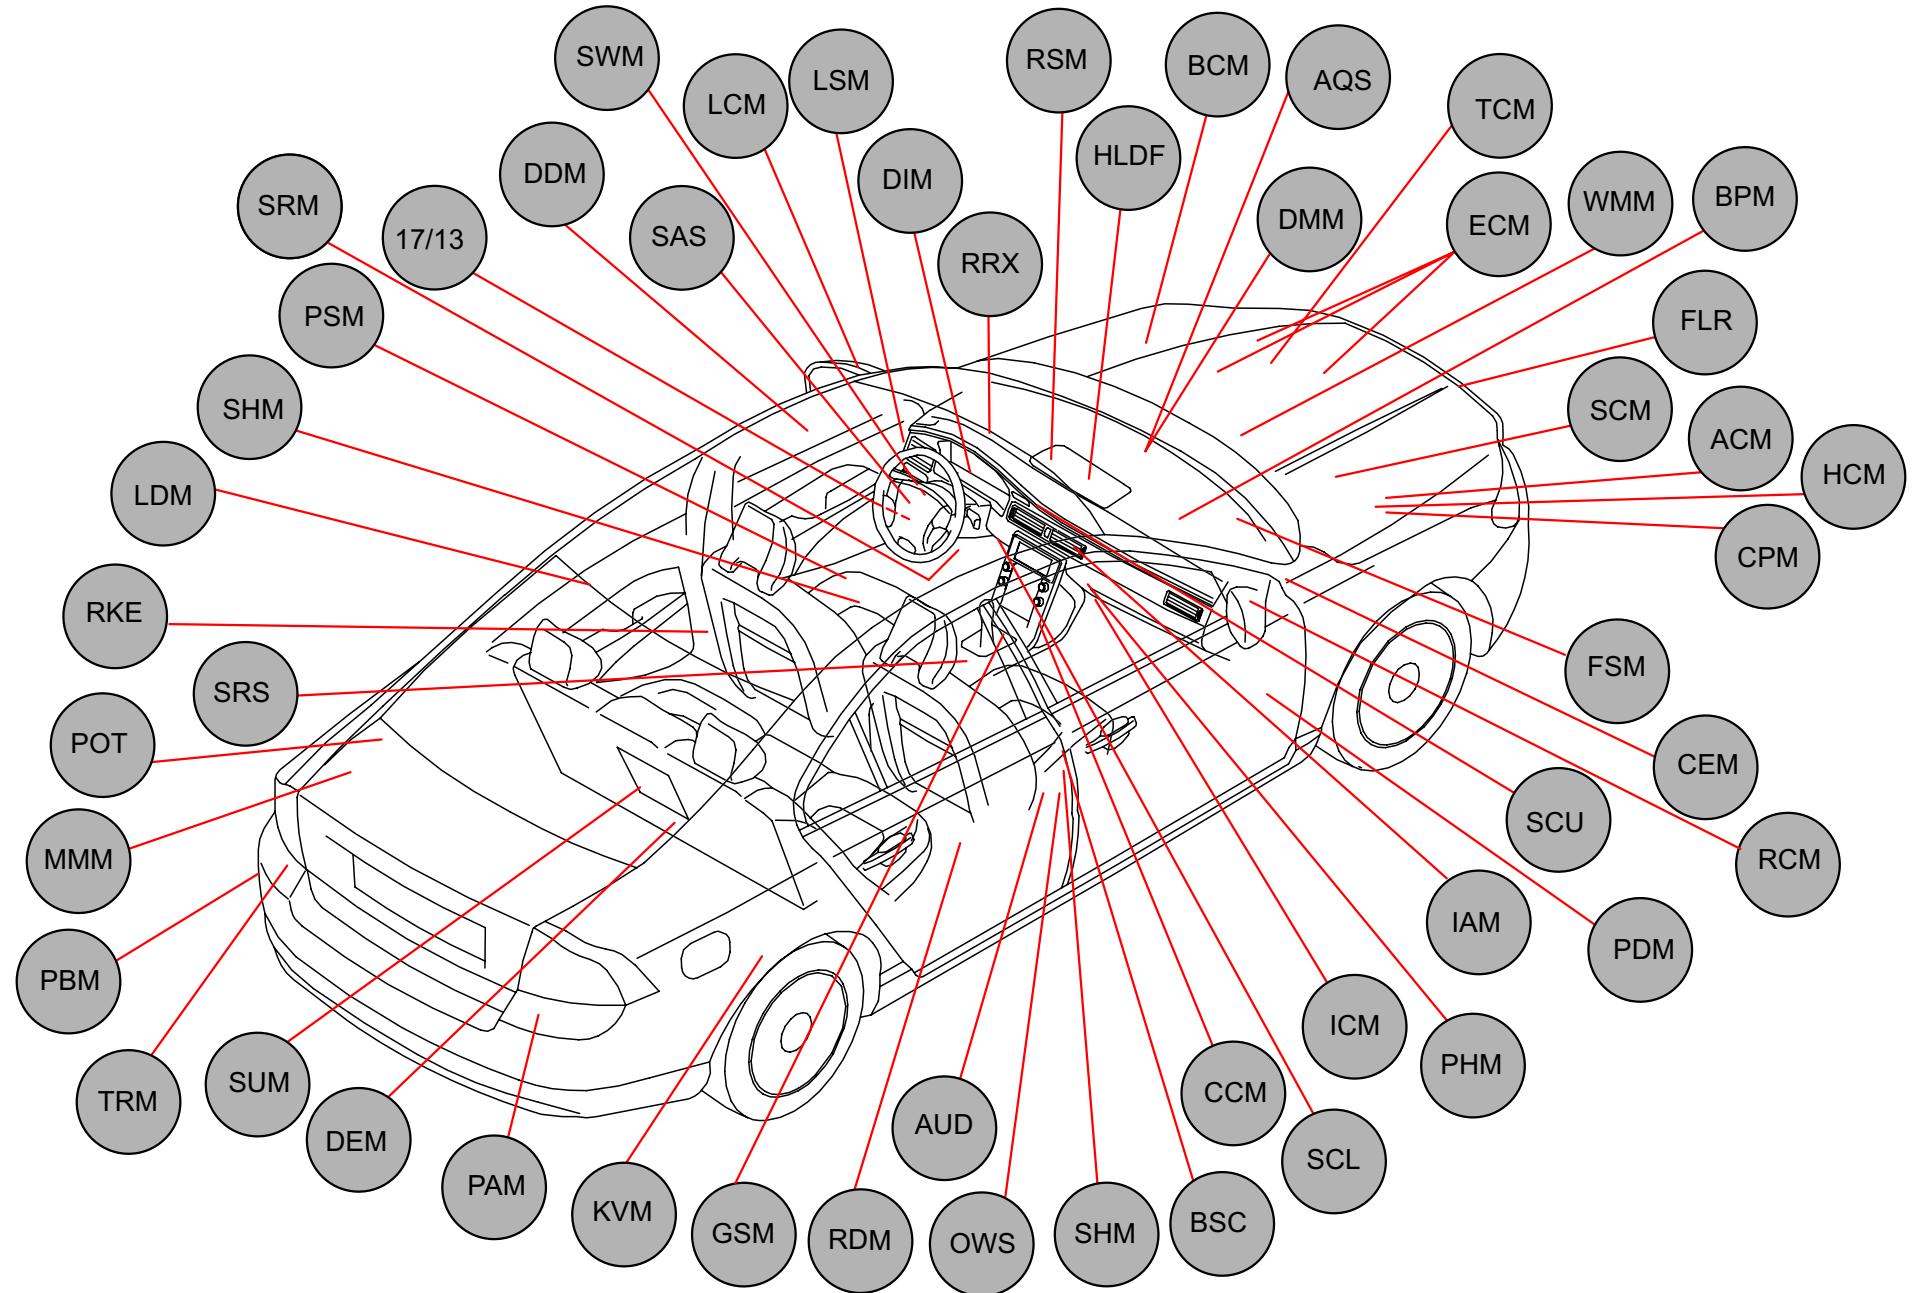


Control modules

Overview of designations

Unit	Designation	Unit	Designation
ACM	6/26 Alternator Control Module (ACM)	PAM	4/86 Parking Assistance Module (PAM)
AQS	7/159 Air Quality Sensor (AQS)	PBM	4/115 Parking Brake Module (PBM)
AUD	16/105 Audio module (AUD)	PDM	3/127 Passenger Door Module (PDM)
BCM	4/16 Brake Control Module (BCM)	PHM	16/60 Phone Module (PHM)
BPM	16/147 Bluetooth Phone Module (BPM)	POT	4/116 Power Operated Tailgate Module (POT)
BSC	7/164 Body Sensor Cluster Stability Sensor (BSC)	PSM	4/52 Power Seat Module (PSM)
CCM	4/6 Climate Control Module (CCM)	RCM	27/4 Right-hand Camera Module (RCM)
CEM	4/56 Central Electronic Module (CEM)	RDM	3/129 Right rear Door Module (RDM)
CPM	4/7 Combustion Preheater Module (CPM)	RKE	4/119 Remote Keyless Entry (RKE)
DDM	3/126 Driver's Door Module (DDM)	RRX	4/119.2 Remote Receiver Module (RRX)
DEM	4/82 Differential Electronic Module (DEM)	RSM	7/149 Rain Sensor Module (RSM)
DIM	5/1 Driver Information Module (DIM)	SAS	4/68 Steering Wheel Angle Sensor Module (SAS)
DMM	Damper Motor Module (DMM)	SCL	4/102 Steering Column Lock module (SCL)
ECM	4/46 Engine Control Module (ECM)	SCM	16/35 Siren Control Module (SCM)
FLR	7/203 Forward-aimed radar (FLR)	SCU	3/132 Start Control Unit (SCU)
FSM	4/80 Forward Sensing Module (FSM)	SHM	9/12 Seat Heating Module (SHM), driver's side
GSM	3/156 Gear Selector Module (GSM)	SRM	4/33 Sunroof Module (SRM)
HCM	4/118 Headlamp Control Module (HCM)	SRS	4/9 Supplemental restraint system module (SRS)
HLDF	16/46 High Level Display Front module (HLDF)	SUM	4/84 Suspension Module (SUM)
IAM	16/1 Integrated Audio Module (IAM)	SWM	3/130 Steering Wheel Module (SWM)
ICM	3/281 Infotainment Control Module (ICM)	TCM	4/28 Transmission Control Module (TCM)
KVM	4/93 Keyless Vehicle Module (KVM)	TMC	16/49 Traffic Message Channel module (TMC)
LCM	27/3 Left Camera Module (LCM)	TRM	4/110 Trailer Module (TRM)
LDM	3/128 Left rear Door Module (LDM)	WHM	6/1 Wiper Motor Module (WMM)
LSM	3/111 Light Switch Module (LSM)	4/31	4/31 Fan control module
MMM	16/108 Multimedia Module (MMM)	4/71	4/71 Cooling fan control module
OWS	7/93 Occupant Weight Sensor (OWS)	17/13	17/13 Data link connector


Control modules

Central electronic module (CEM) 1:3

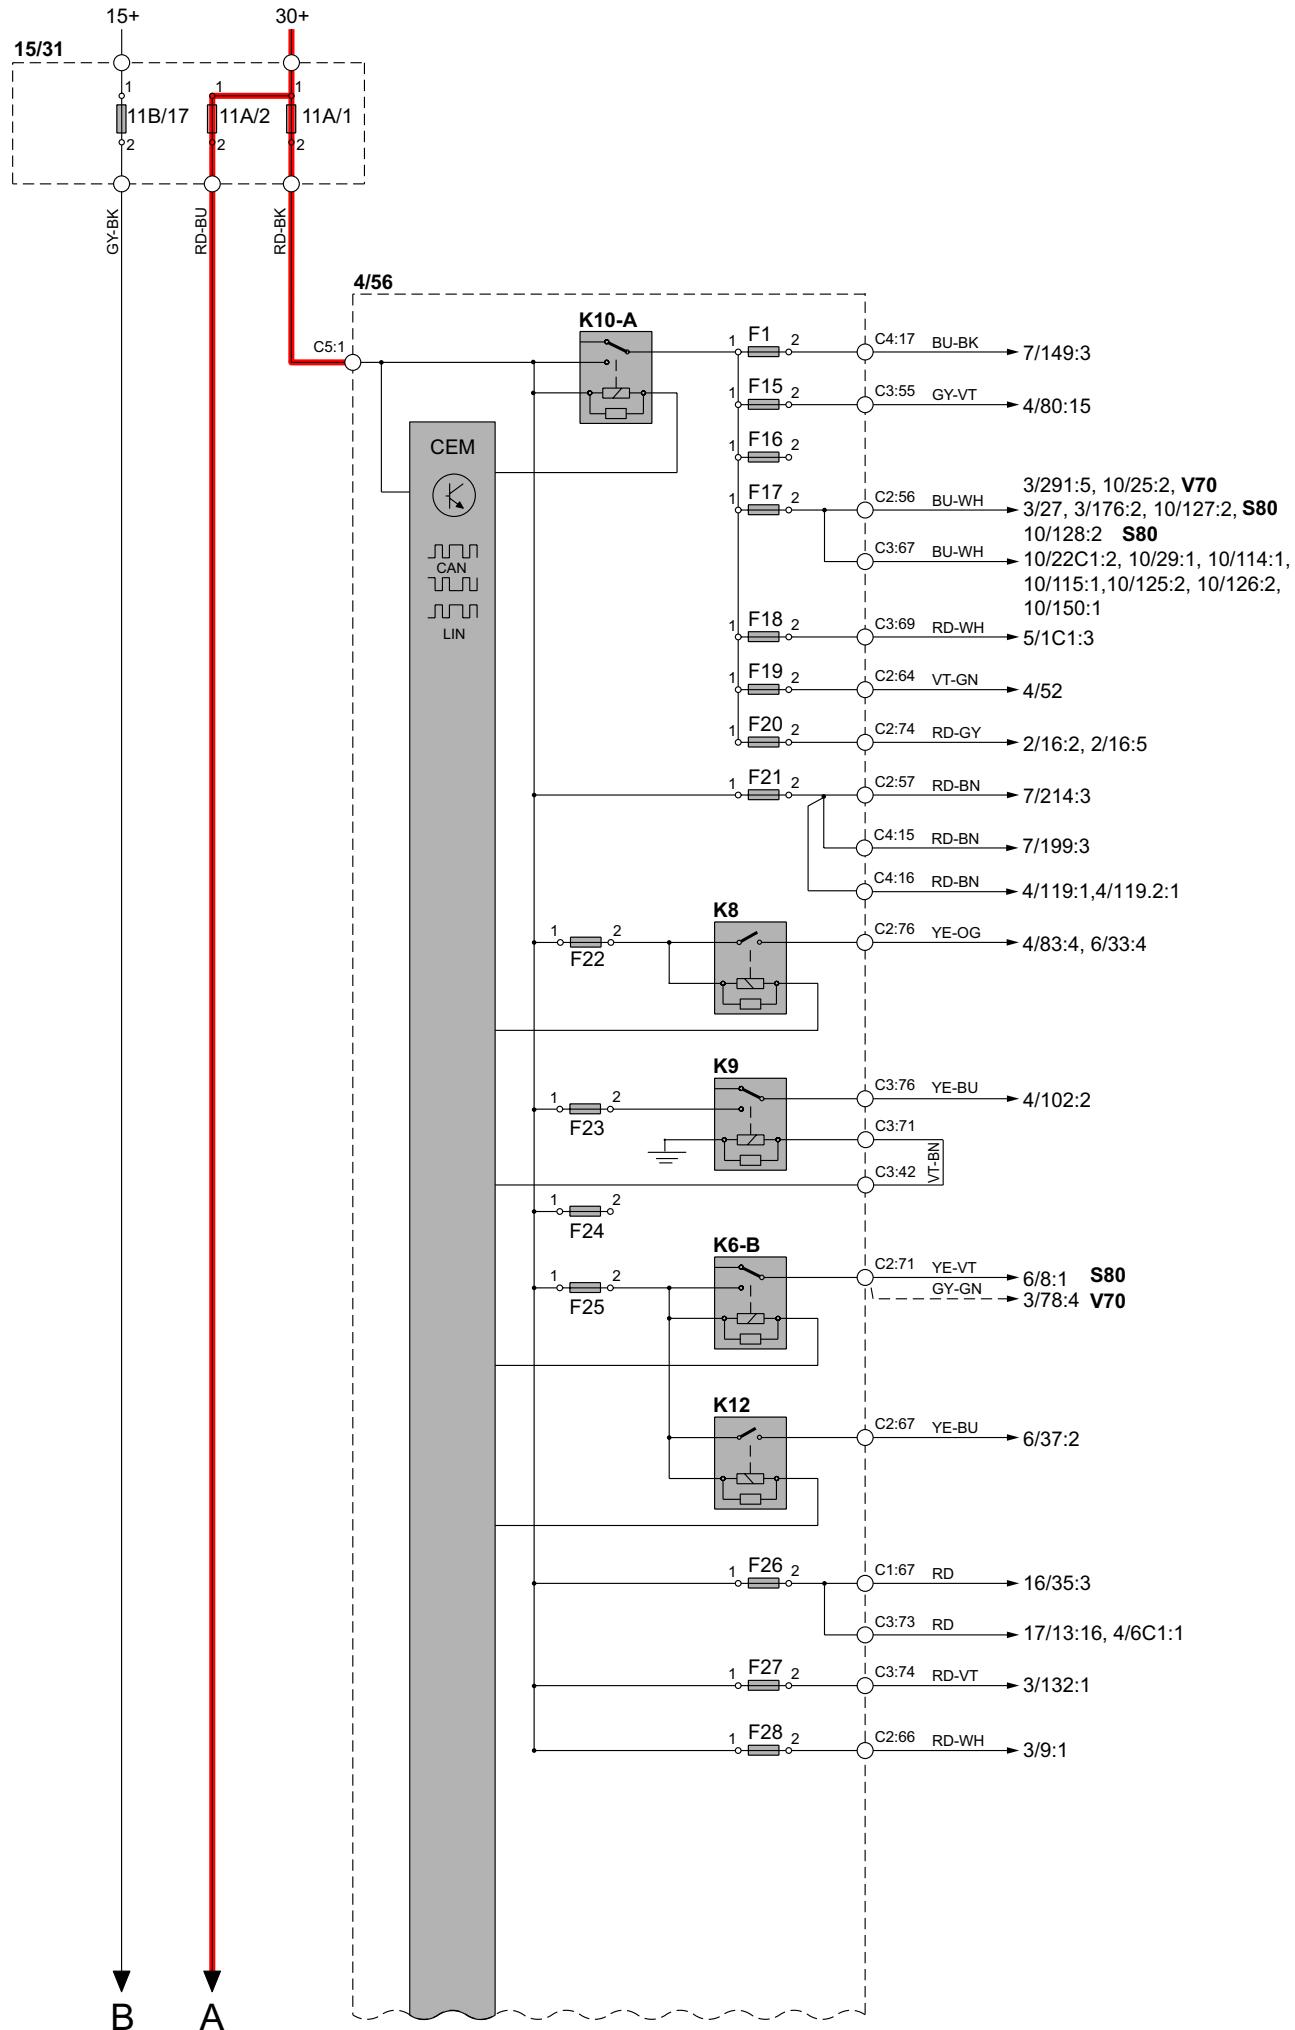


Control modules

Central Electronic Module (CEM) 2:3

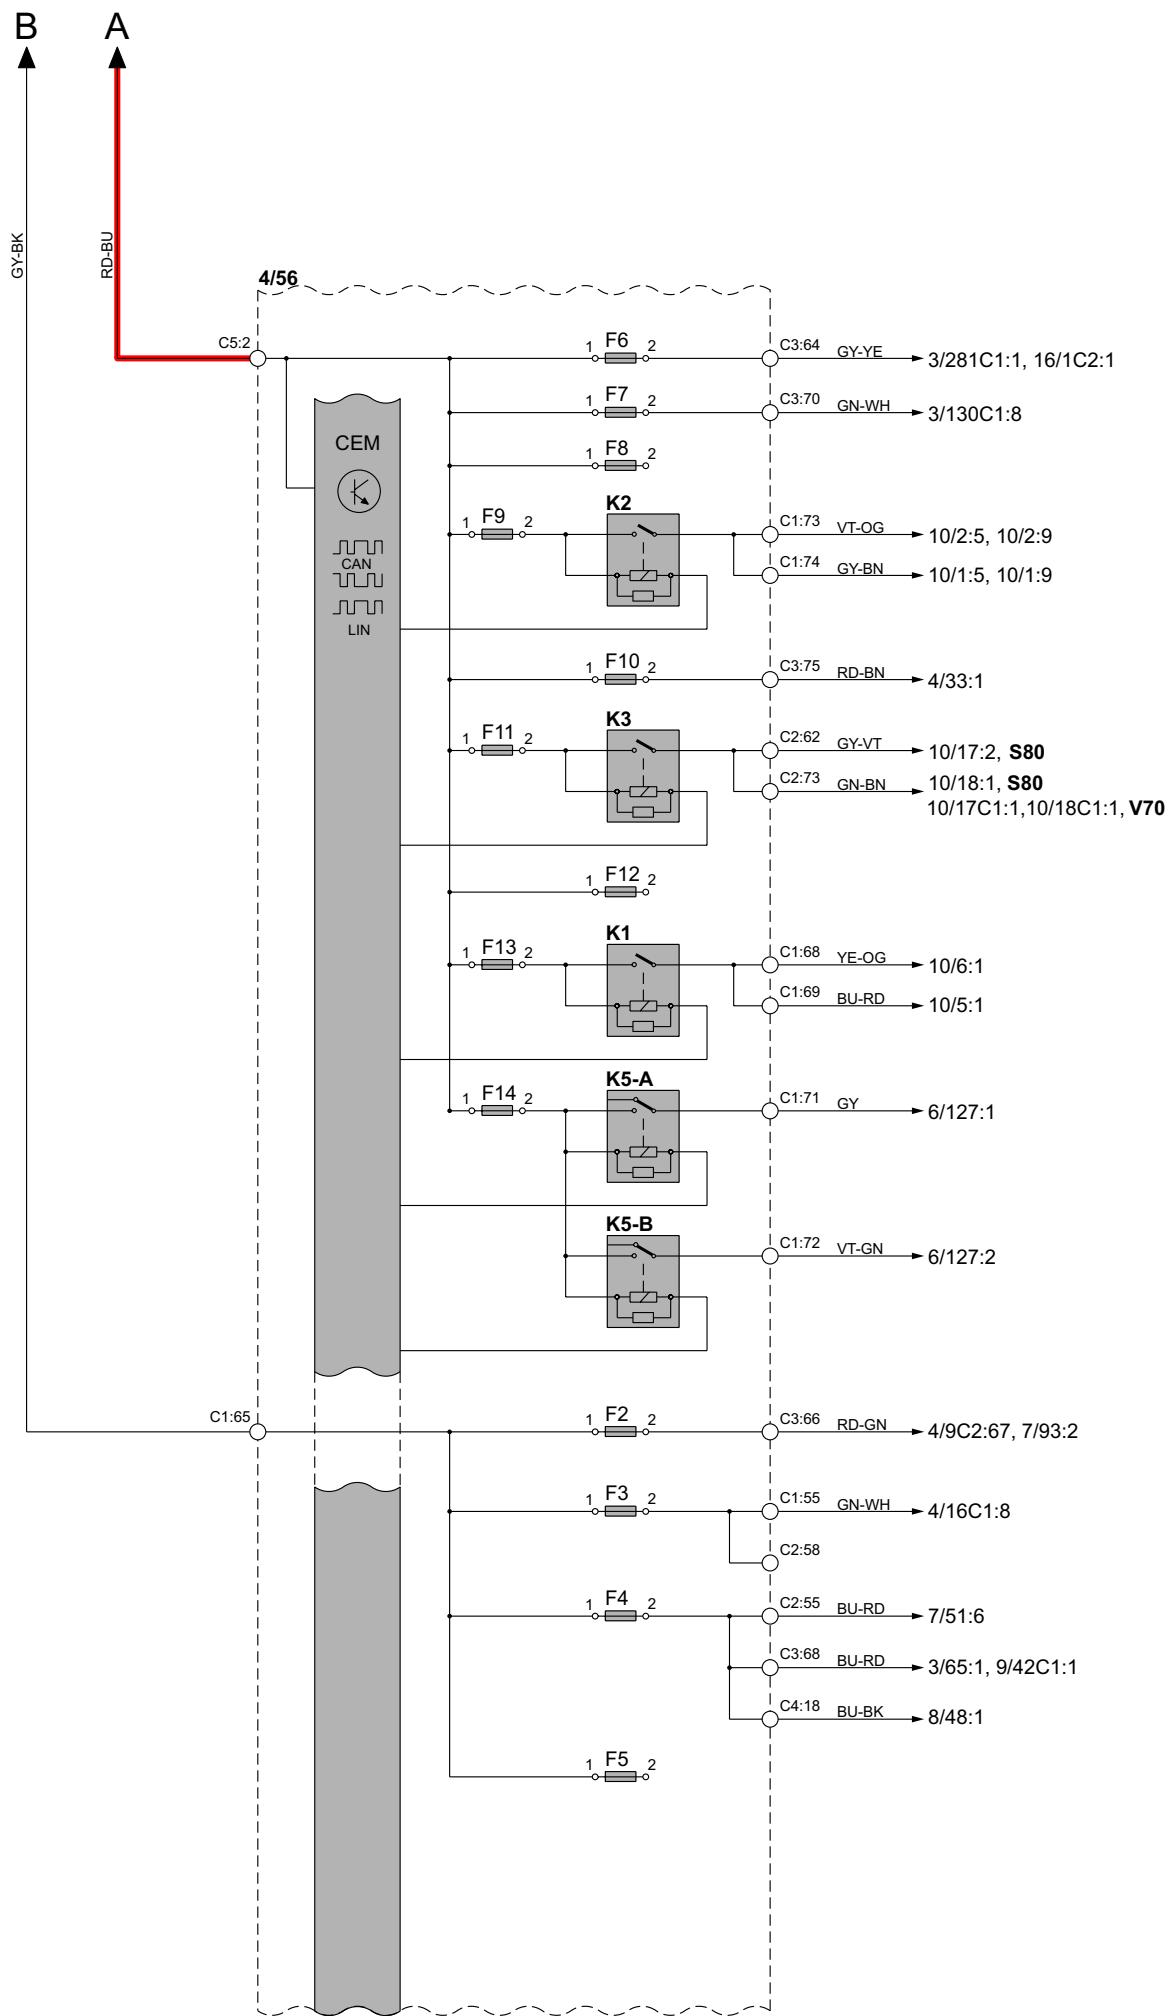


Control modules

Central Electronic Module (CEM) 3:3

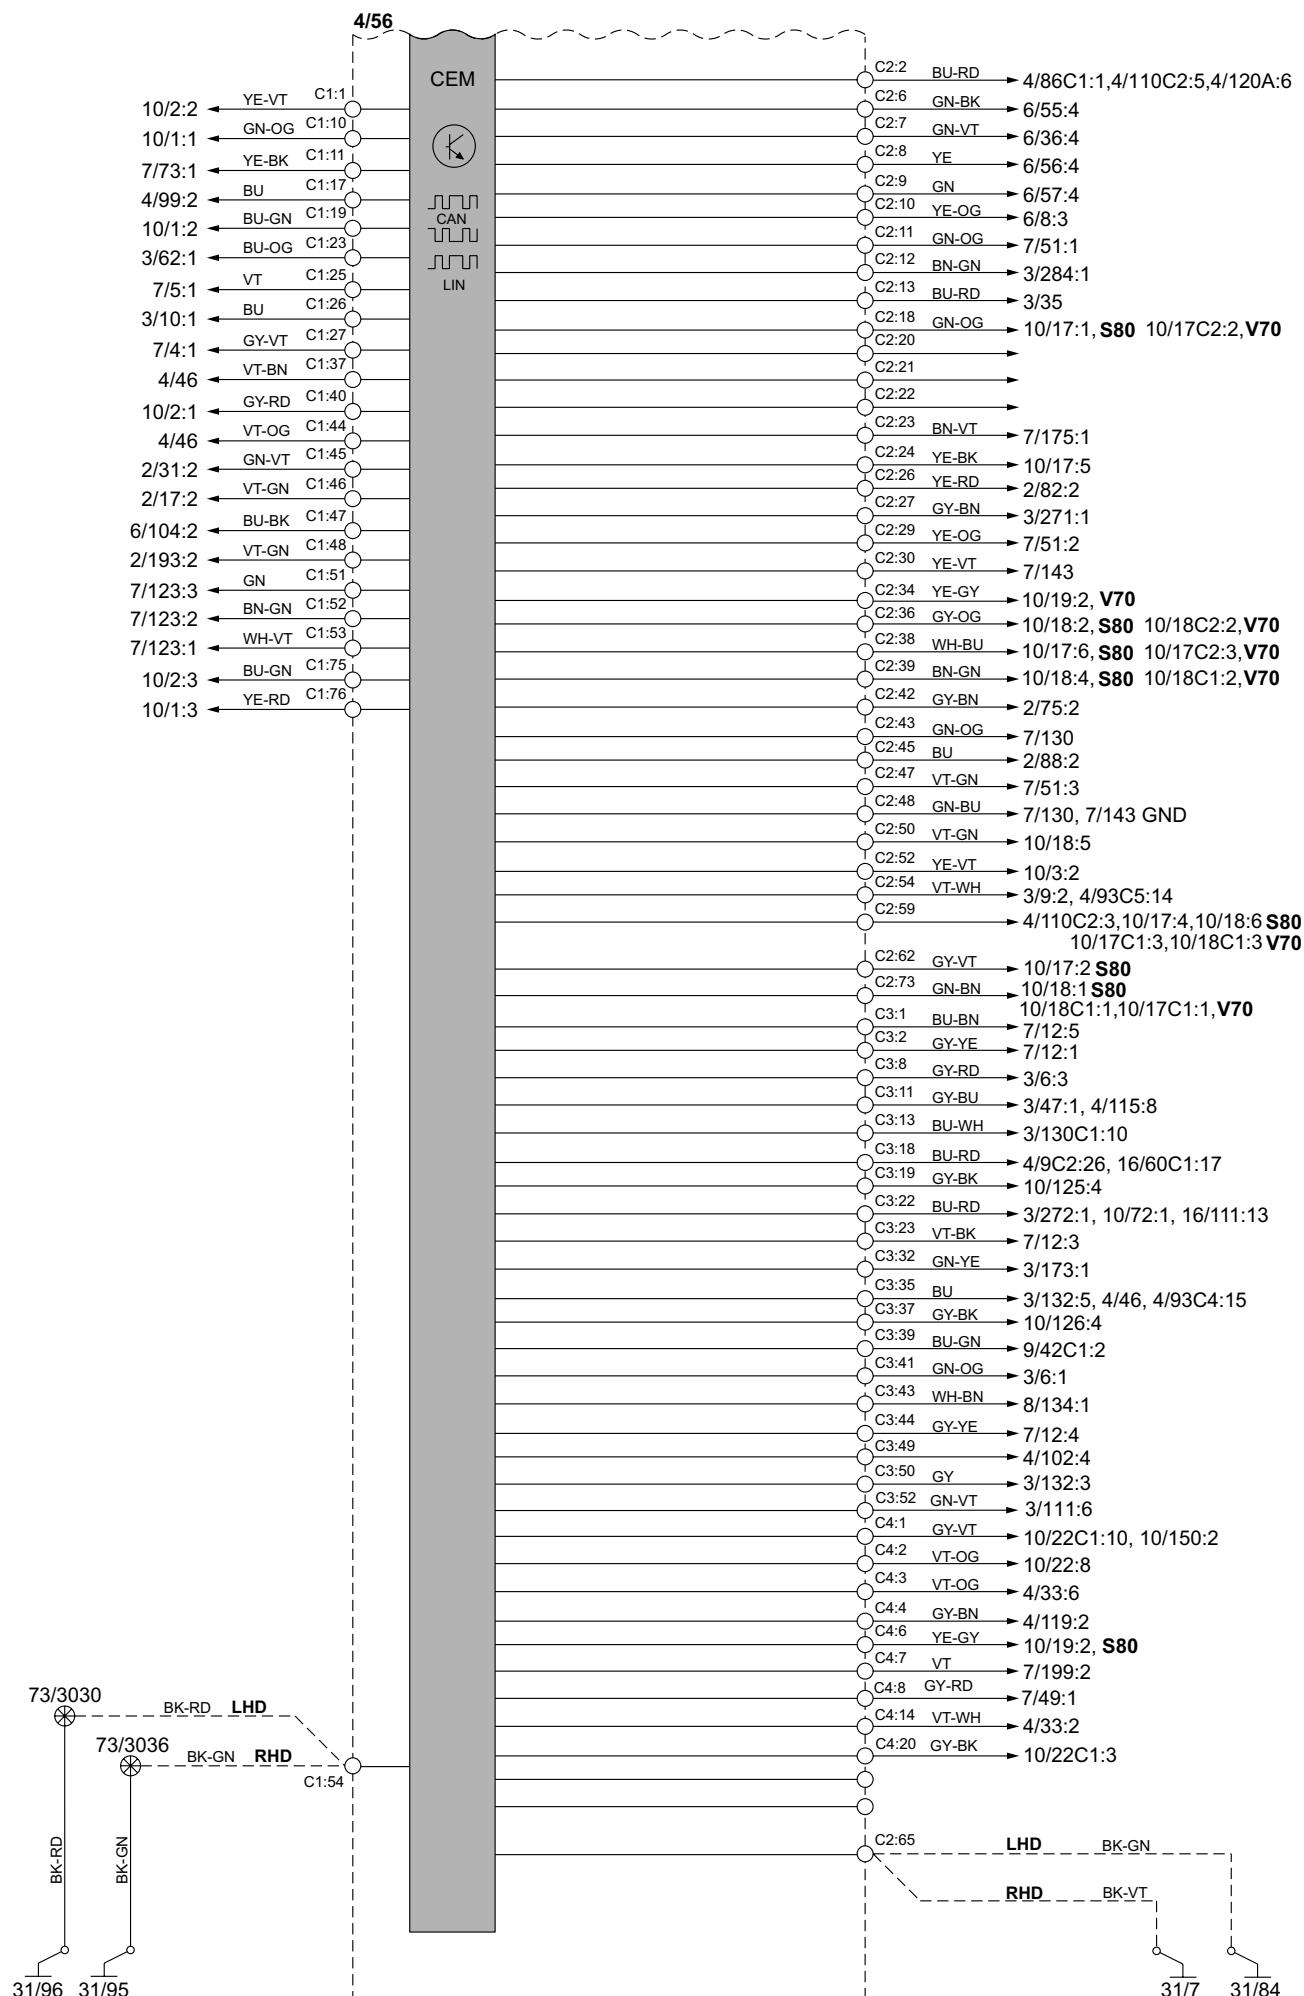


Control modules

Data communication high speed CAN

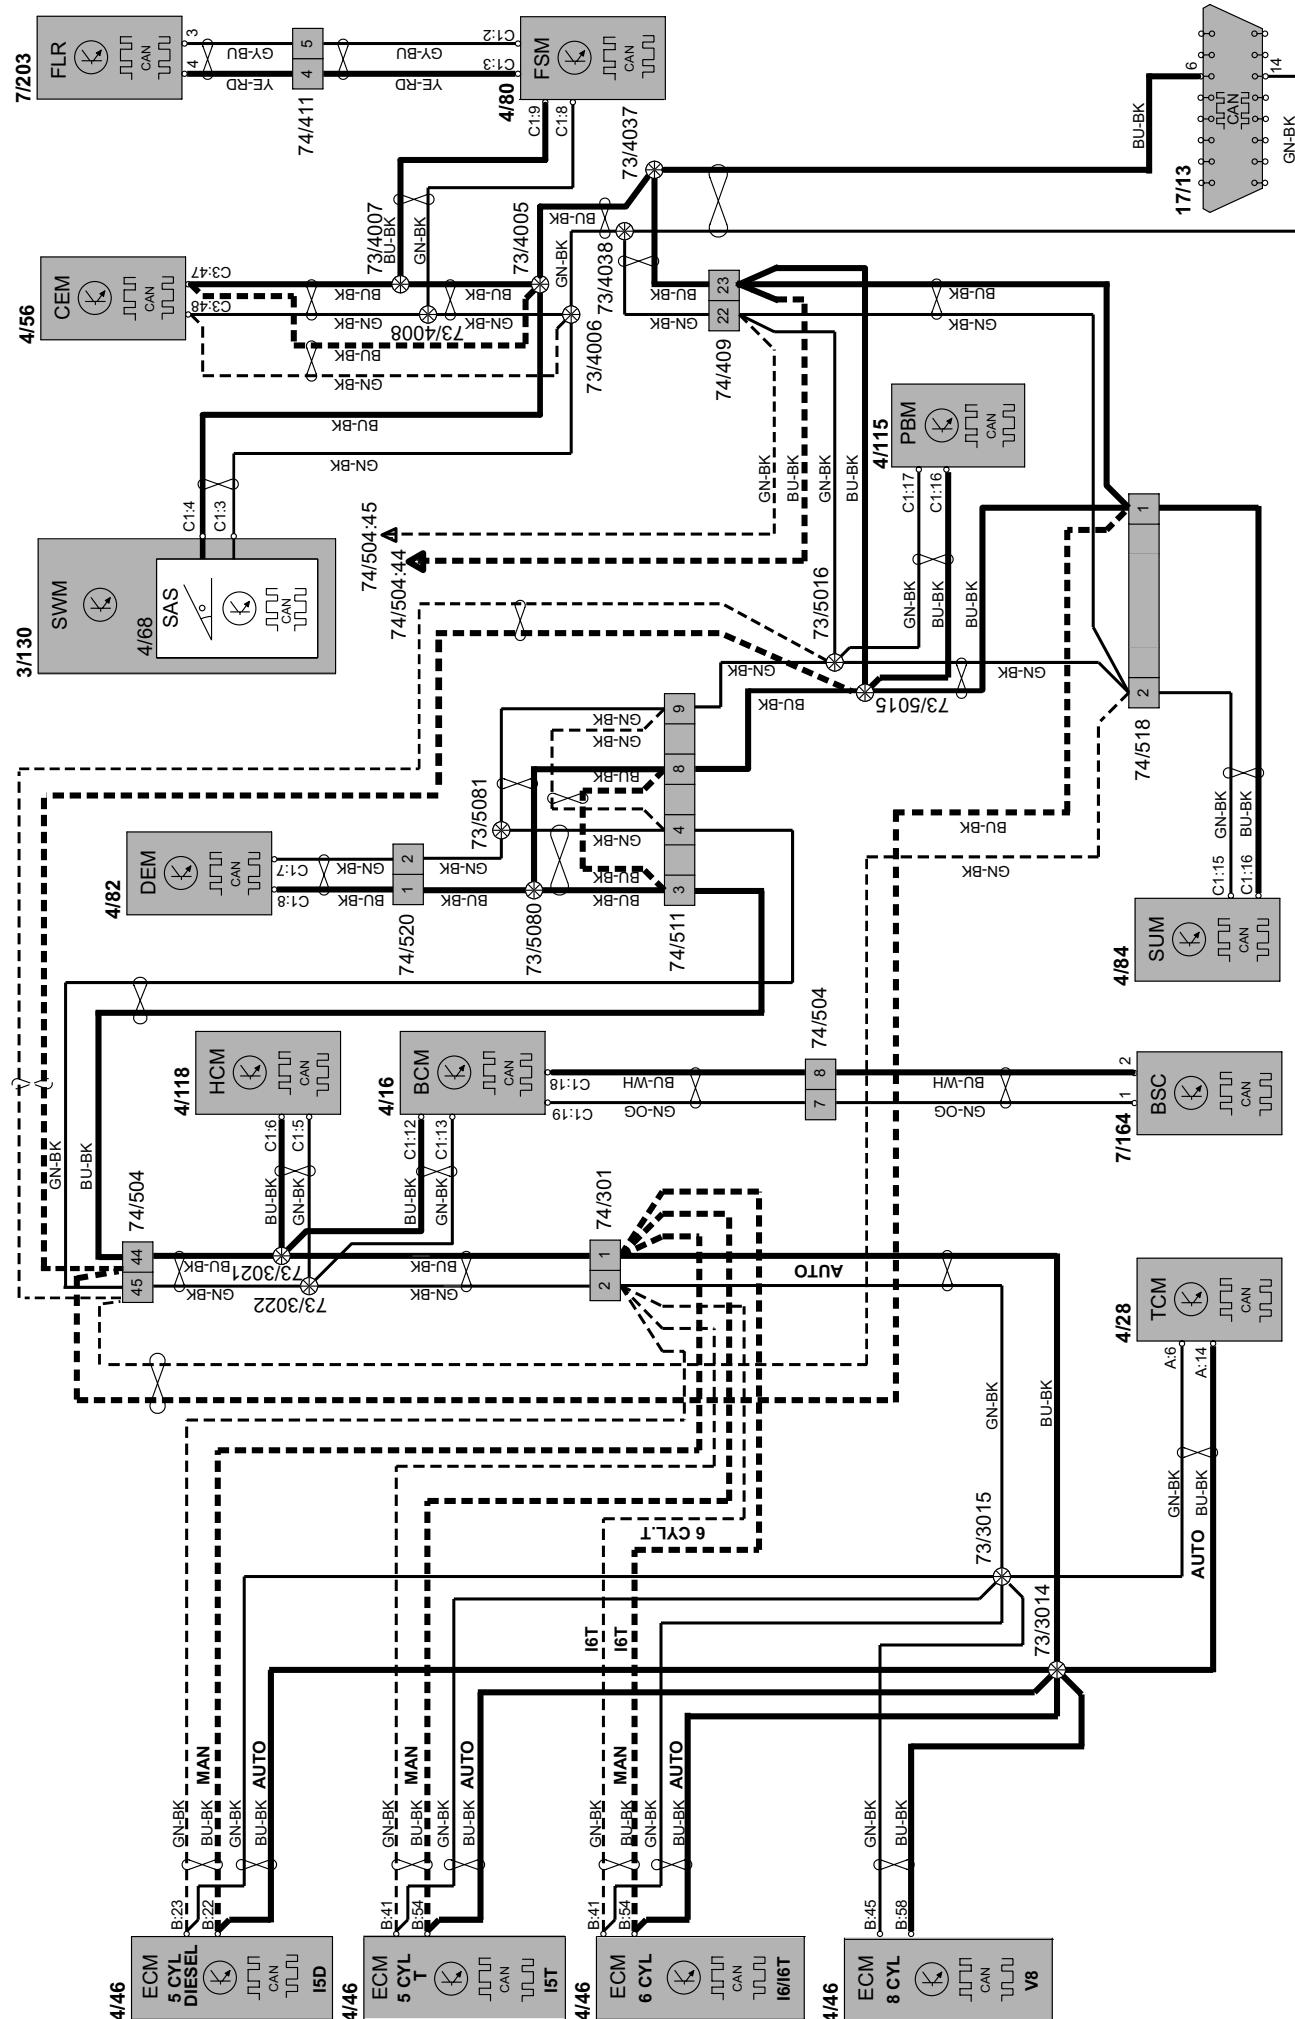


Control modules

Midspeed CAN data communication, LHD

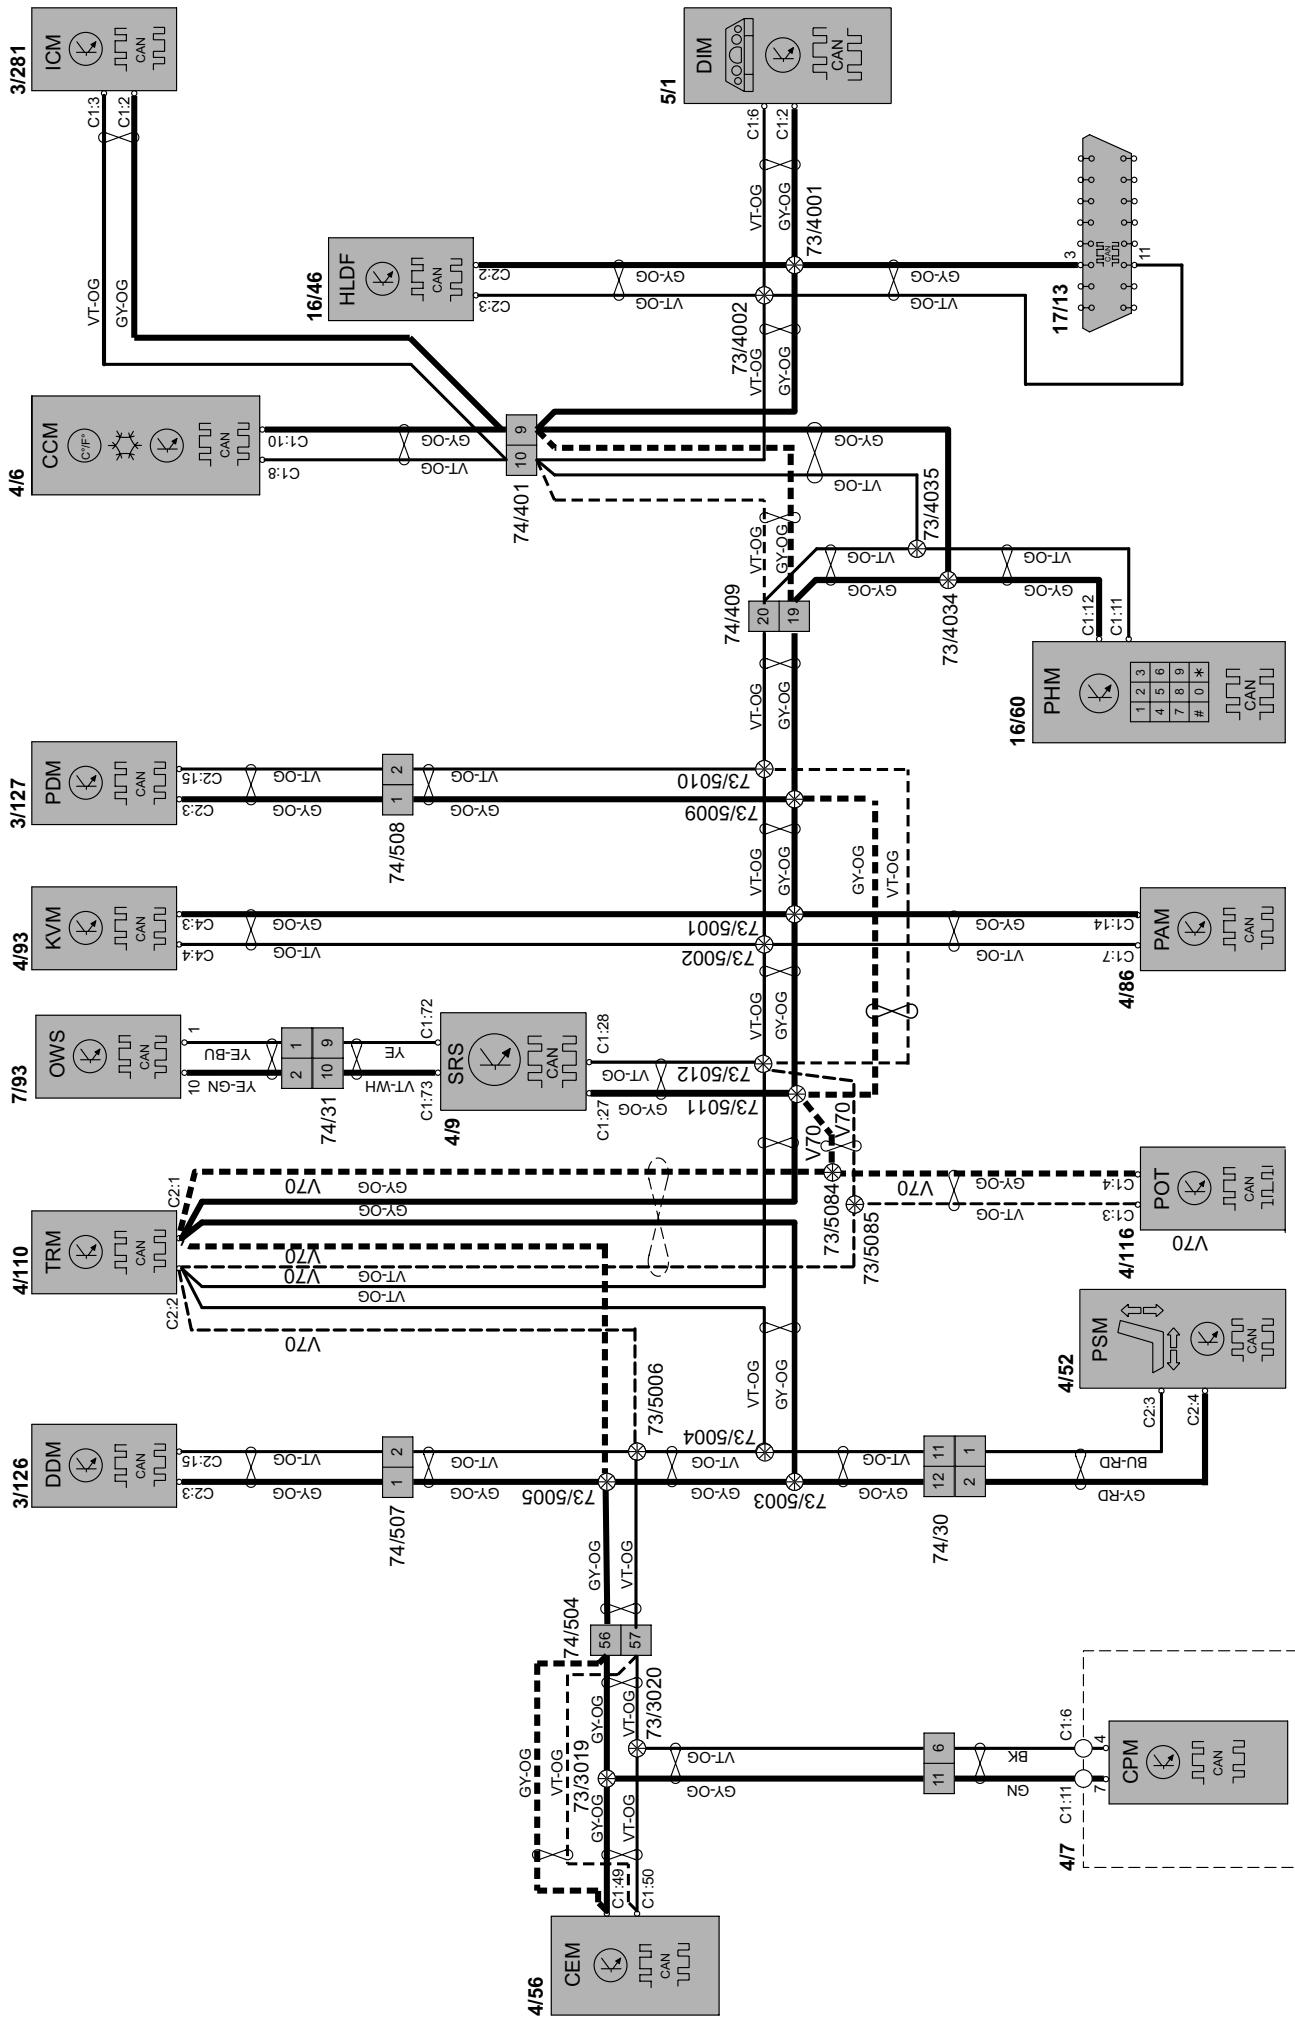


Control modules

Midspeed CAN data communication, RHD

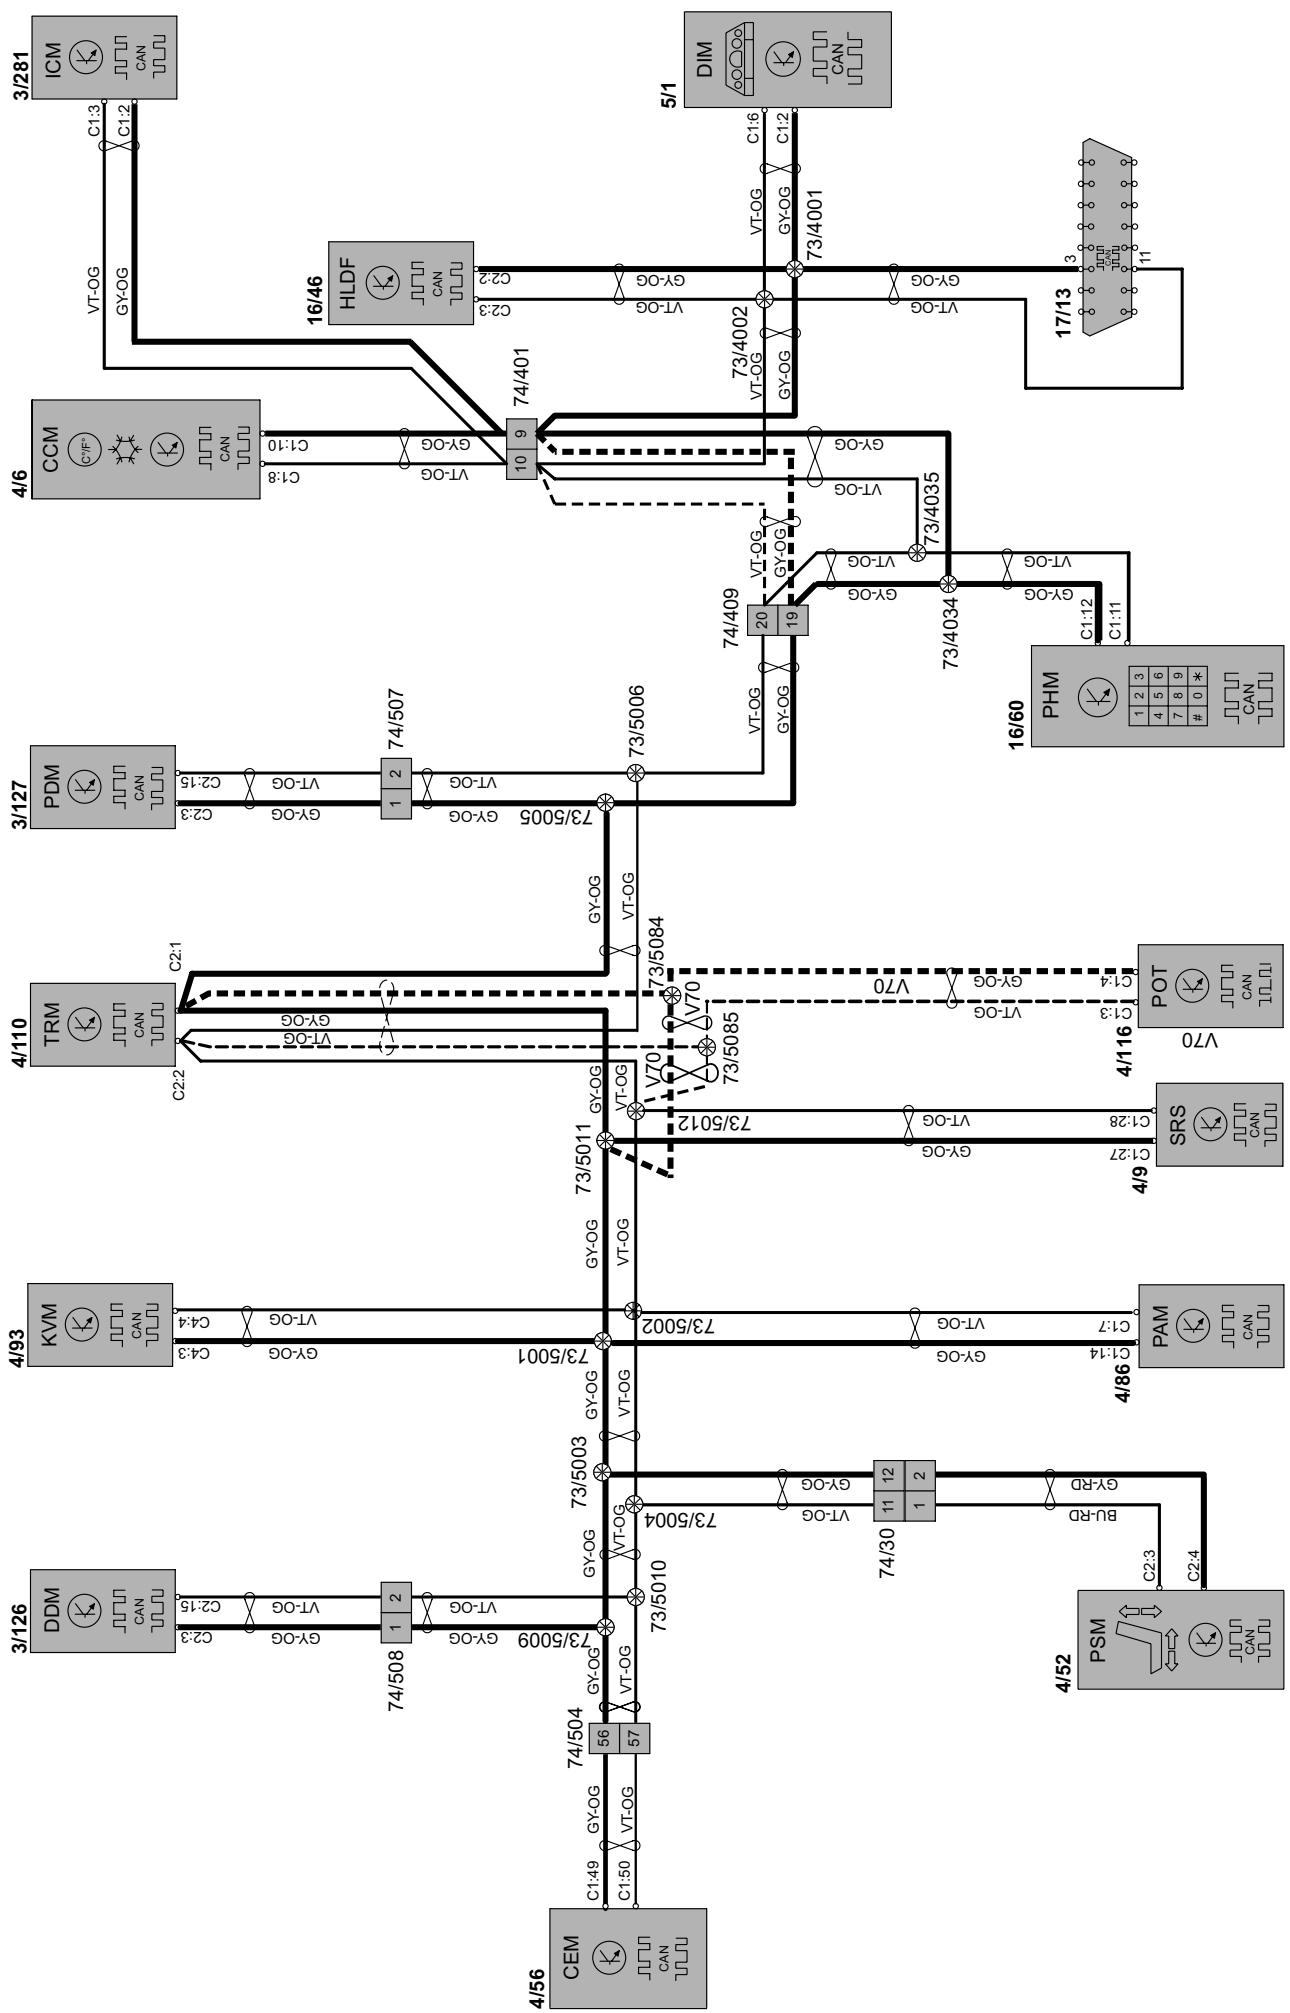


Control modules

Data communication LIN 1:2

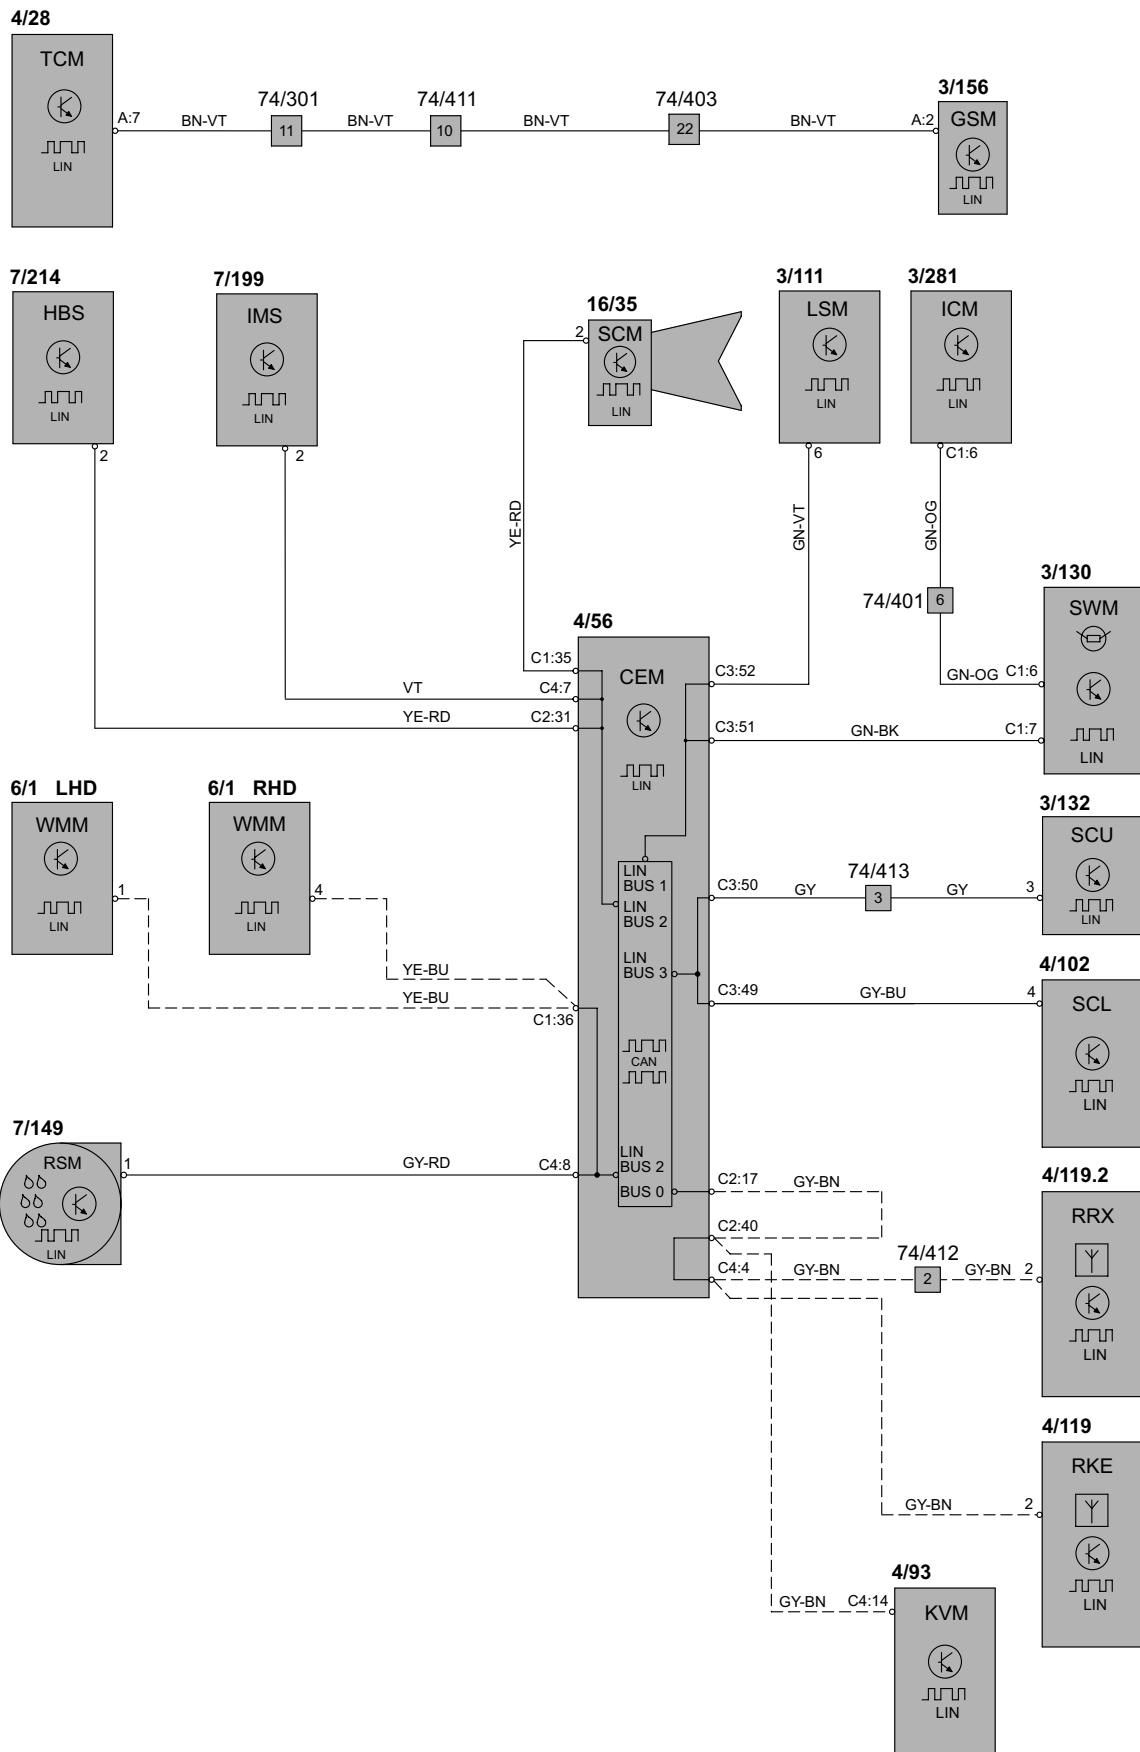


Control modules

Data communication LIN 2:2

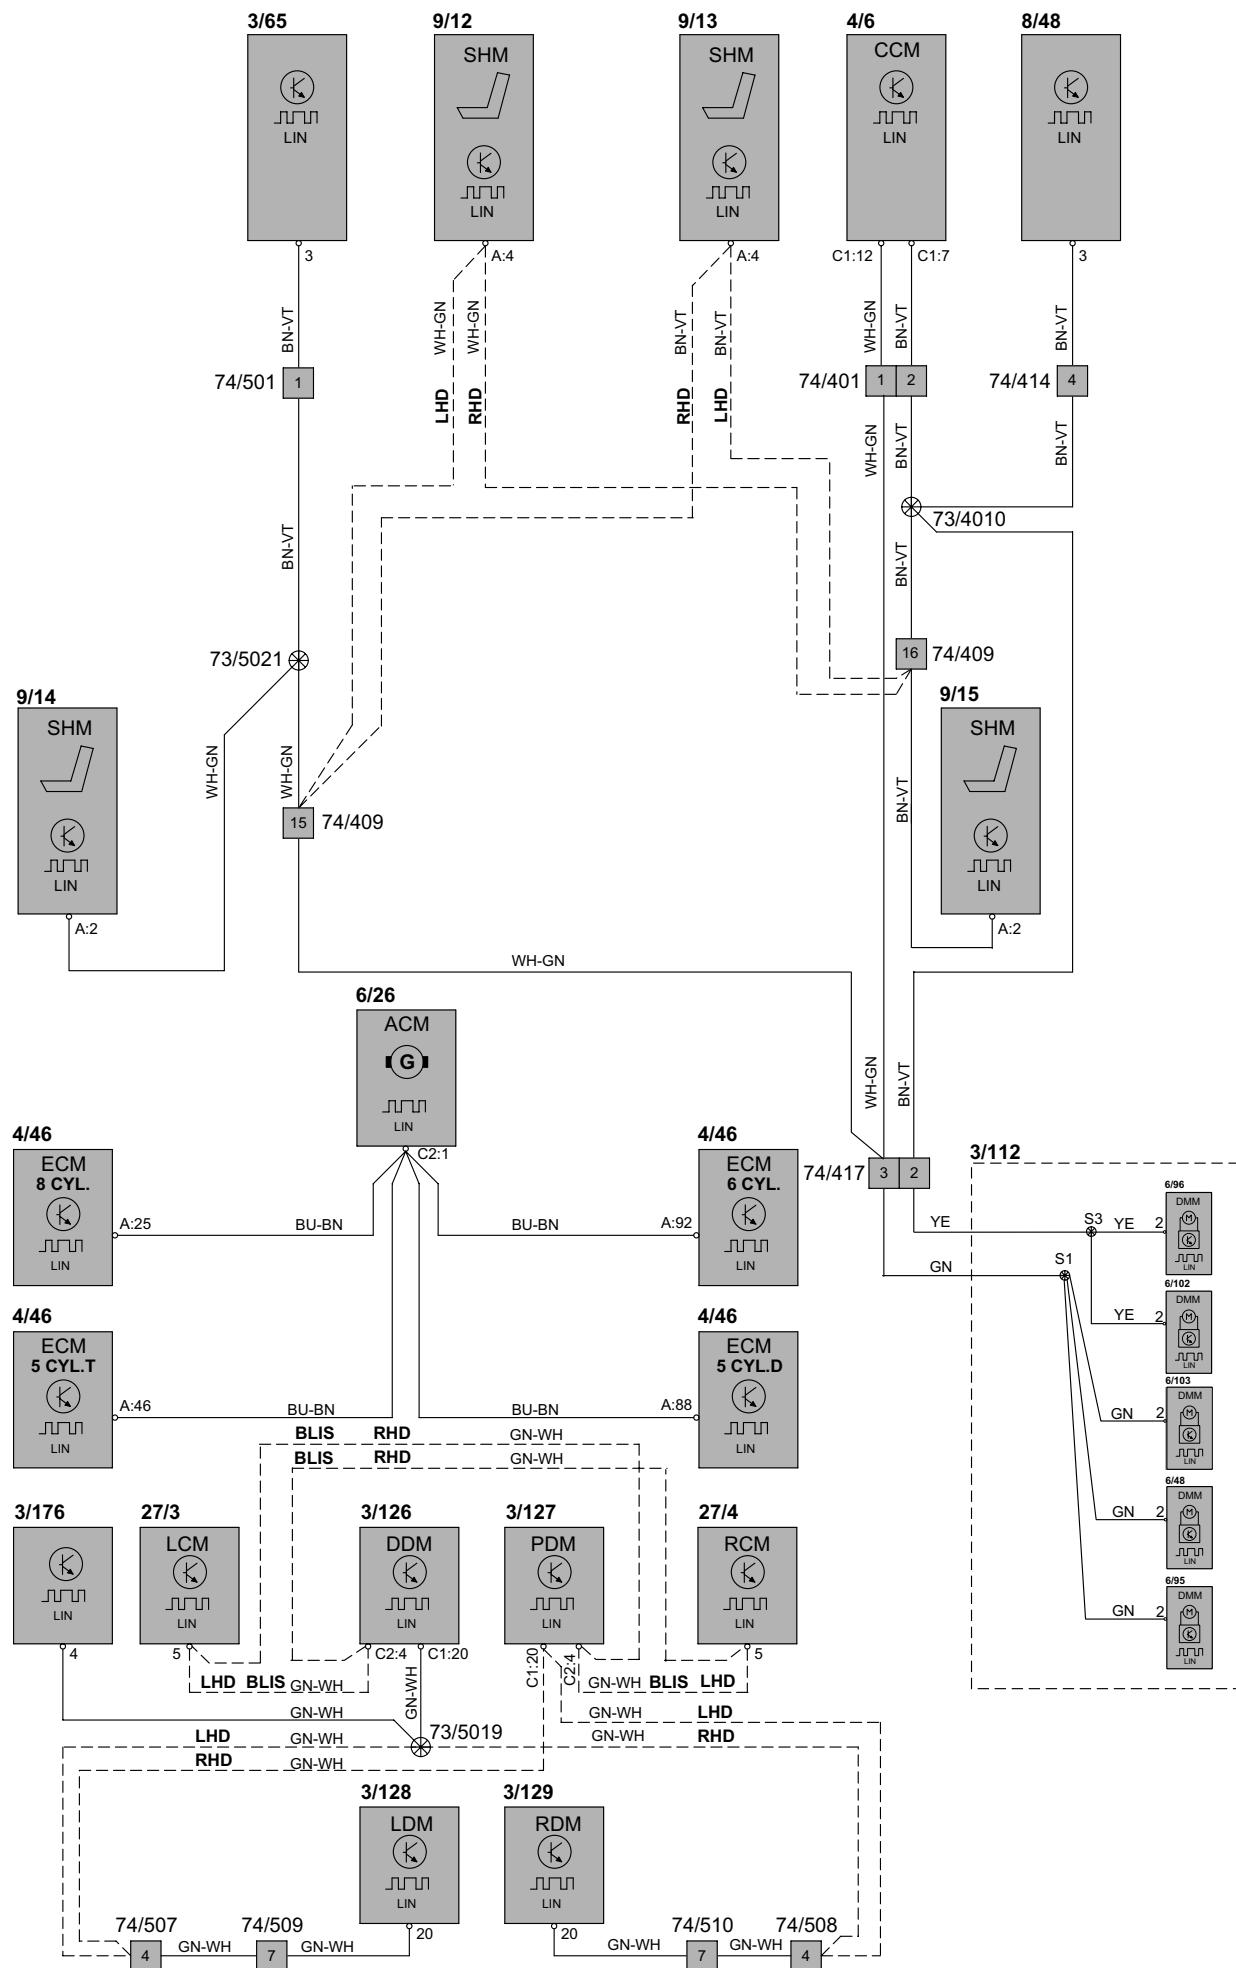


Control modules

Data communication MOST

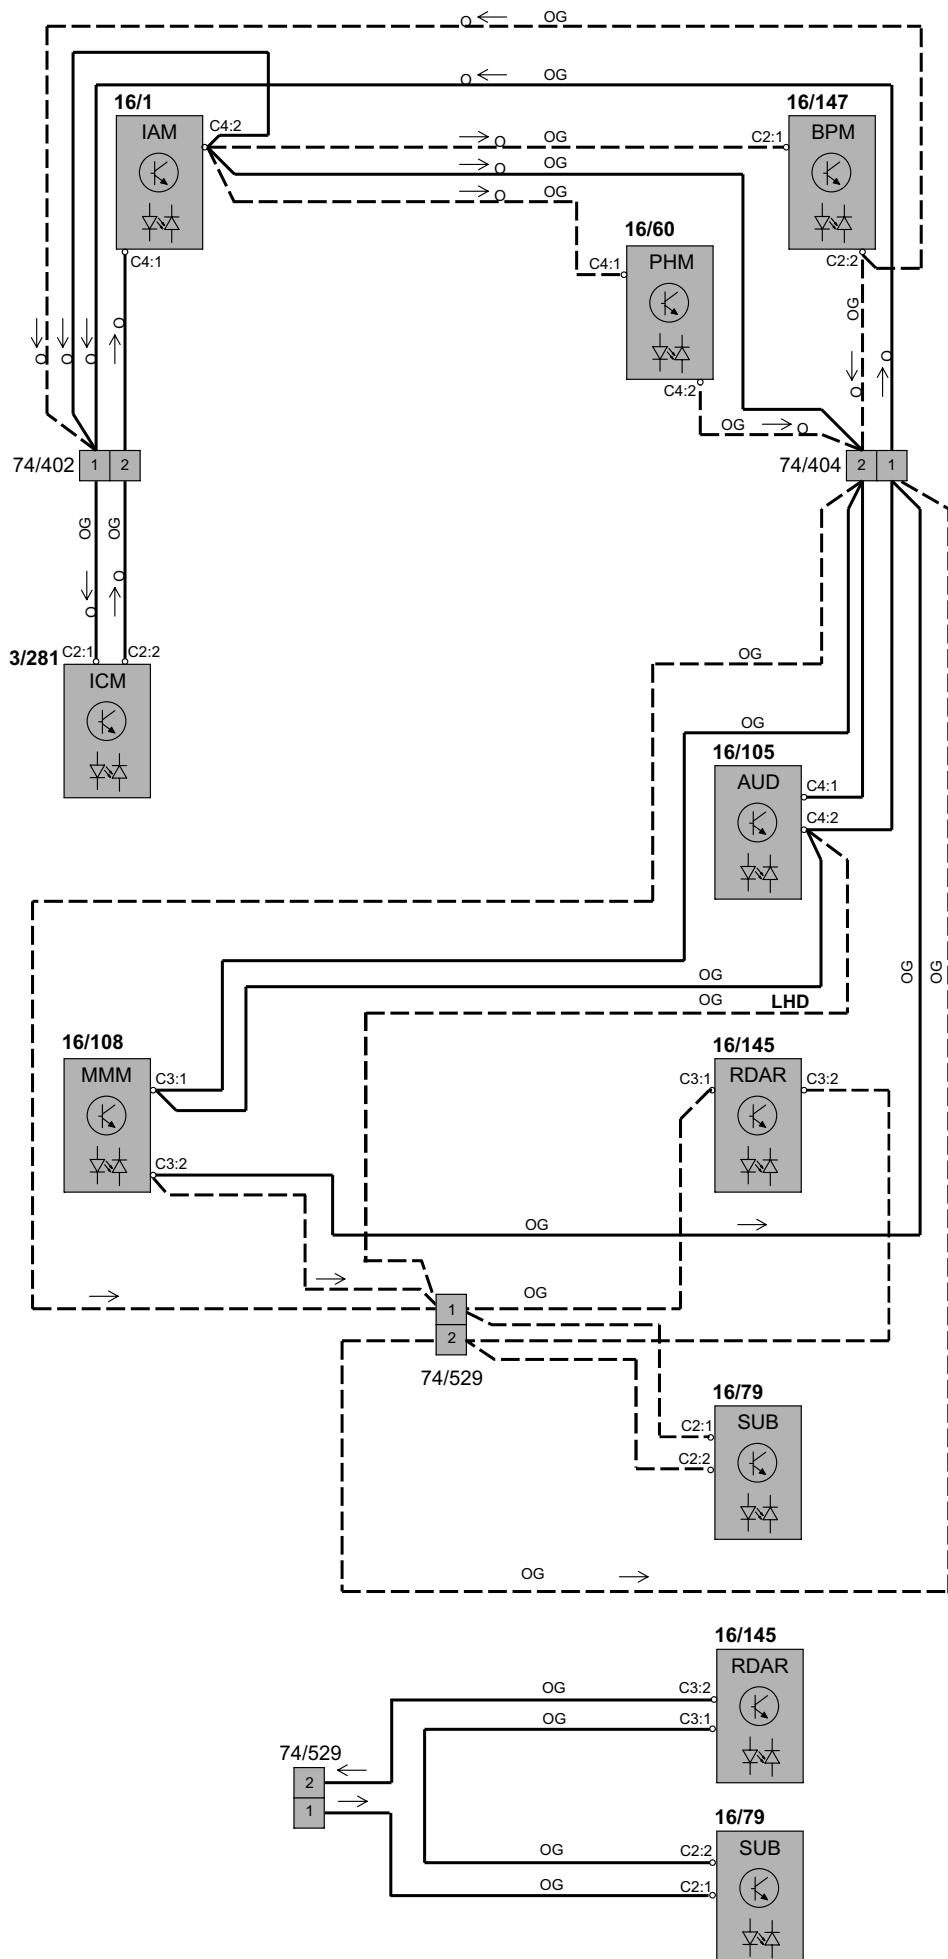


Control modules

Steering Wheel Module (SWM)

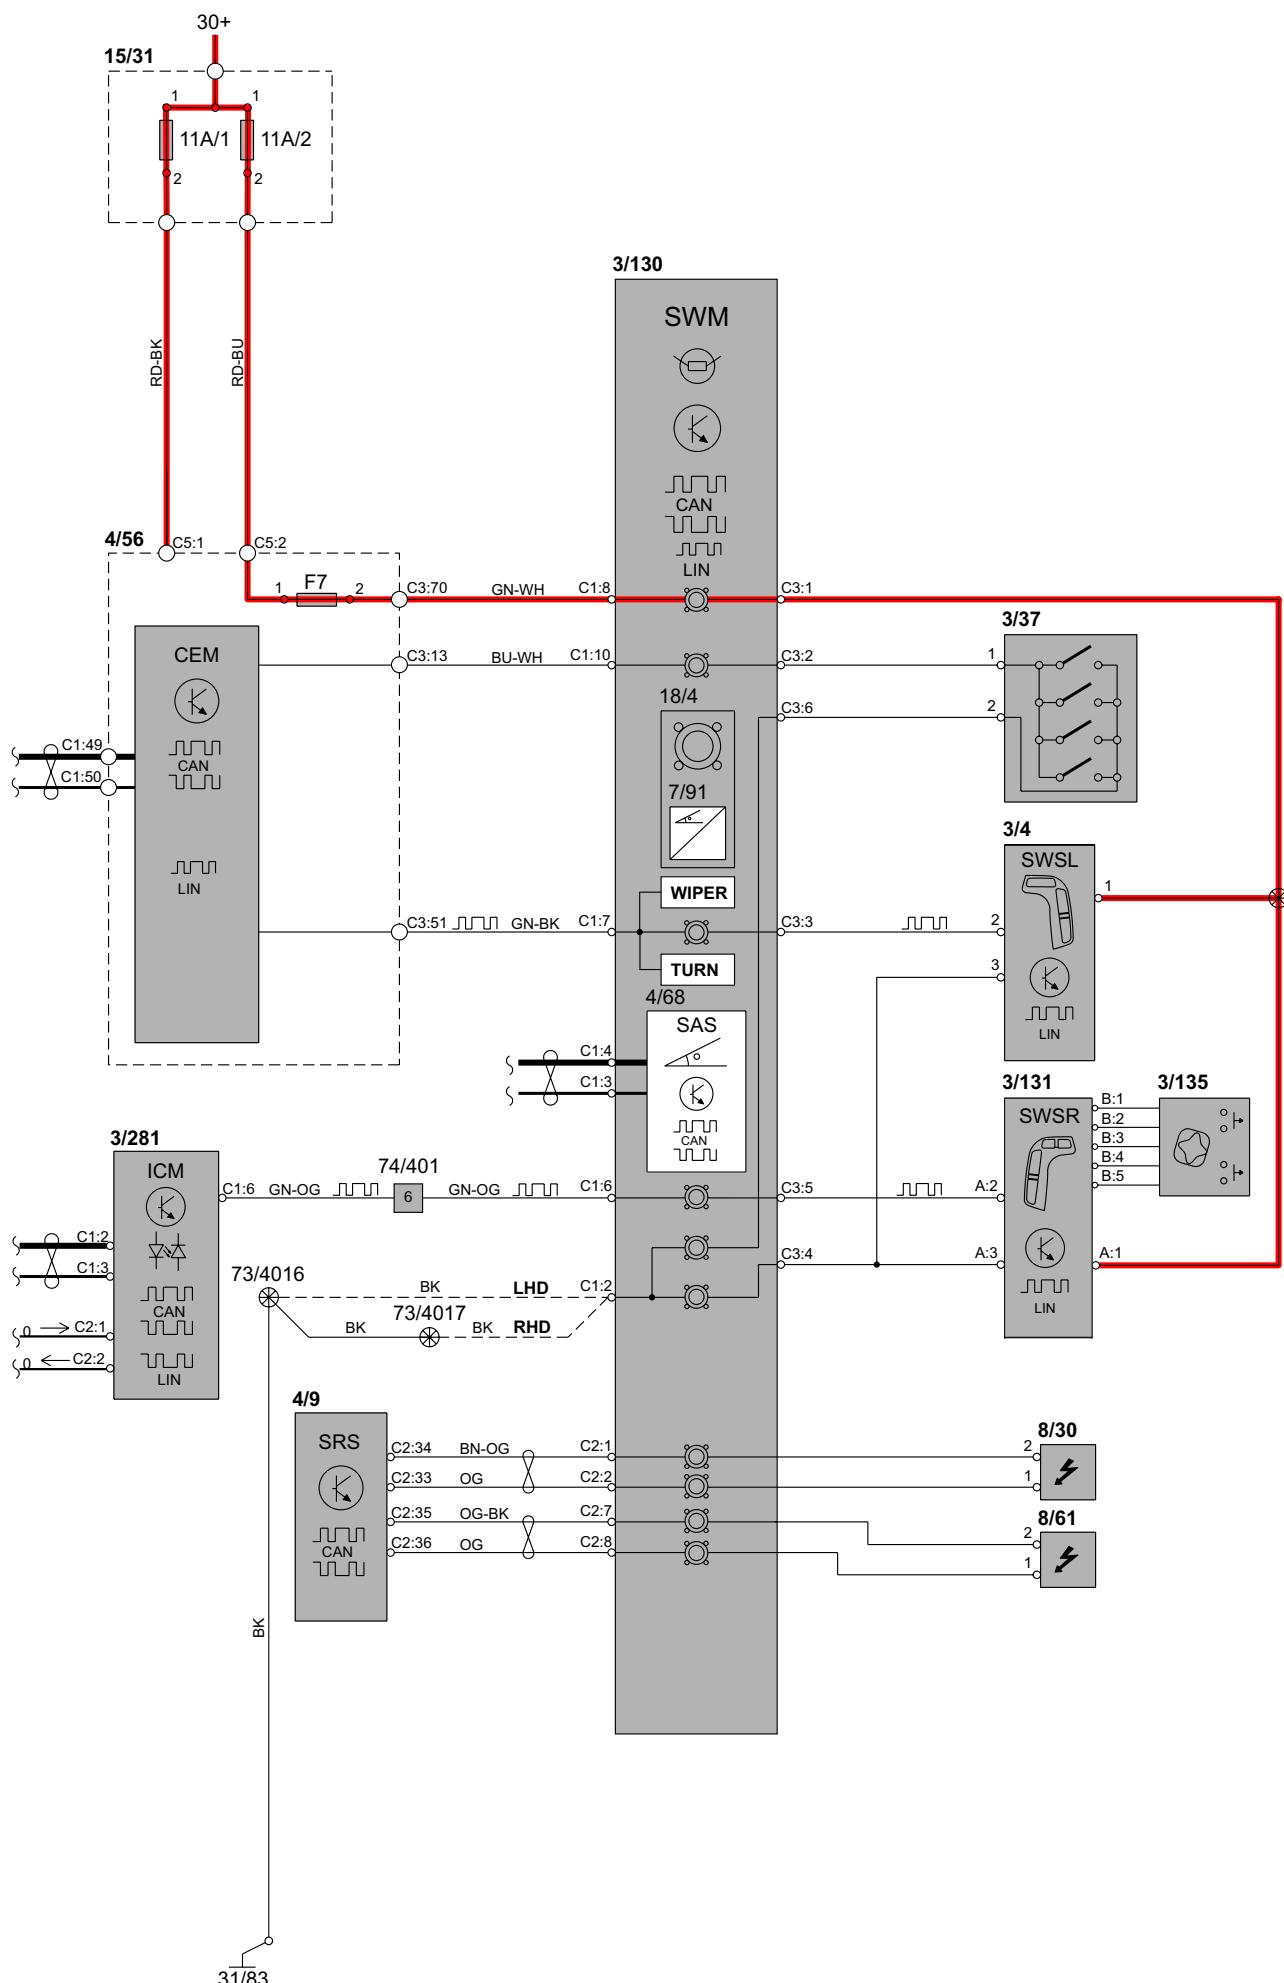


Group 23 Fuel system

Engine management system, 5 Cyl. Turbo 1:2

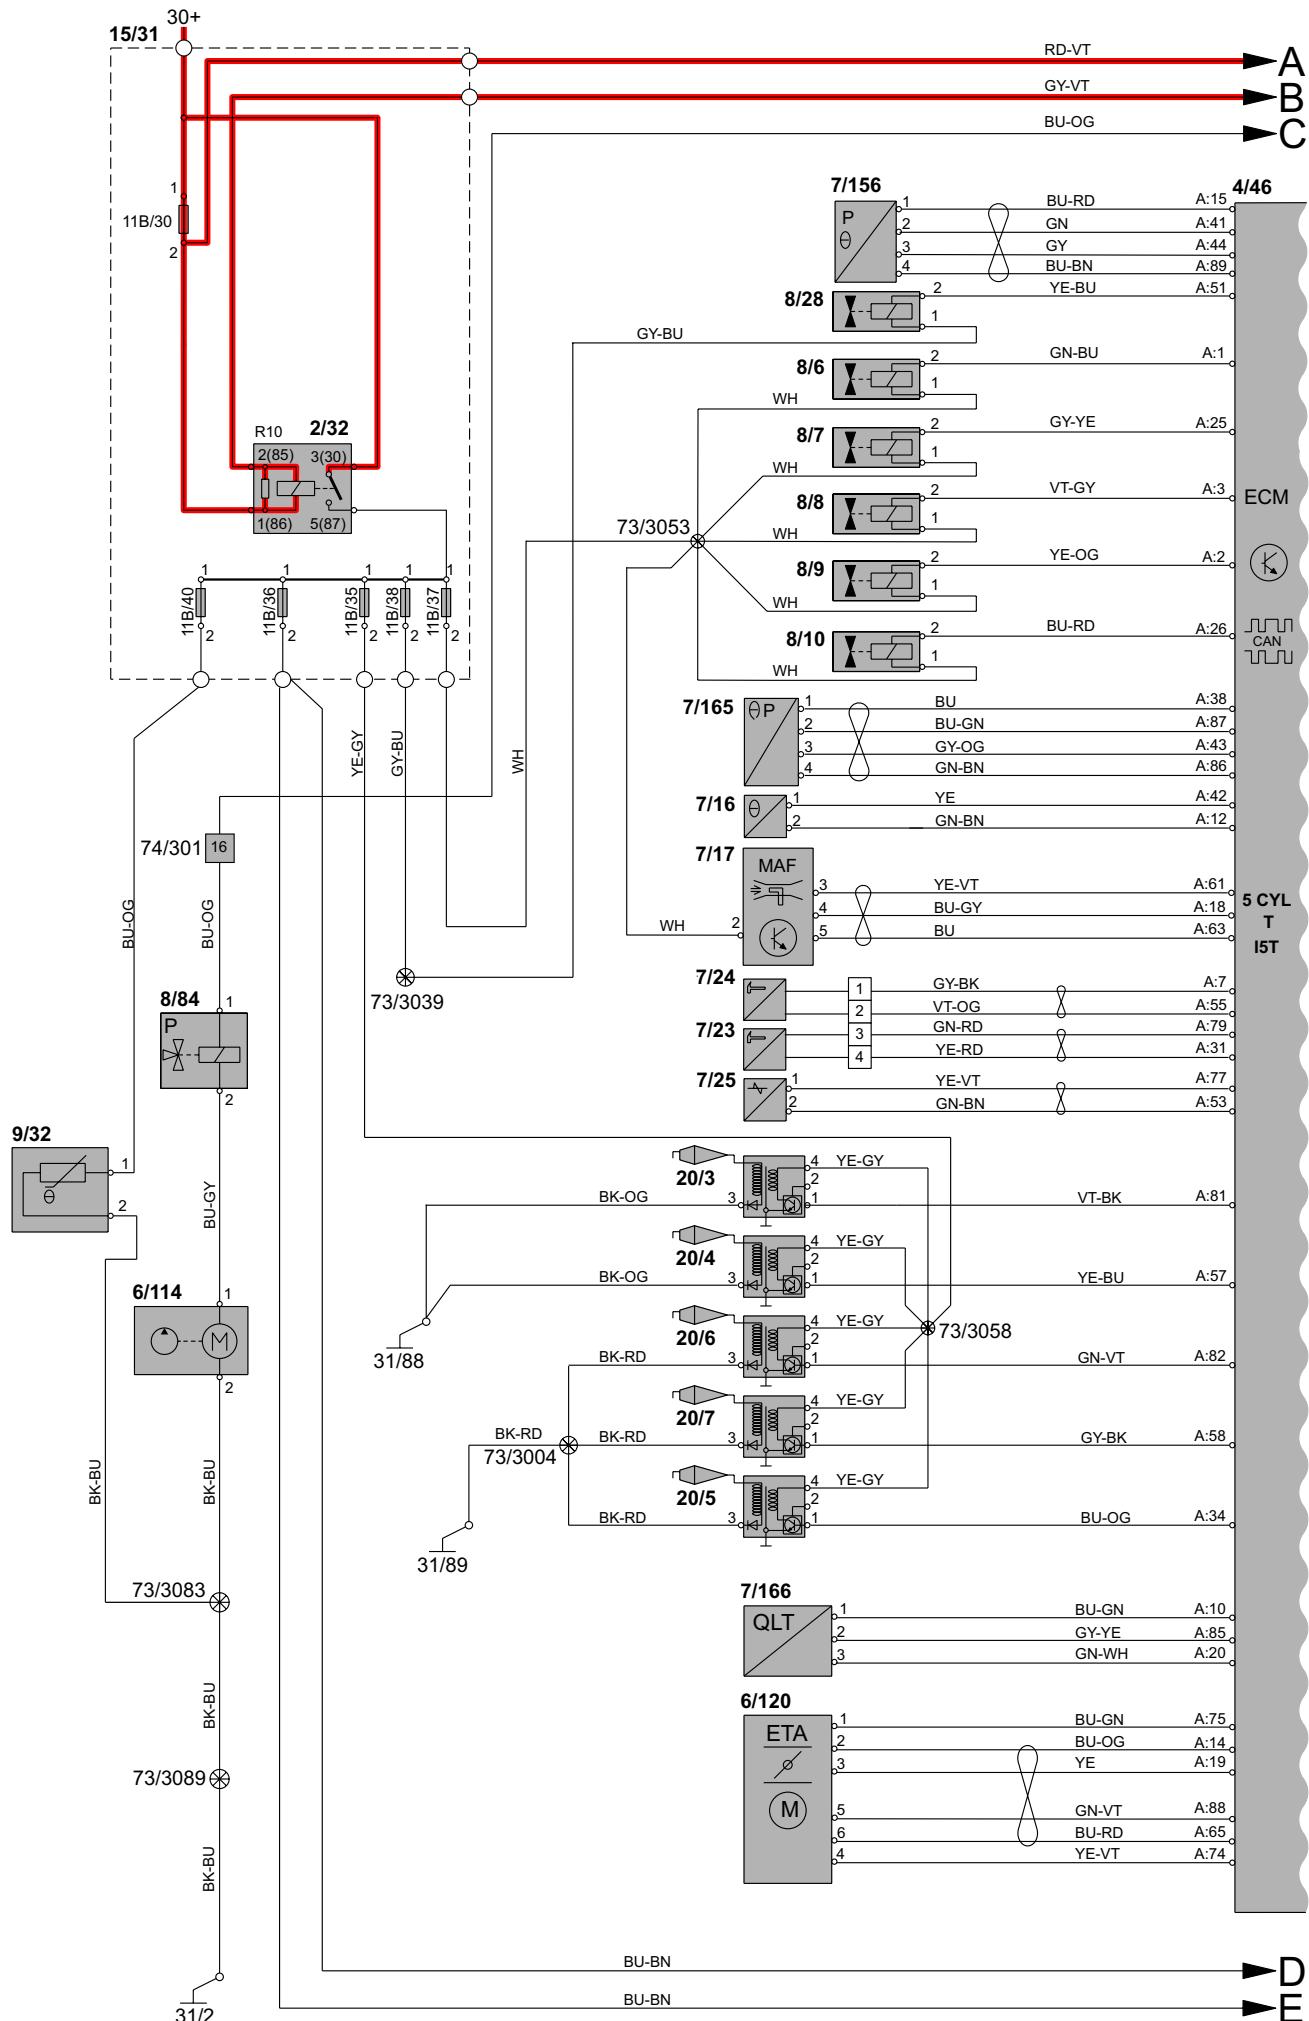


Group 23 Fuel system

Engine management system, 5-cyl. Turbo 2:2

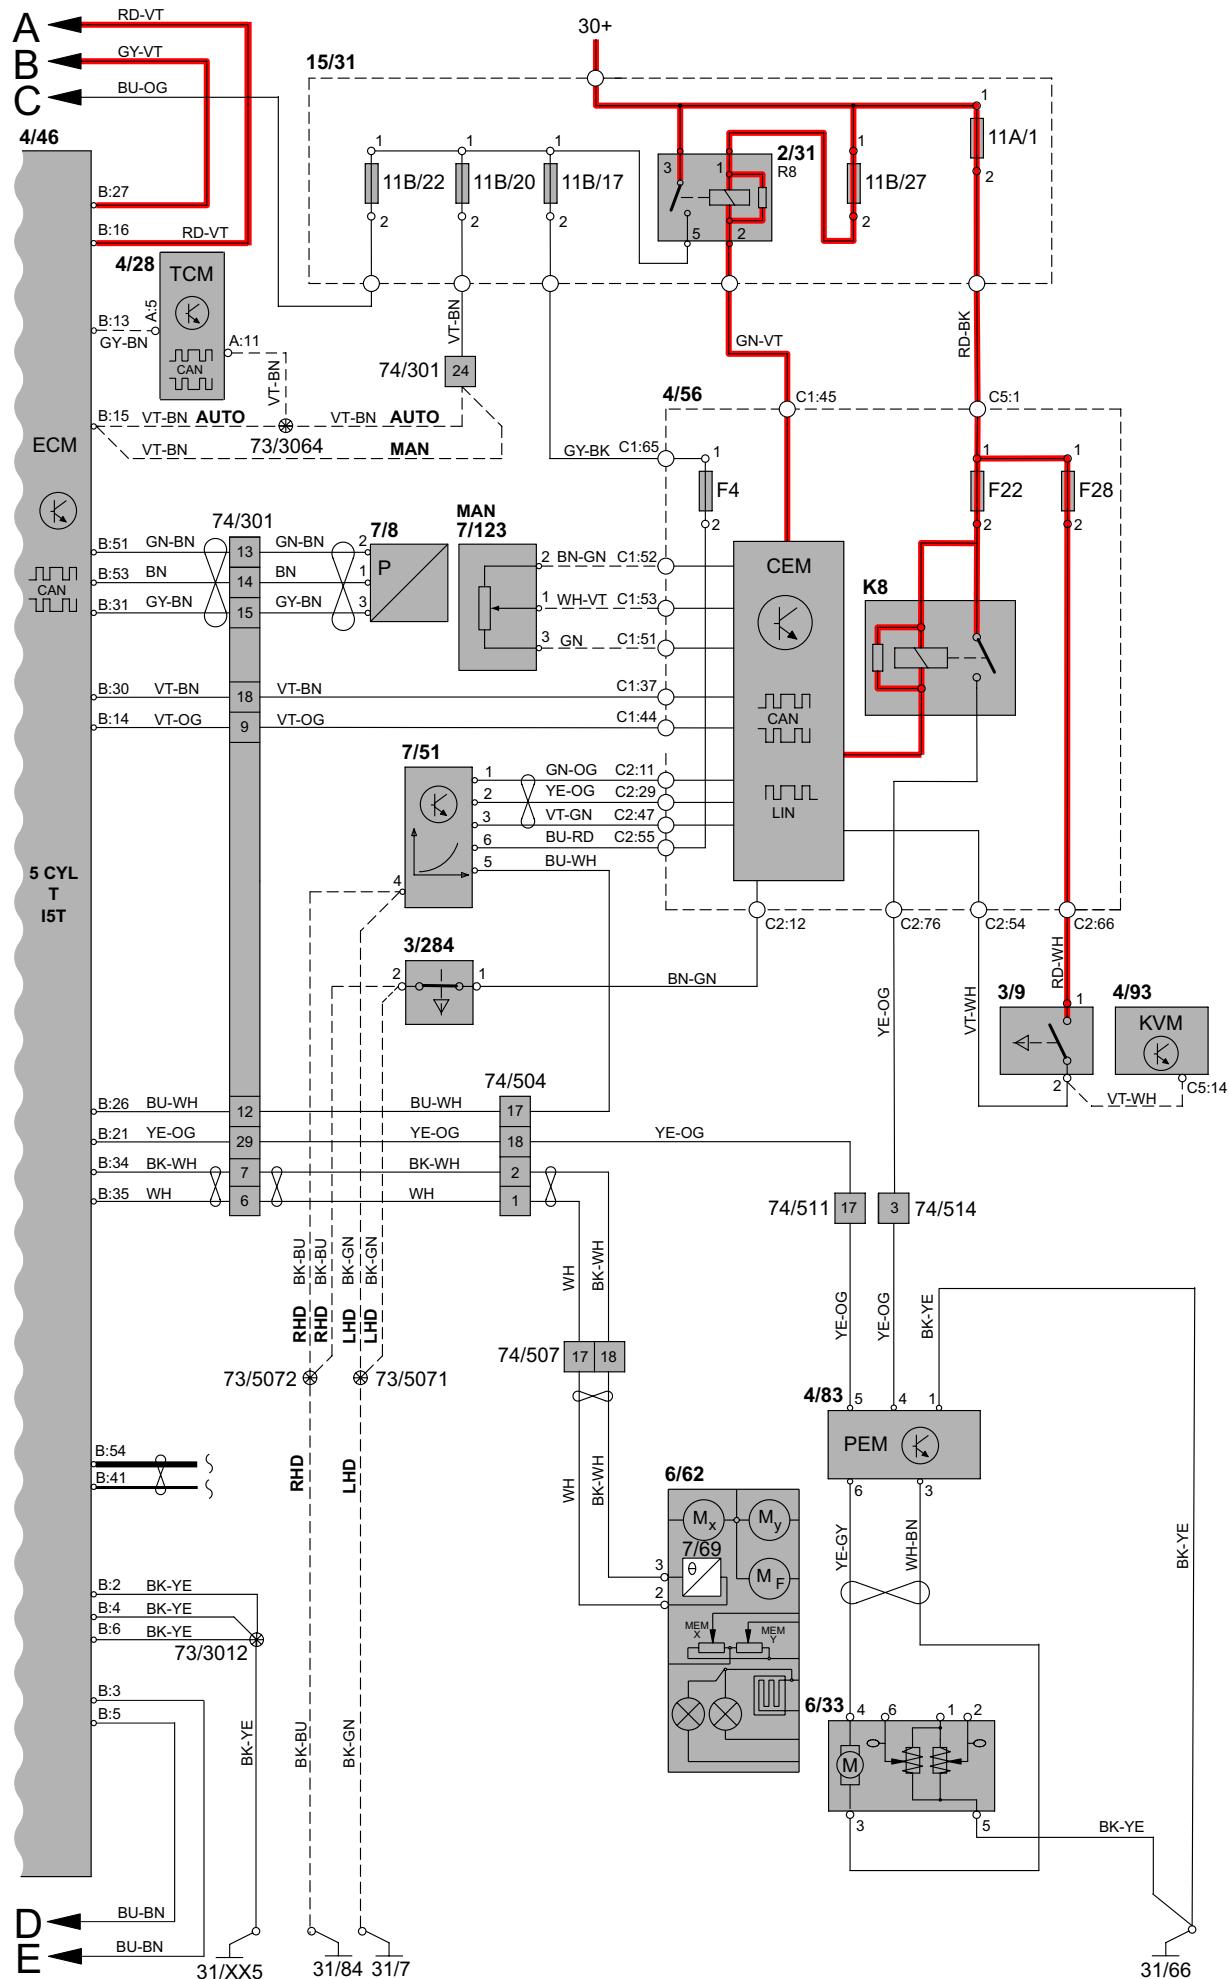


Group 23 Fuel system

Engine management system, 6 cyl. 1:2

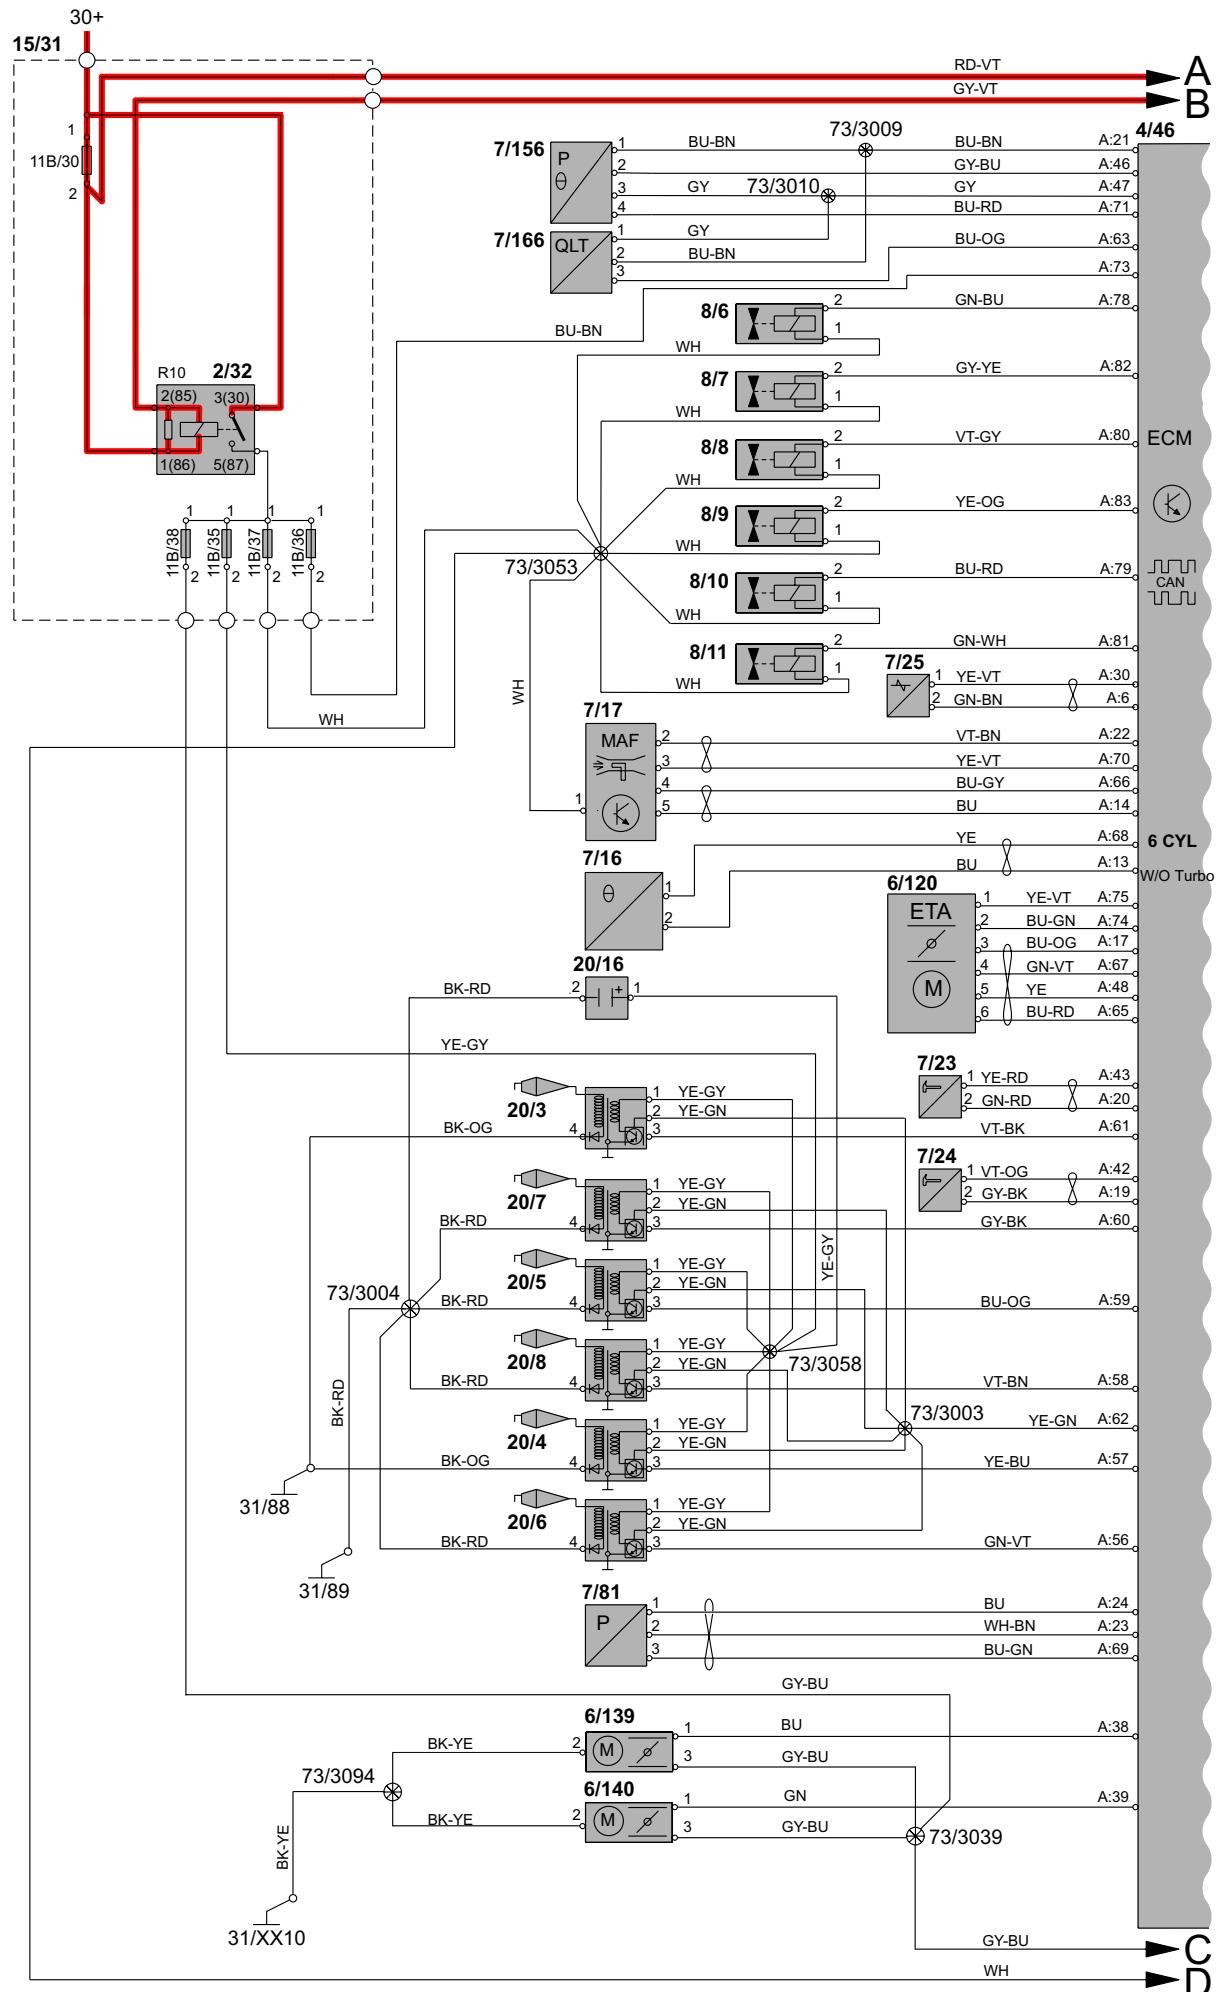


Group 23 Fuel system

Engine management system, 6 cyl. 2:2

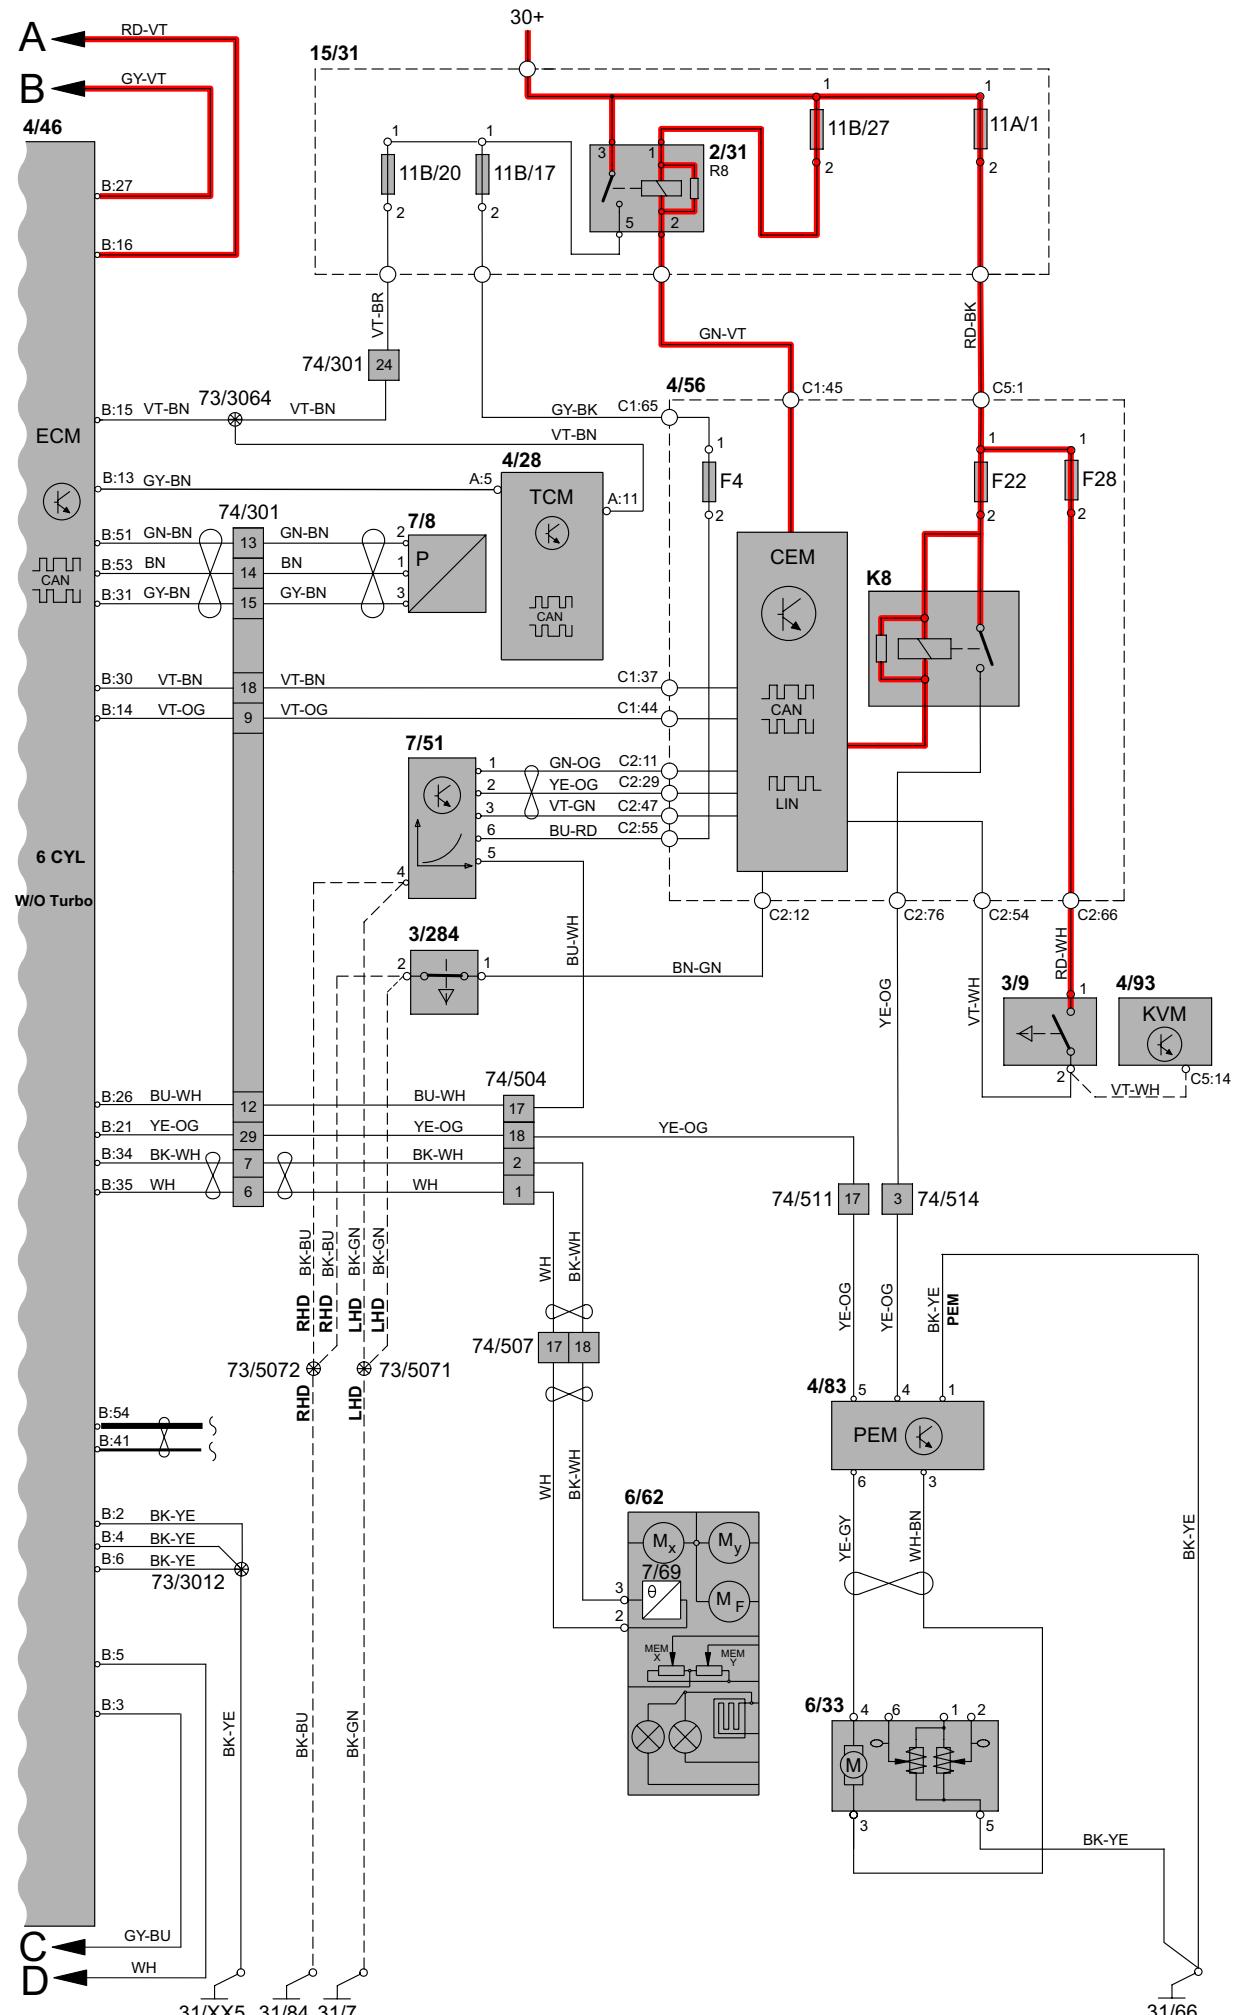


Group 23 Fuel system

Engine management system, 6-cyl. Turbo 1:2

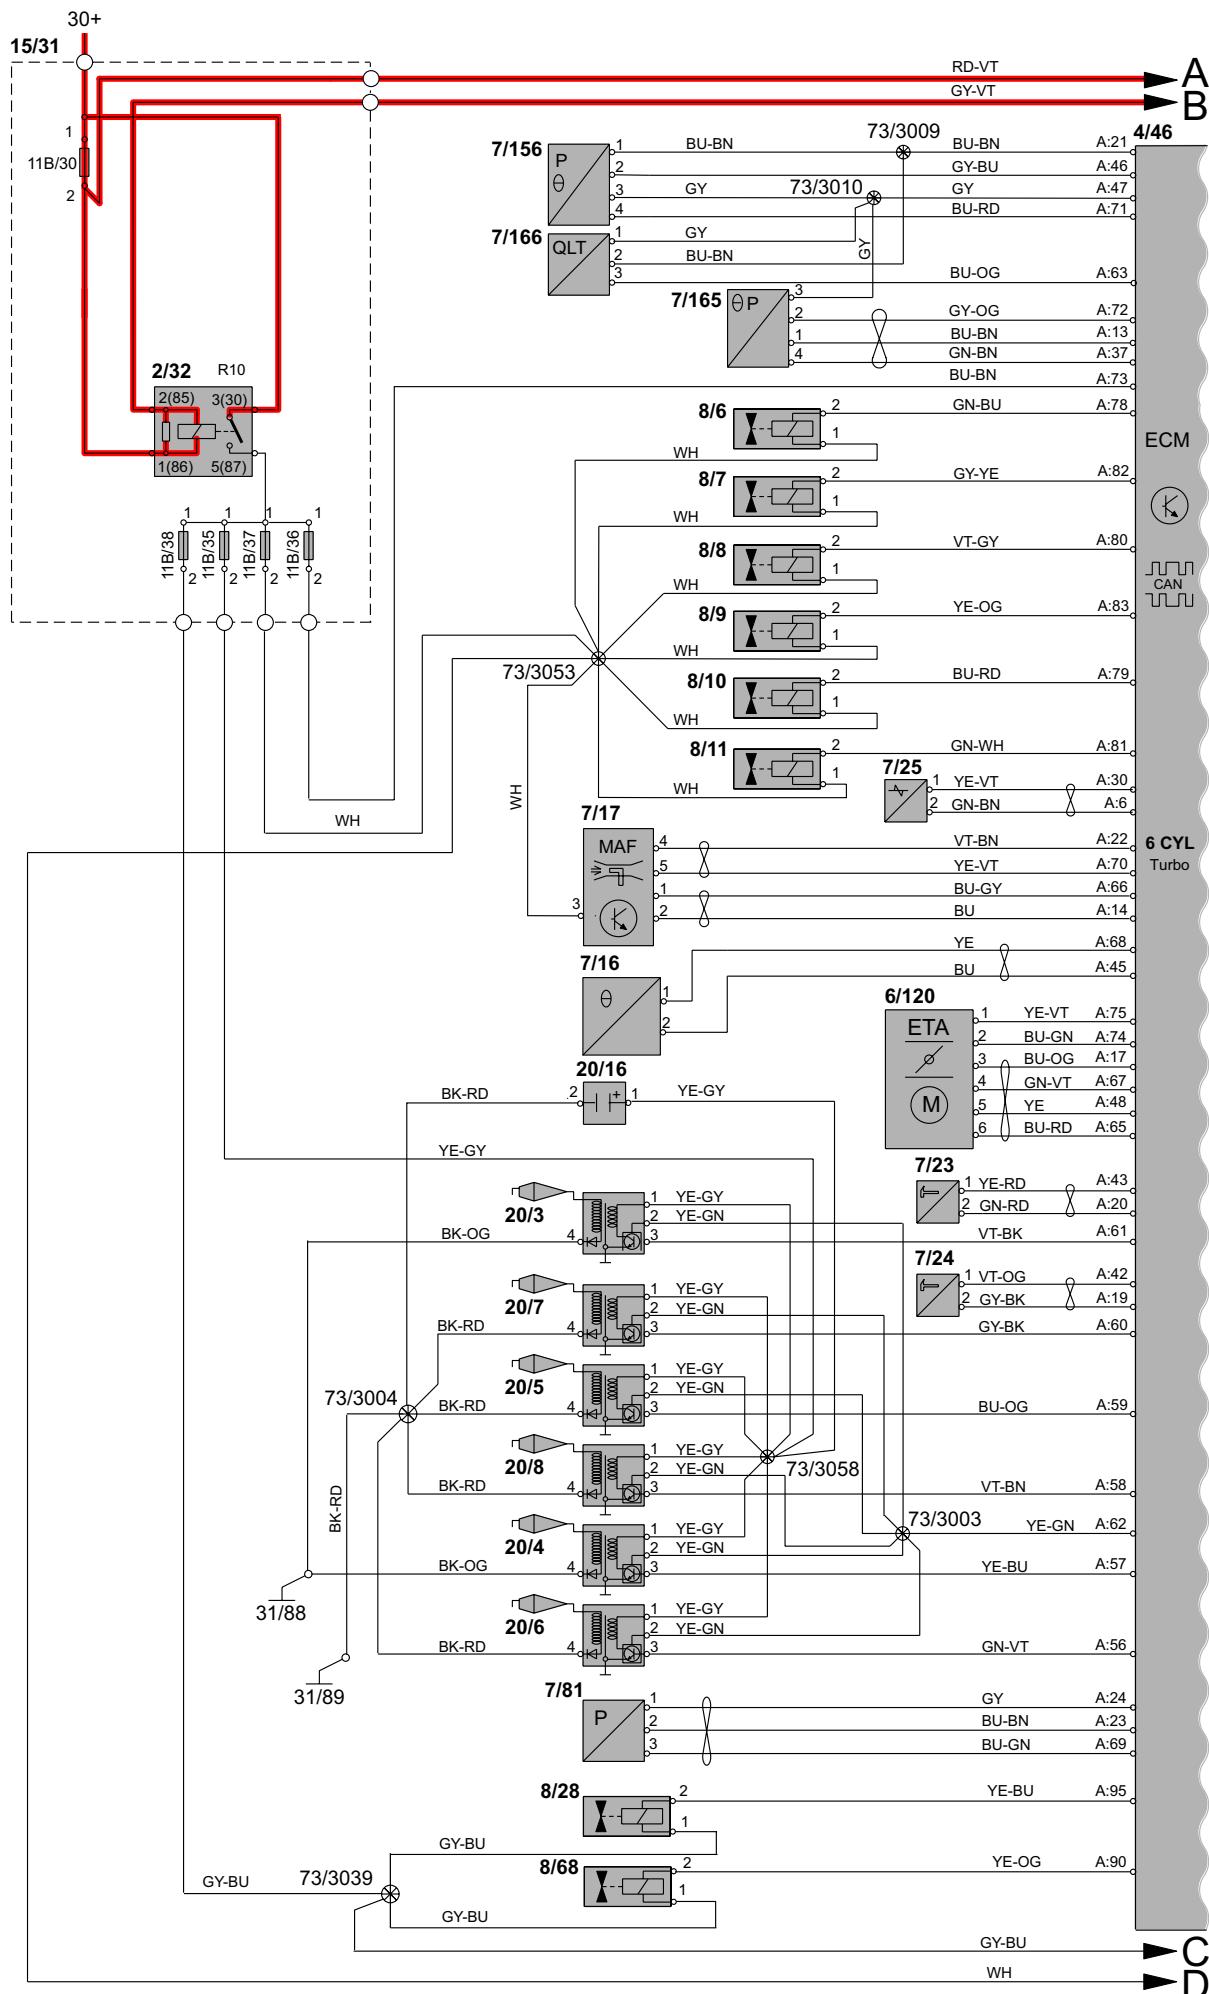


Group 23 Fuel system

Engine management system, 6-cyl. Turbo 2:2

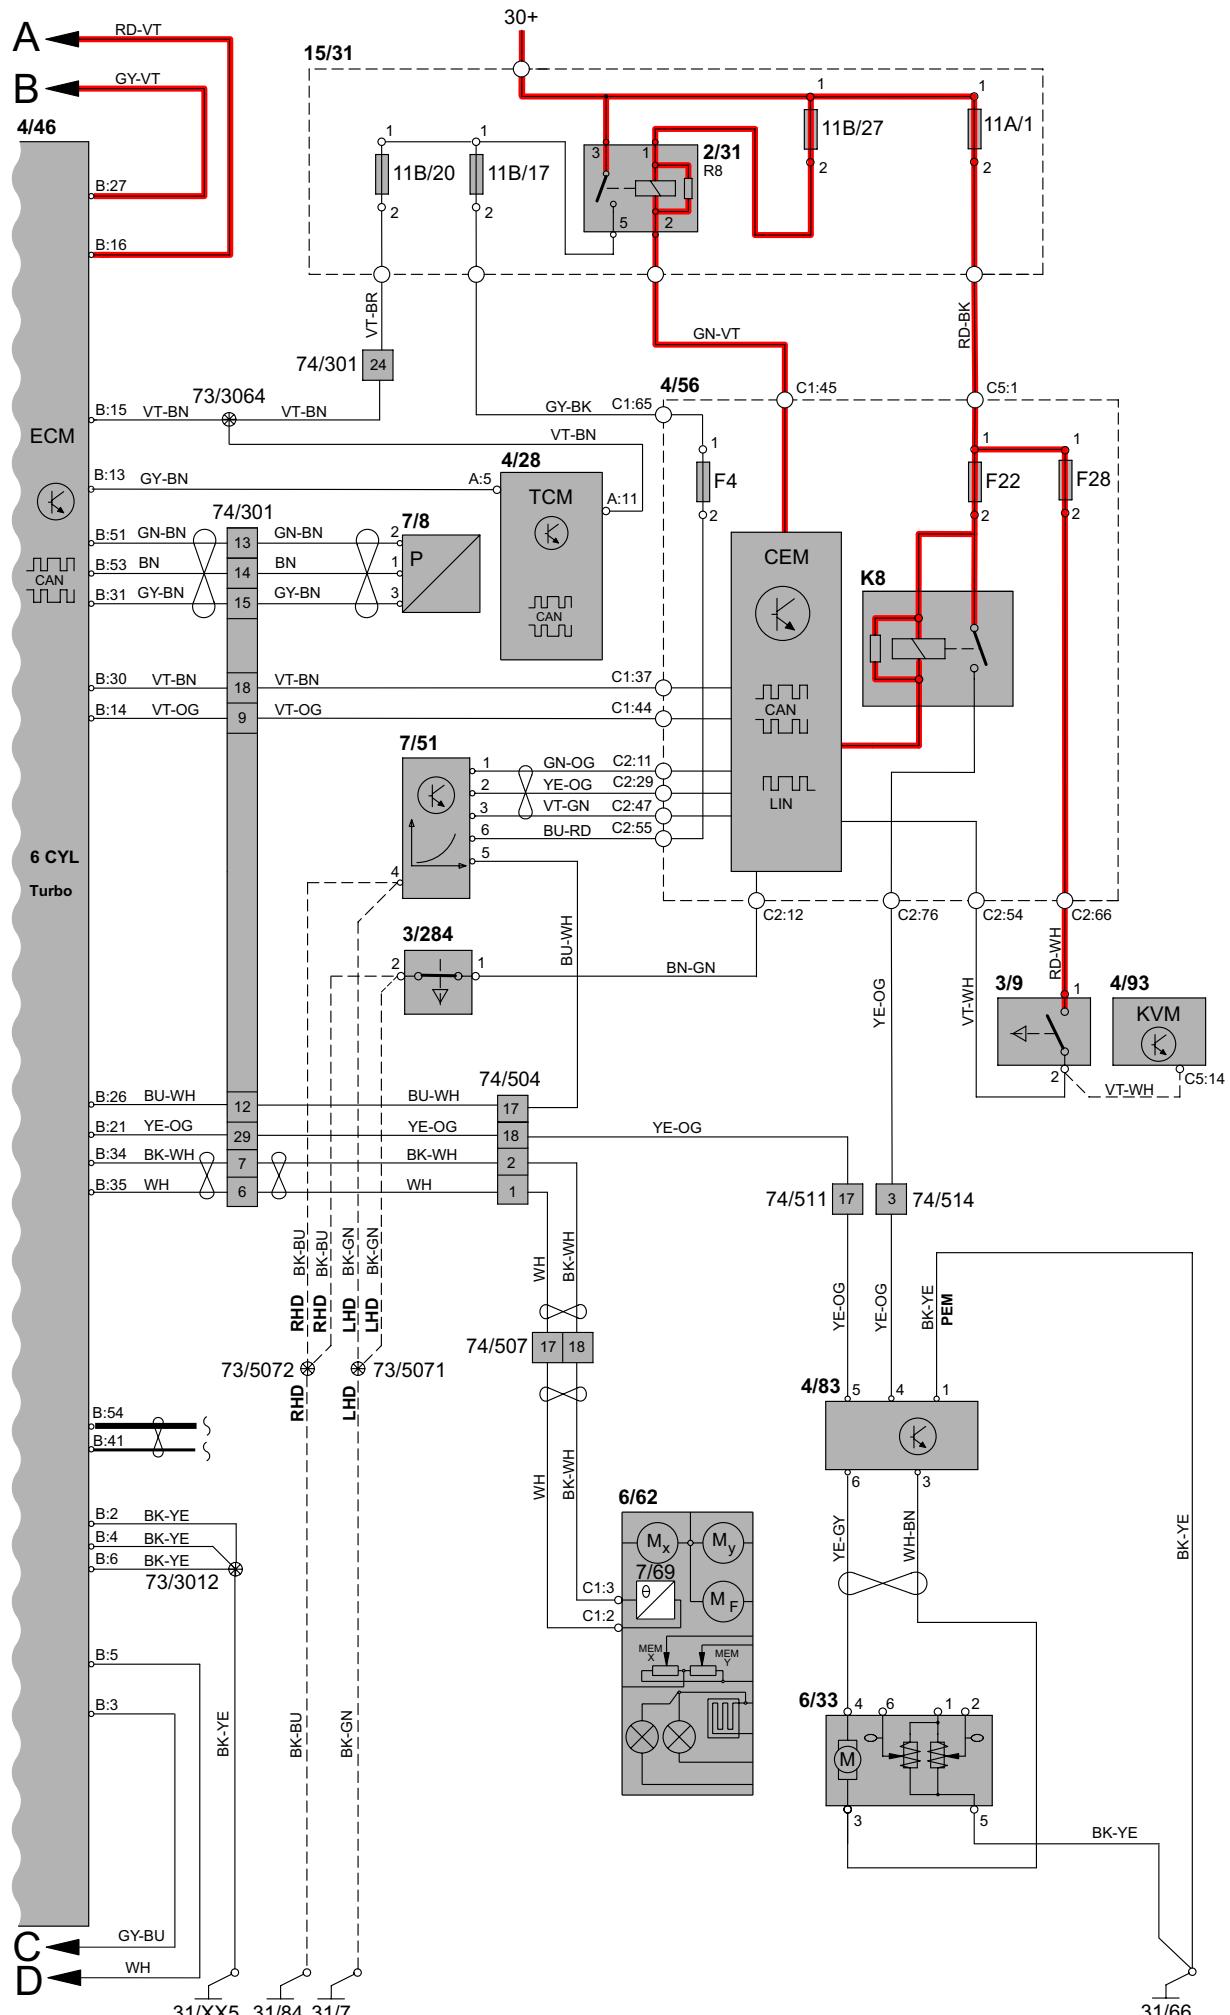


Group 23 Fuel system

Engine management system, 8 cyl. 1:2

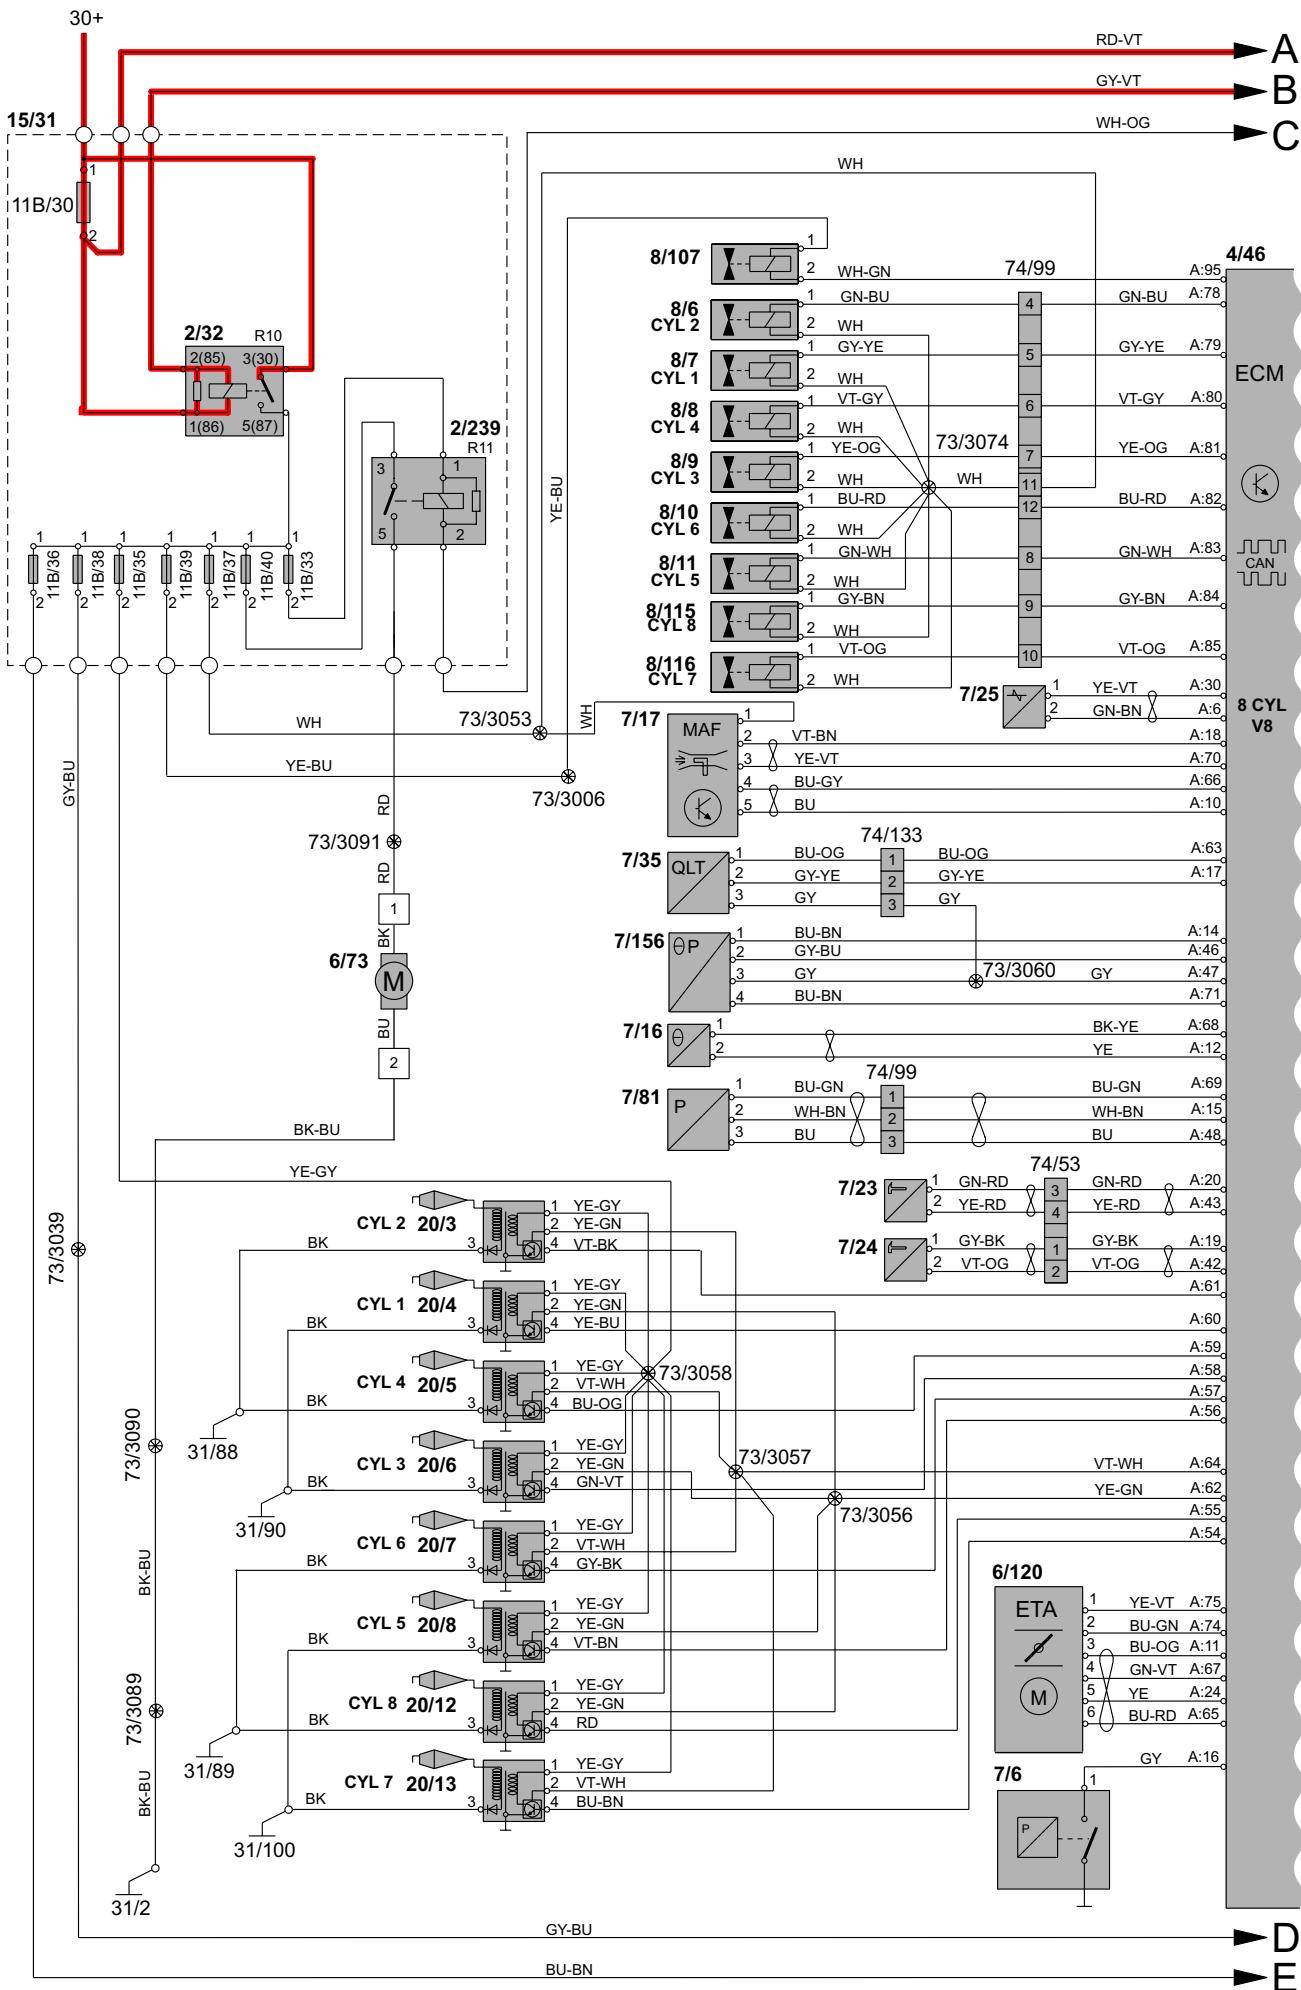


Group 23 Fuel system

Engine management system, 8 cyl. 2:2

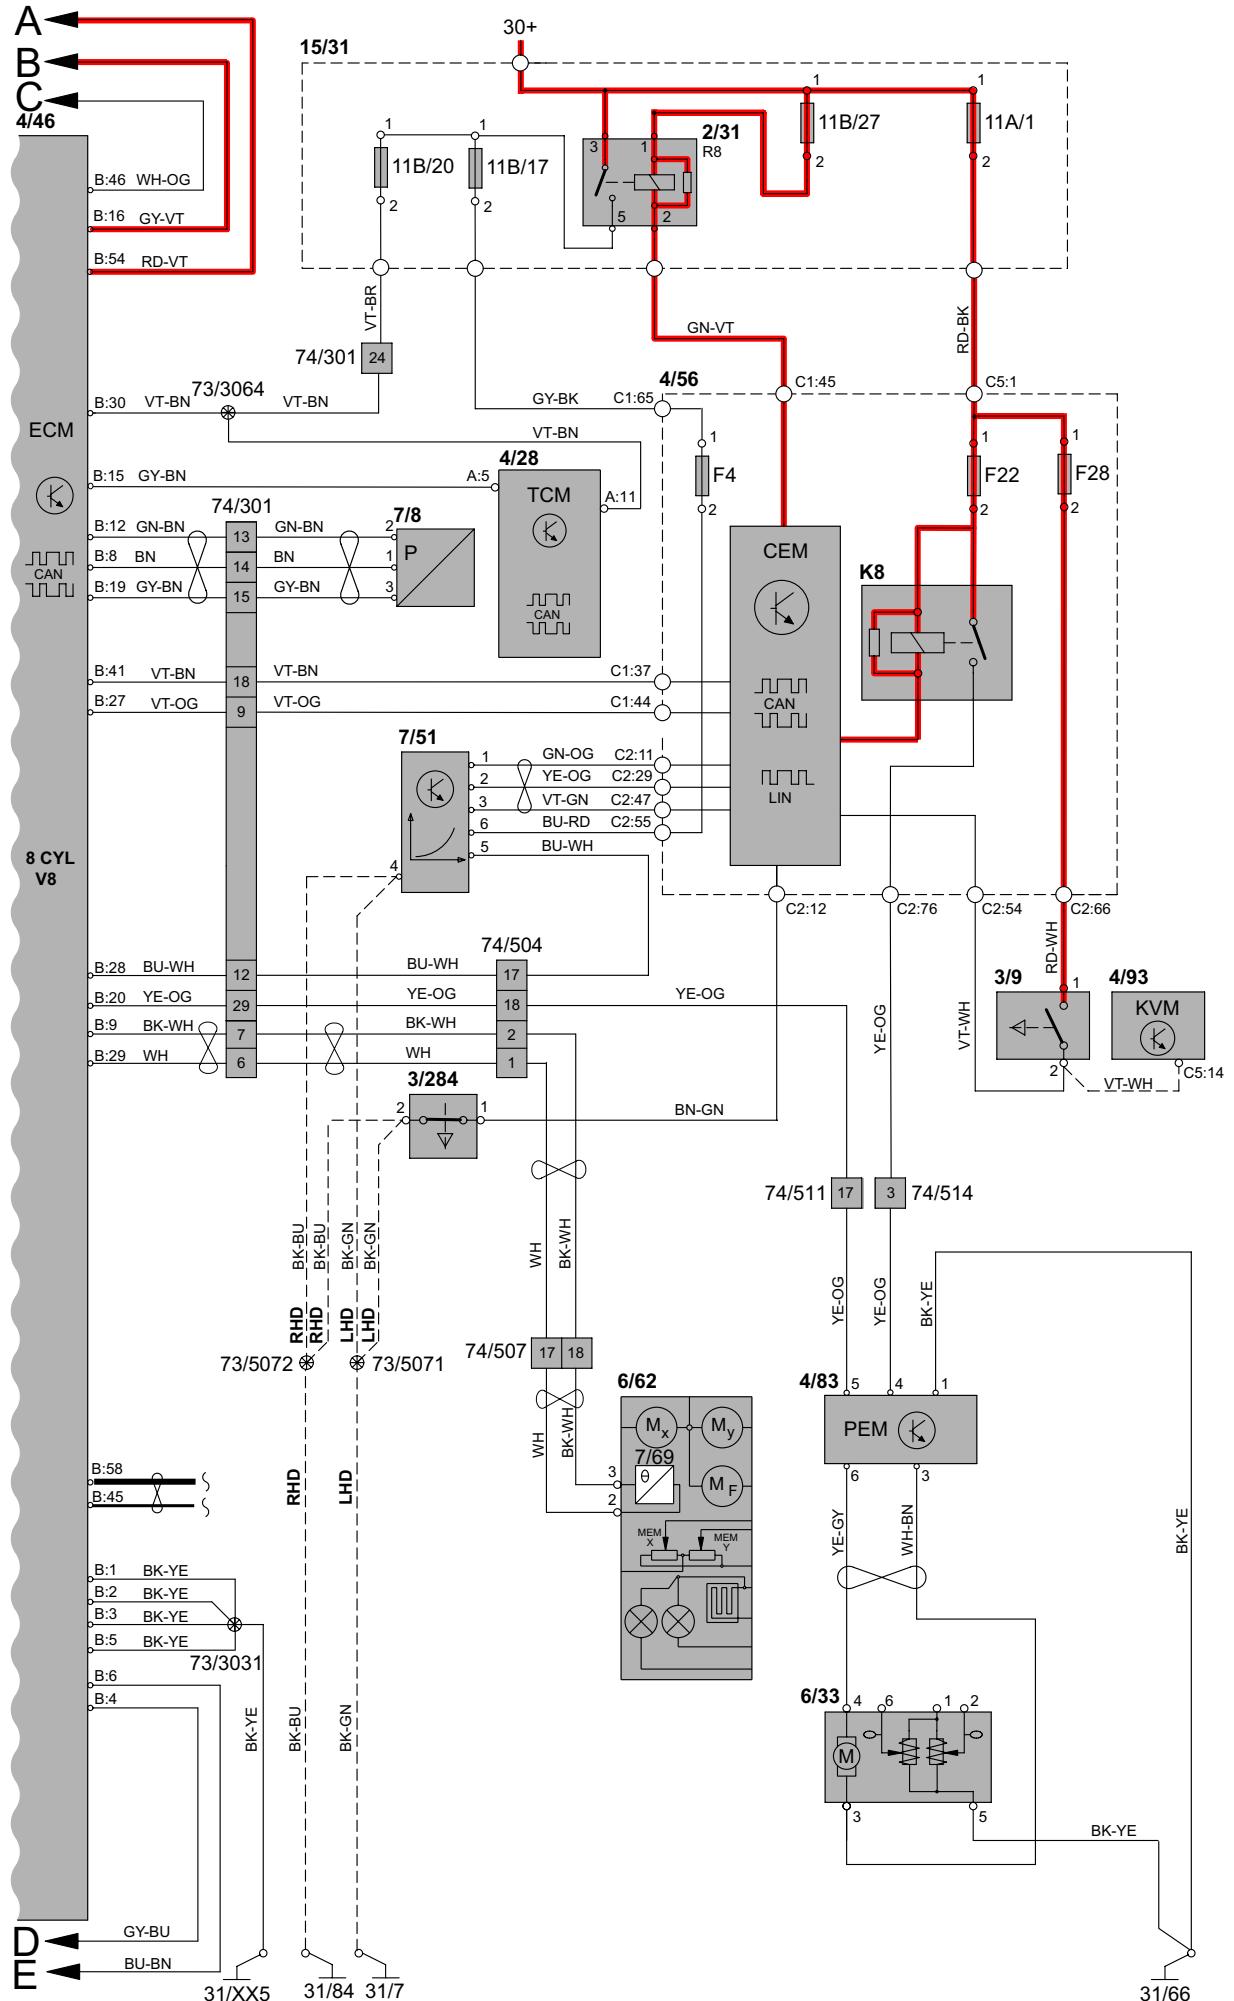


Group 23 Fuel system

Engine management system 5 Cyl. Diesel 1:3

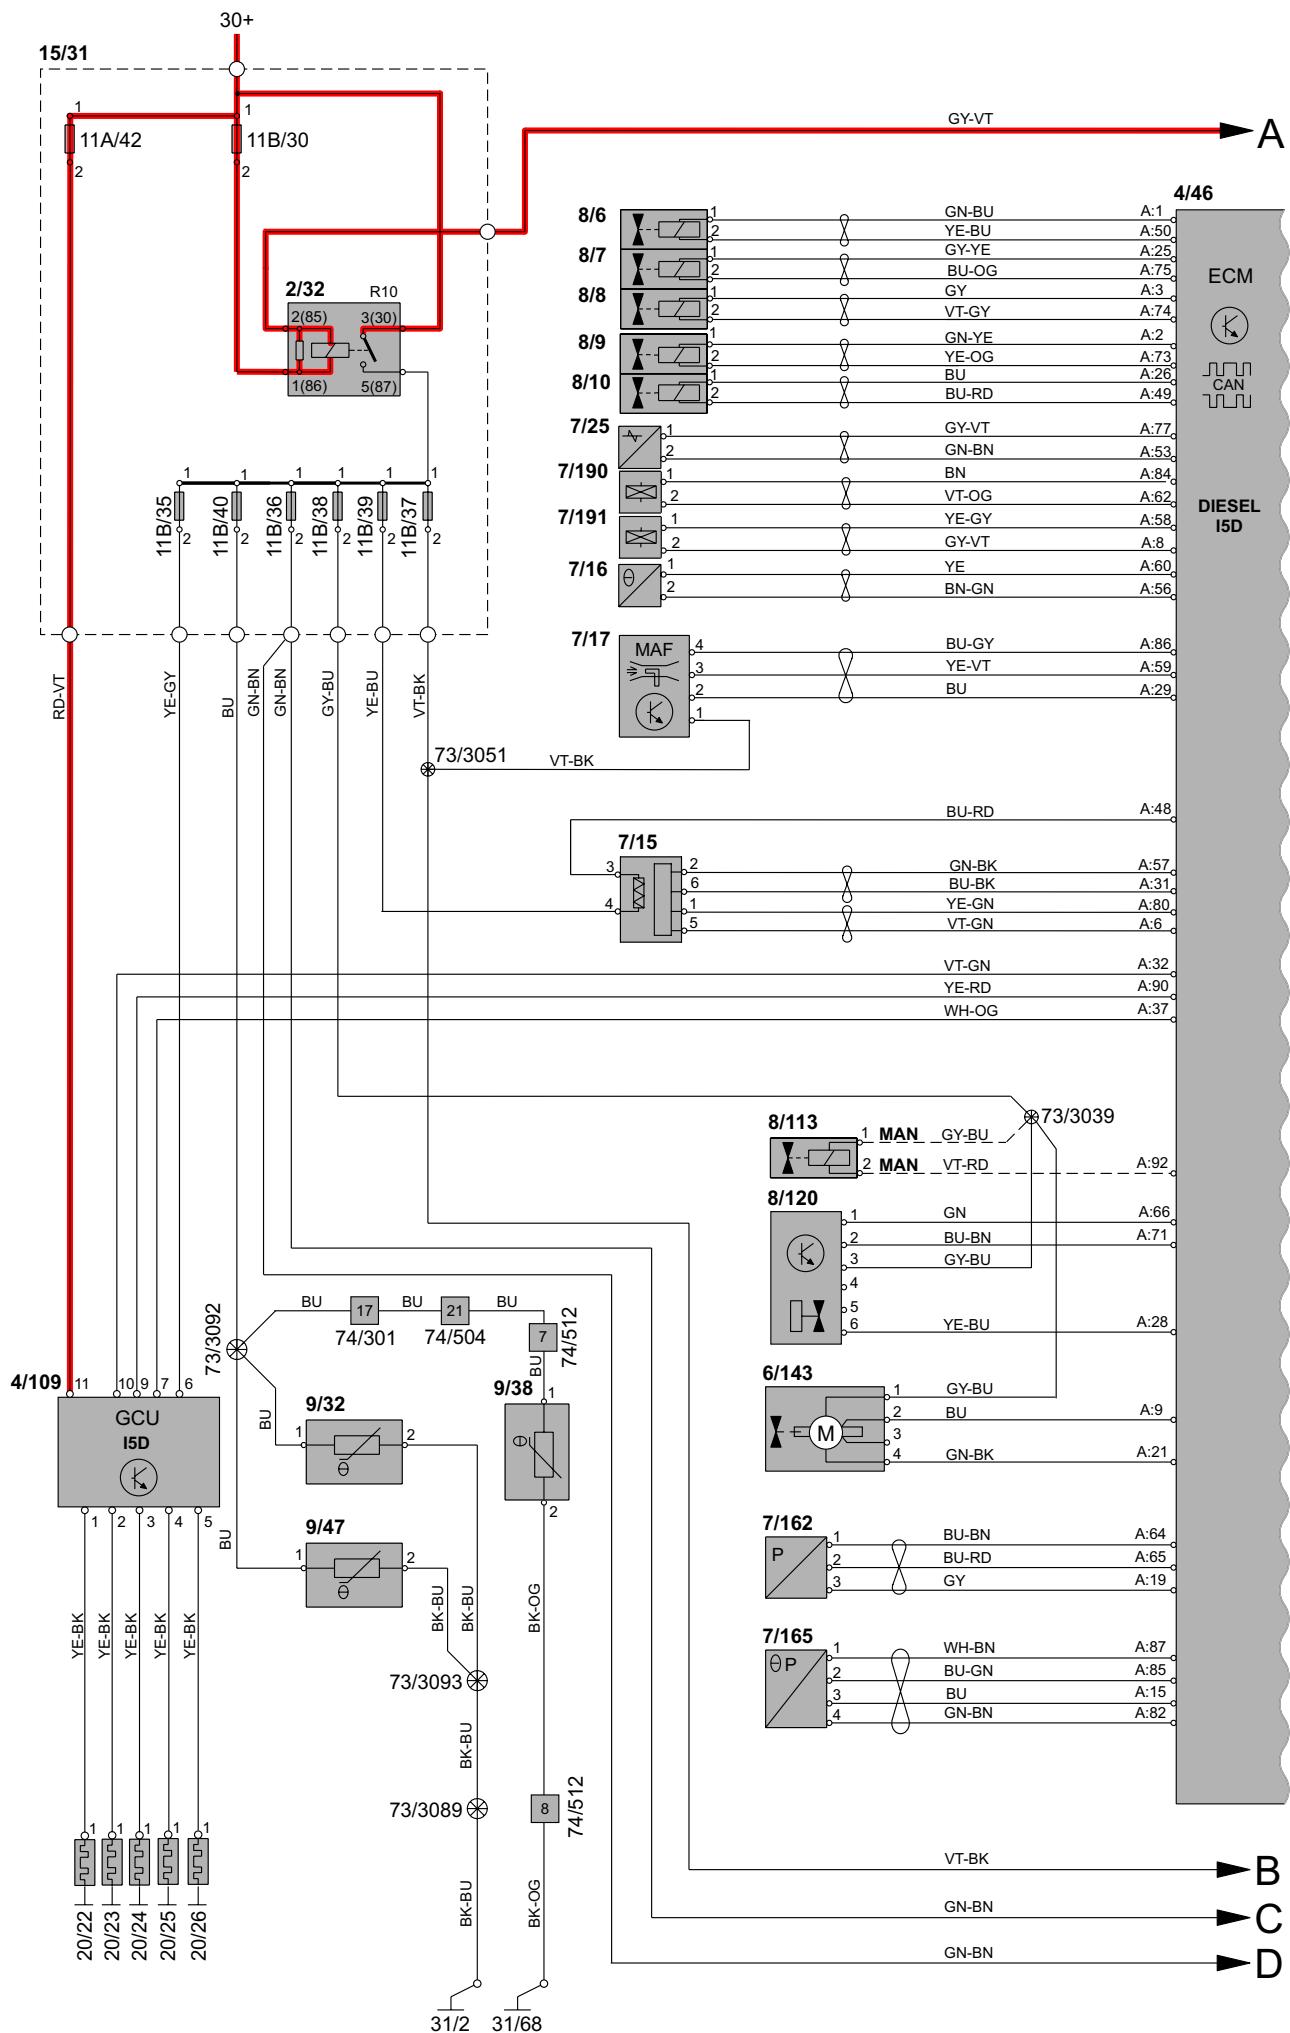


Group 23 Fuel system

Engine management system 5 Cyl. Diesel 2:3

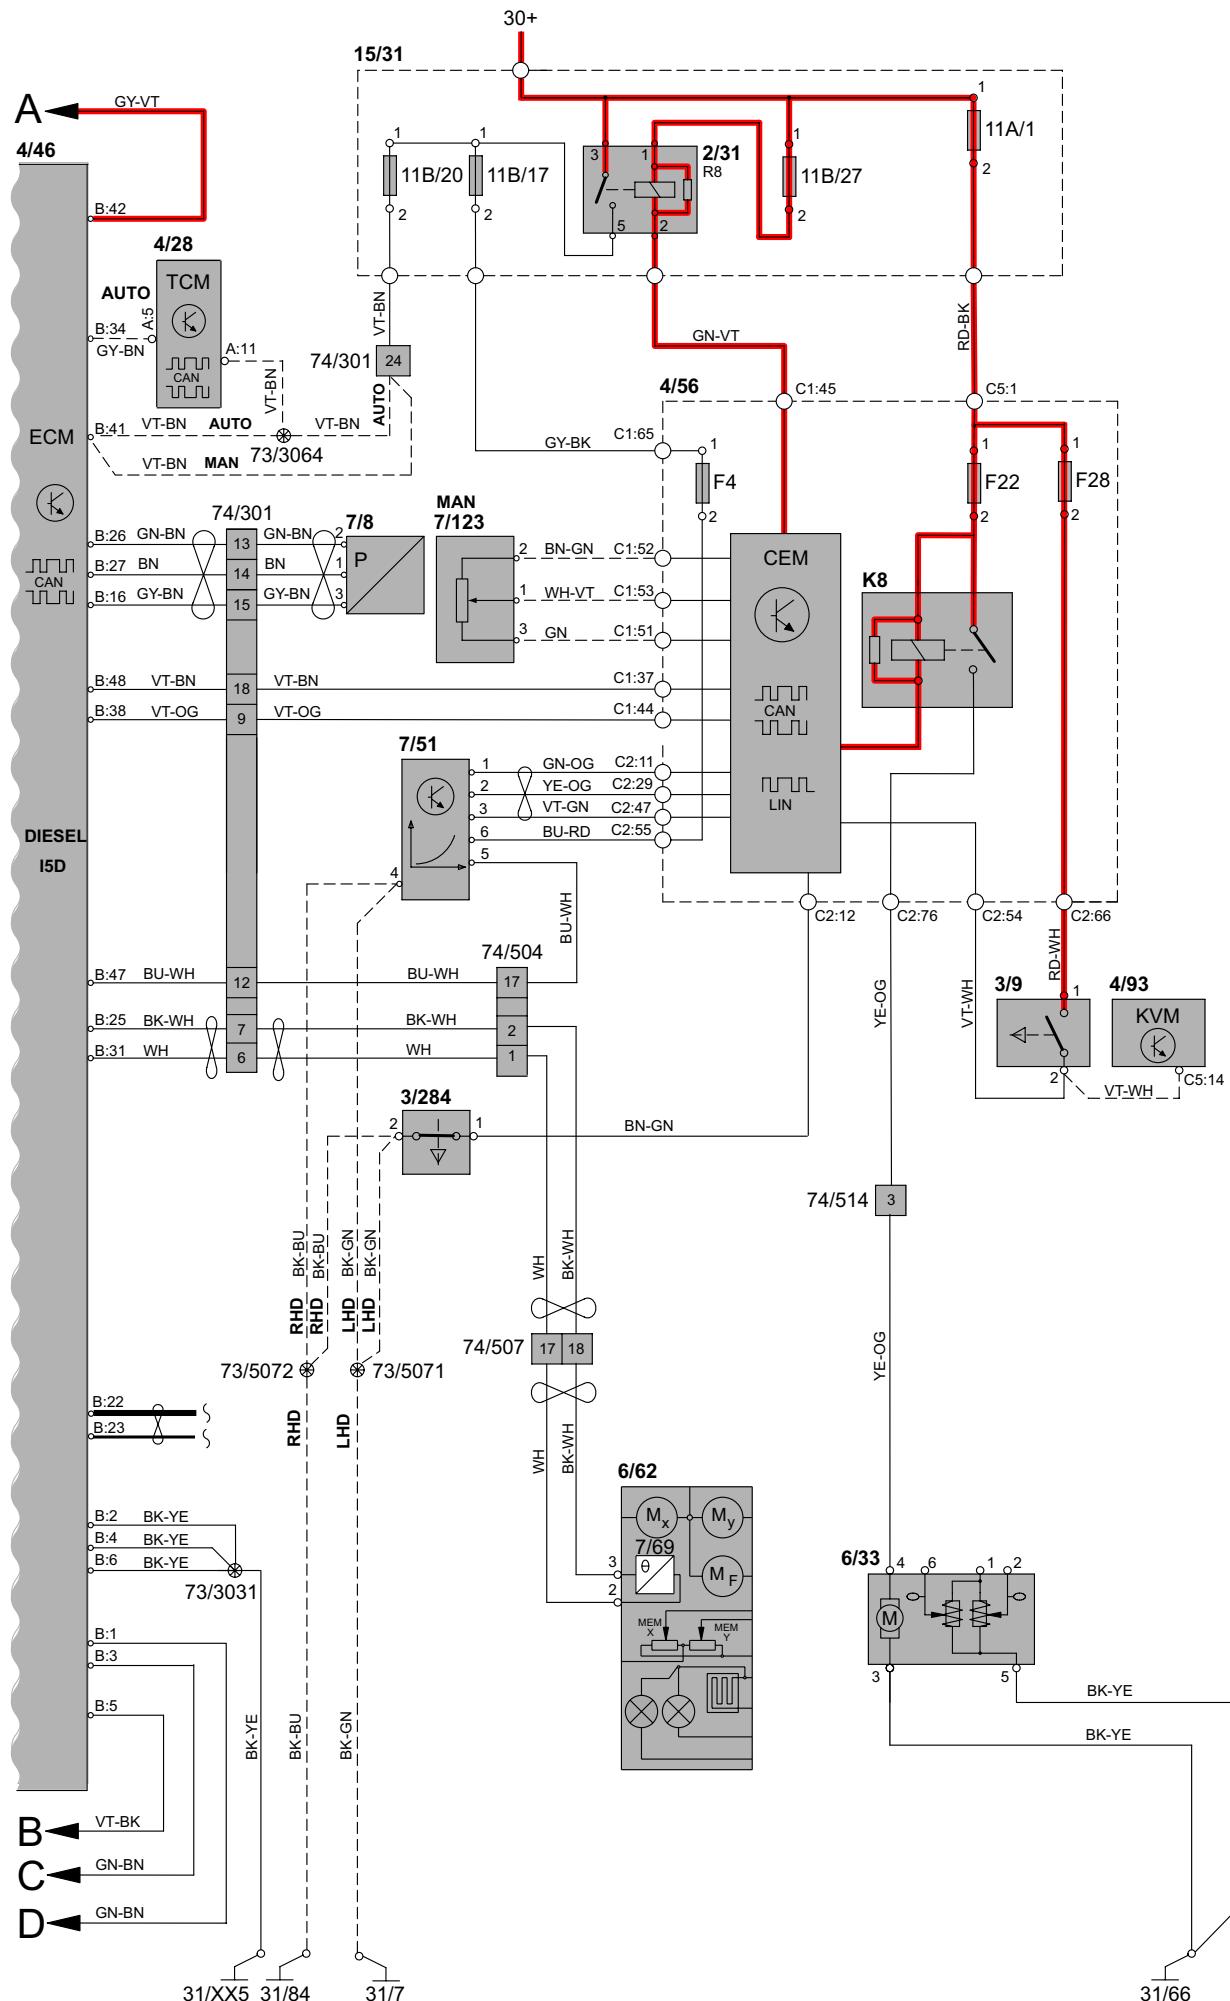


Group 23 Fuel system

Engine management system 5 Cyl. Diesel 3:3

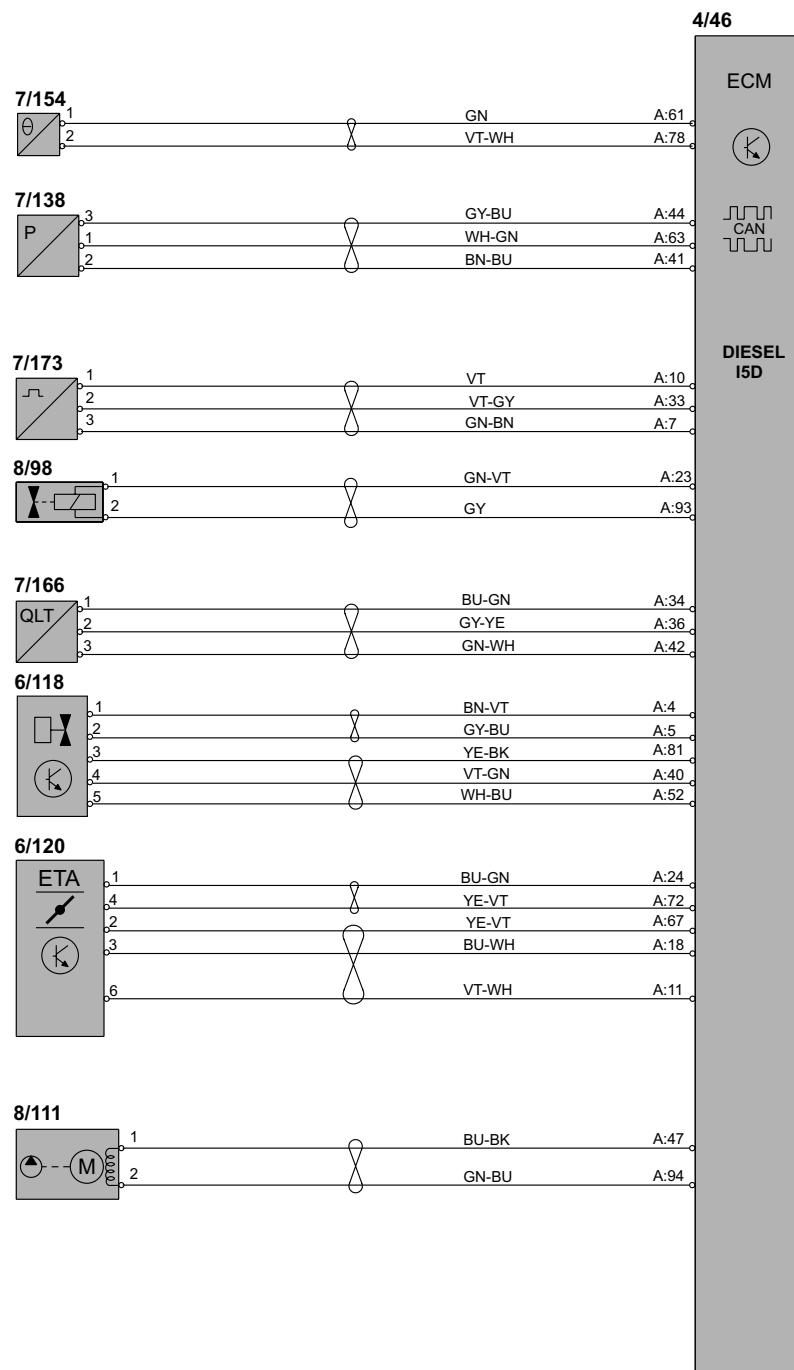


Group 23 Fuel system

Emission control 5 Cyl. Turbo

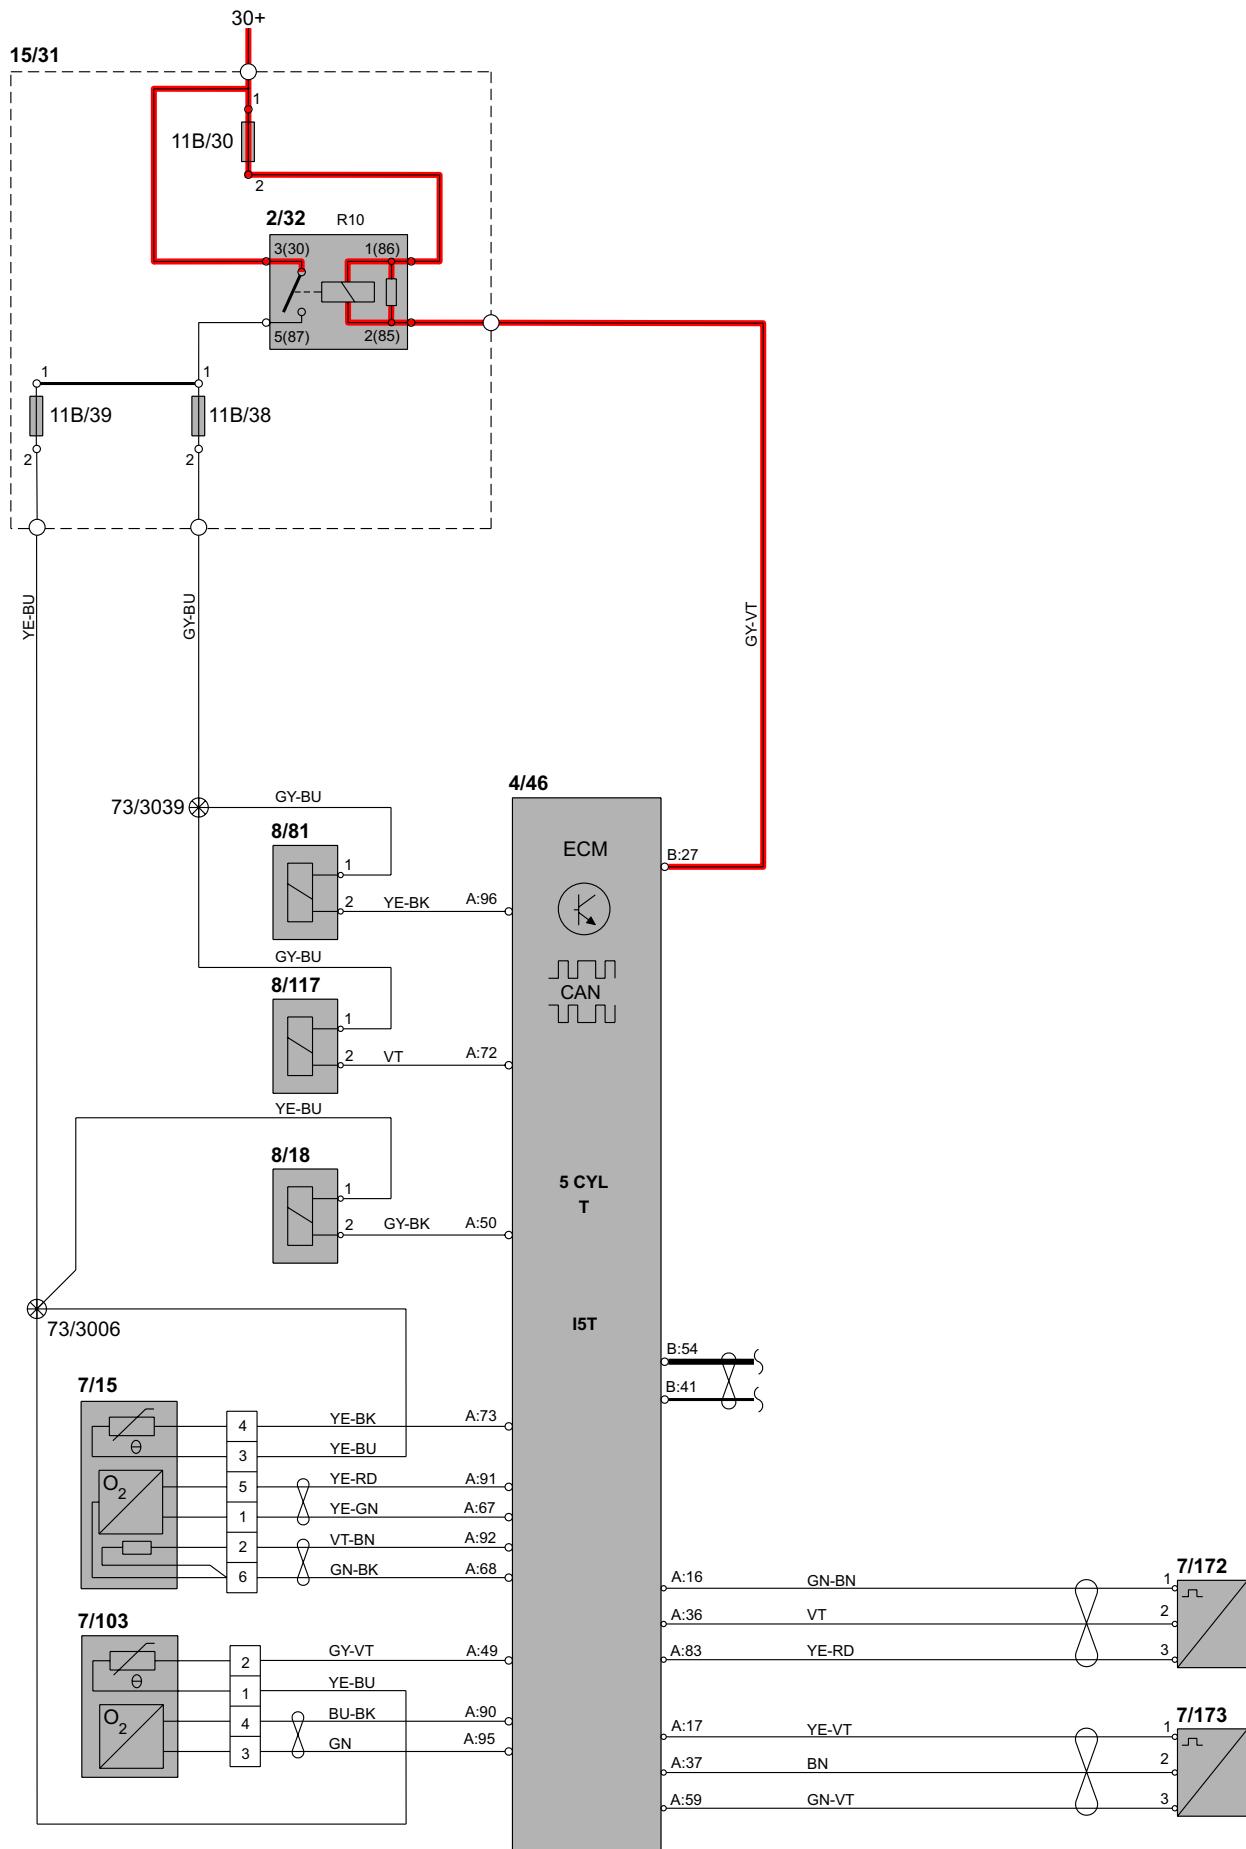


Group 23 Fuel system

Emission control, 6 cyl.

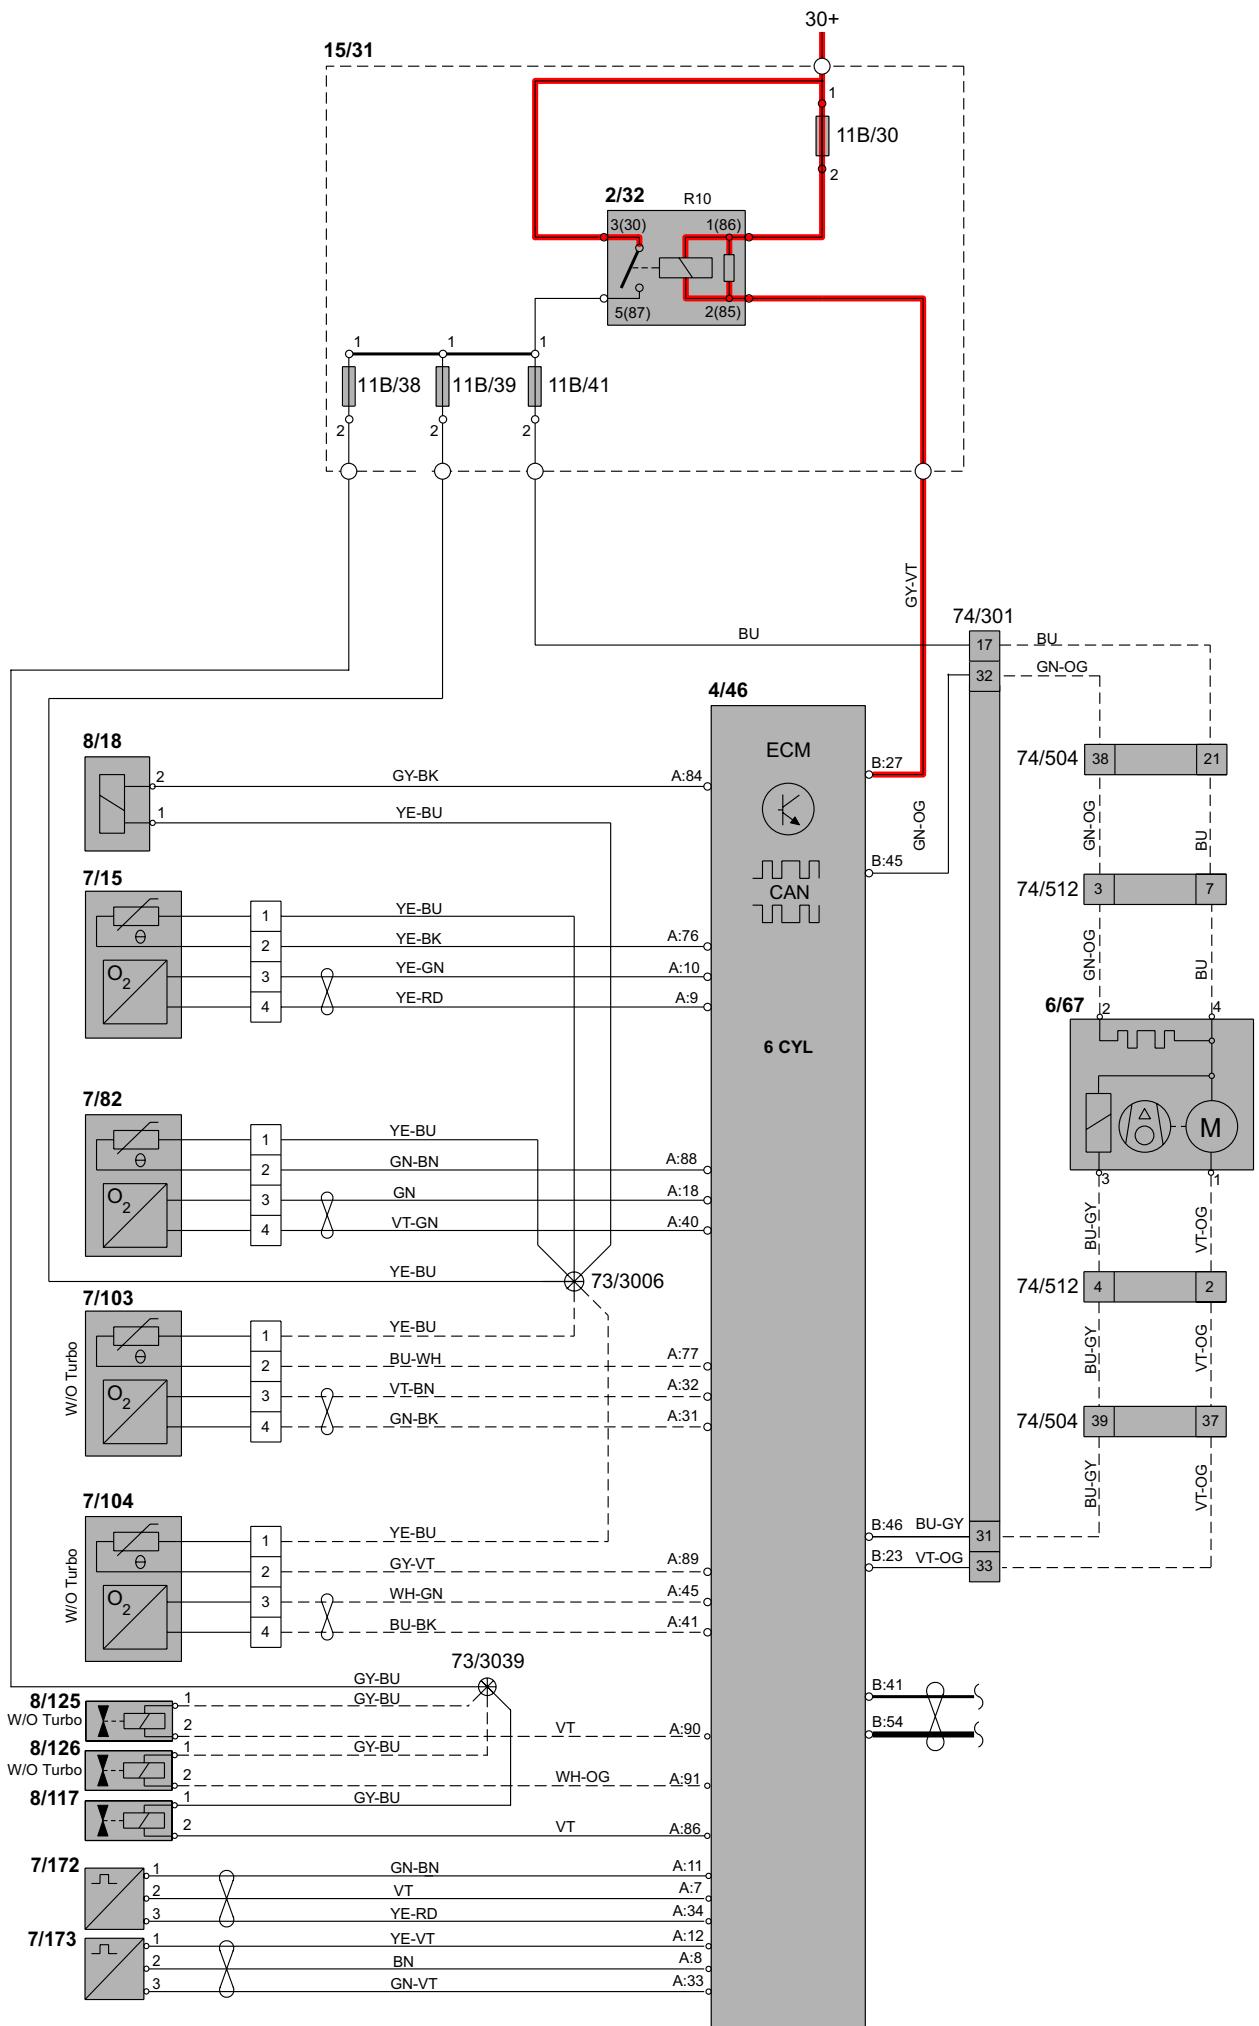


Group 23 Fuel system

Emission control, 8 cyl.

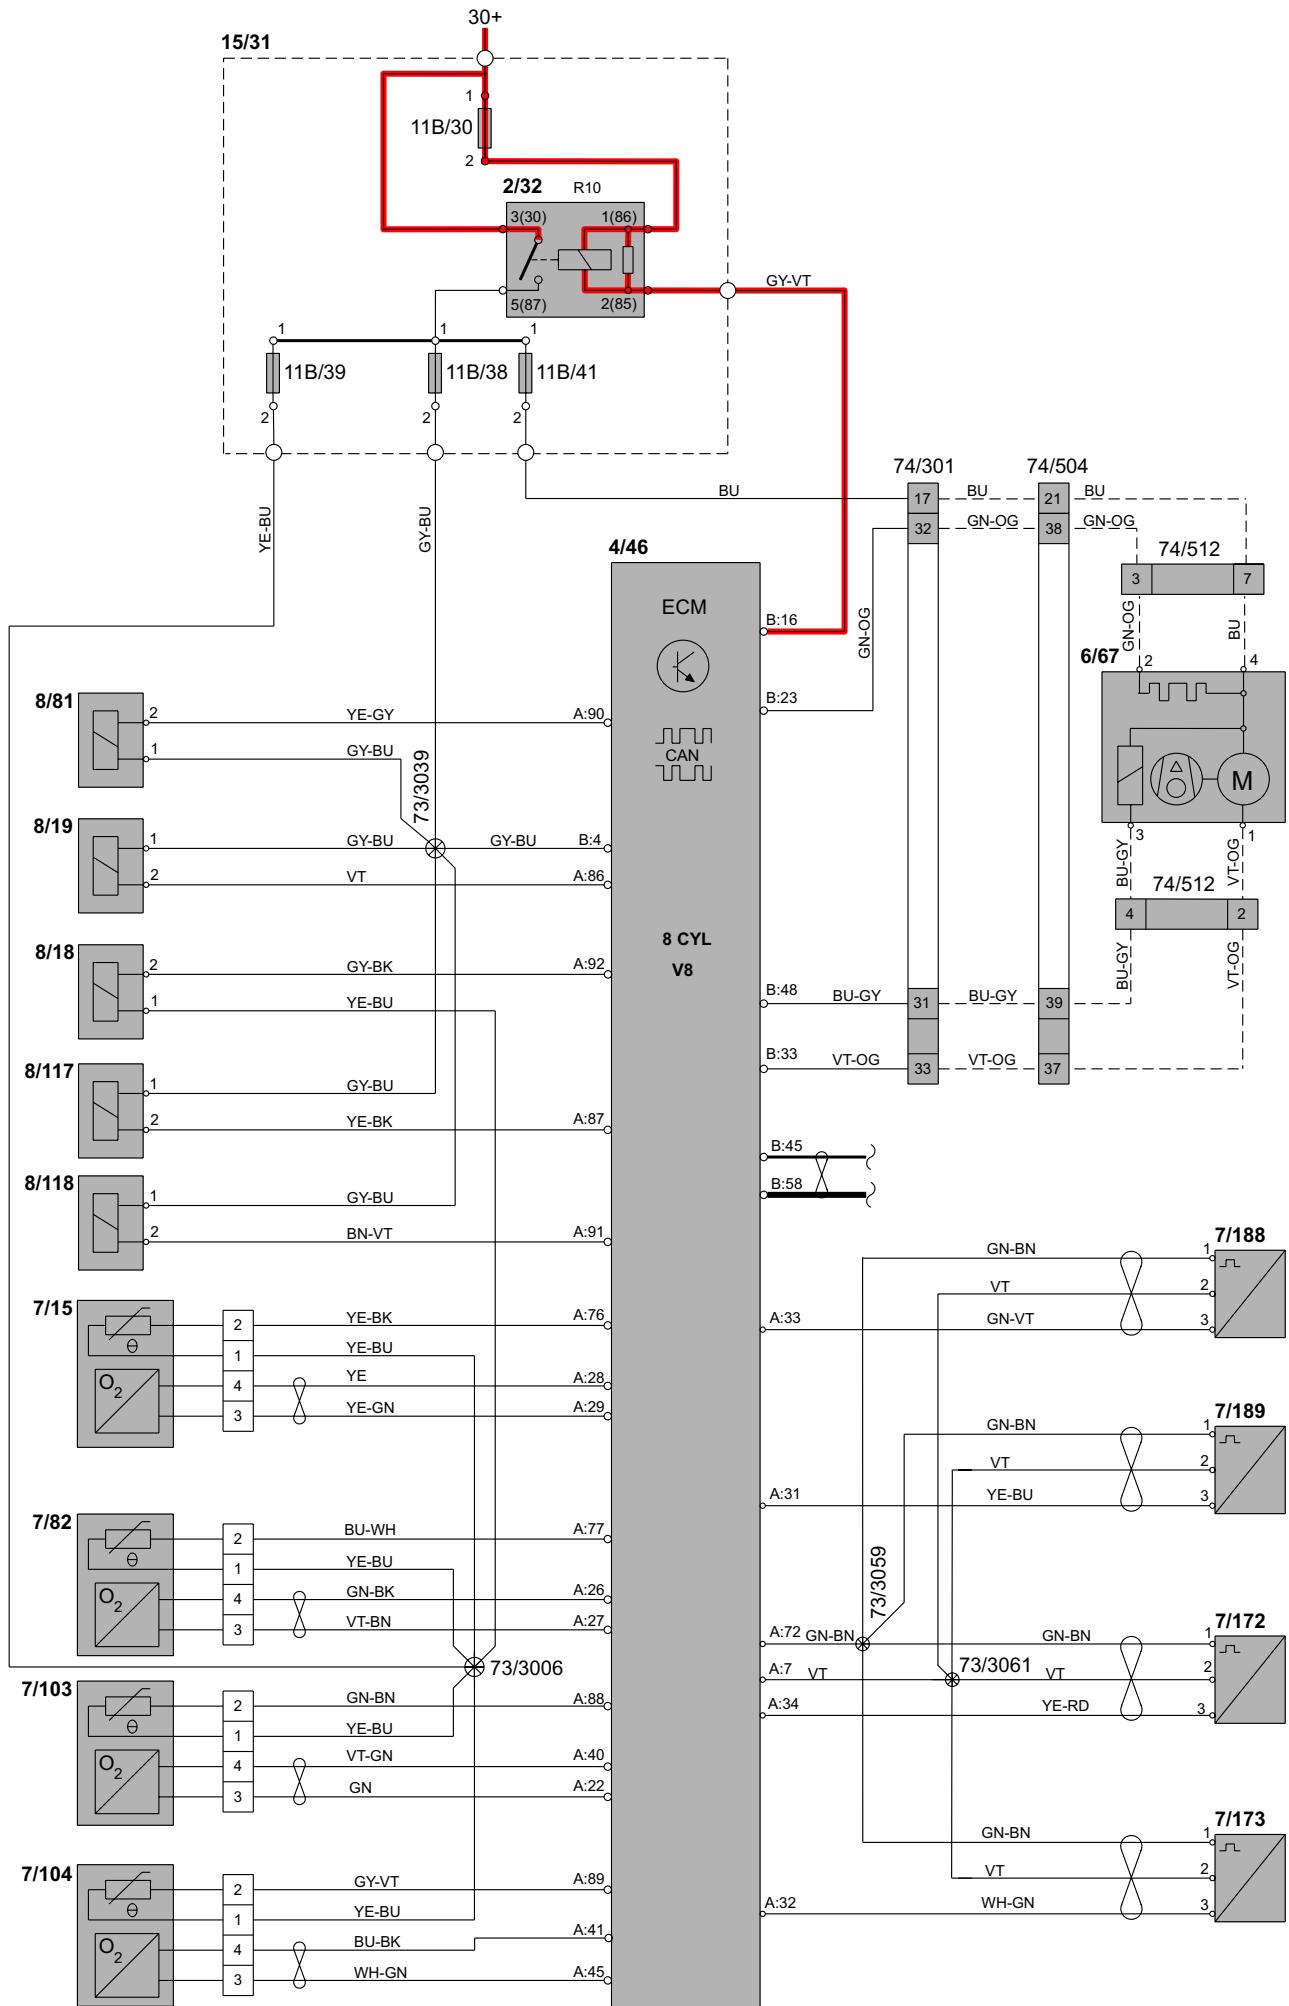


Group 26 Cooling system

Cooling fan, 5 cyl. & 6 cyl.

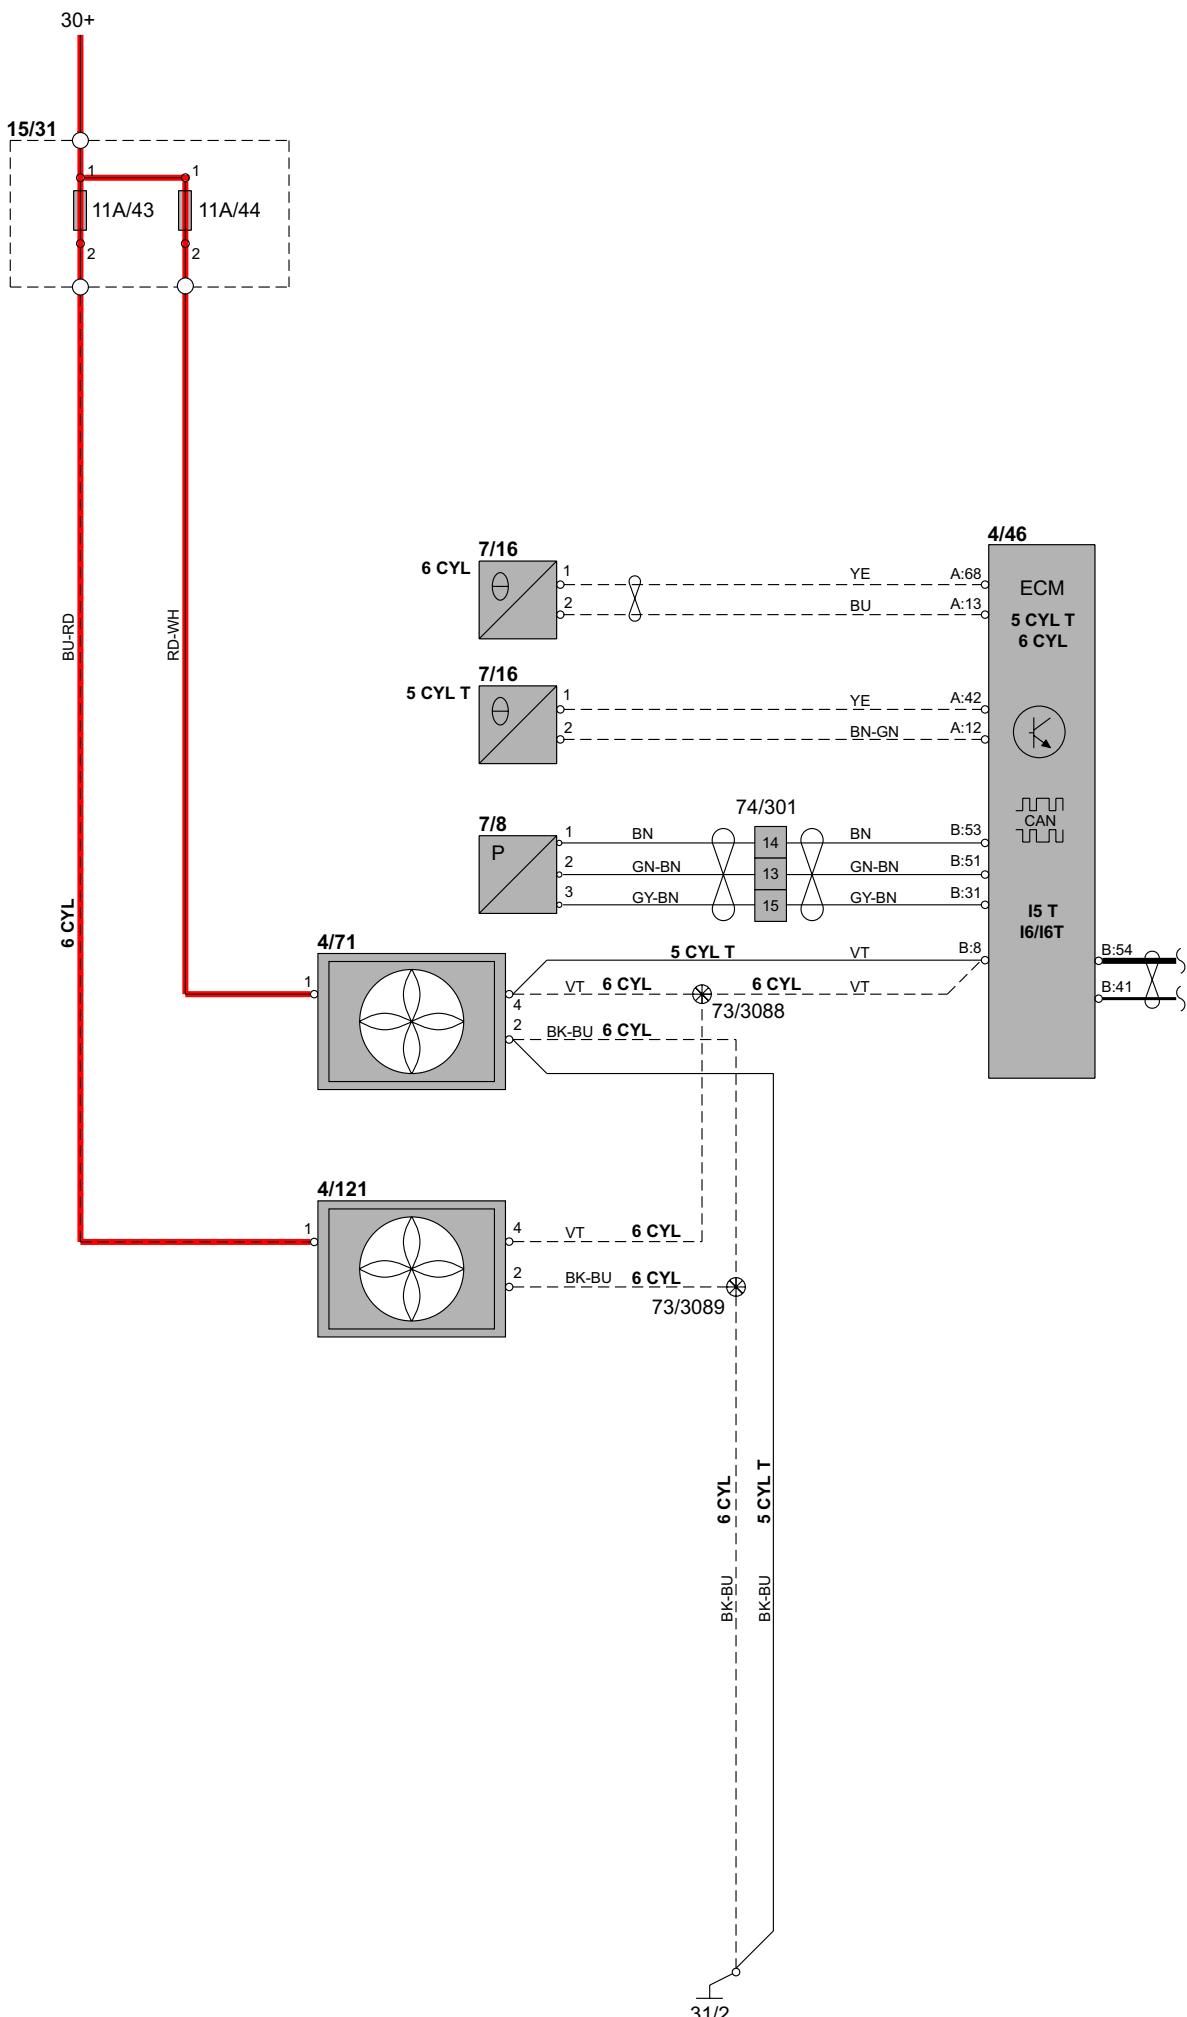


Group 26 Cooling system

Cooling fan, 5 Cyl. Diesel

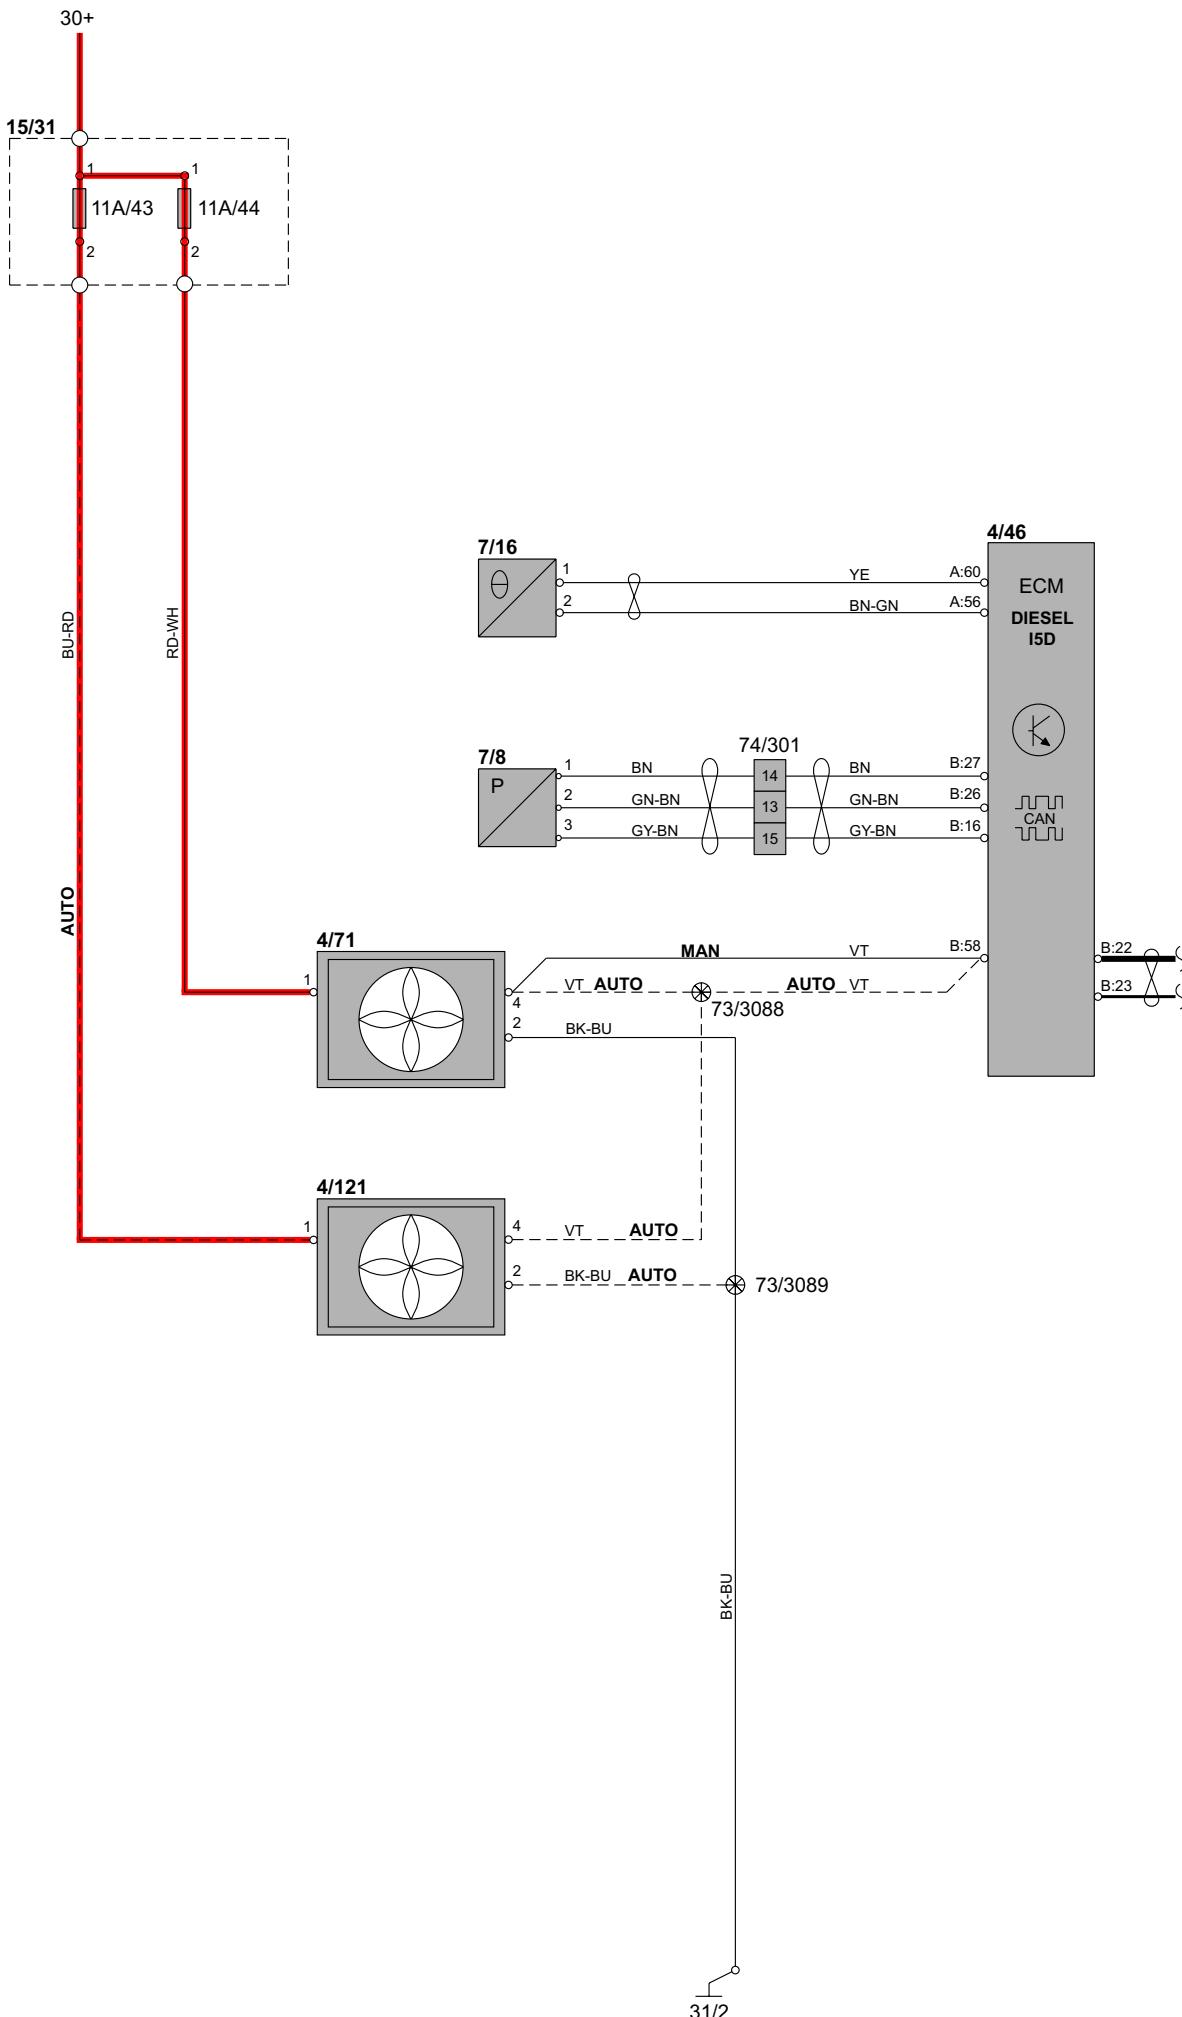


Group 26 Cooling system

Cooling fan, 8 cyl.

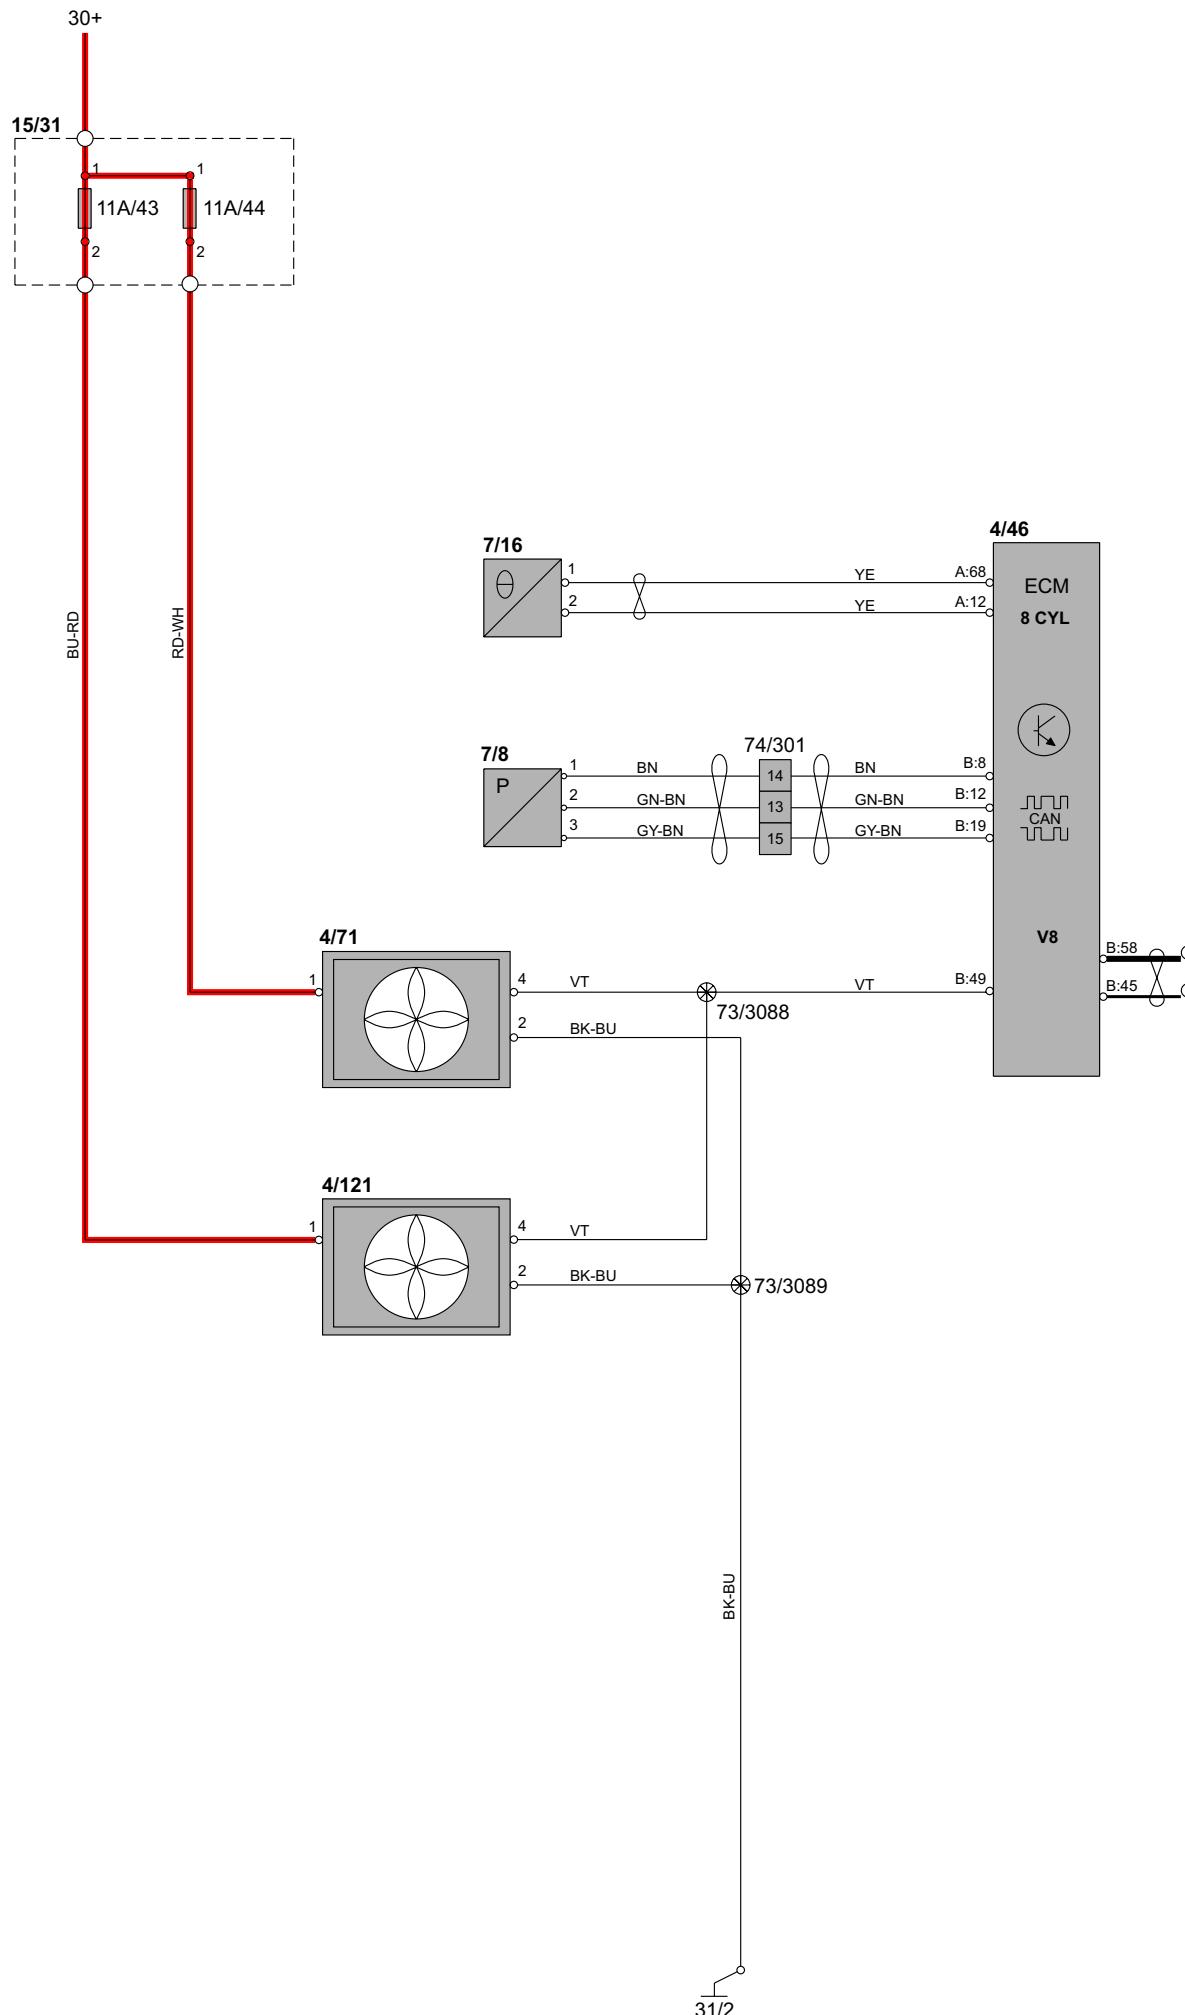


Group 27 Engine controls

Cruise control, 5 Cyl. & 6 Cyl.

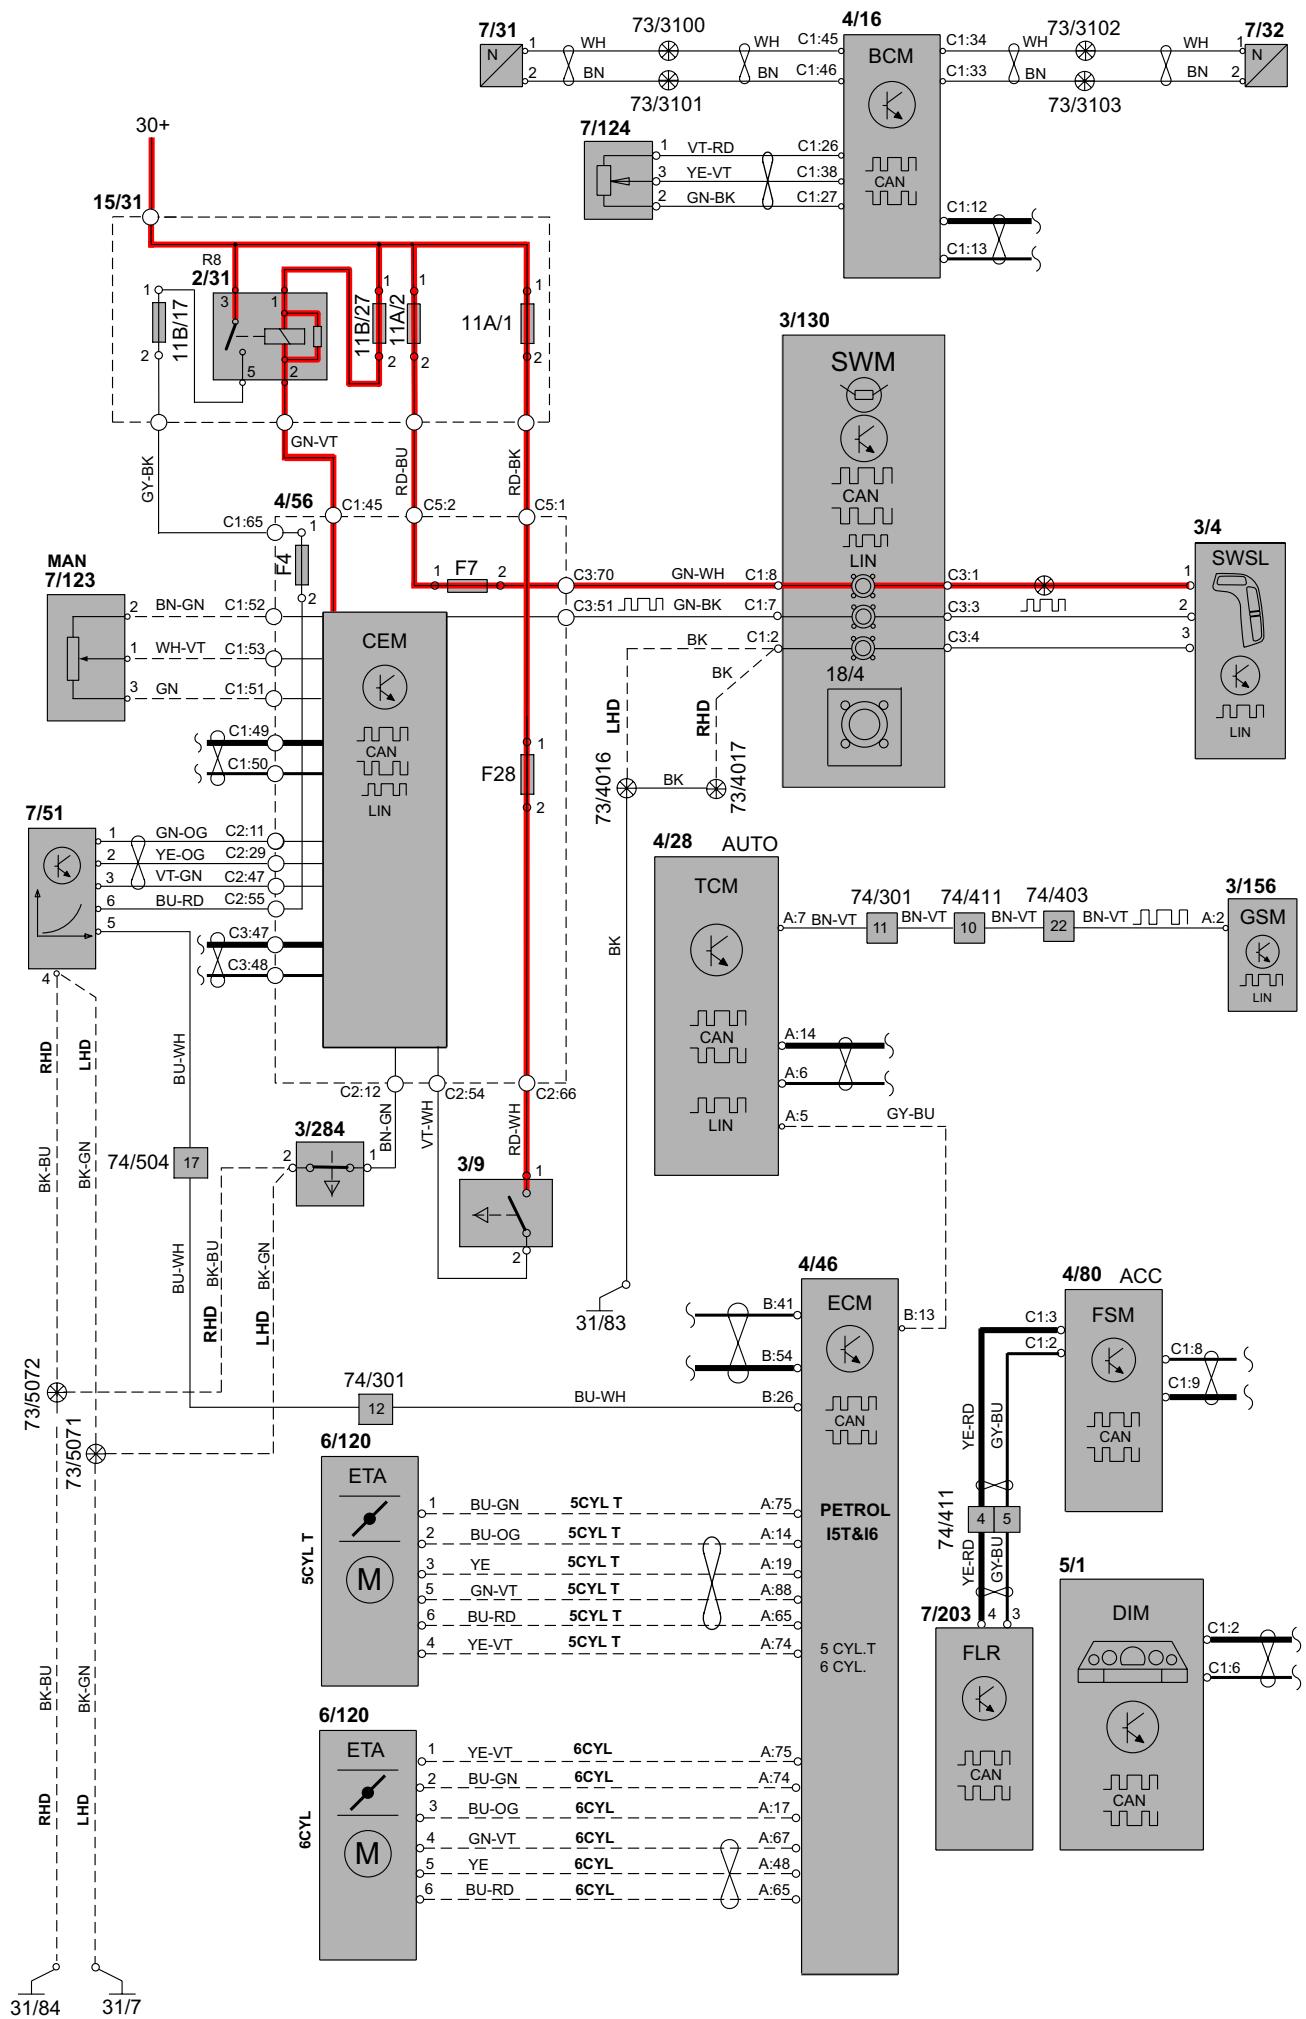


Group 27 Engine controls

Cruise control, Diesel

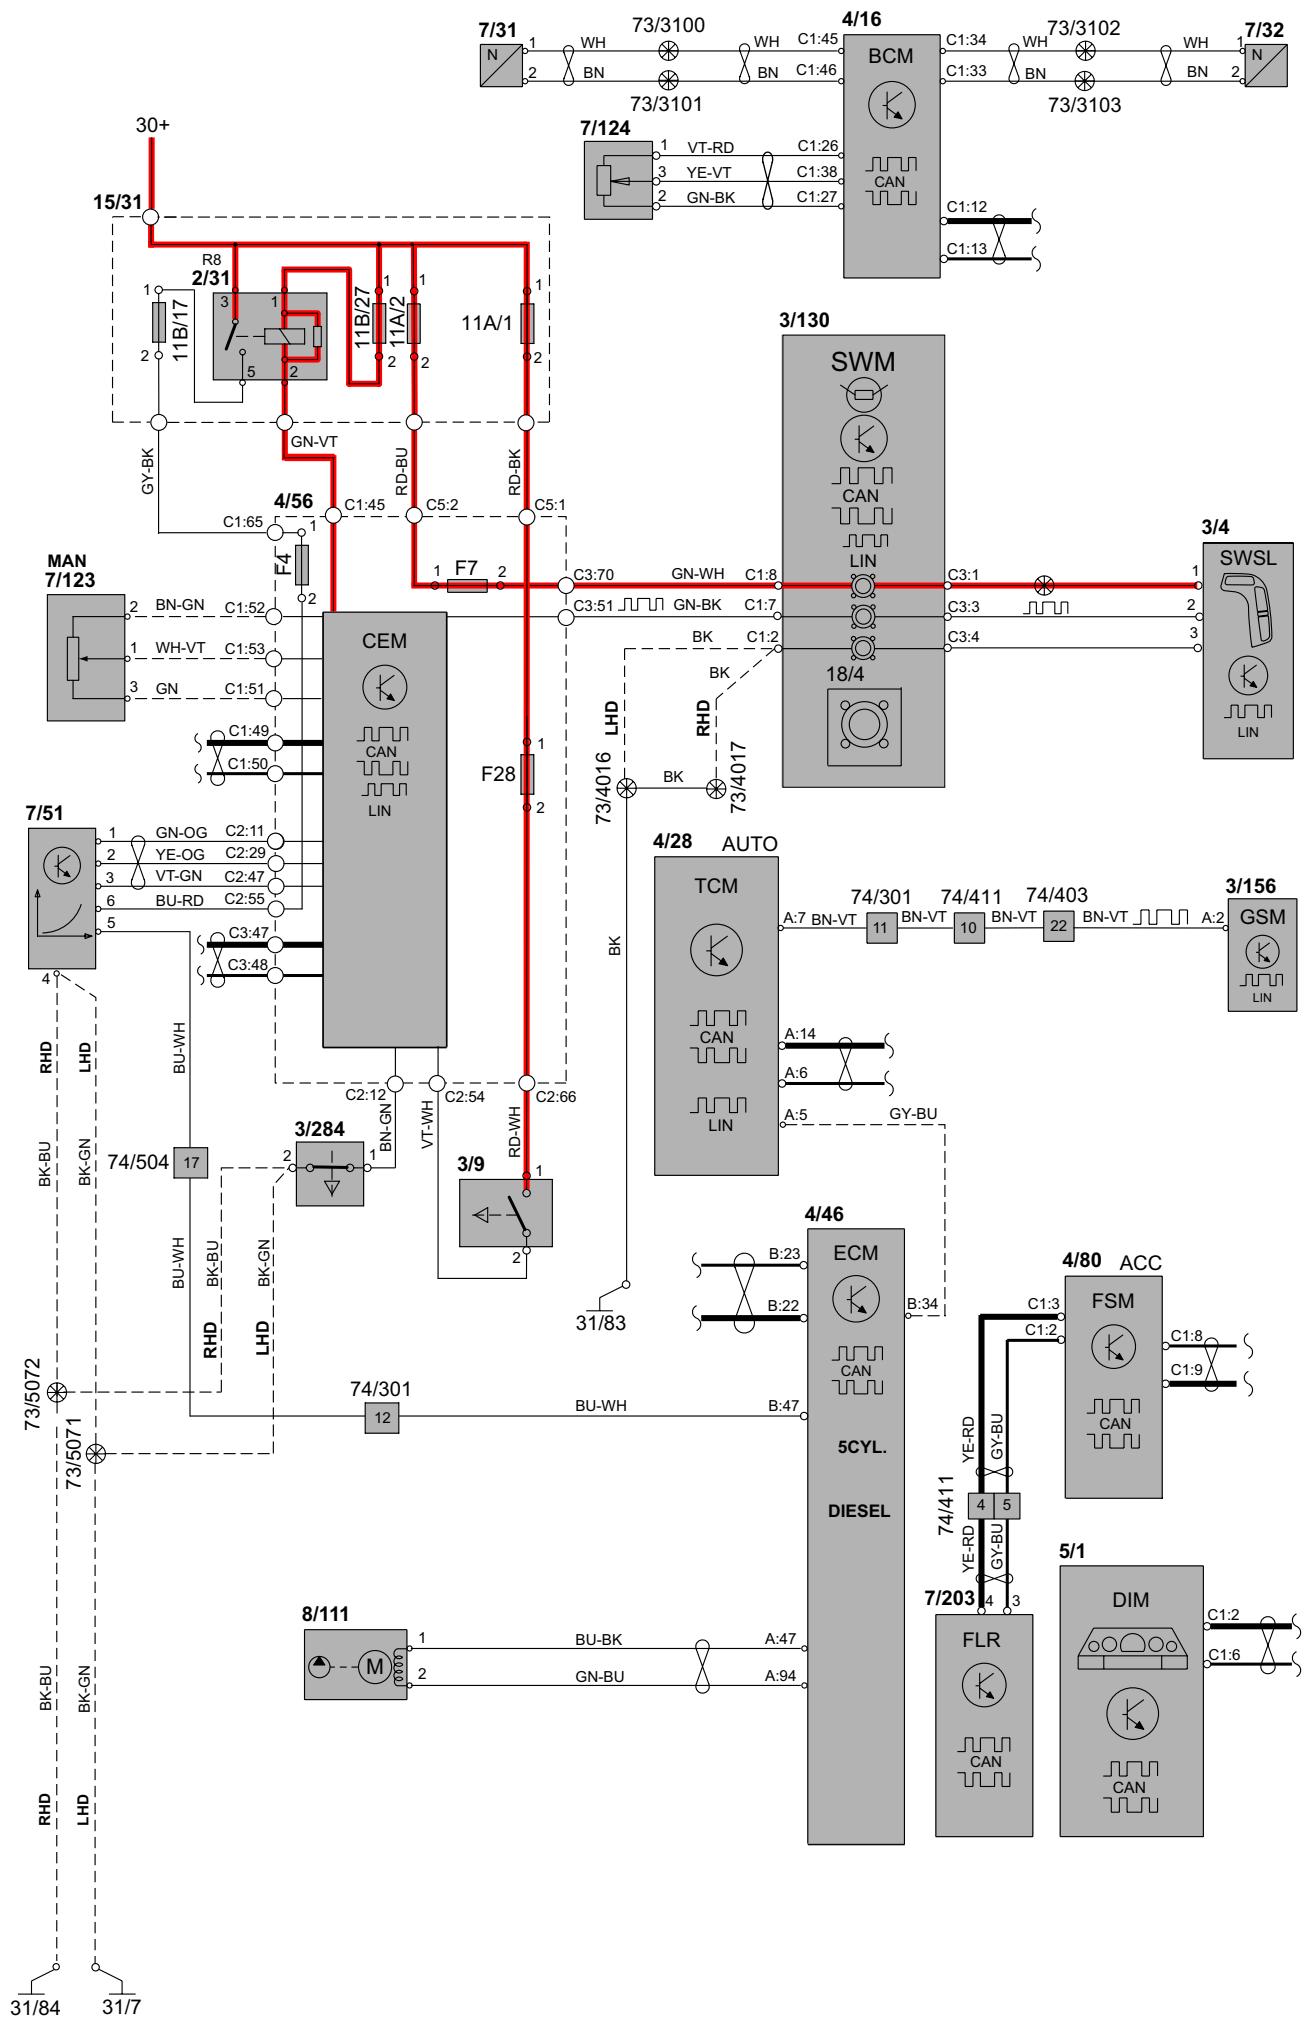


Group 27 Engine controls

Cruise control, 8 Cyl.

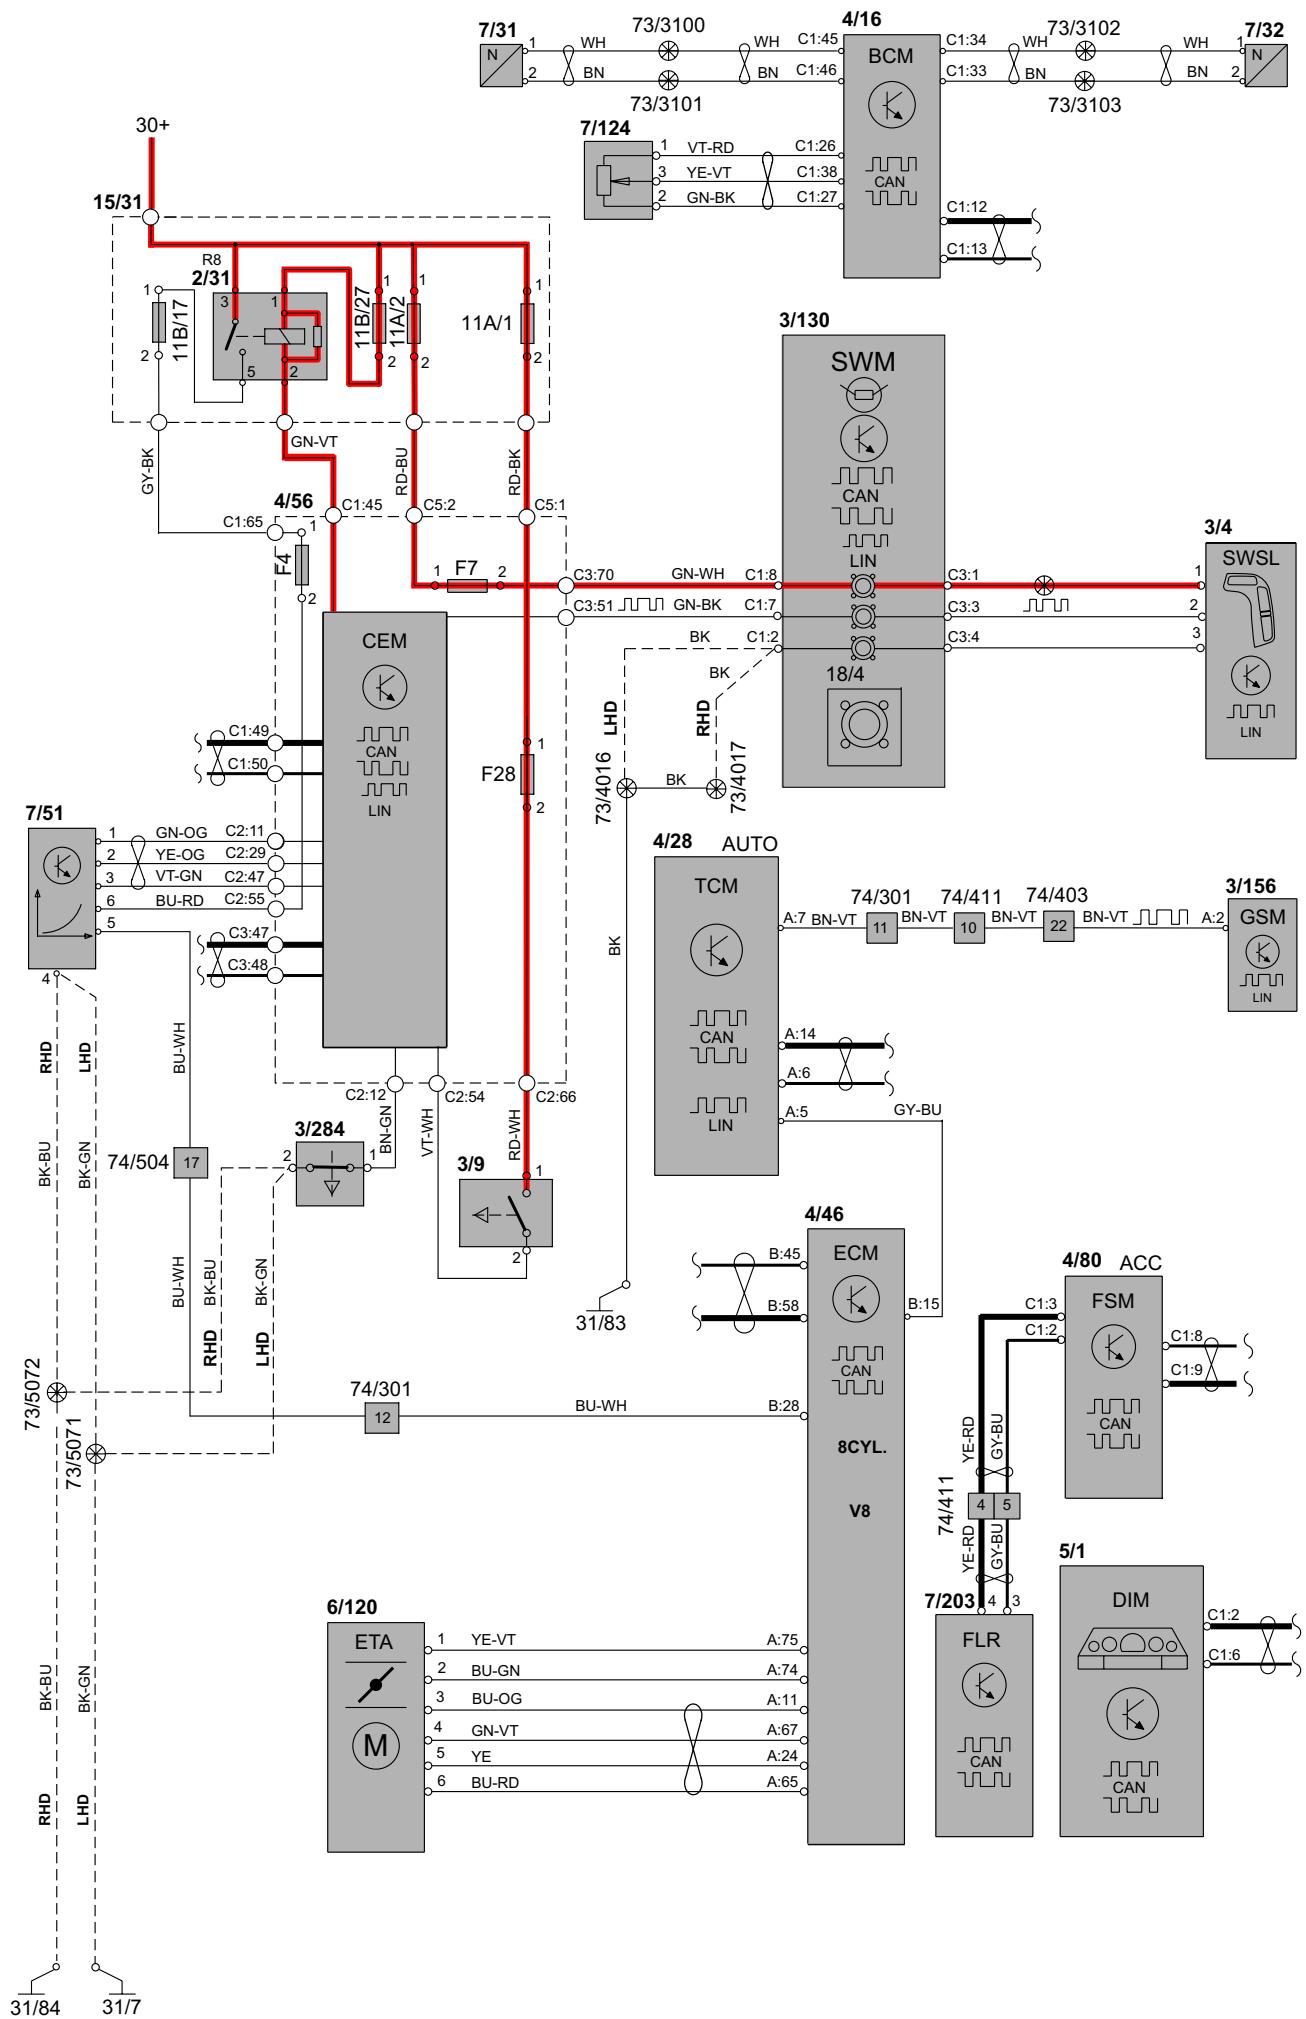


Group 32 Alternator and voltage regulator Power supply

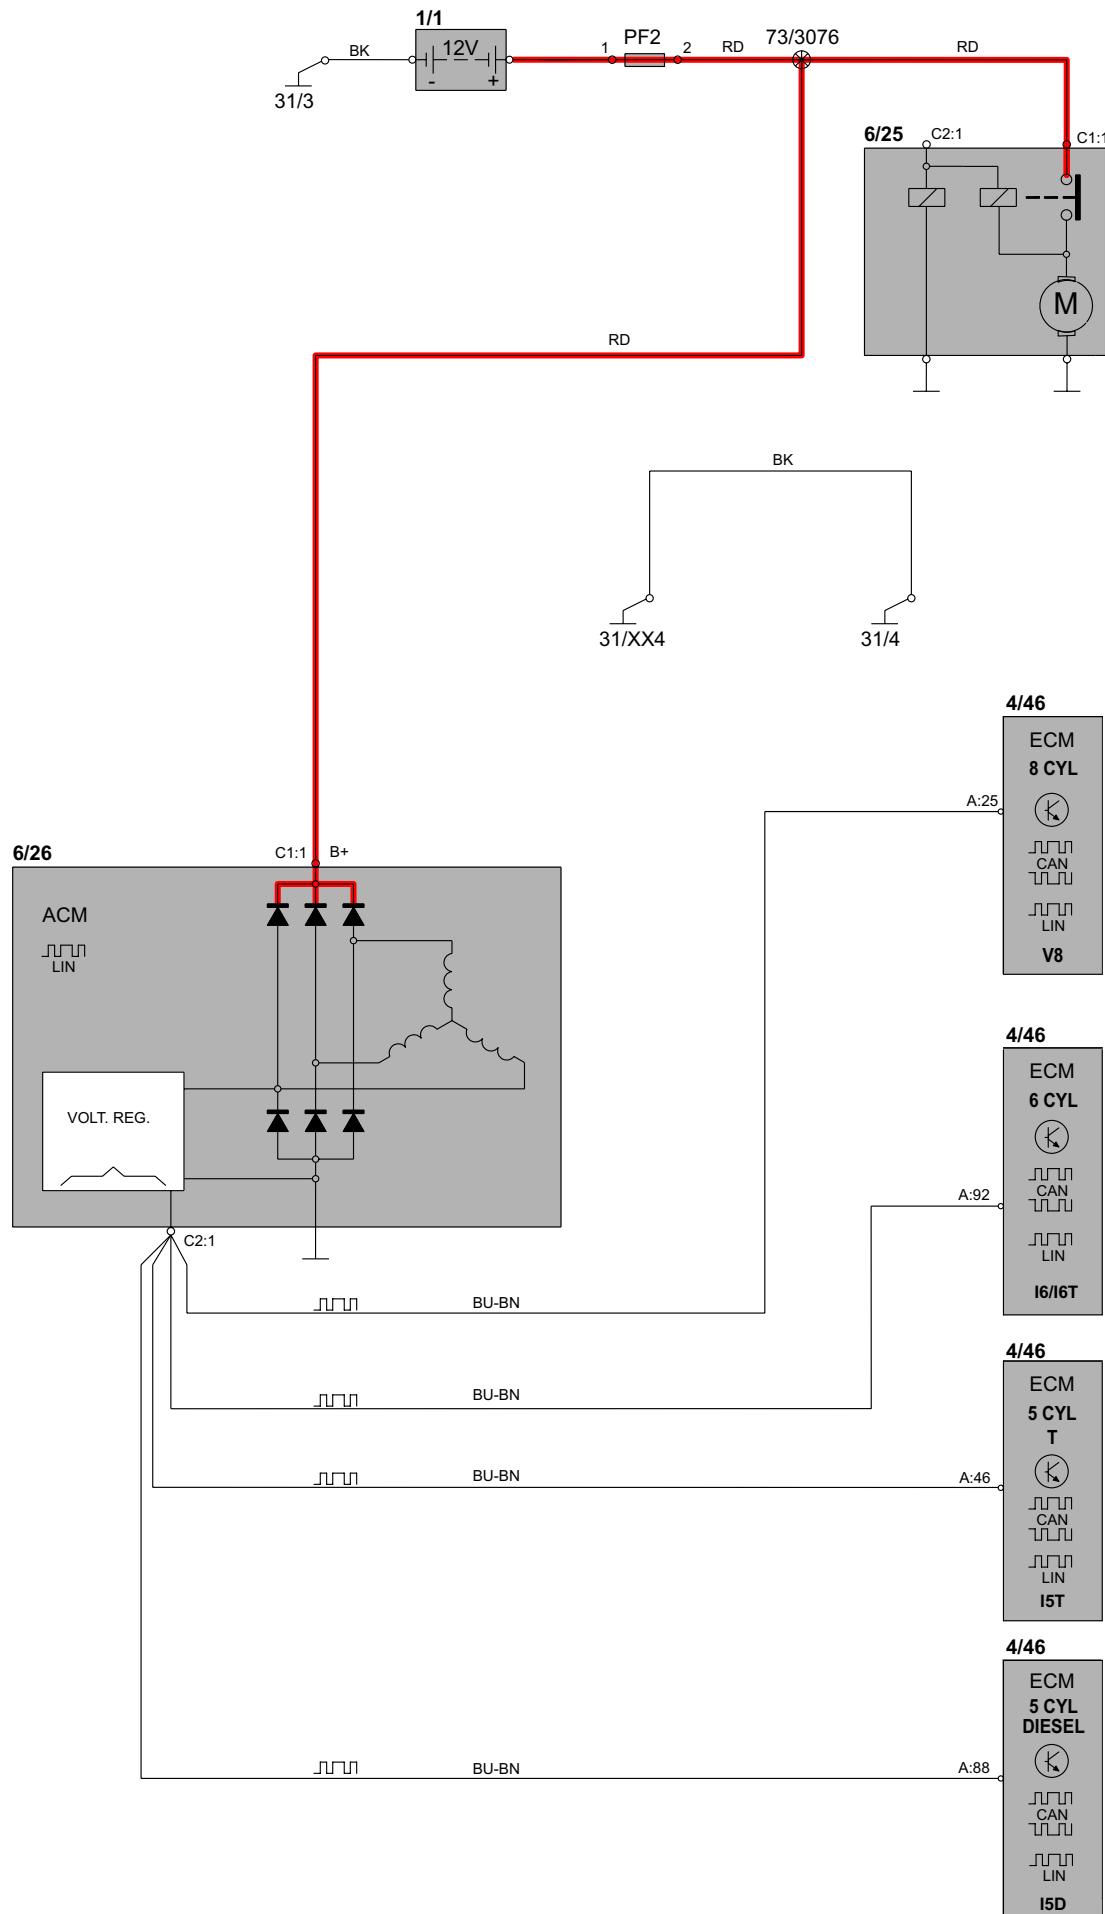


Group 33 Starting system

Starting system

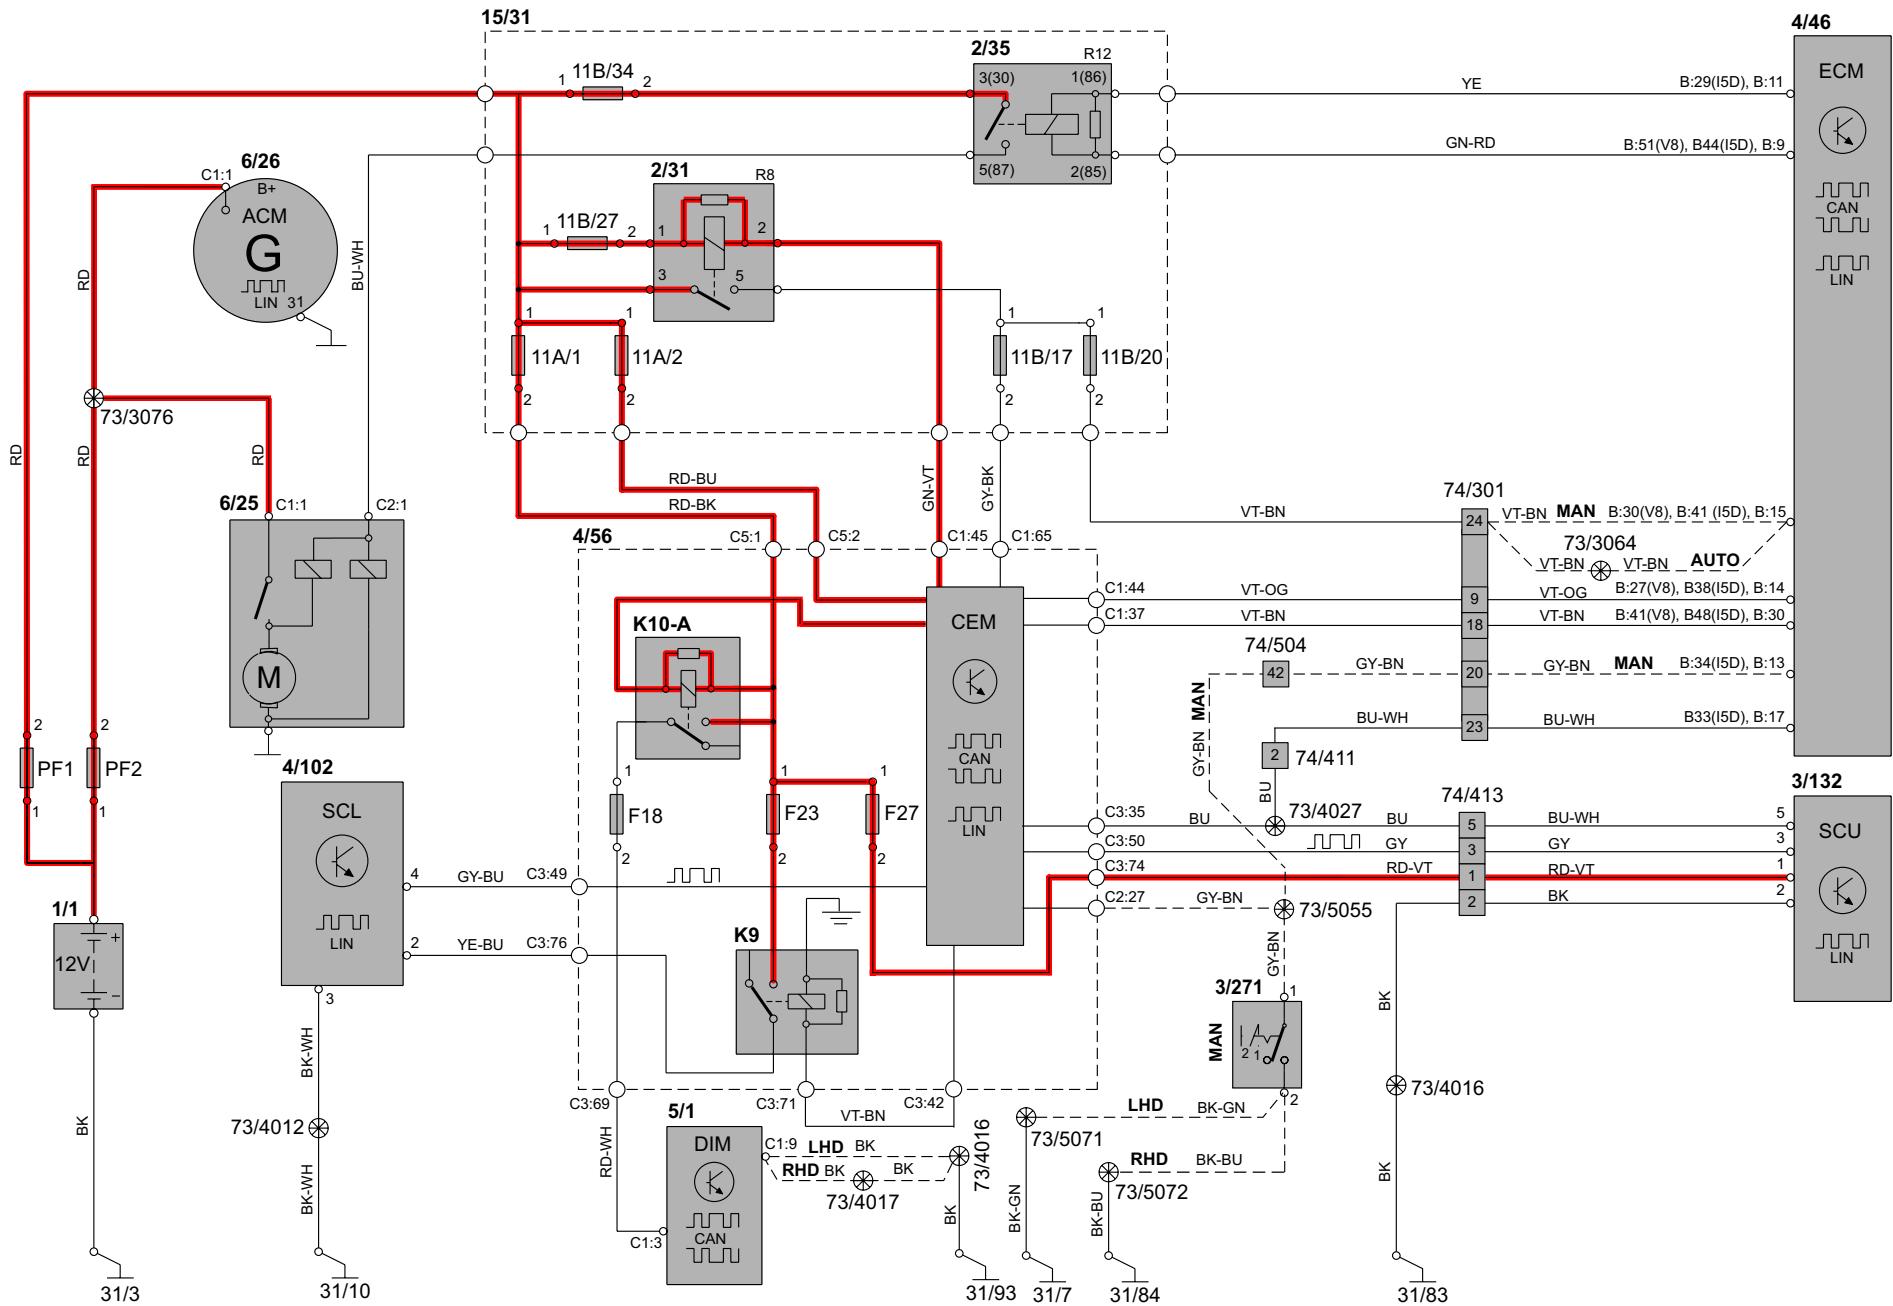


Group 35 Lighting

High and low beam

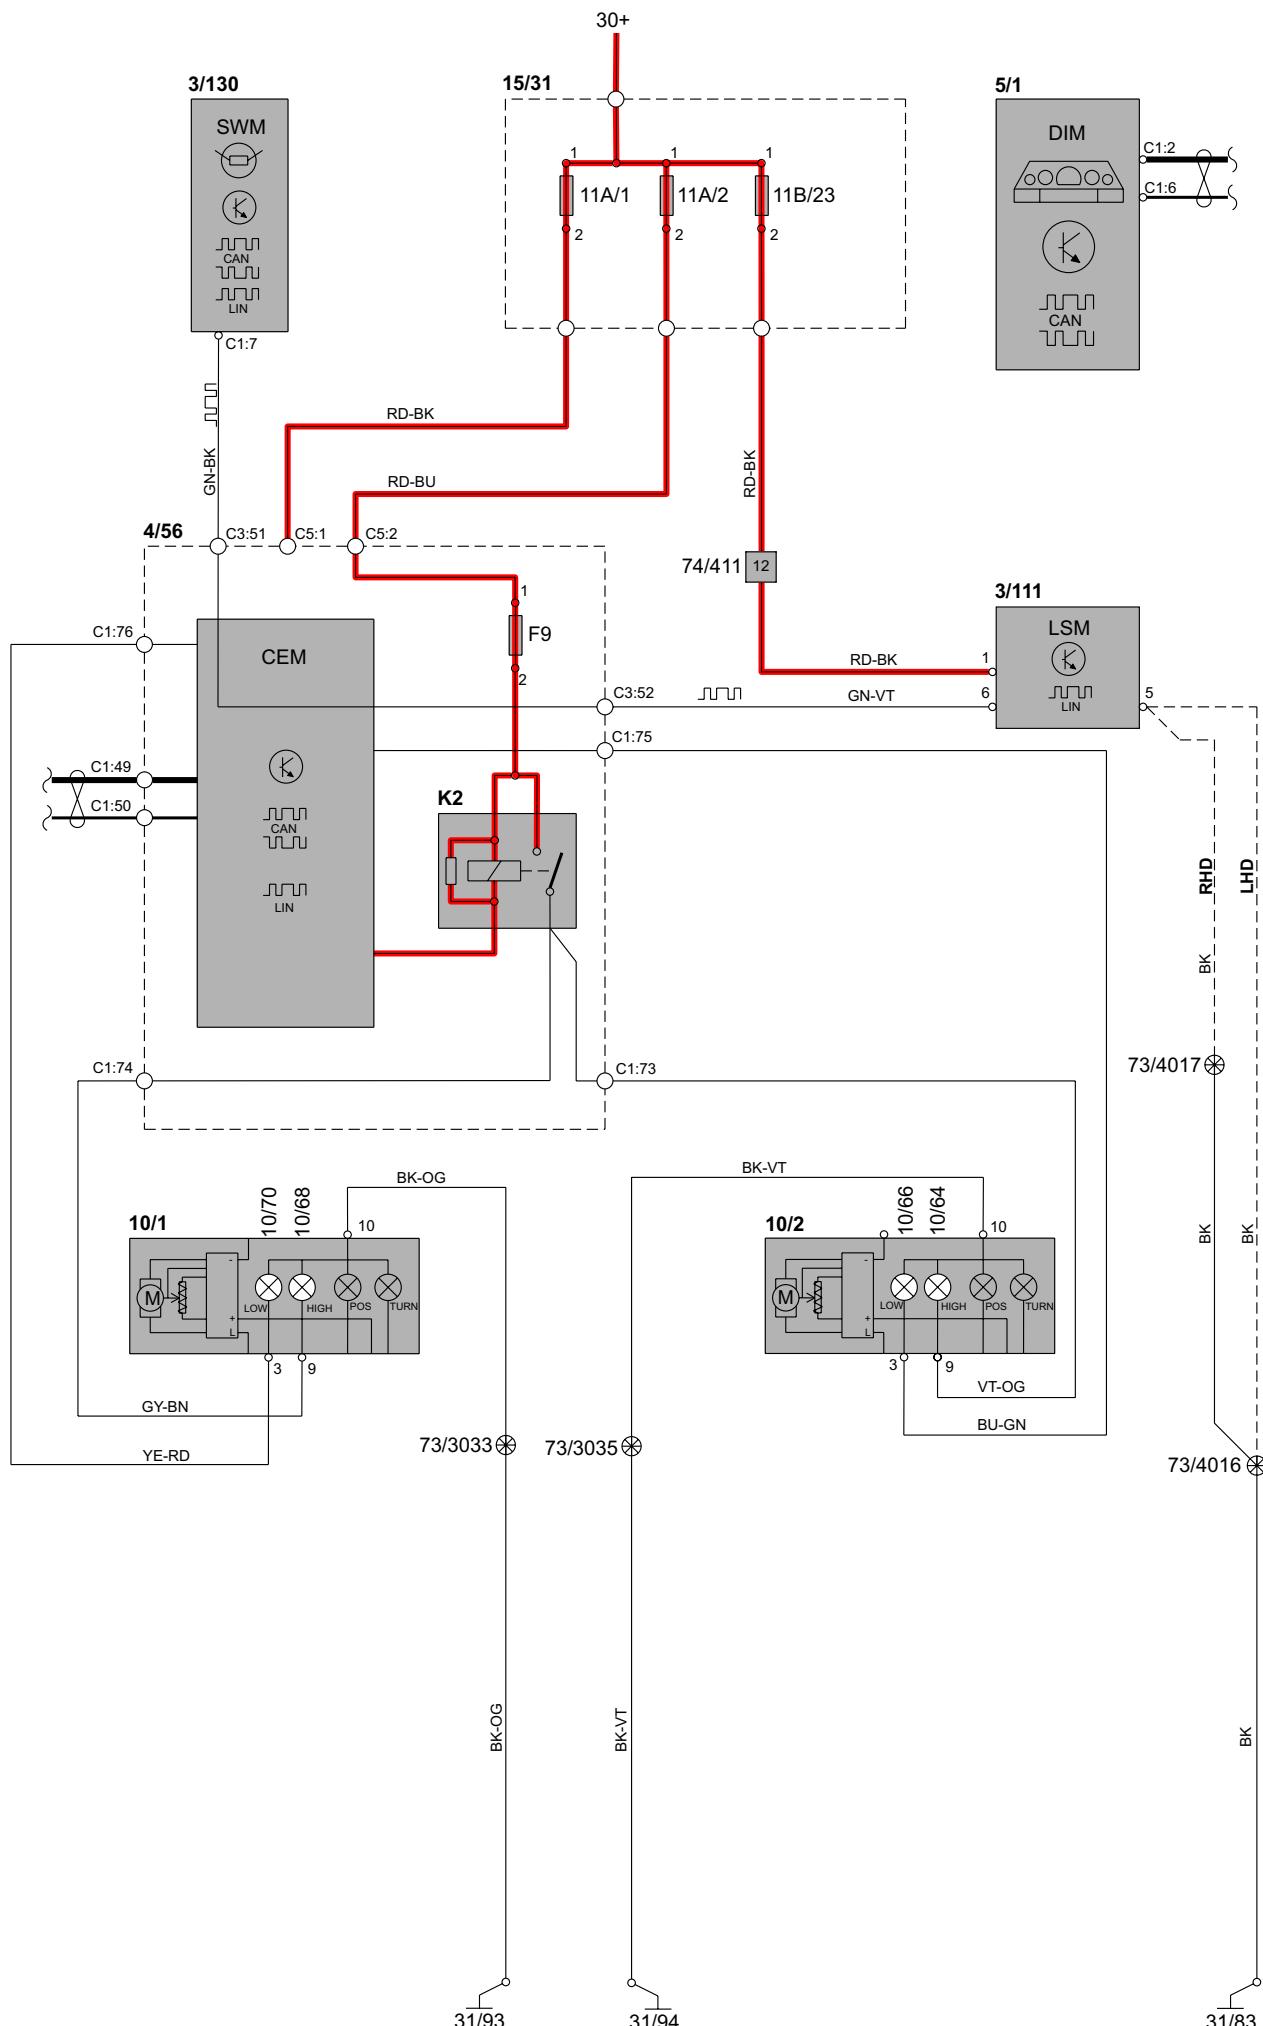


Group 35 Lighting

High and low beam (Bi-Xenon)

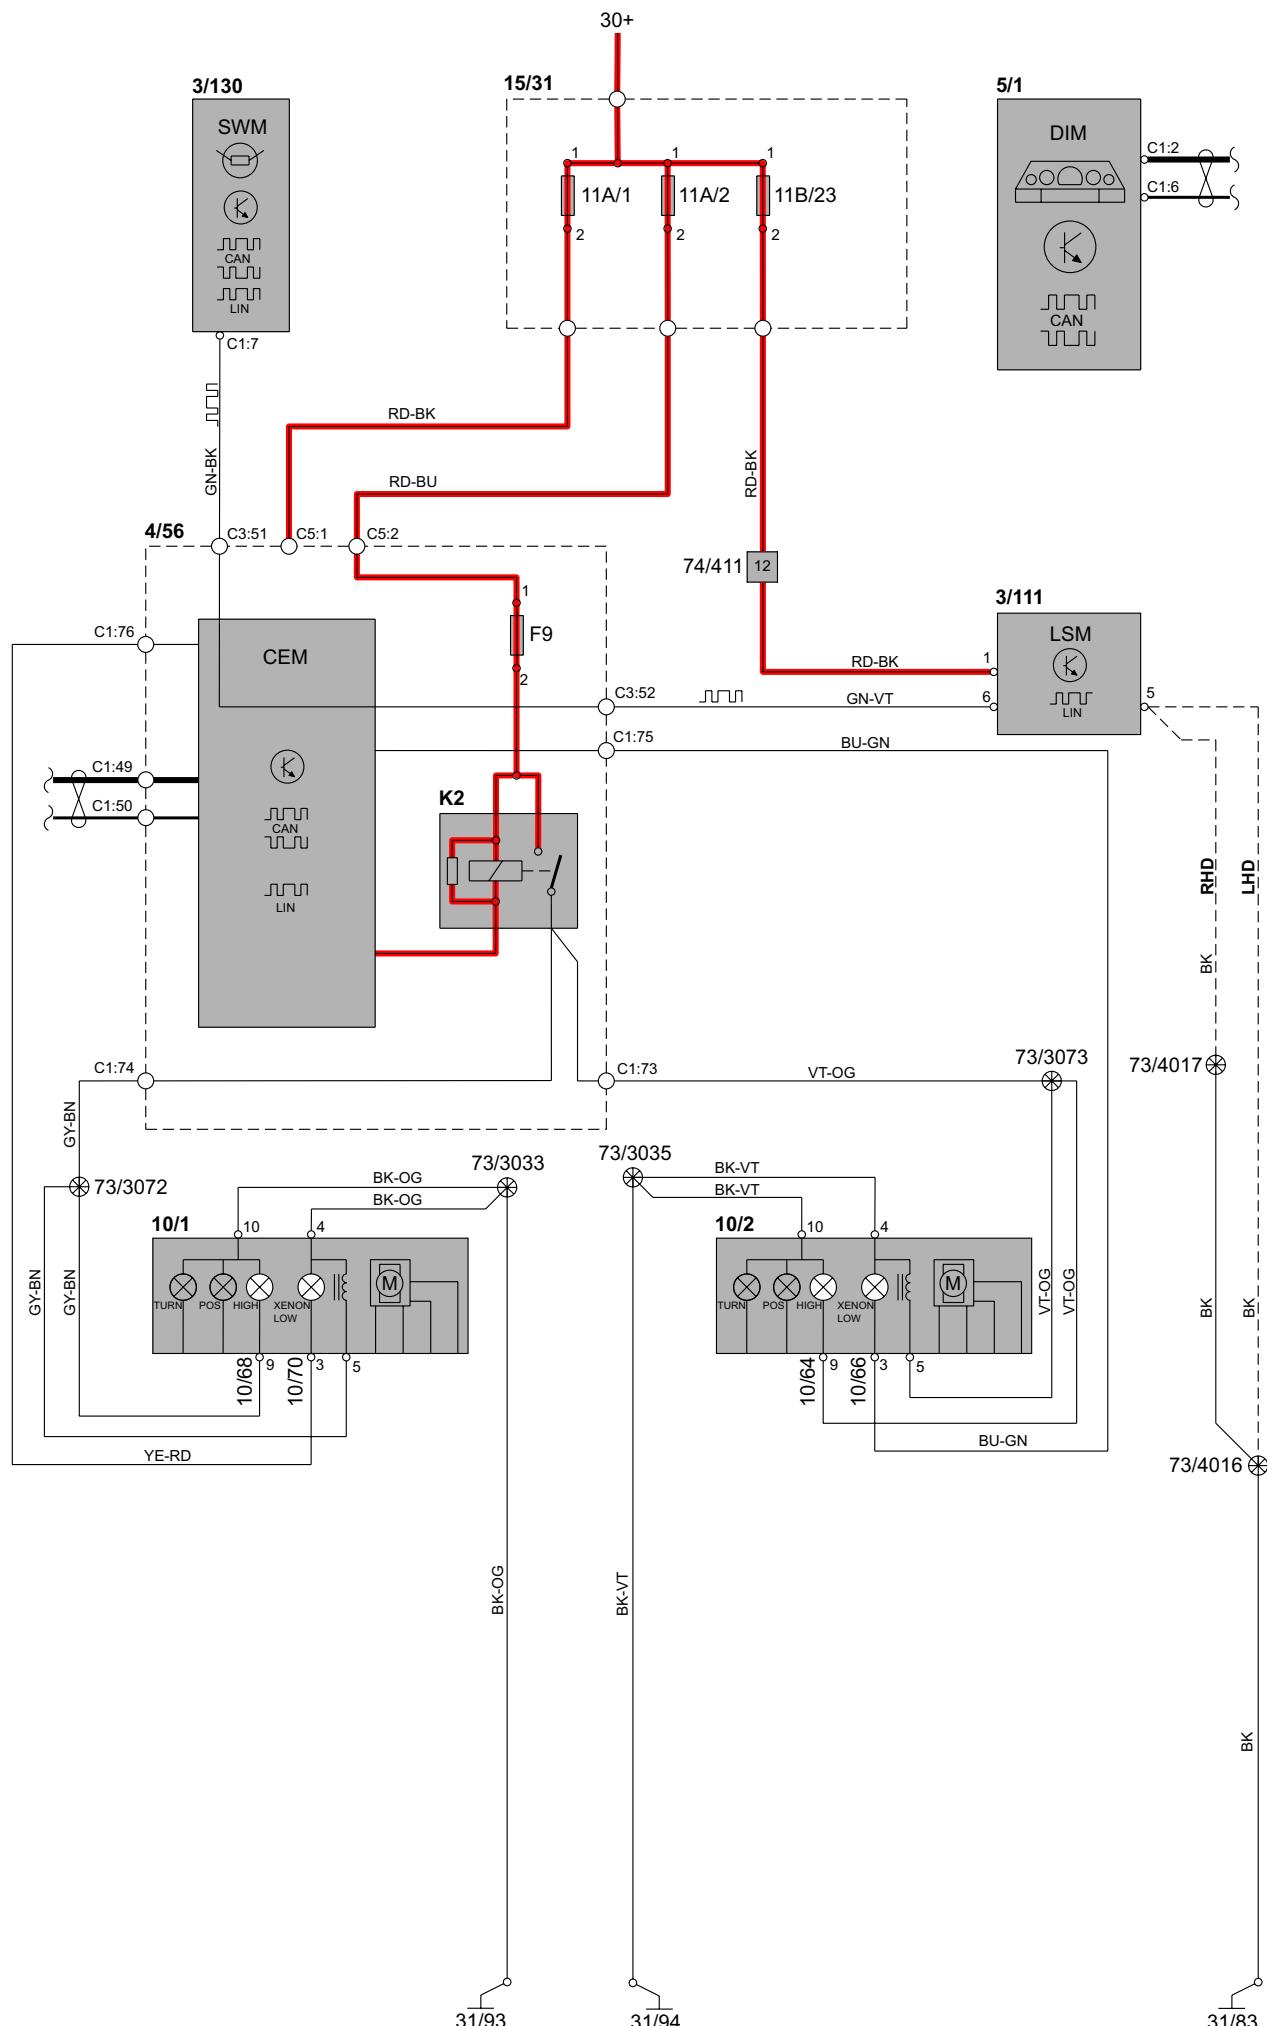


Group 35 Lighting

Beam length adjustment, manual

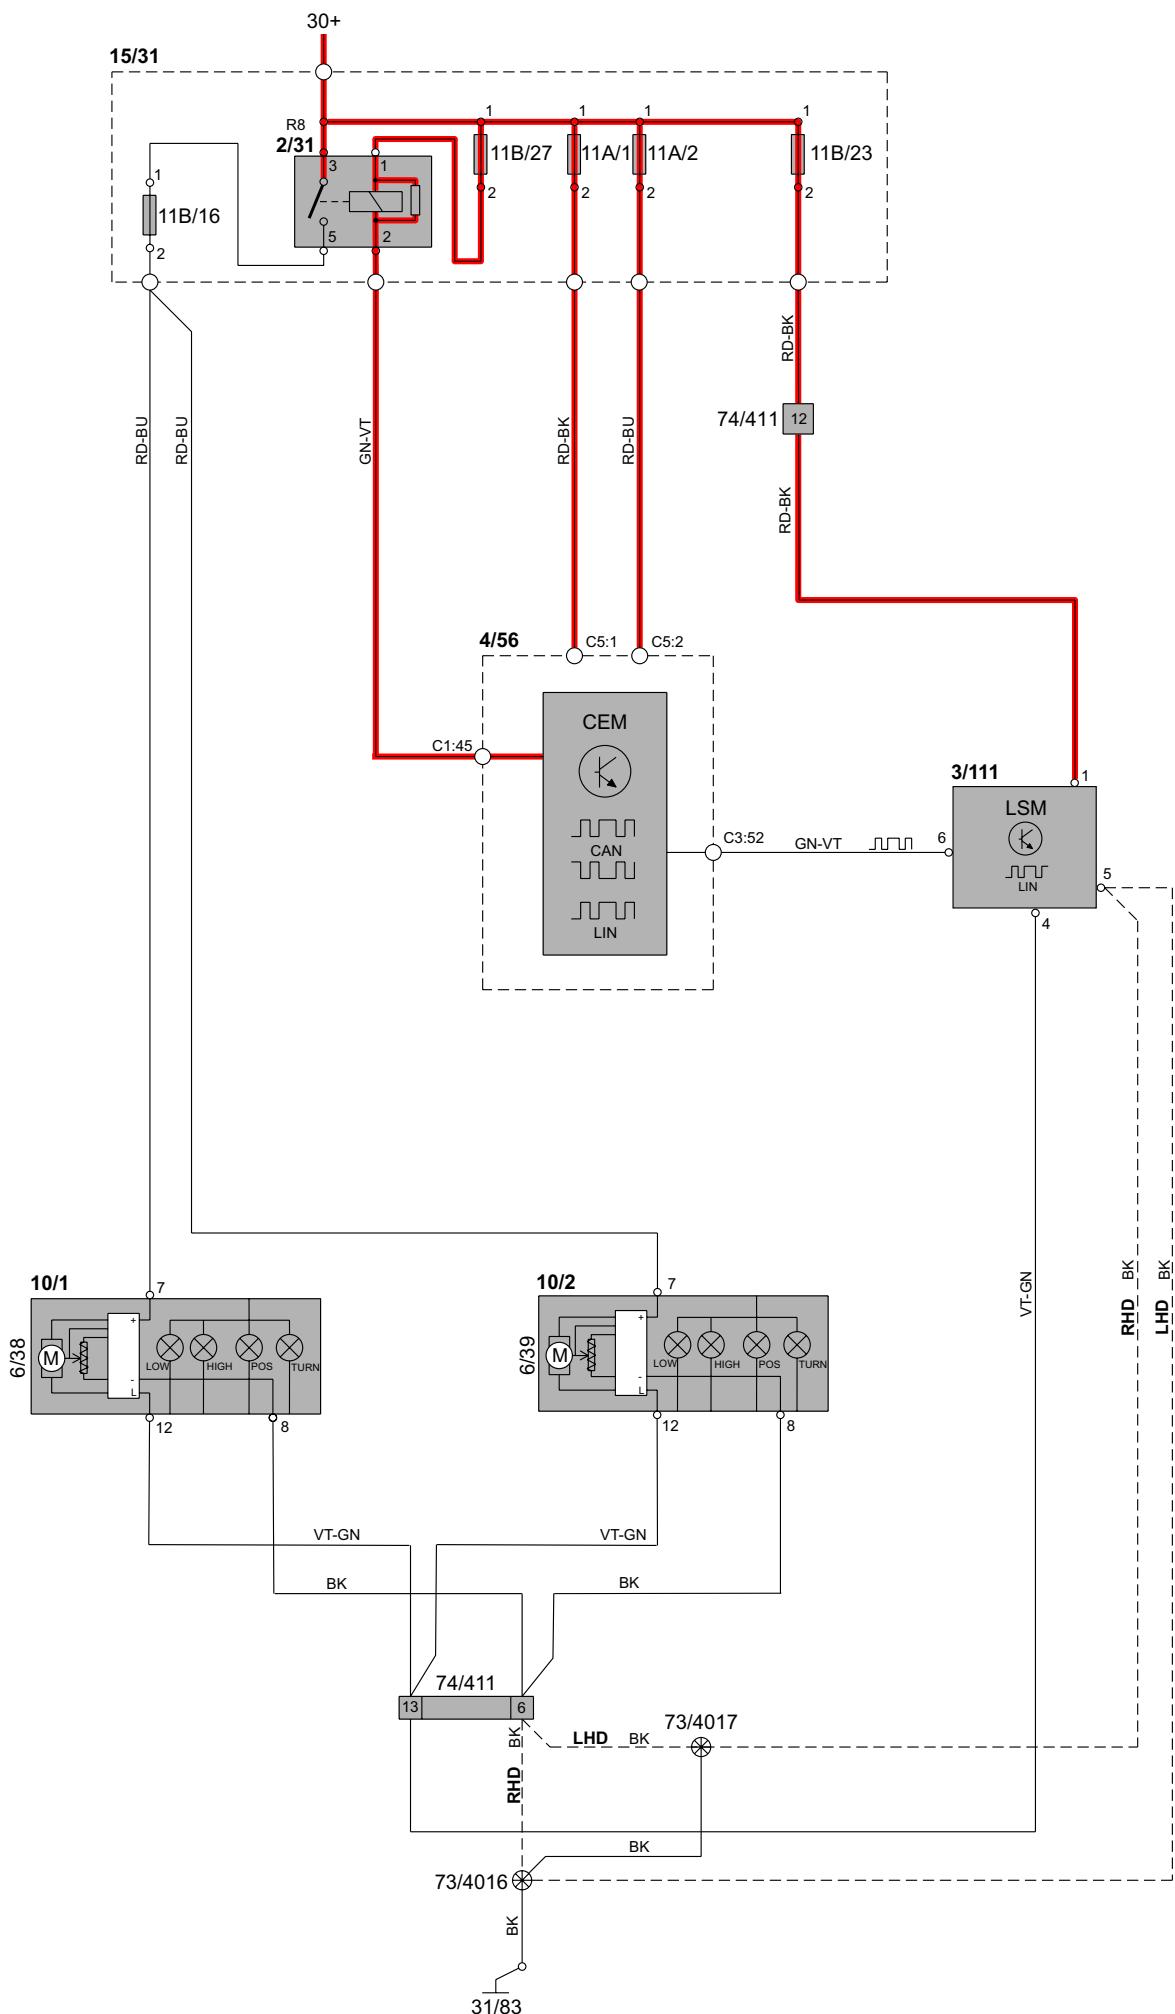


Group 35 Lighting

Beam length adjustment, automatic (Bi-Xenon)

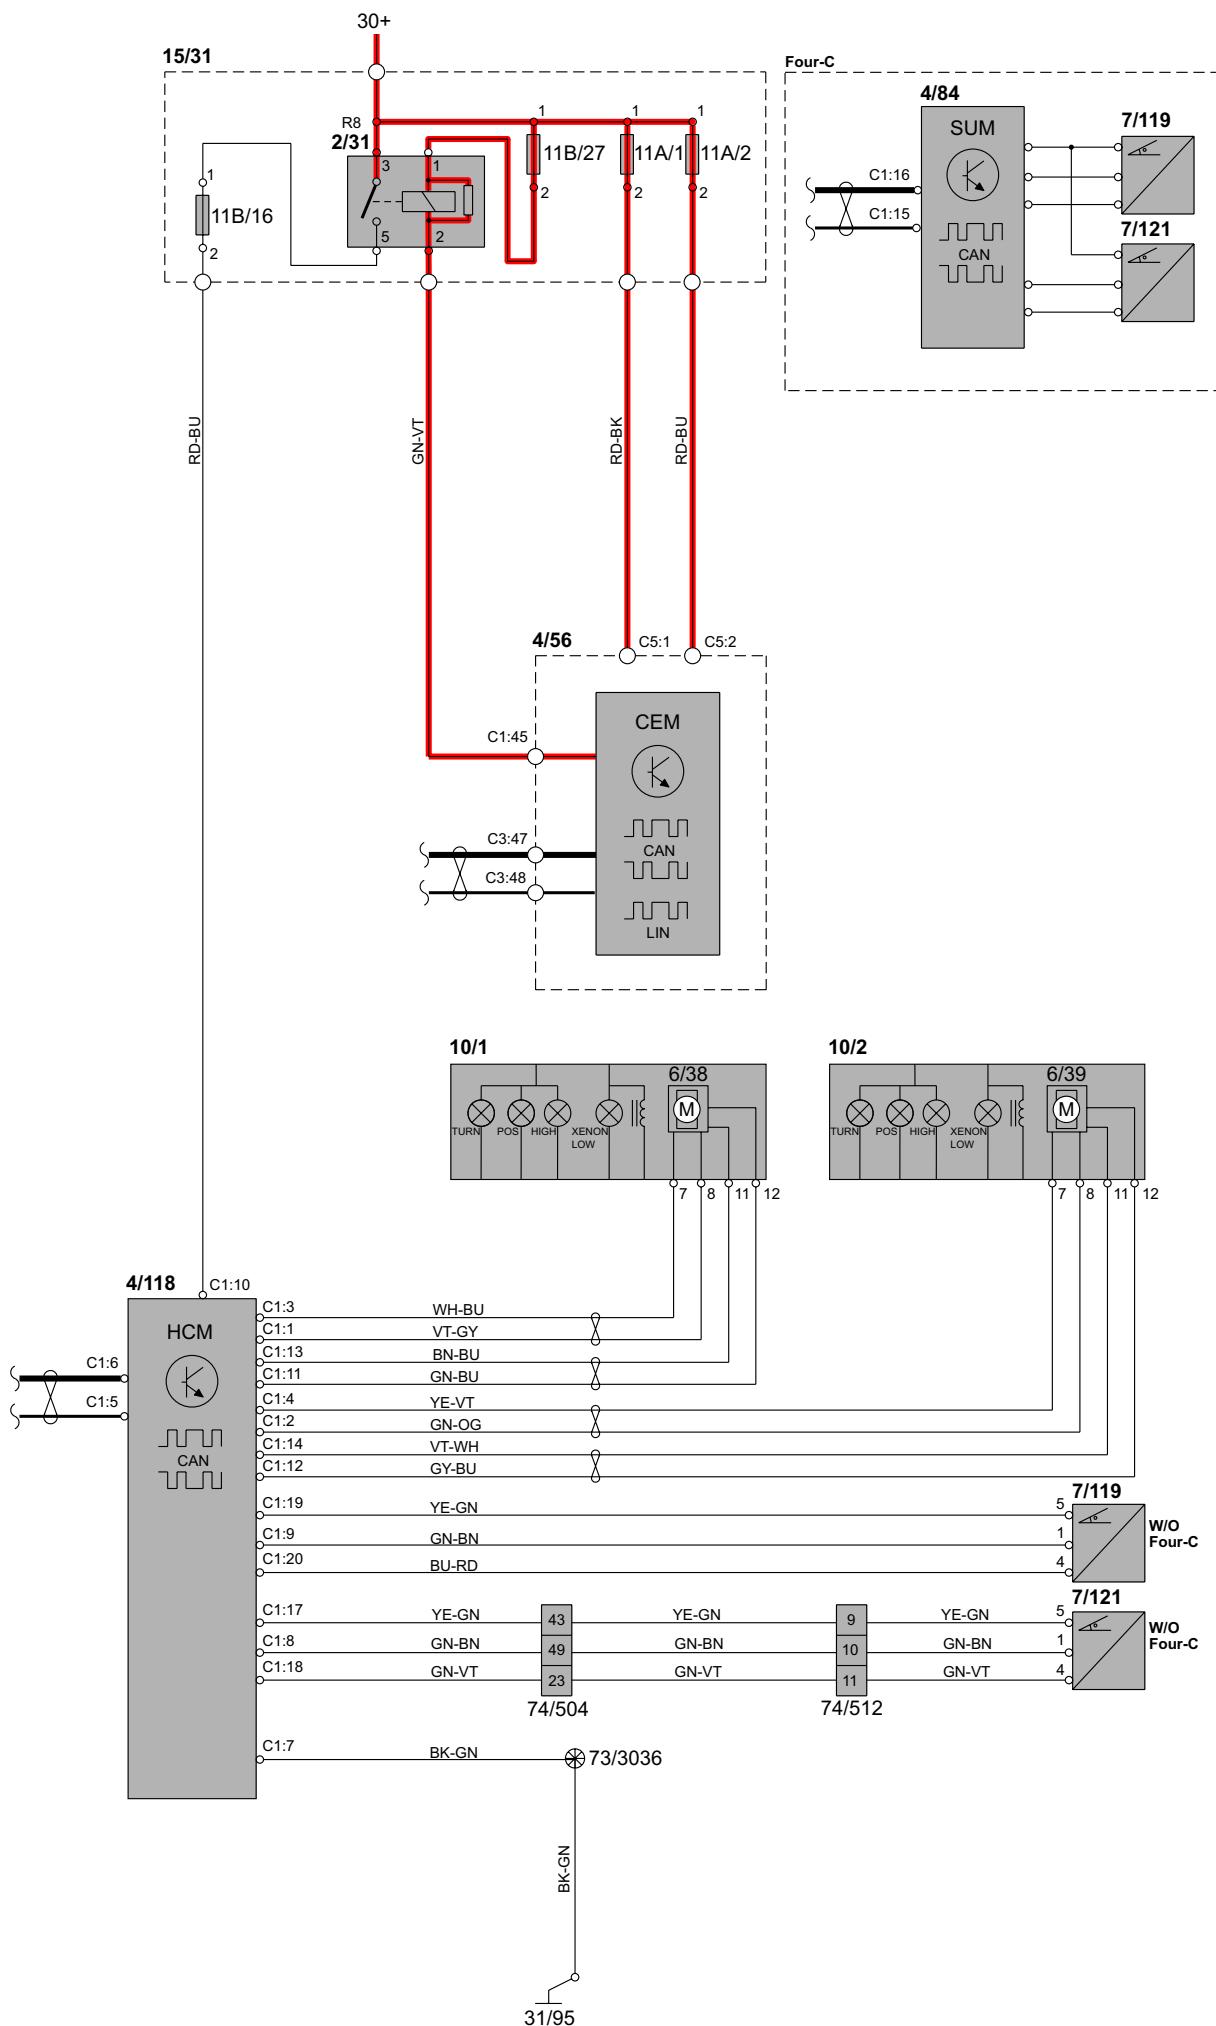


Group 35 Lighting

Running/parking lights, Tail lights V70

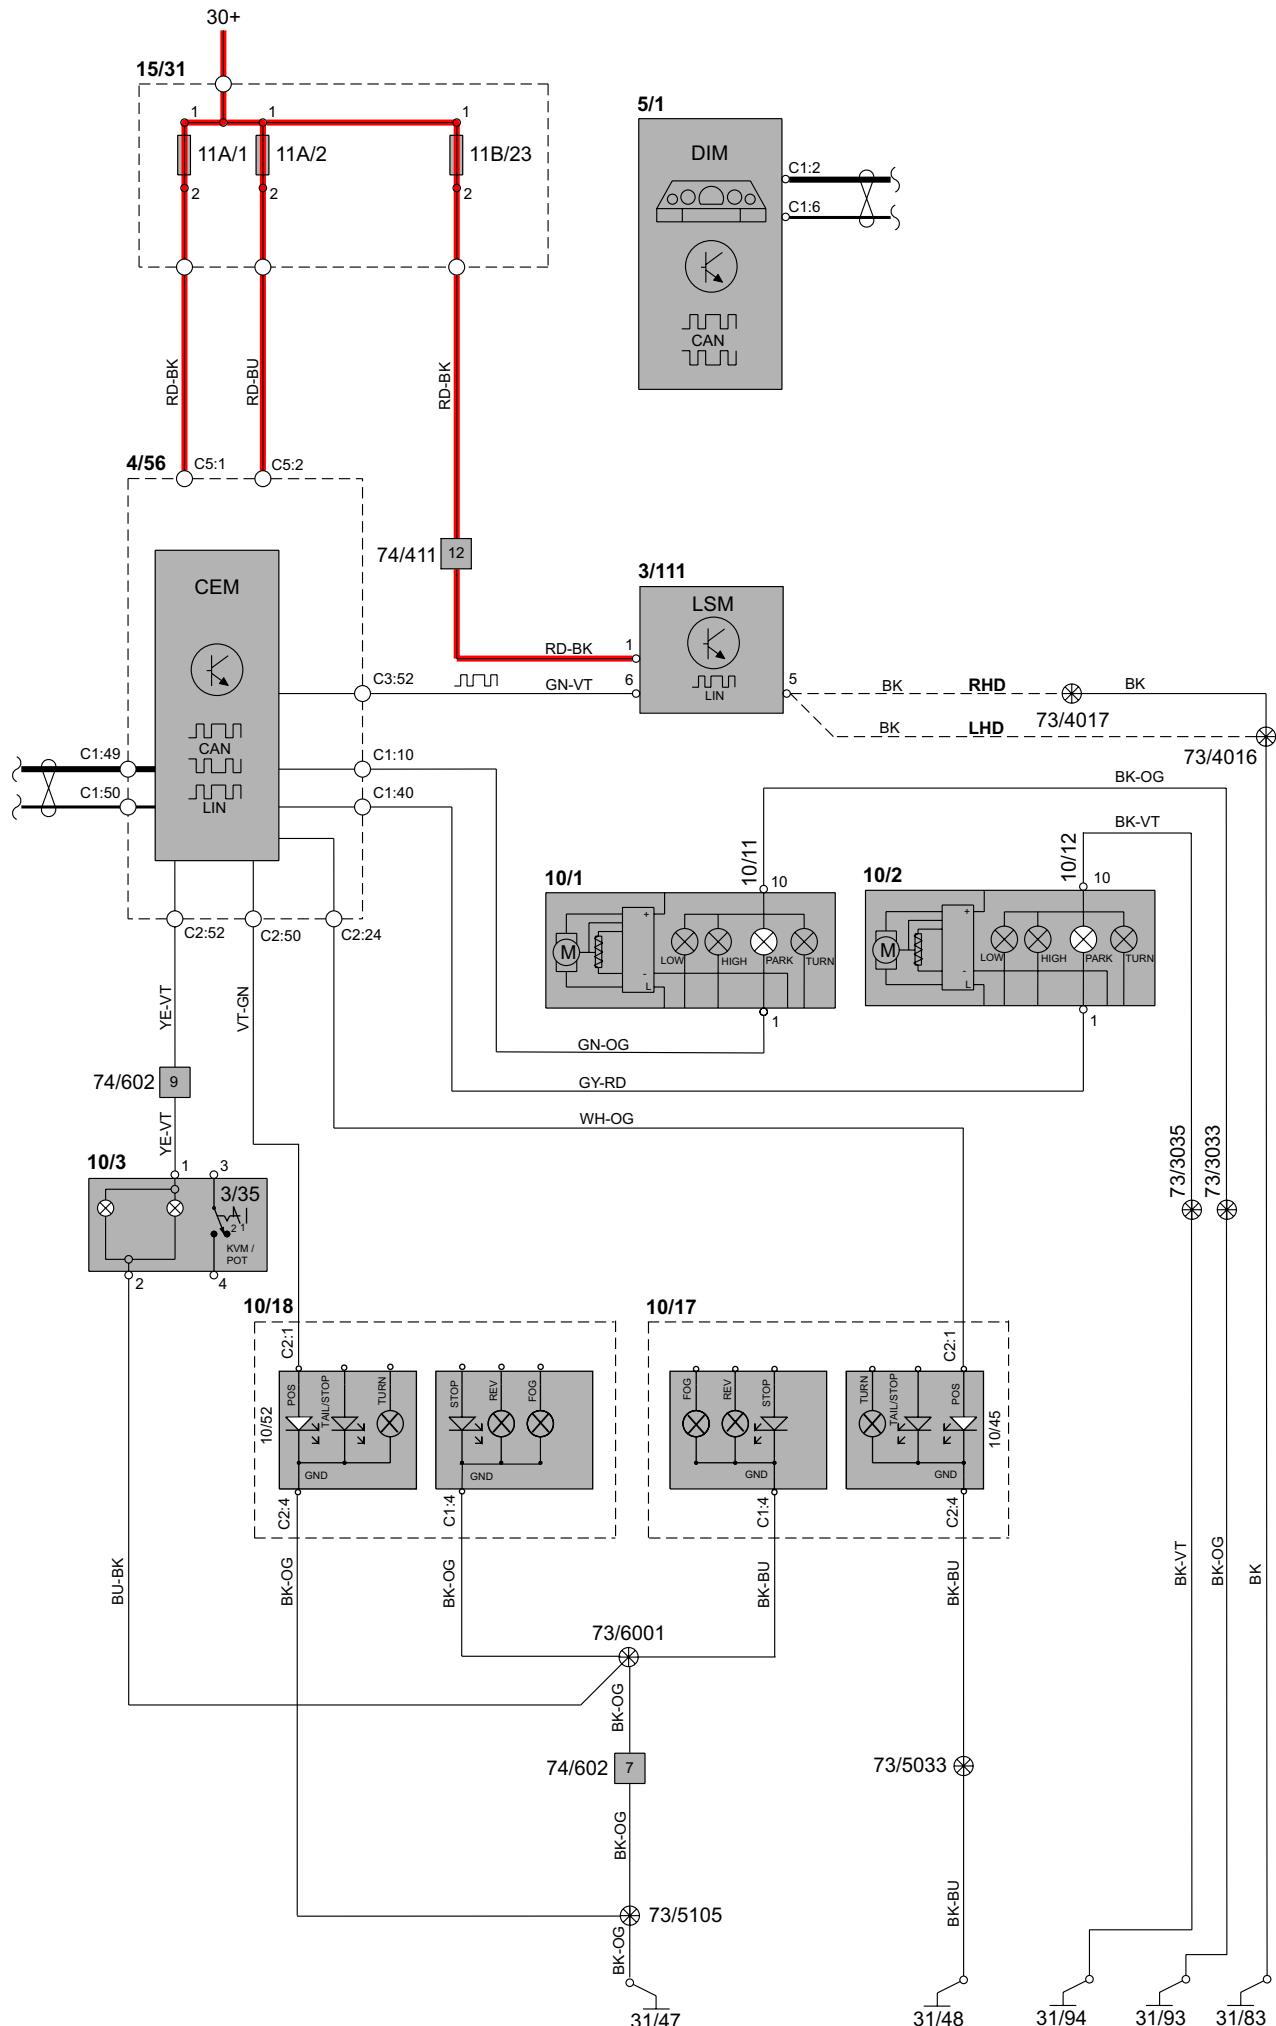


Group 35 Lighting

Running/parking lights, Tail lights S80

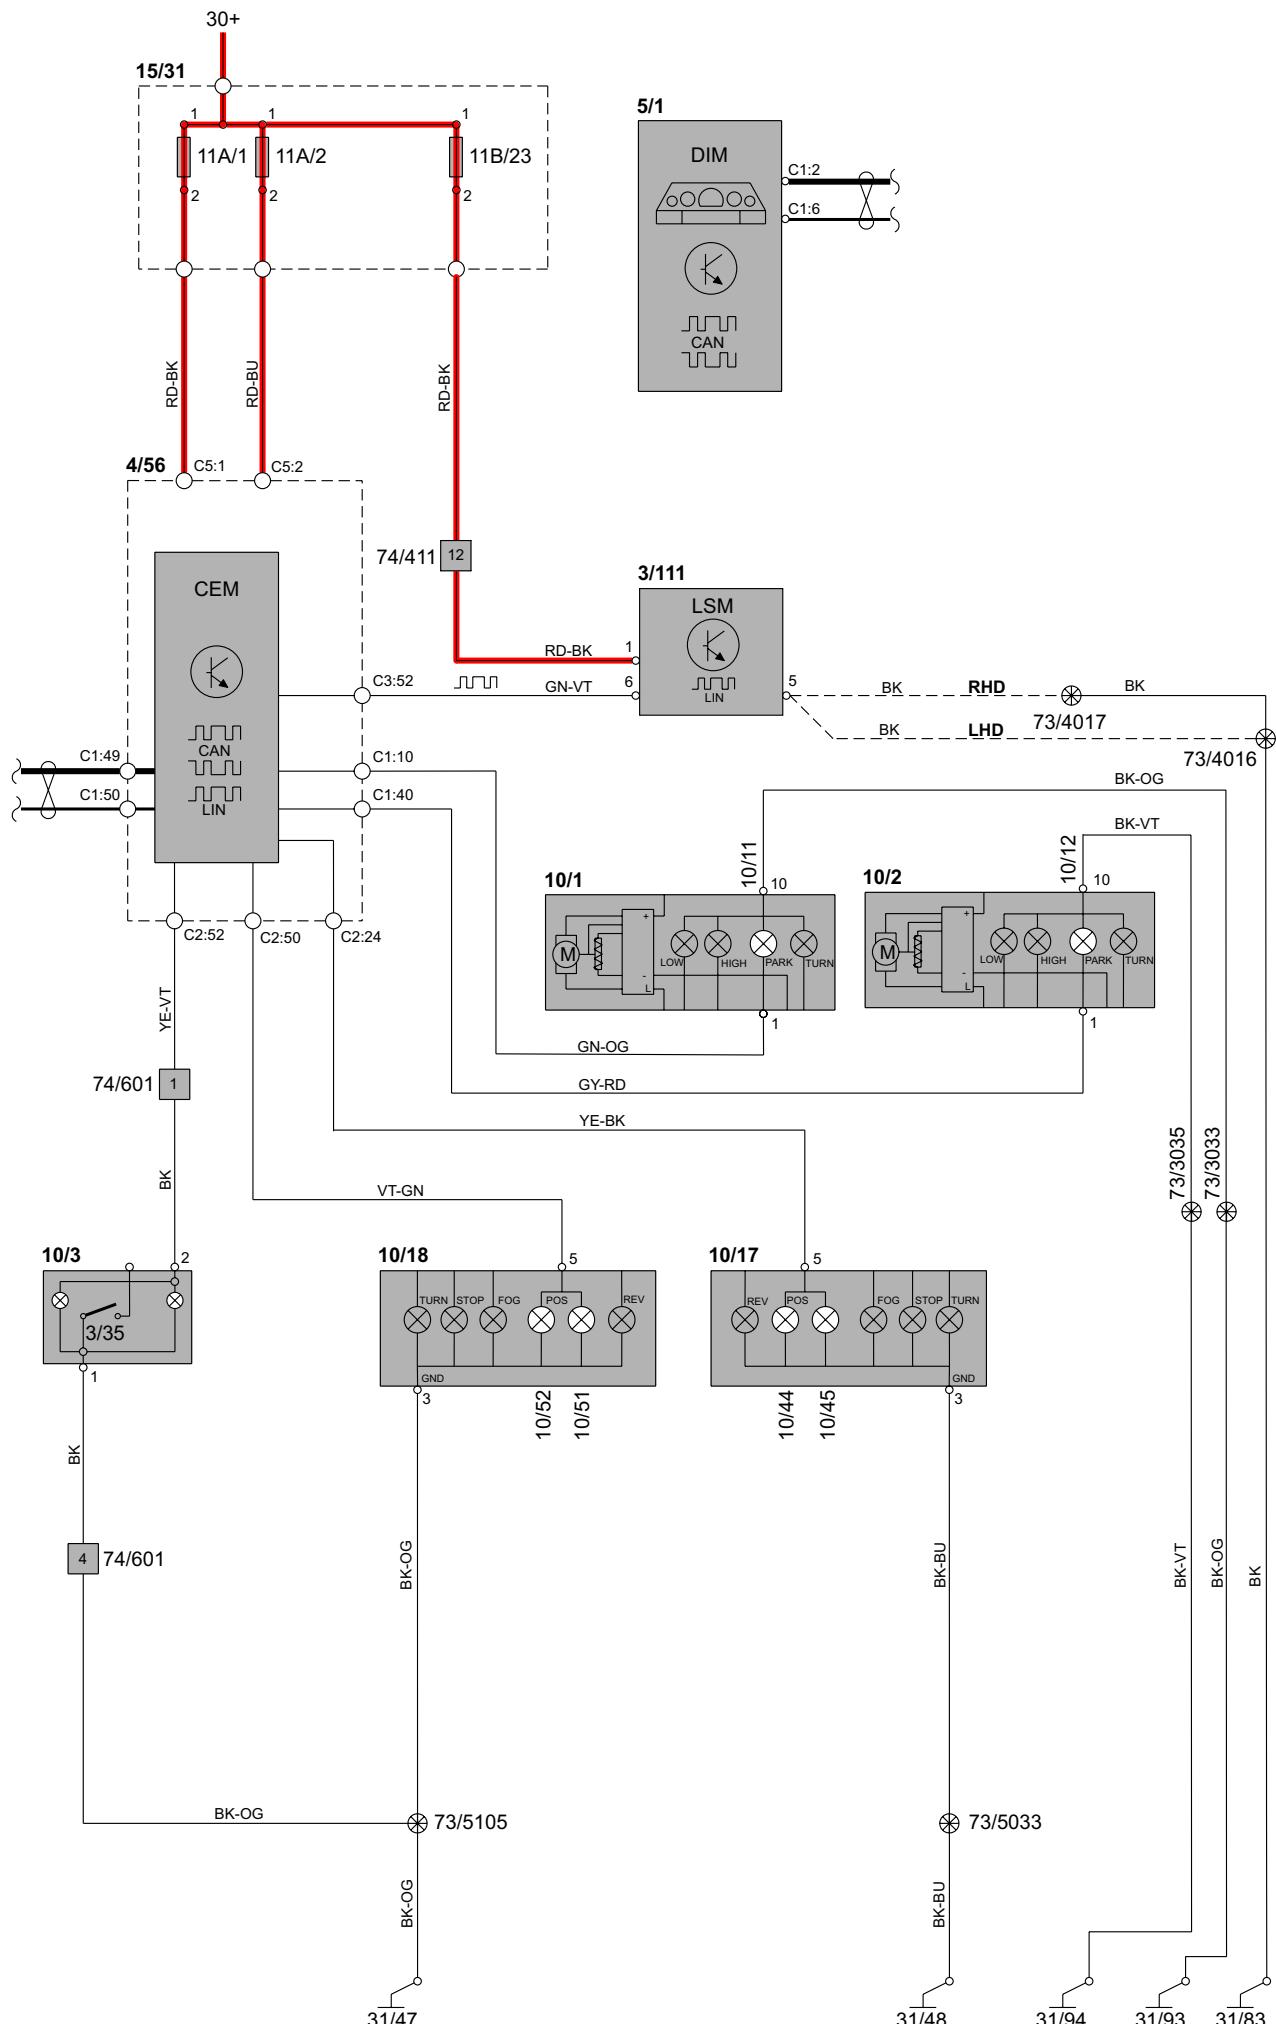


Group 35 Lighting

Running/parking lights, Tail lights (Bi-Xenon) V70

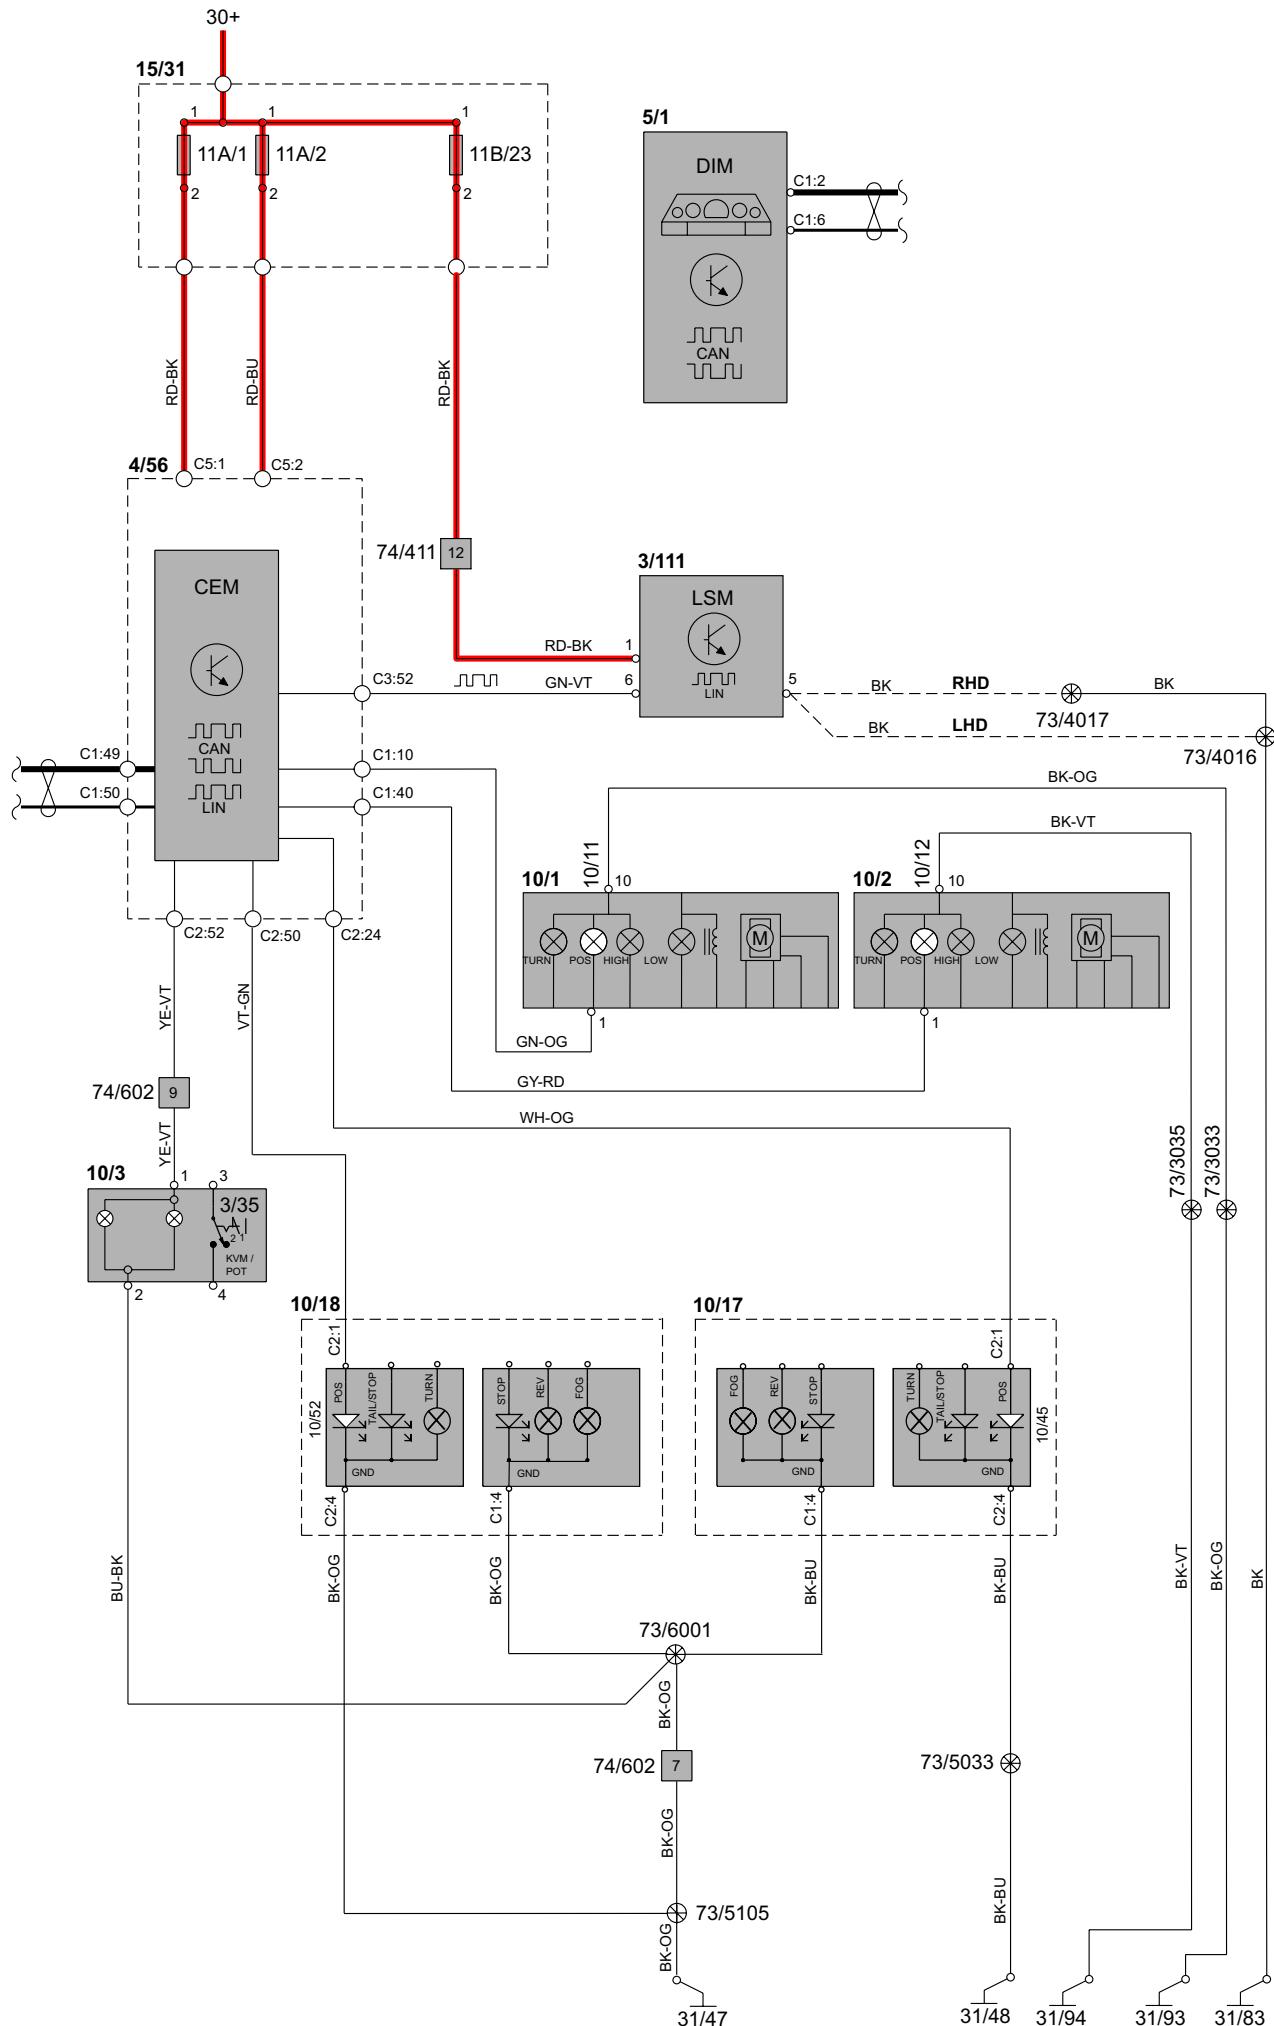


Group 35 Lighting

Running/parking lights, Tail lights (Bi-Xenon) S80

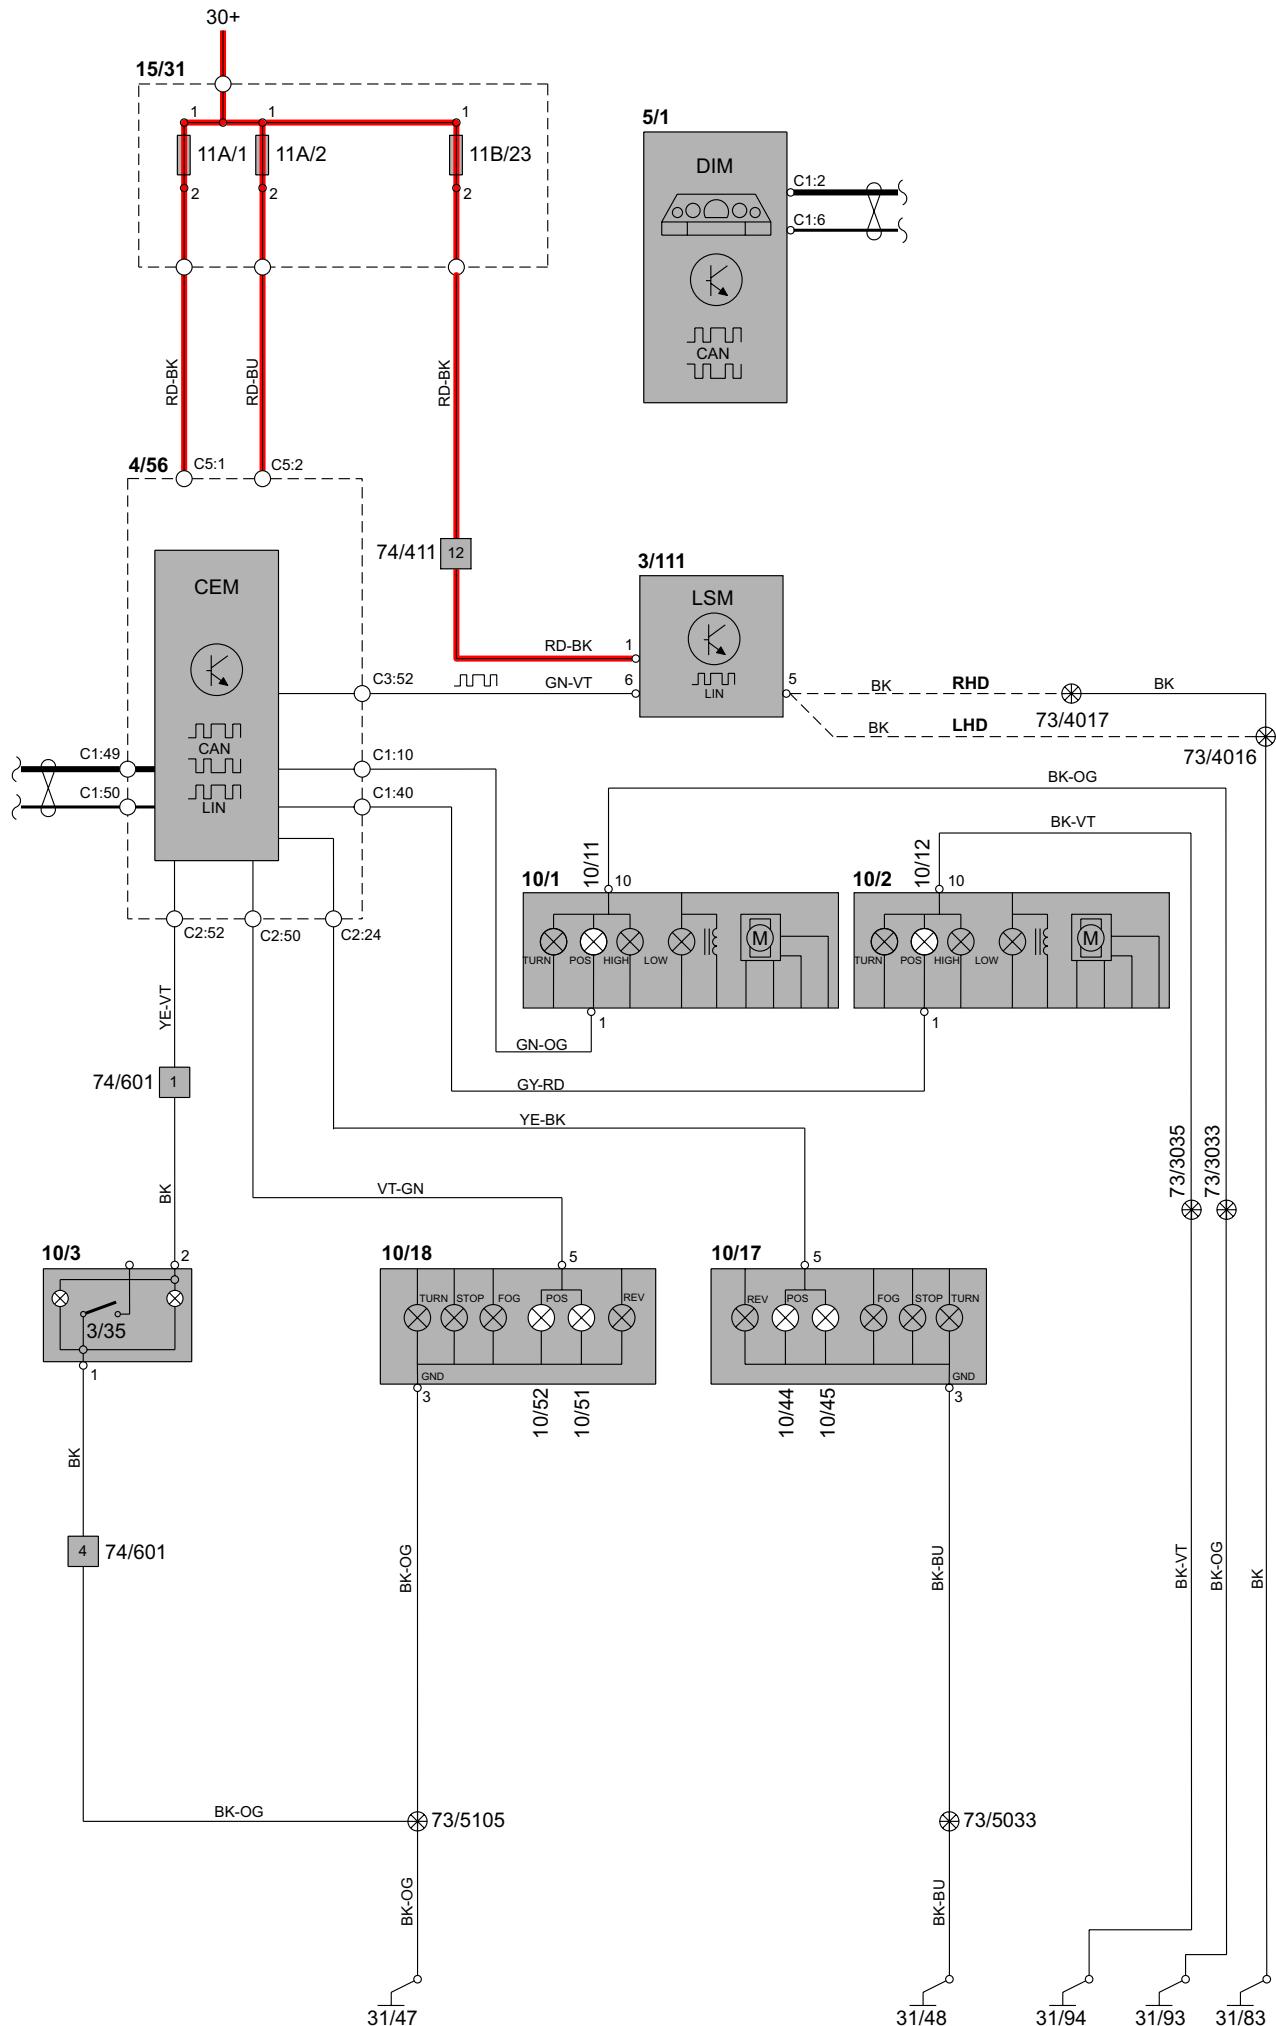


Group 35 Lighting

Fog lights V70

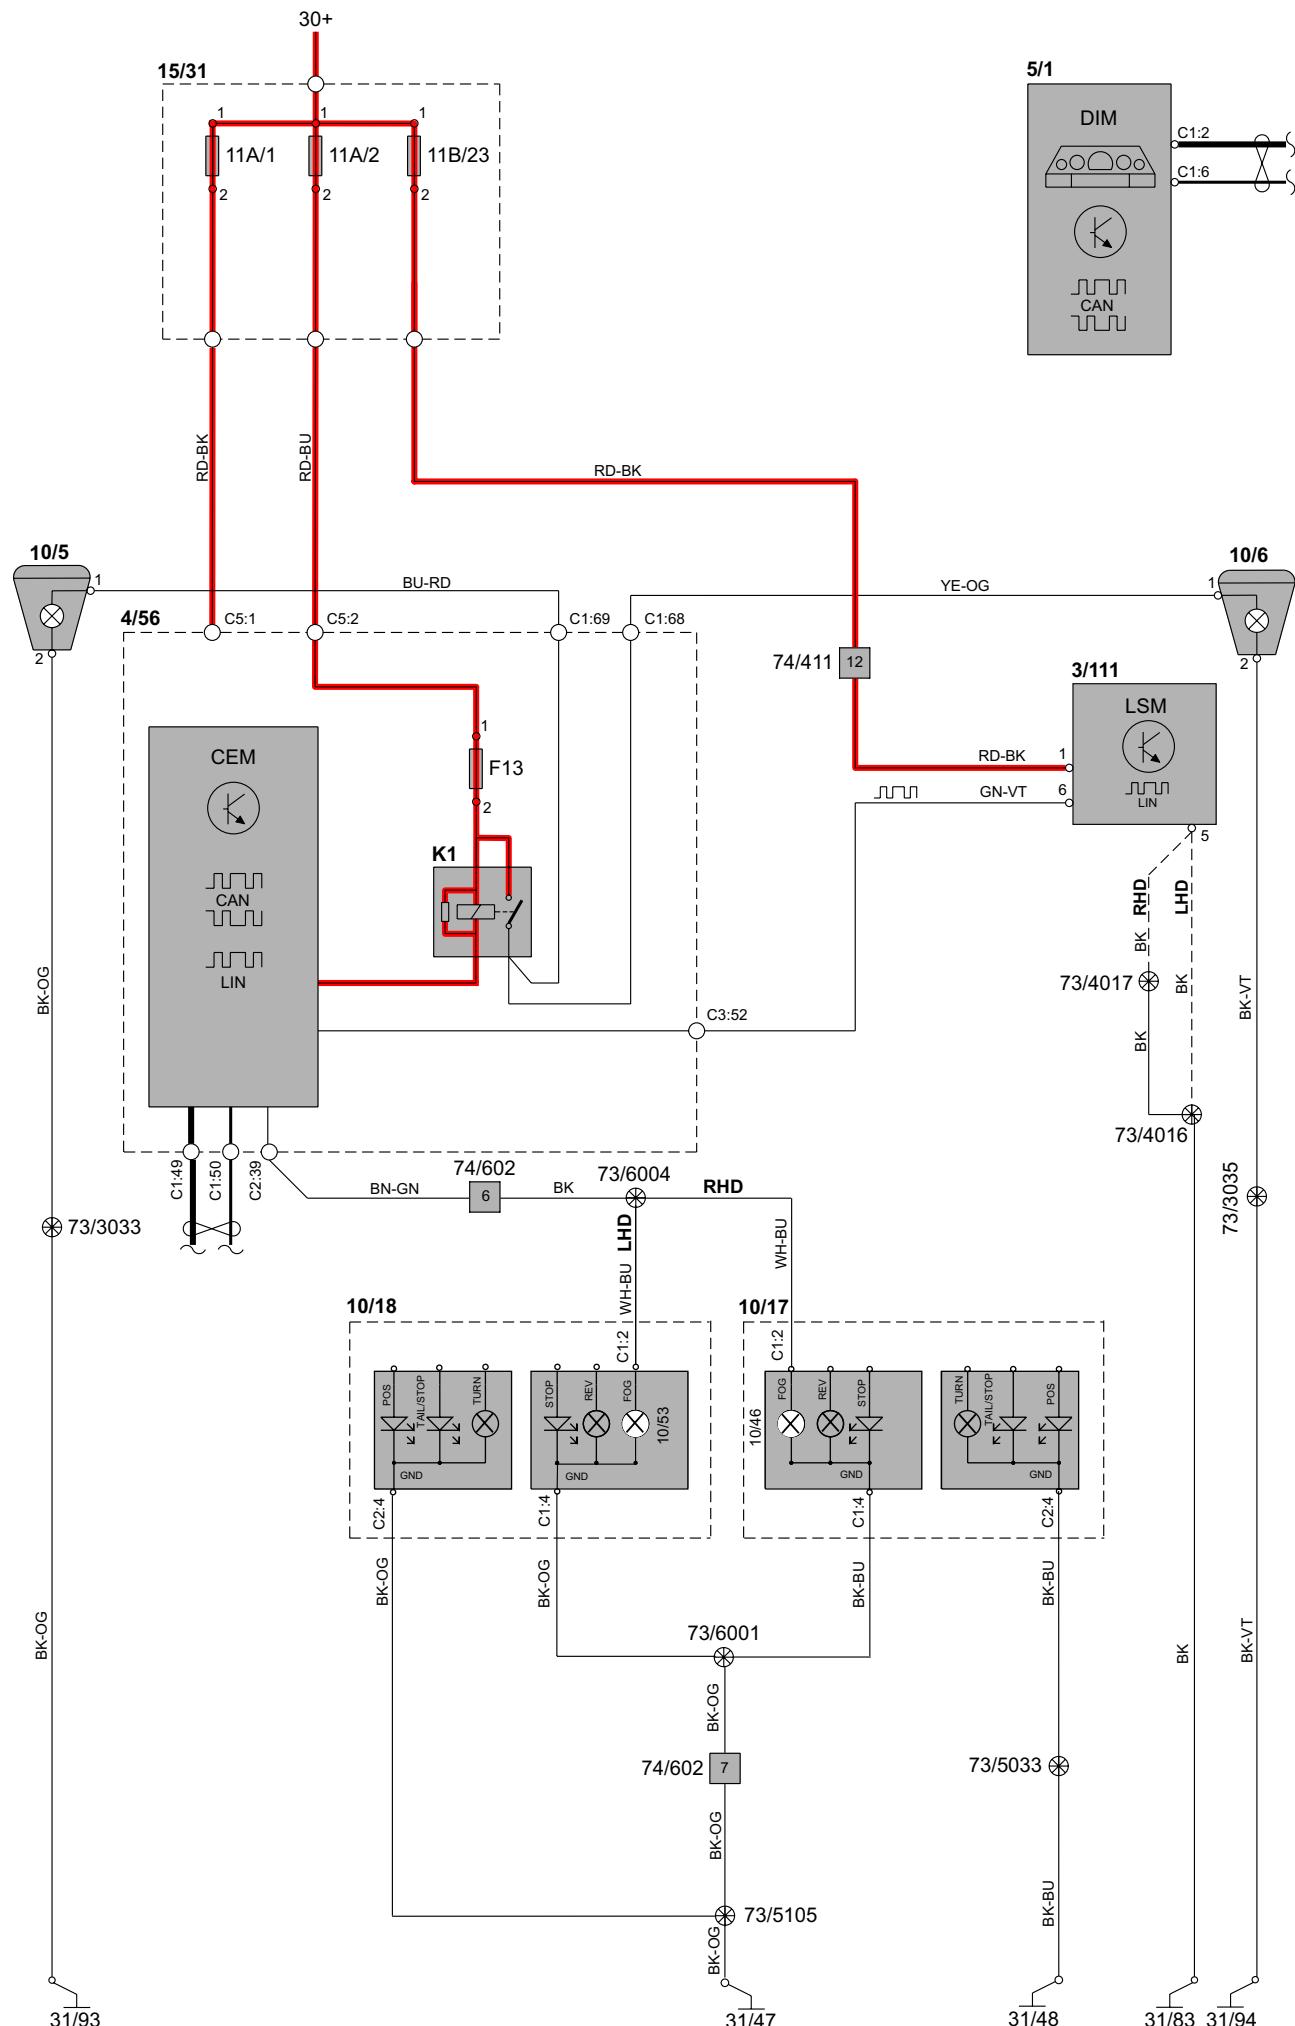


Group 35 Lighting

Fog lights S80

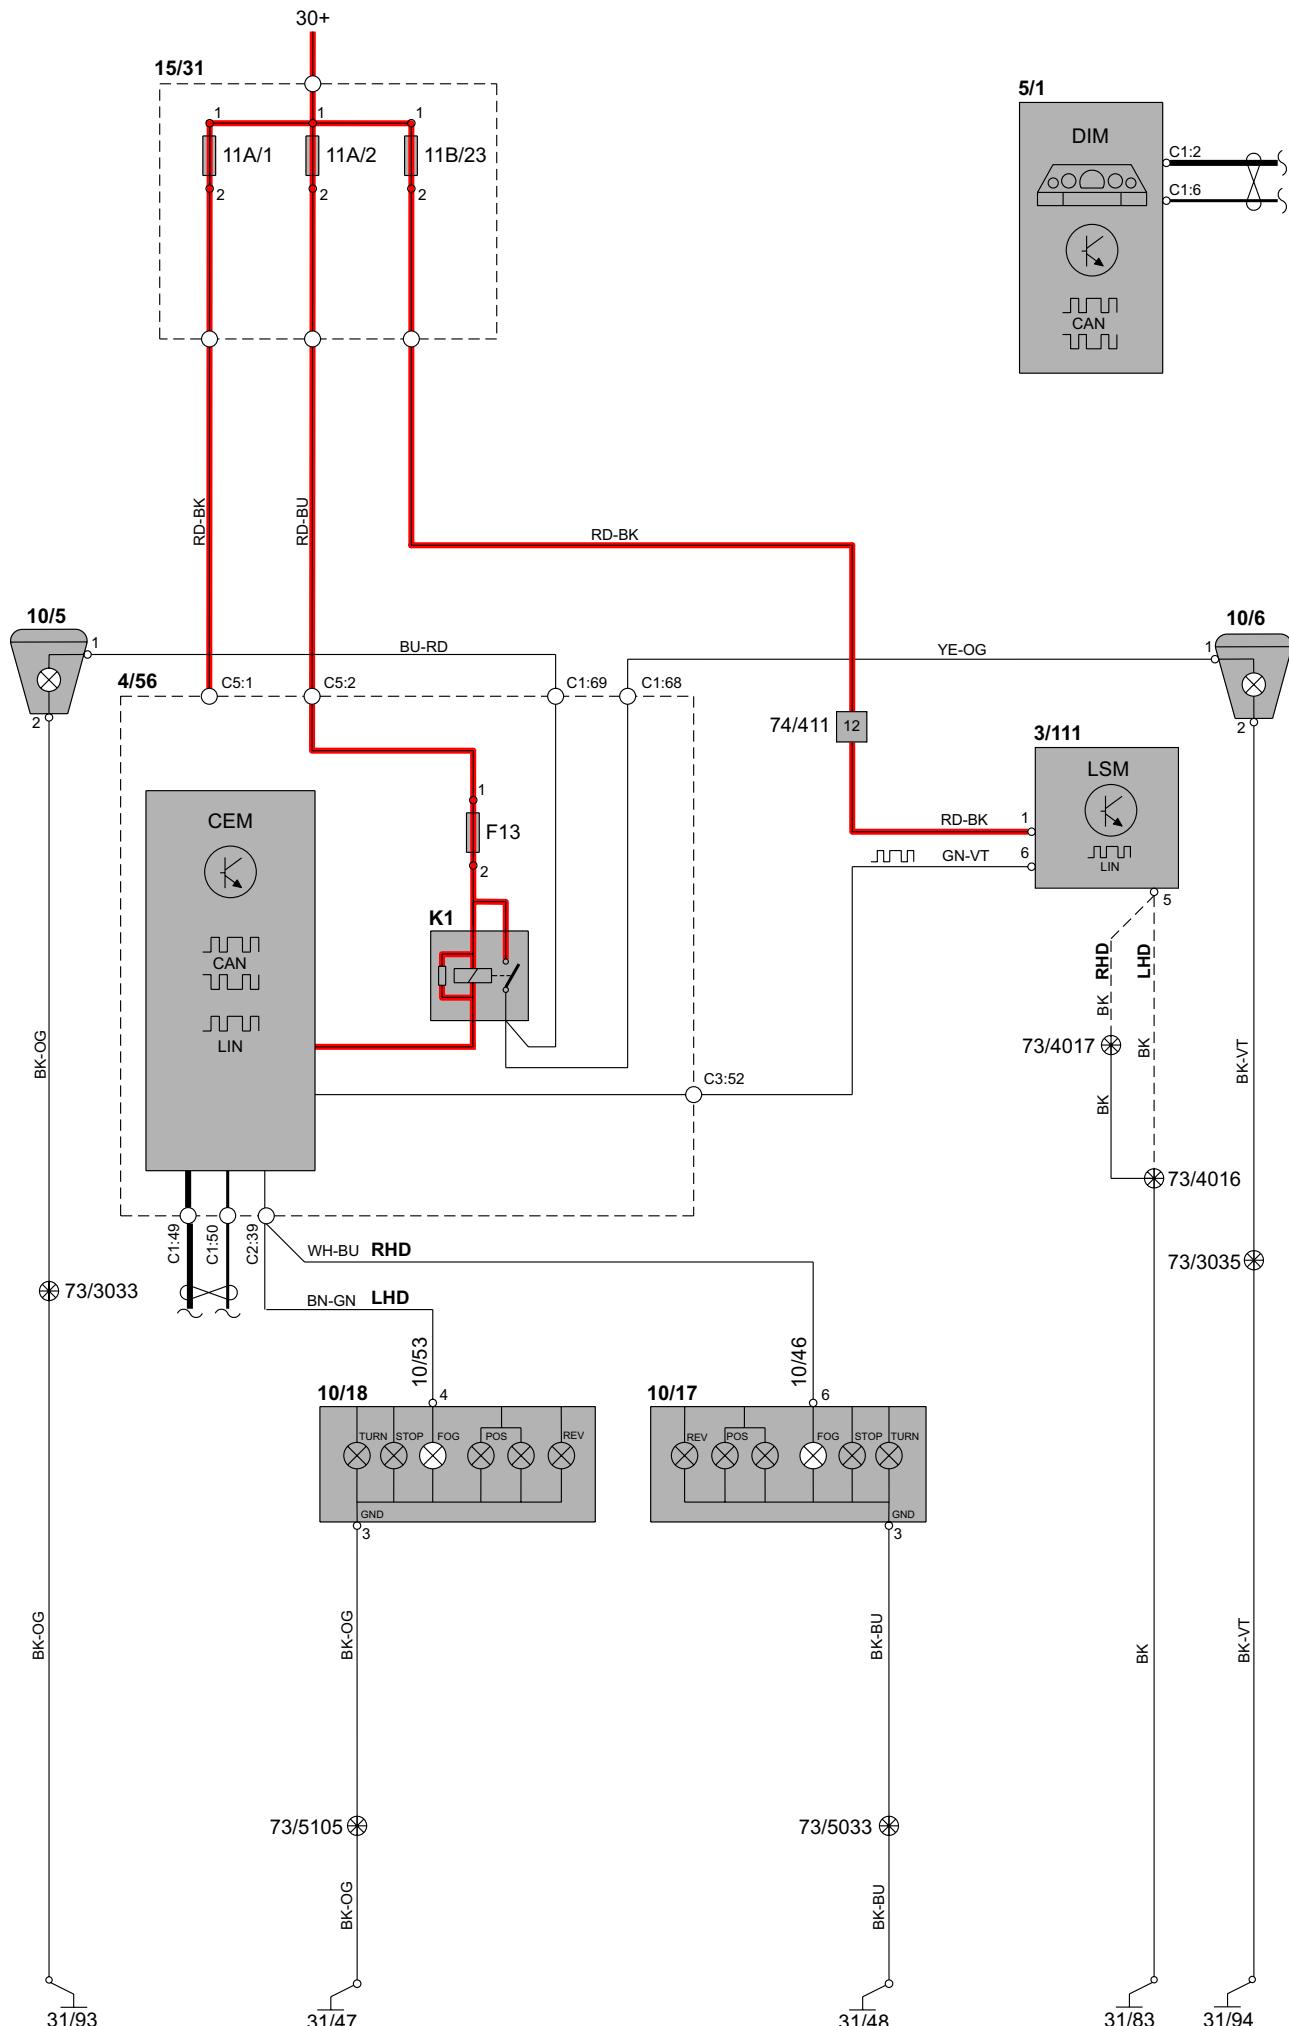


Group 35 Lighting

Brake light V70

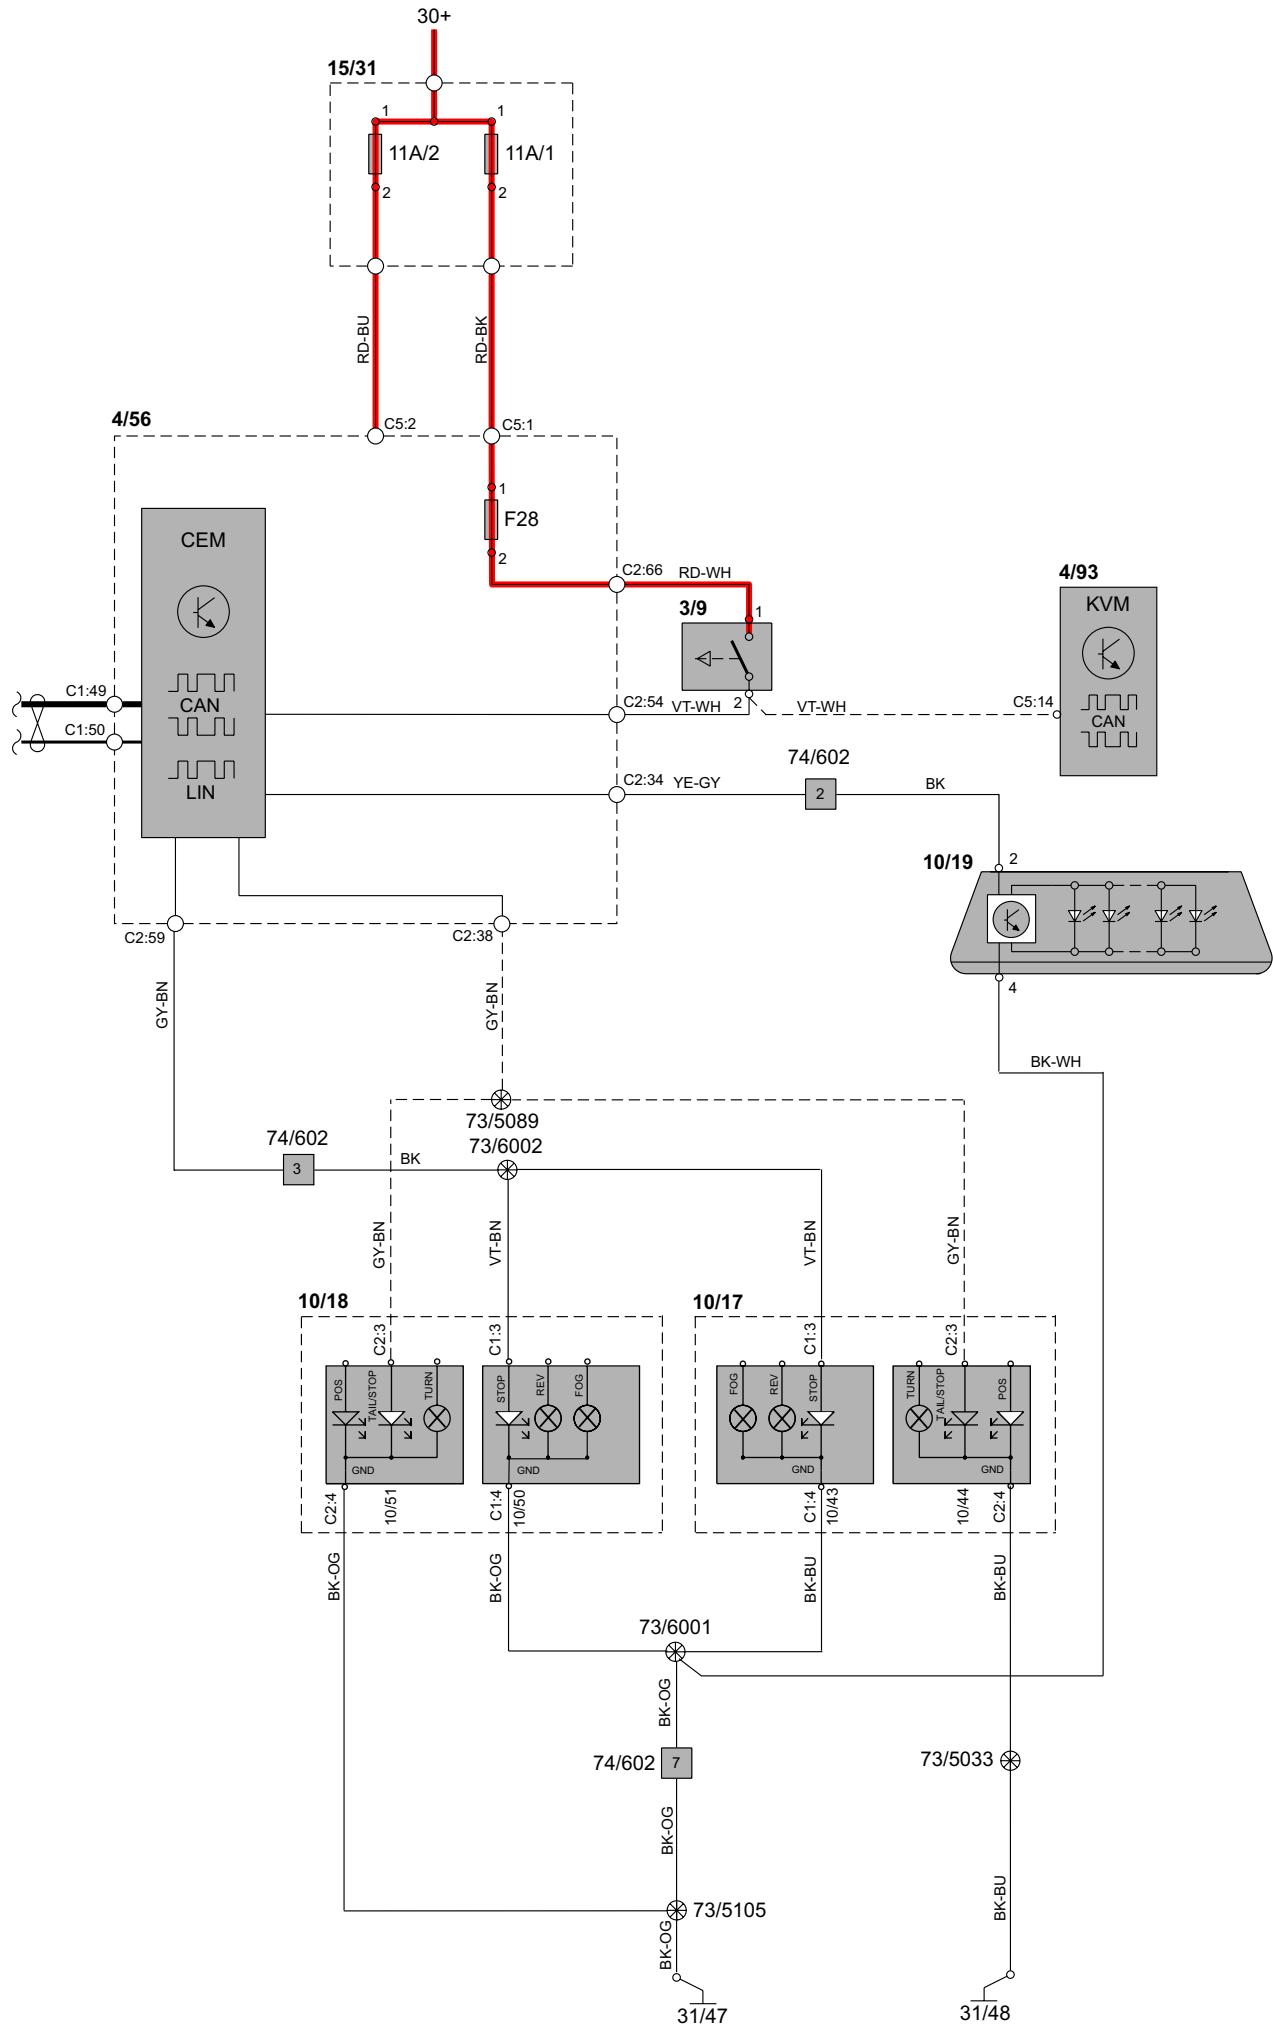


Group 35 Lighting


Brake light S80

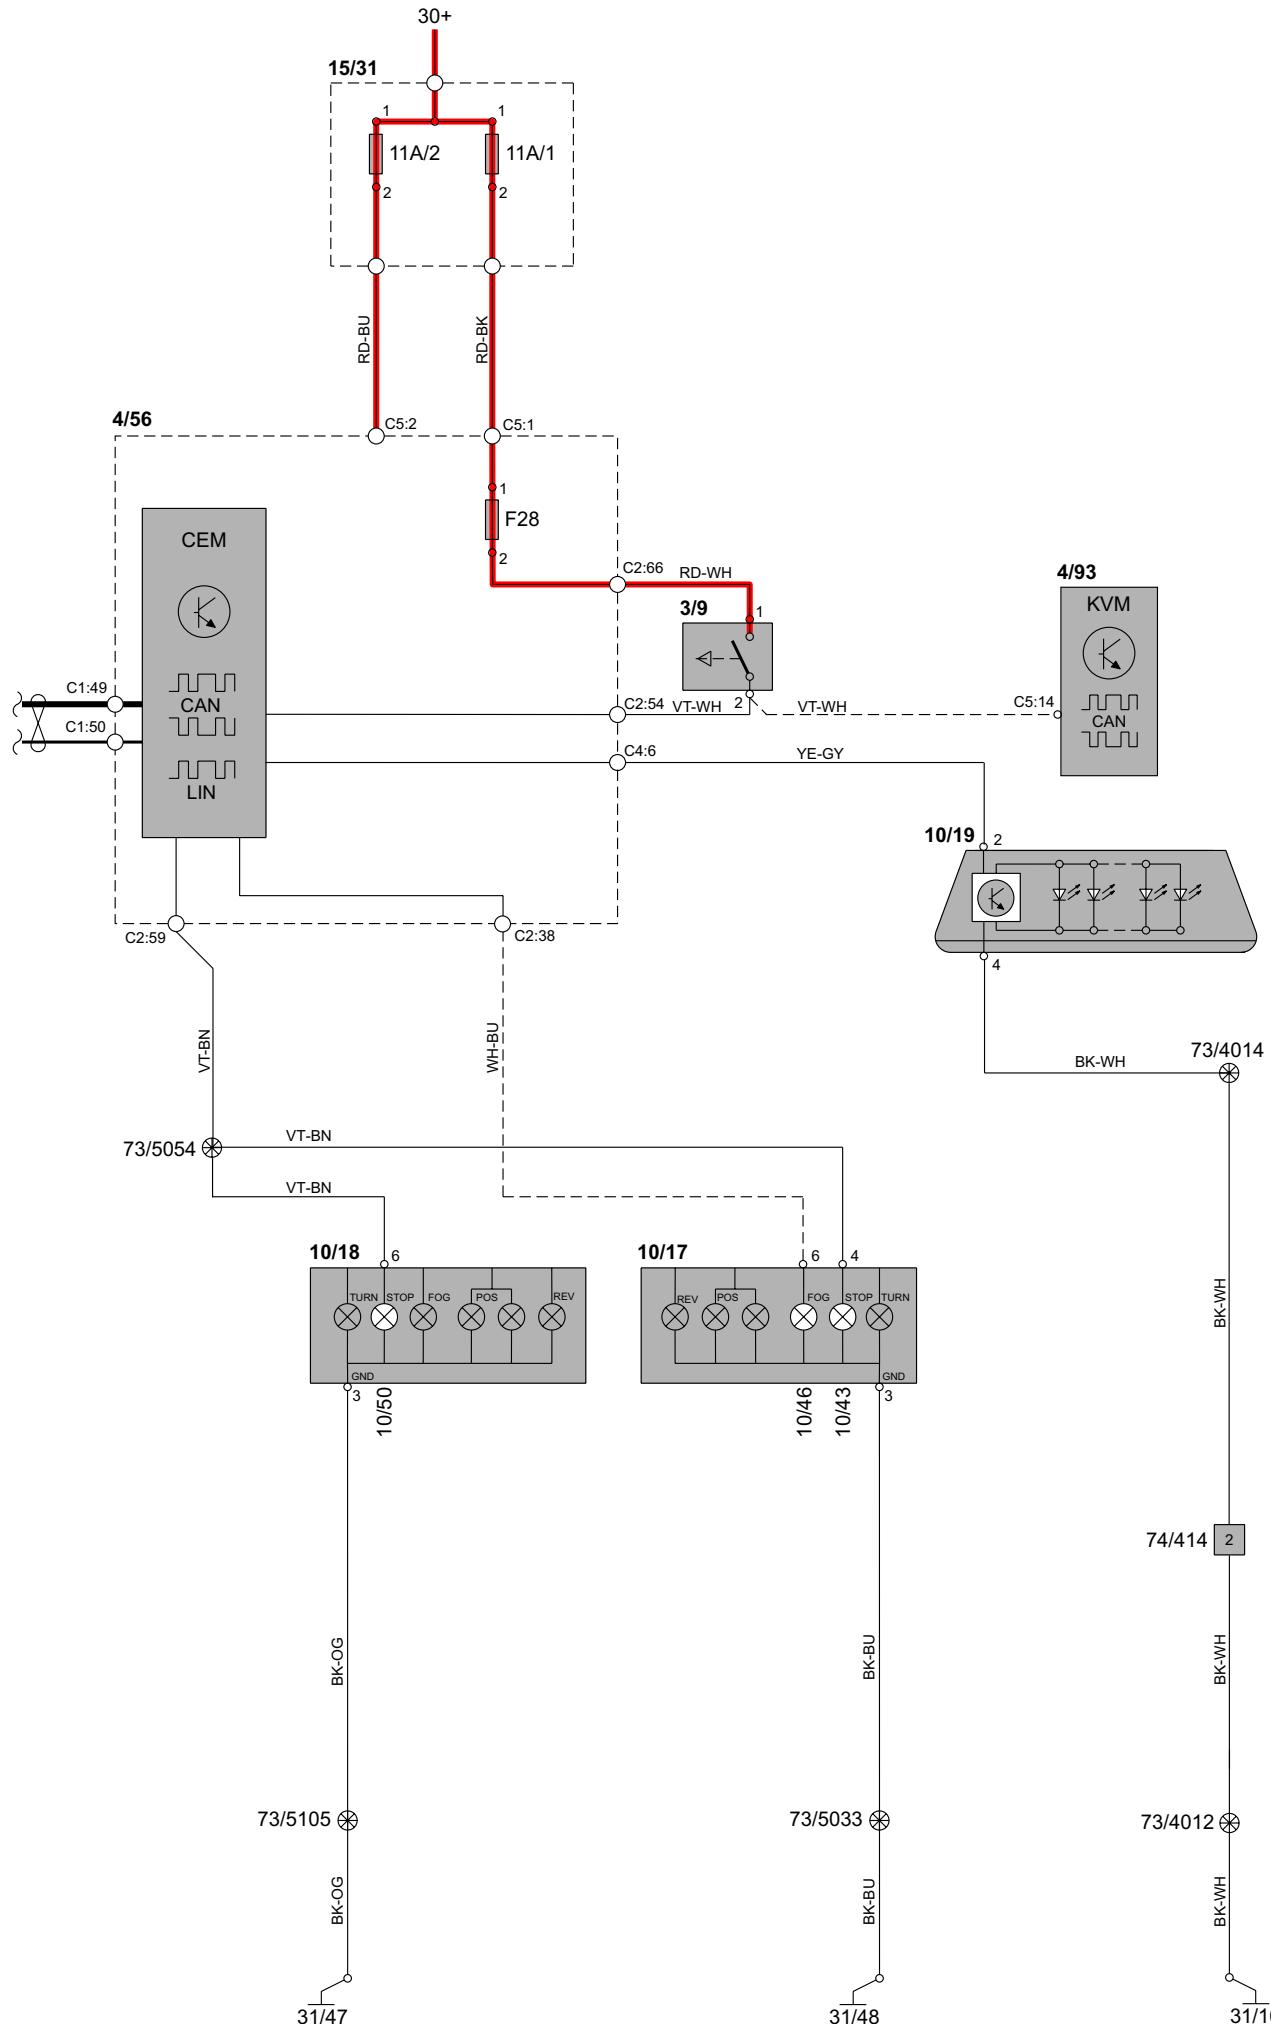

Group 35 Lighting Reversing lights V70

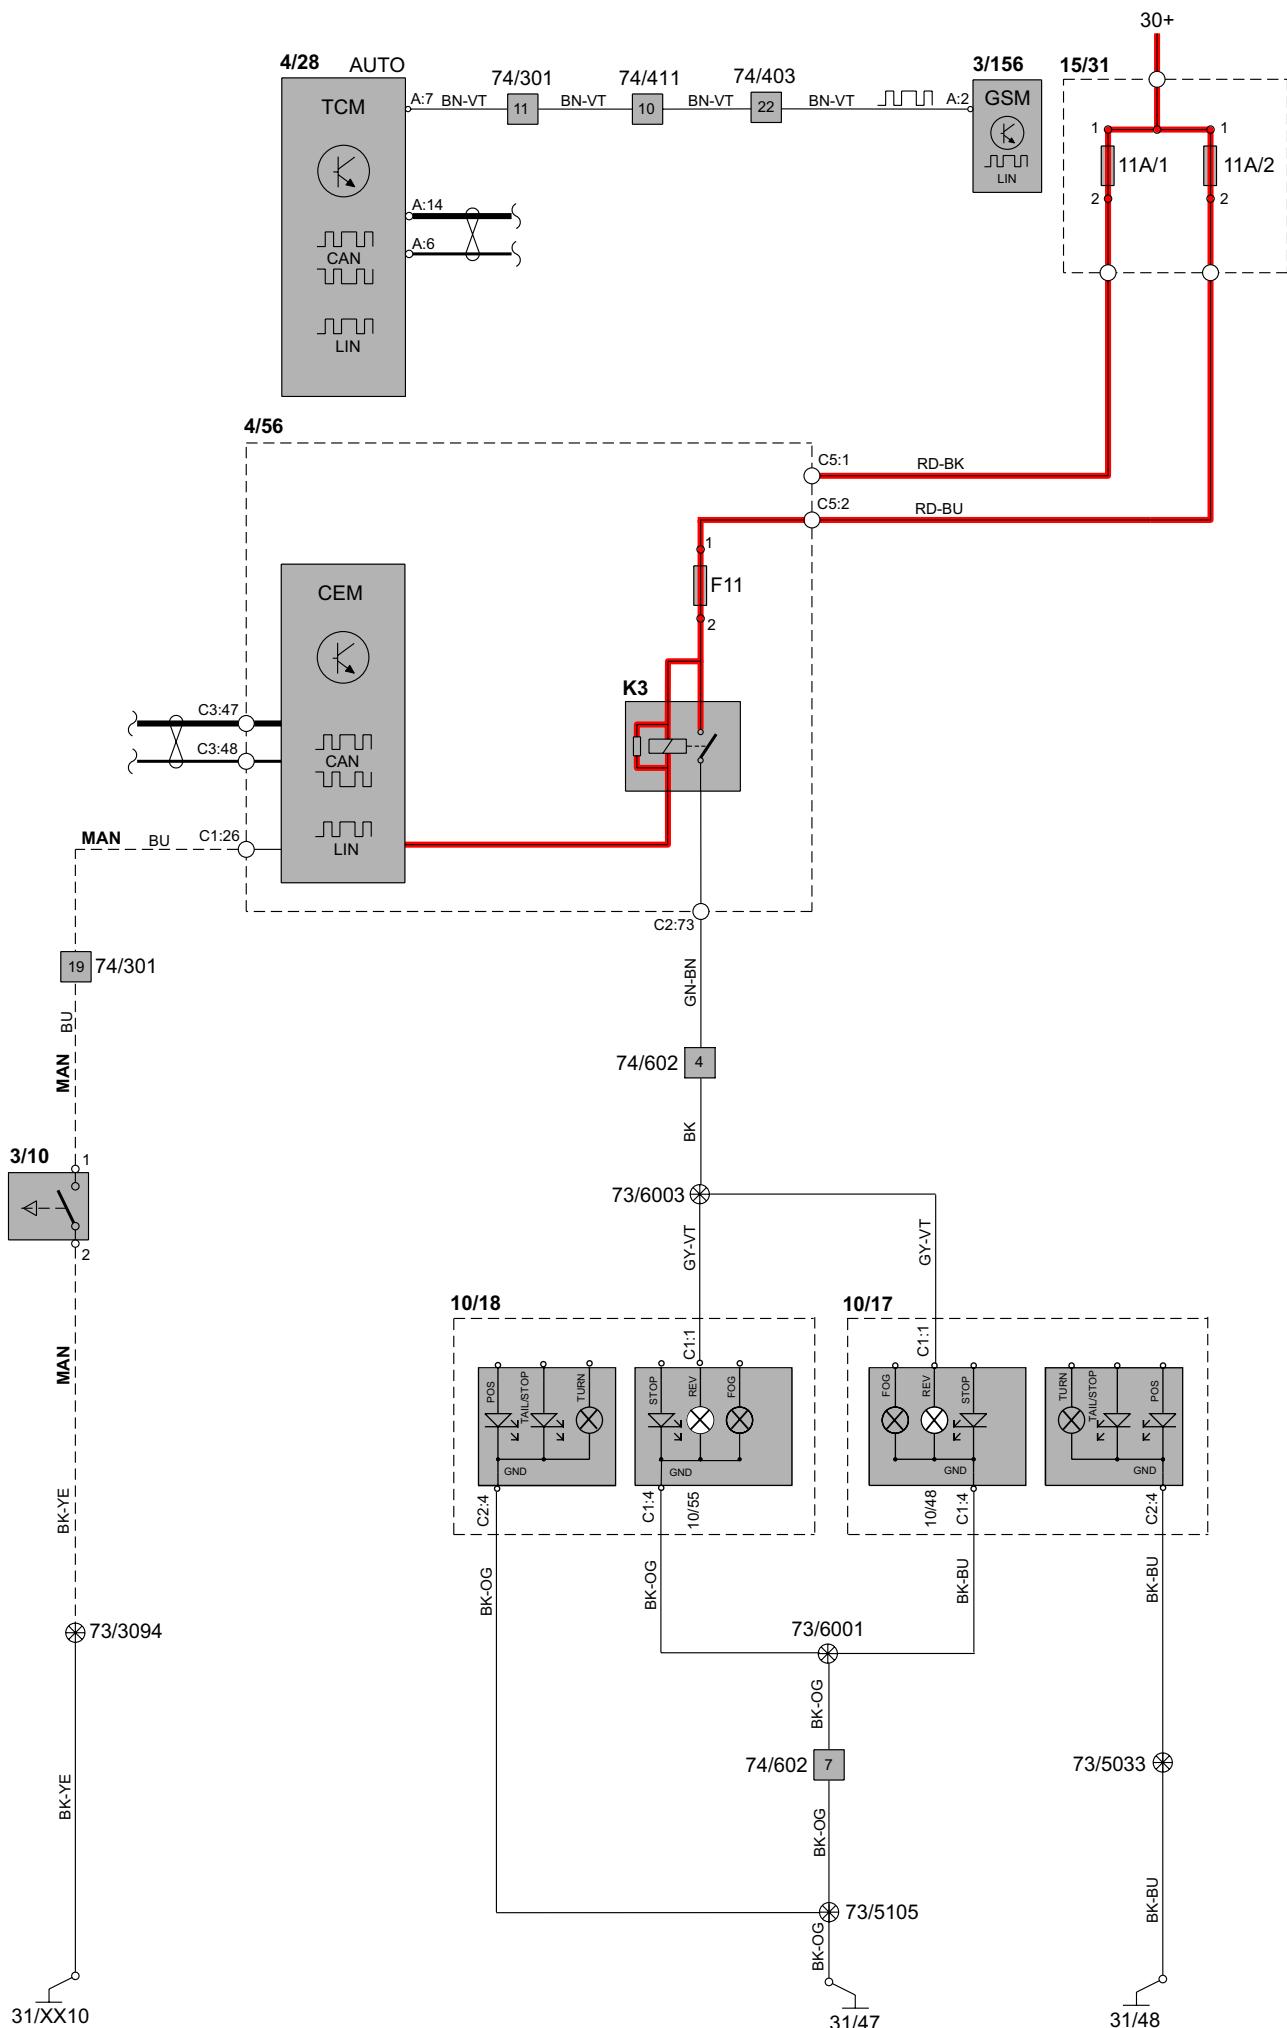


Group 35 Lighting Reversing lights S80

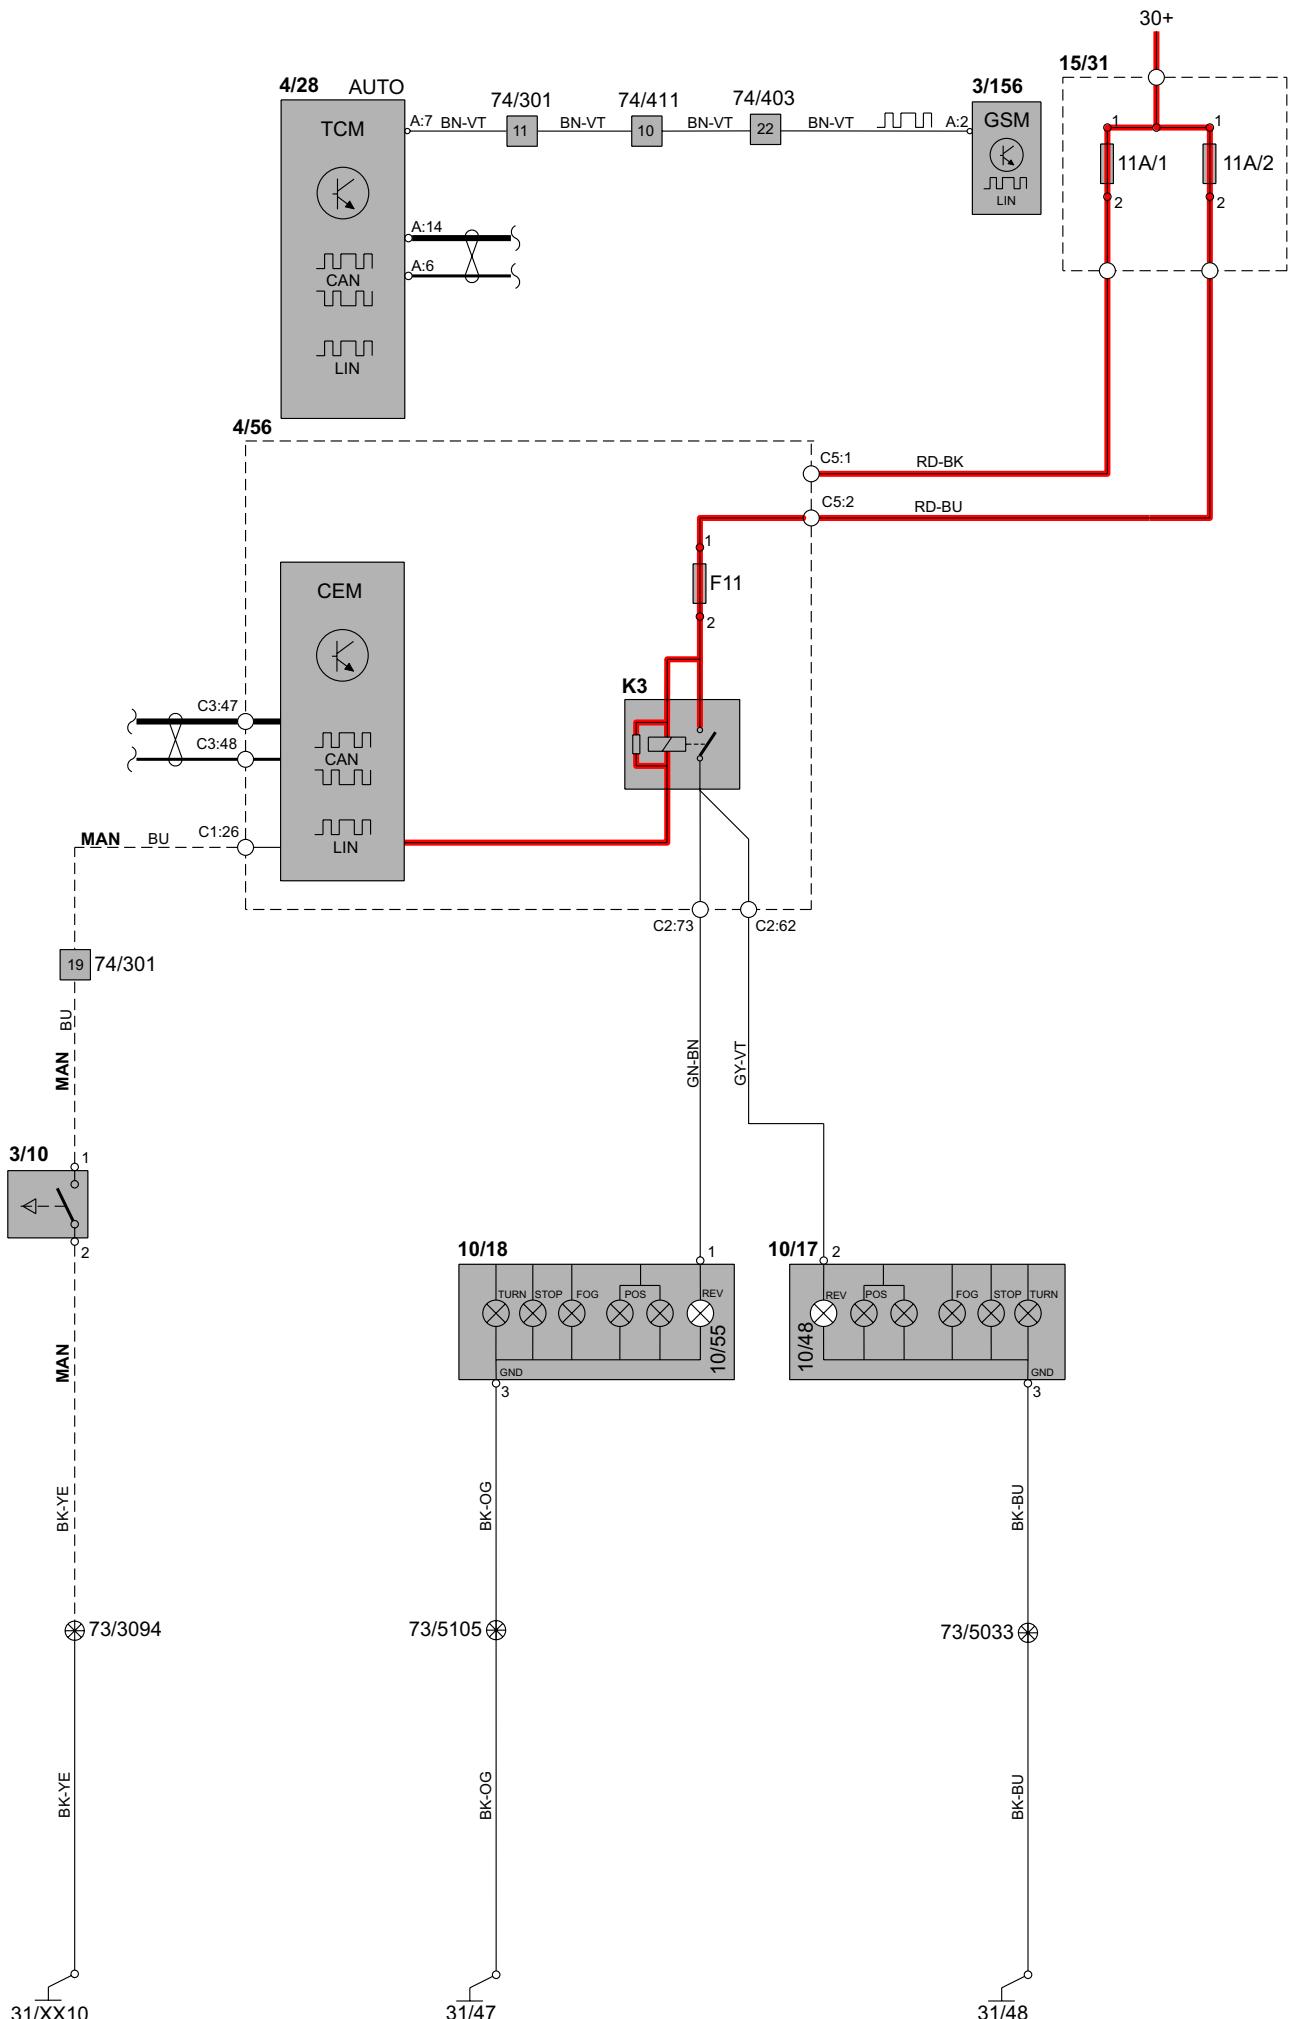


Group 35 Lighting

Follow-me-home lighting, LHD

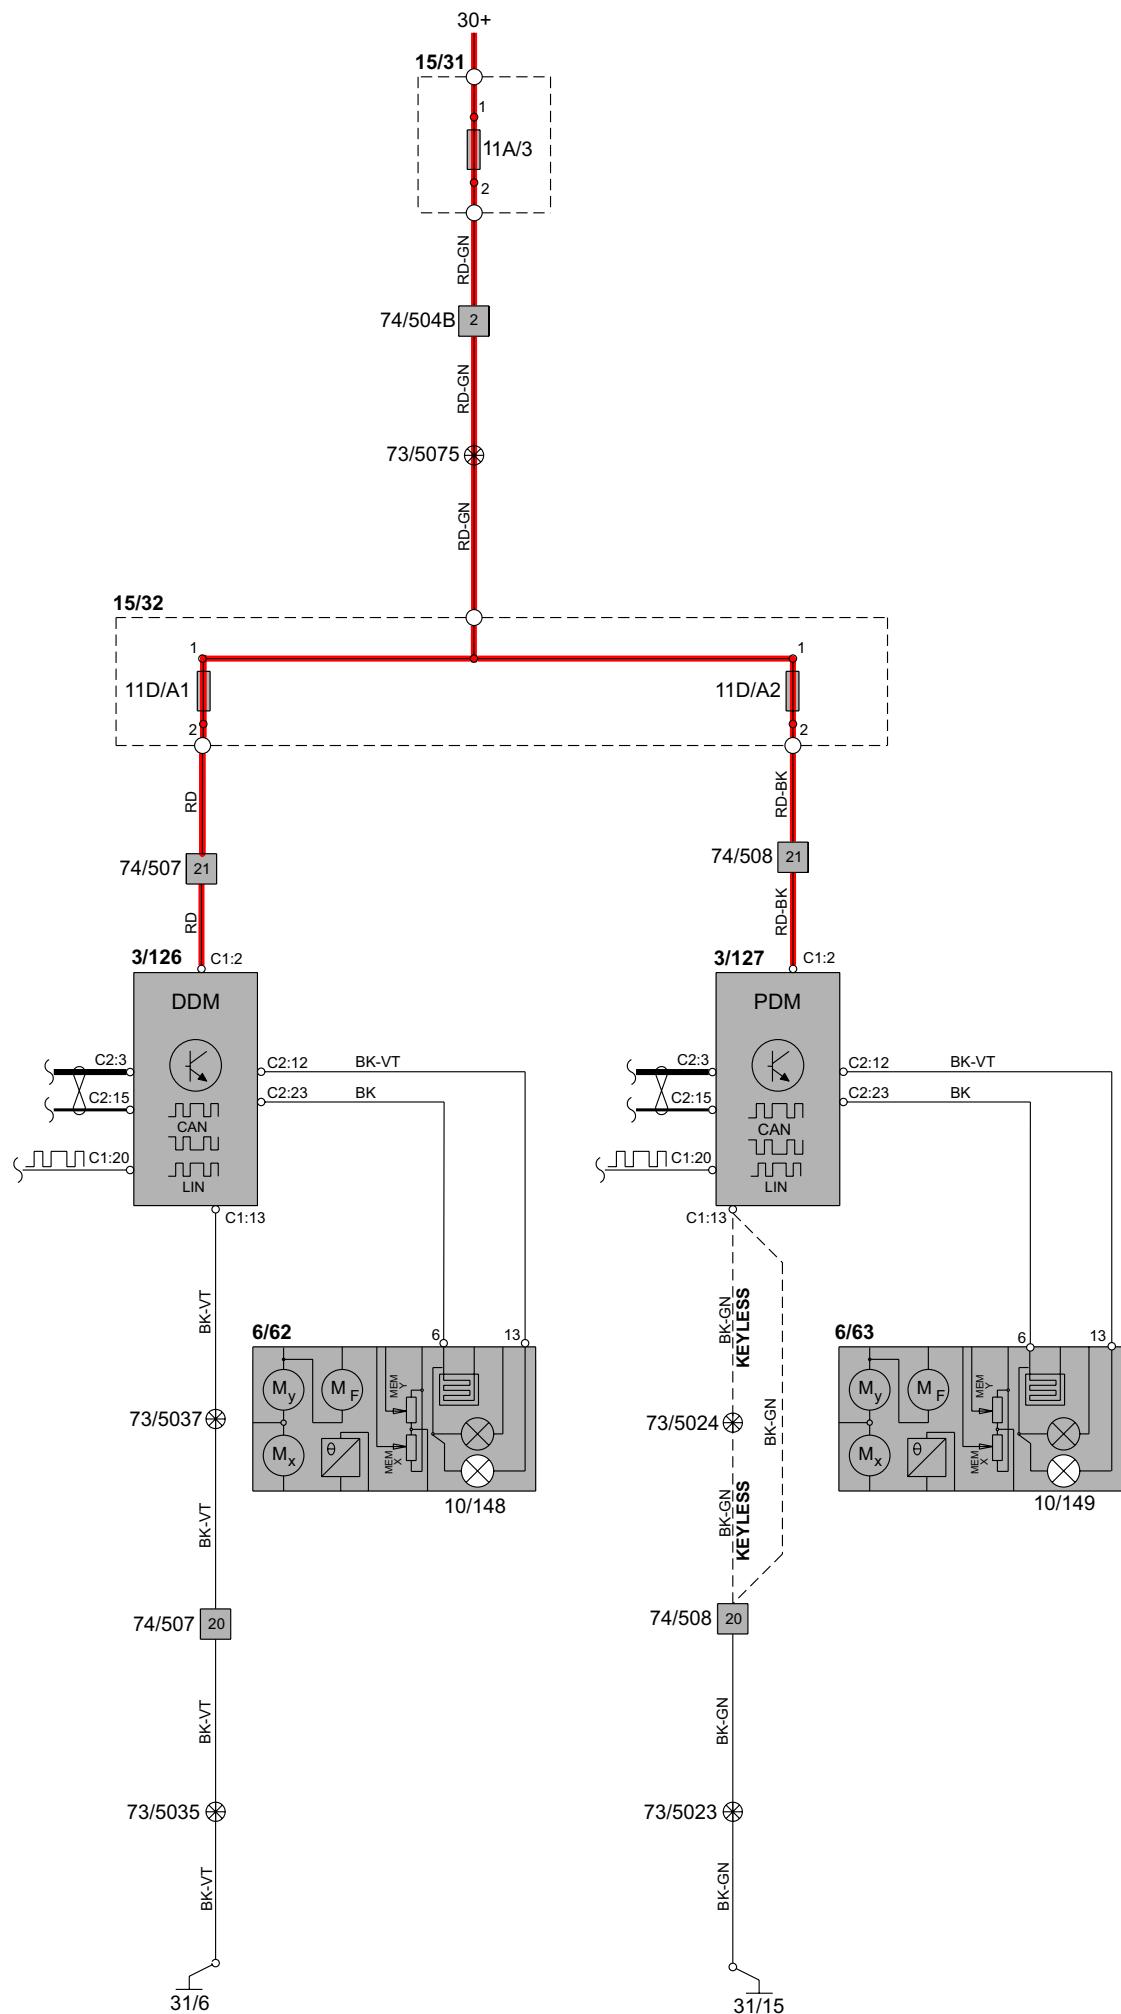


Group 35 Lighting

Follow-me-home lighting, RHD

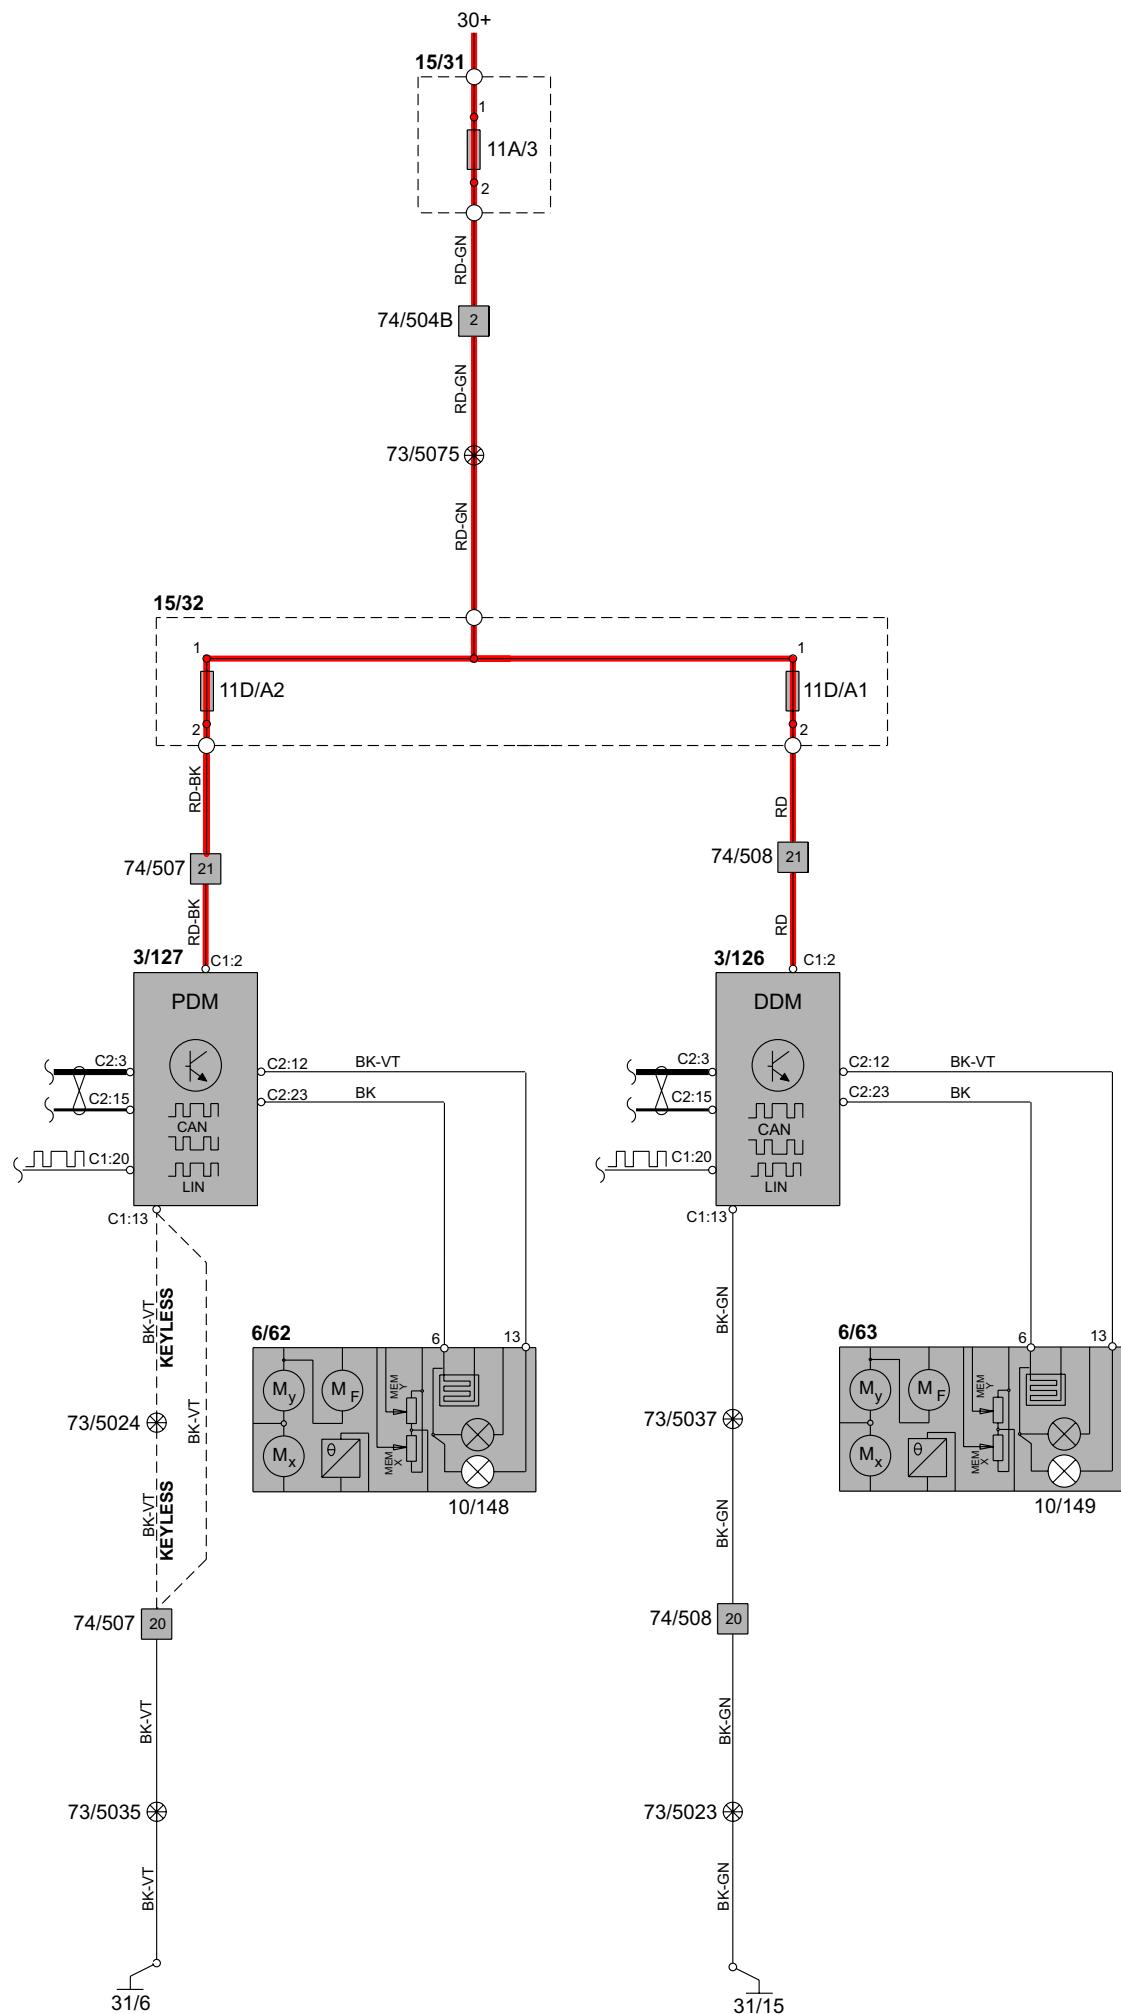


Group 35 Lighting

Interior lighting, LHD 1:2

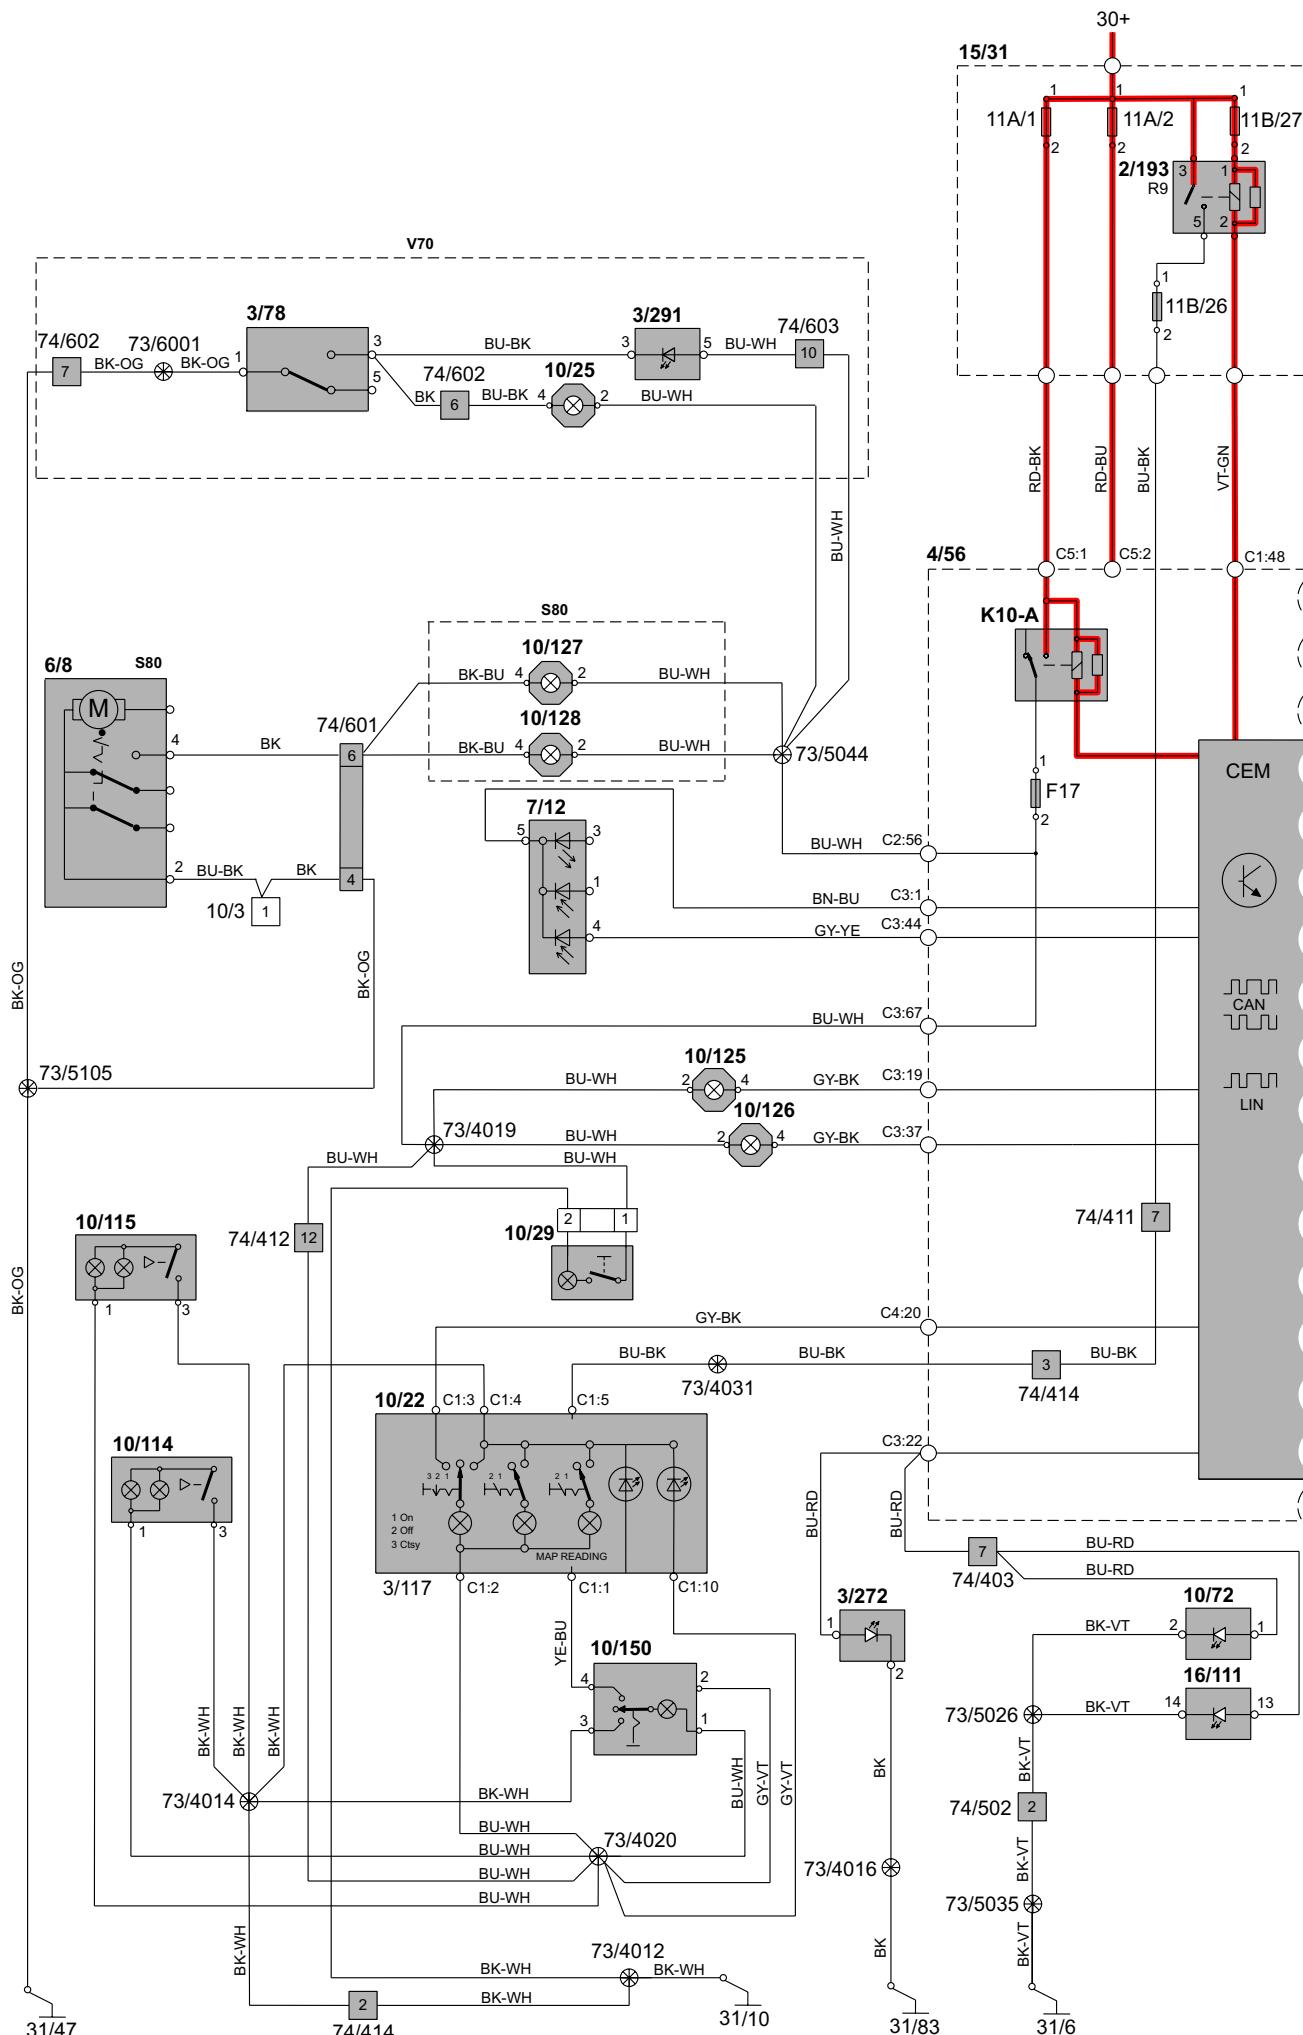


Group 35 Lighting

Interior lighting, LHD 2:2

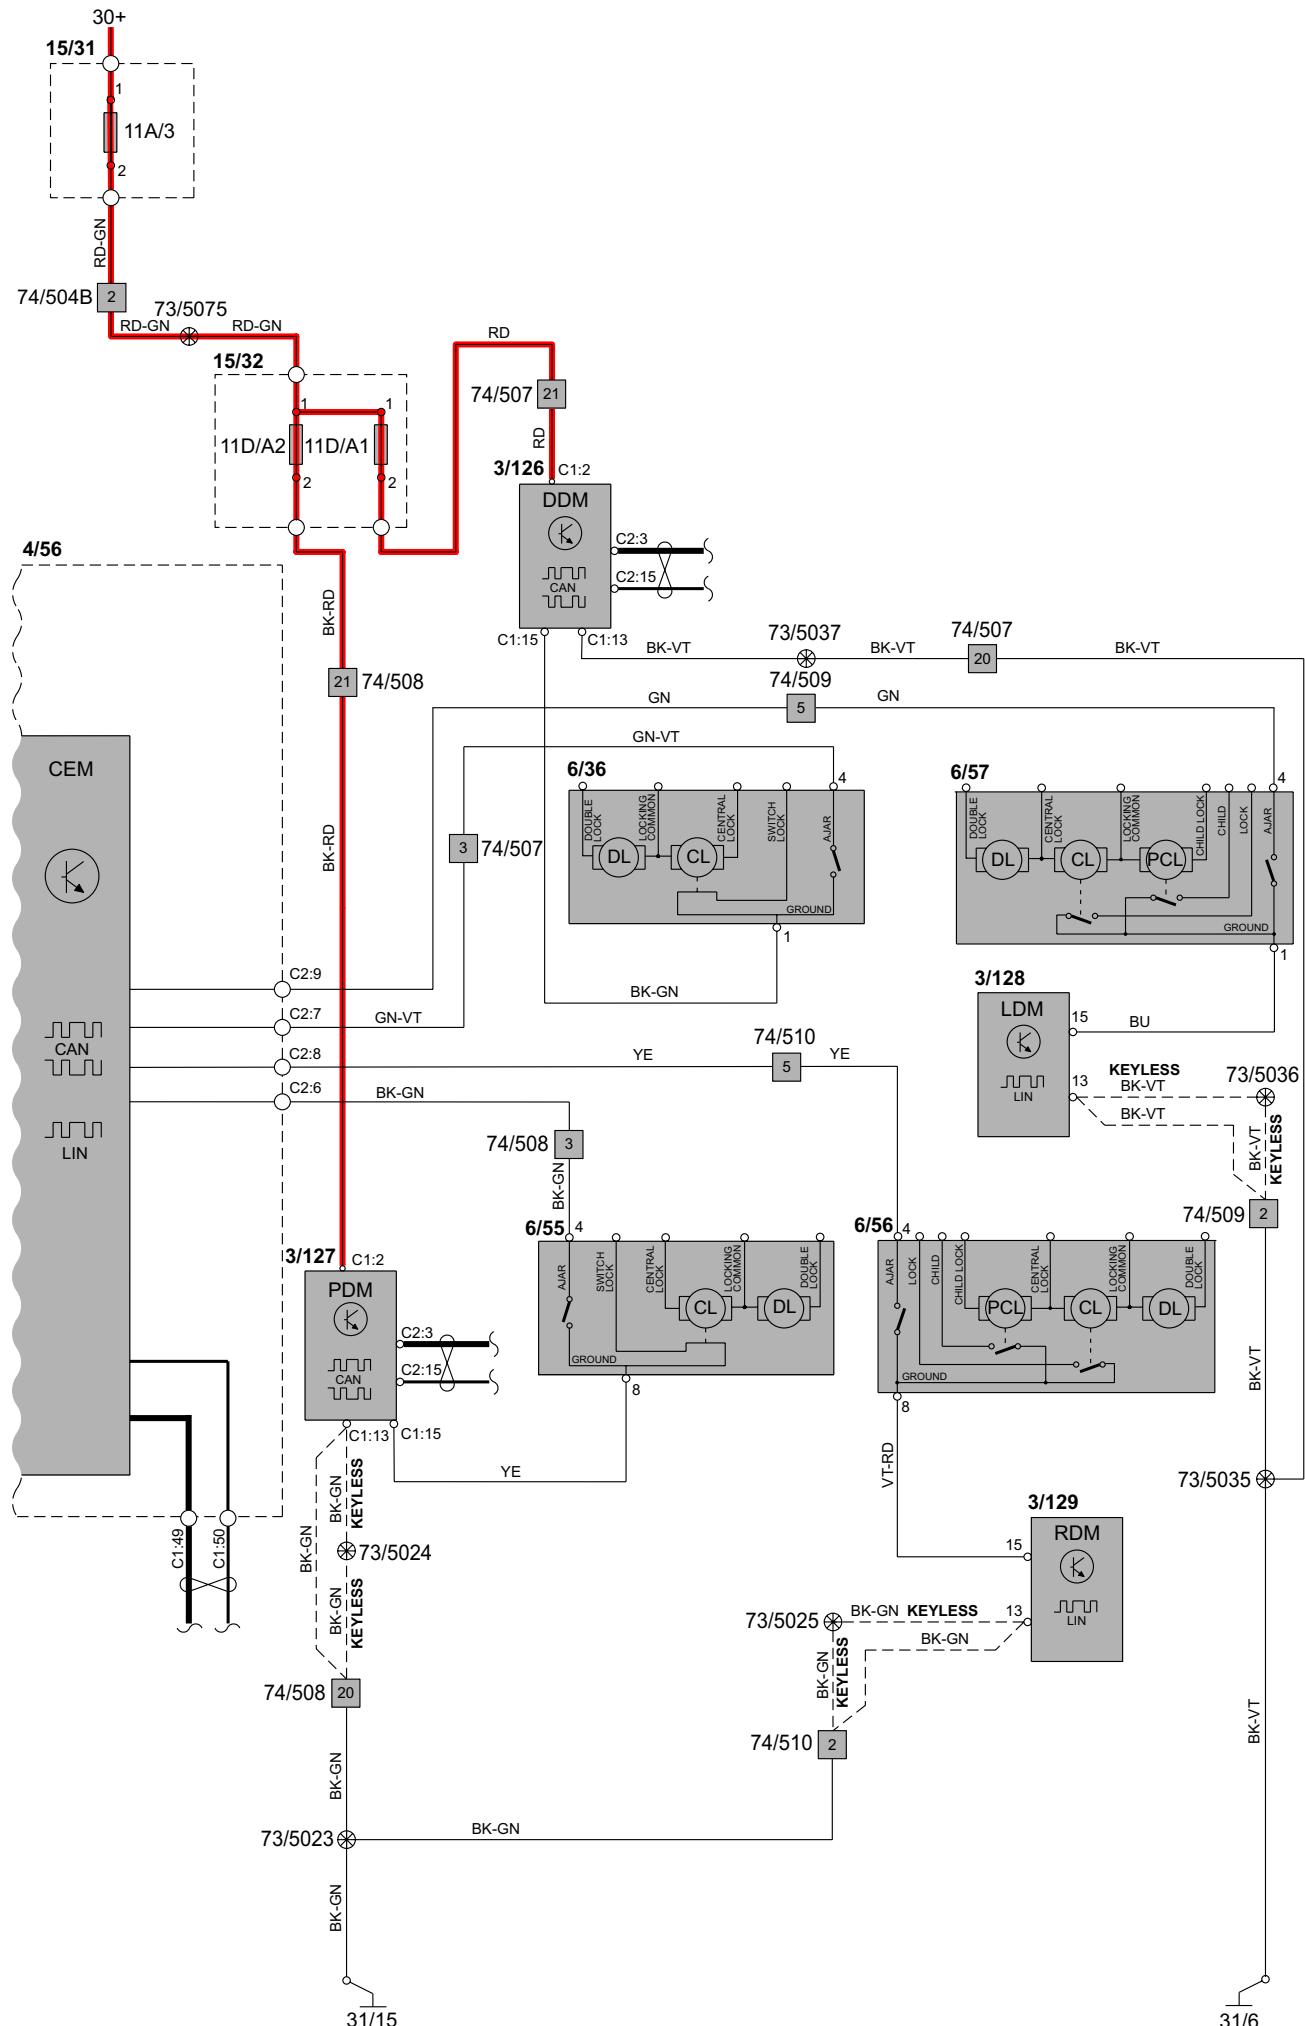


Group 35 Lighting

Interior lighting, RHD 1:2

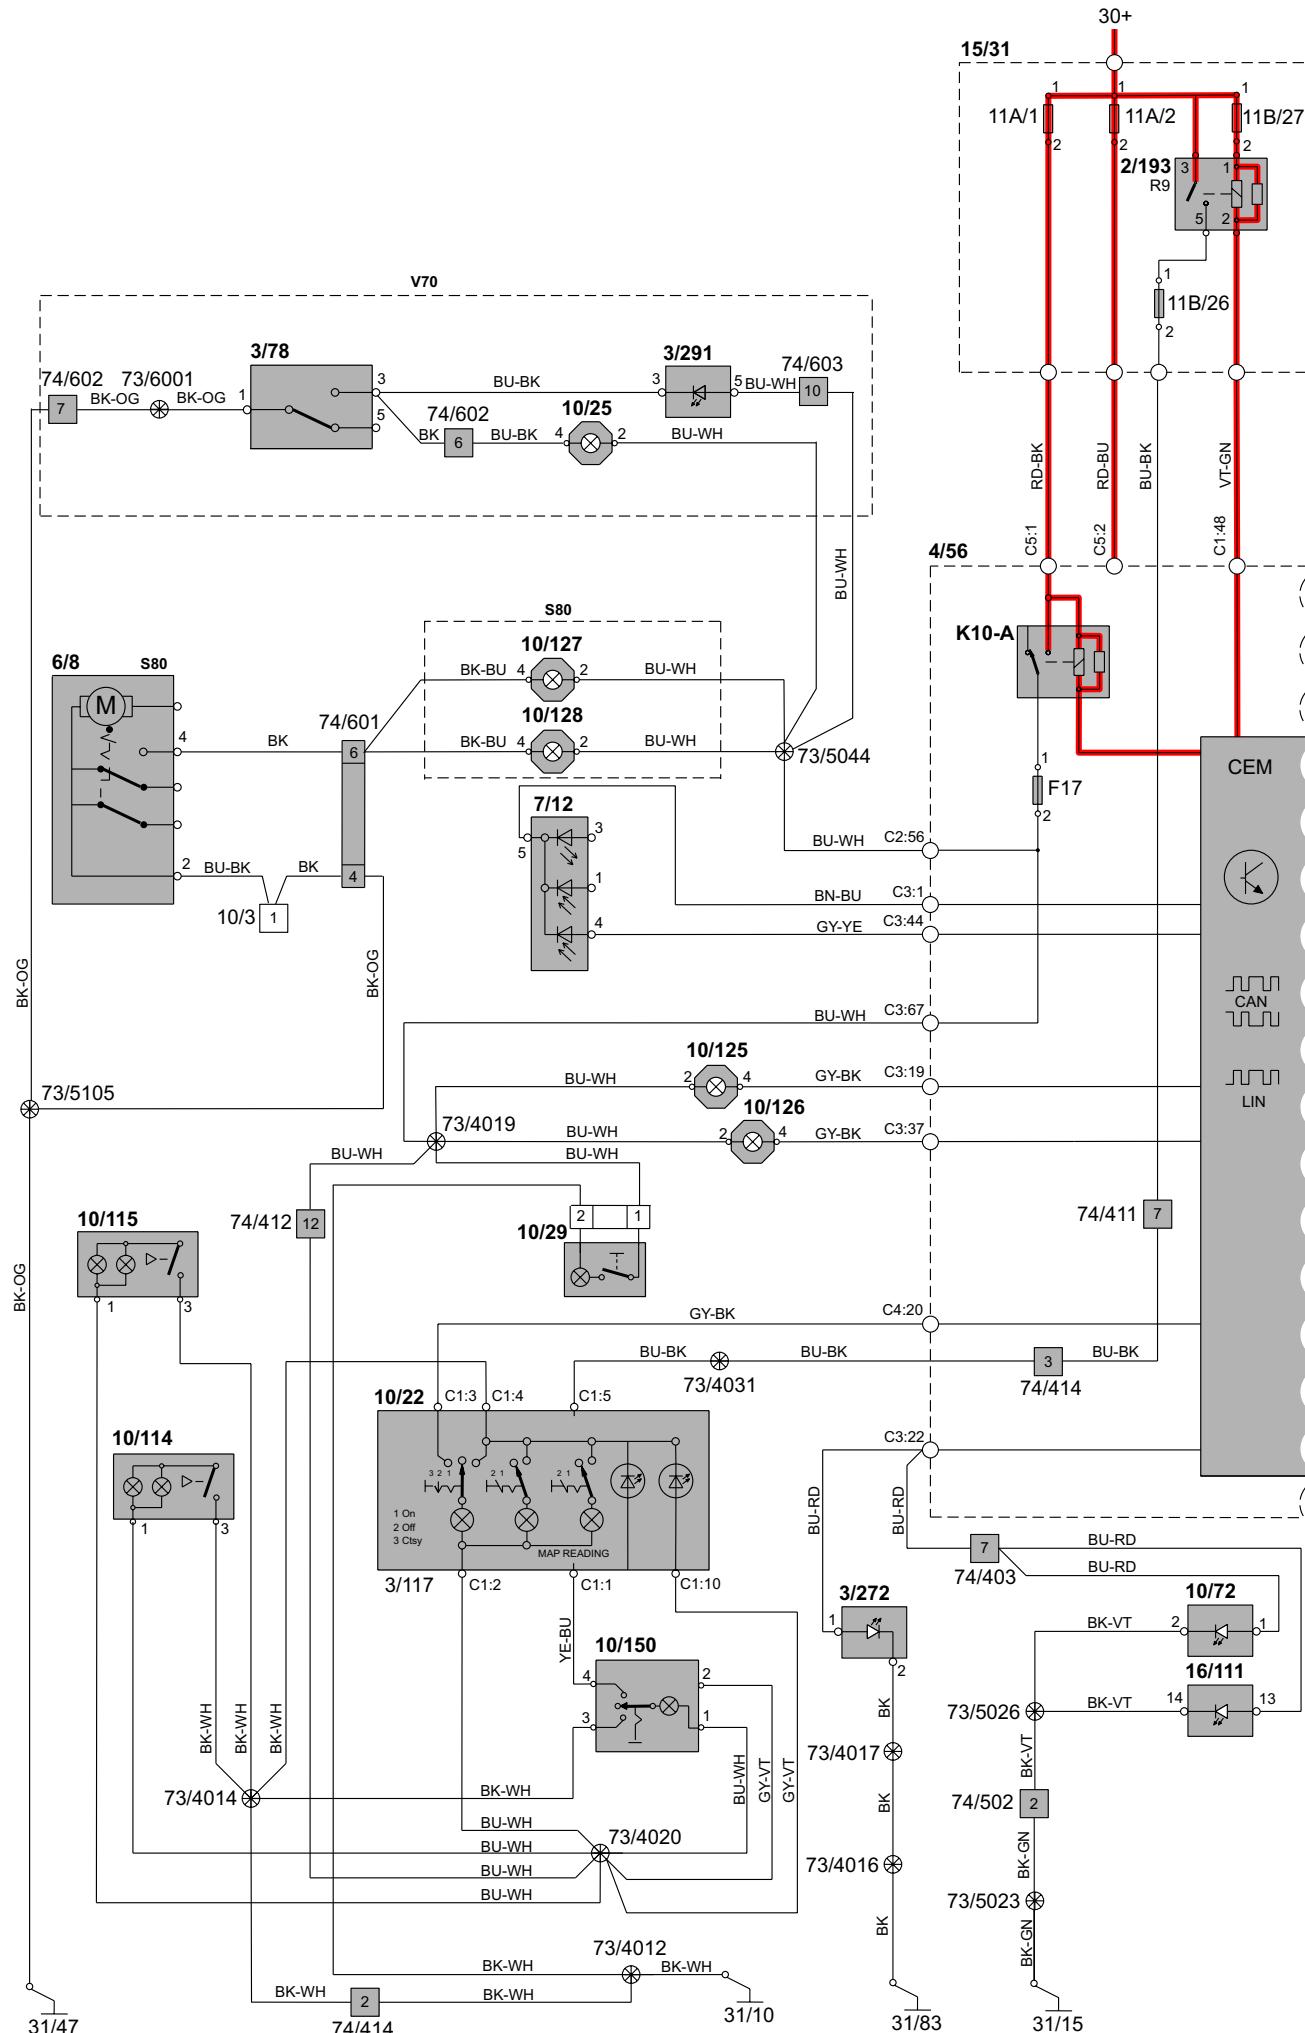


Group 35 Lighting

Interior lighting, RHD 2:2

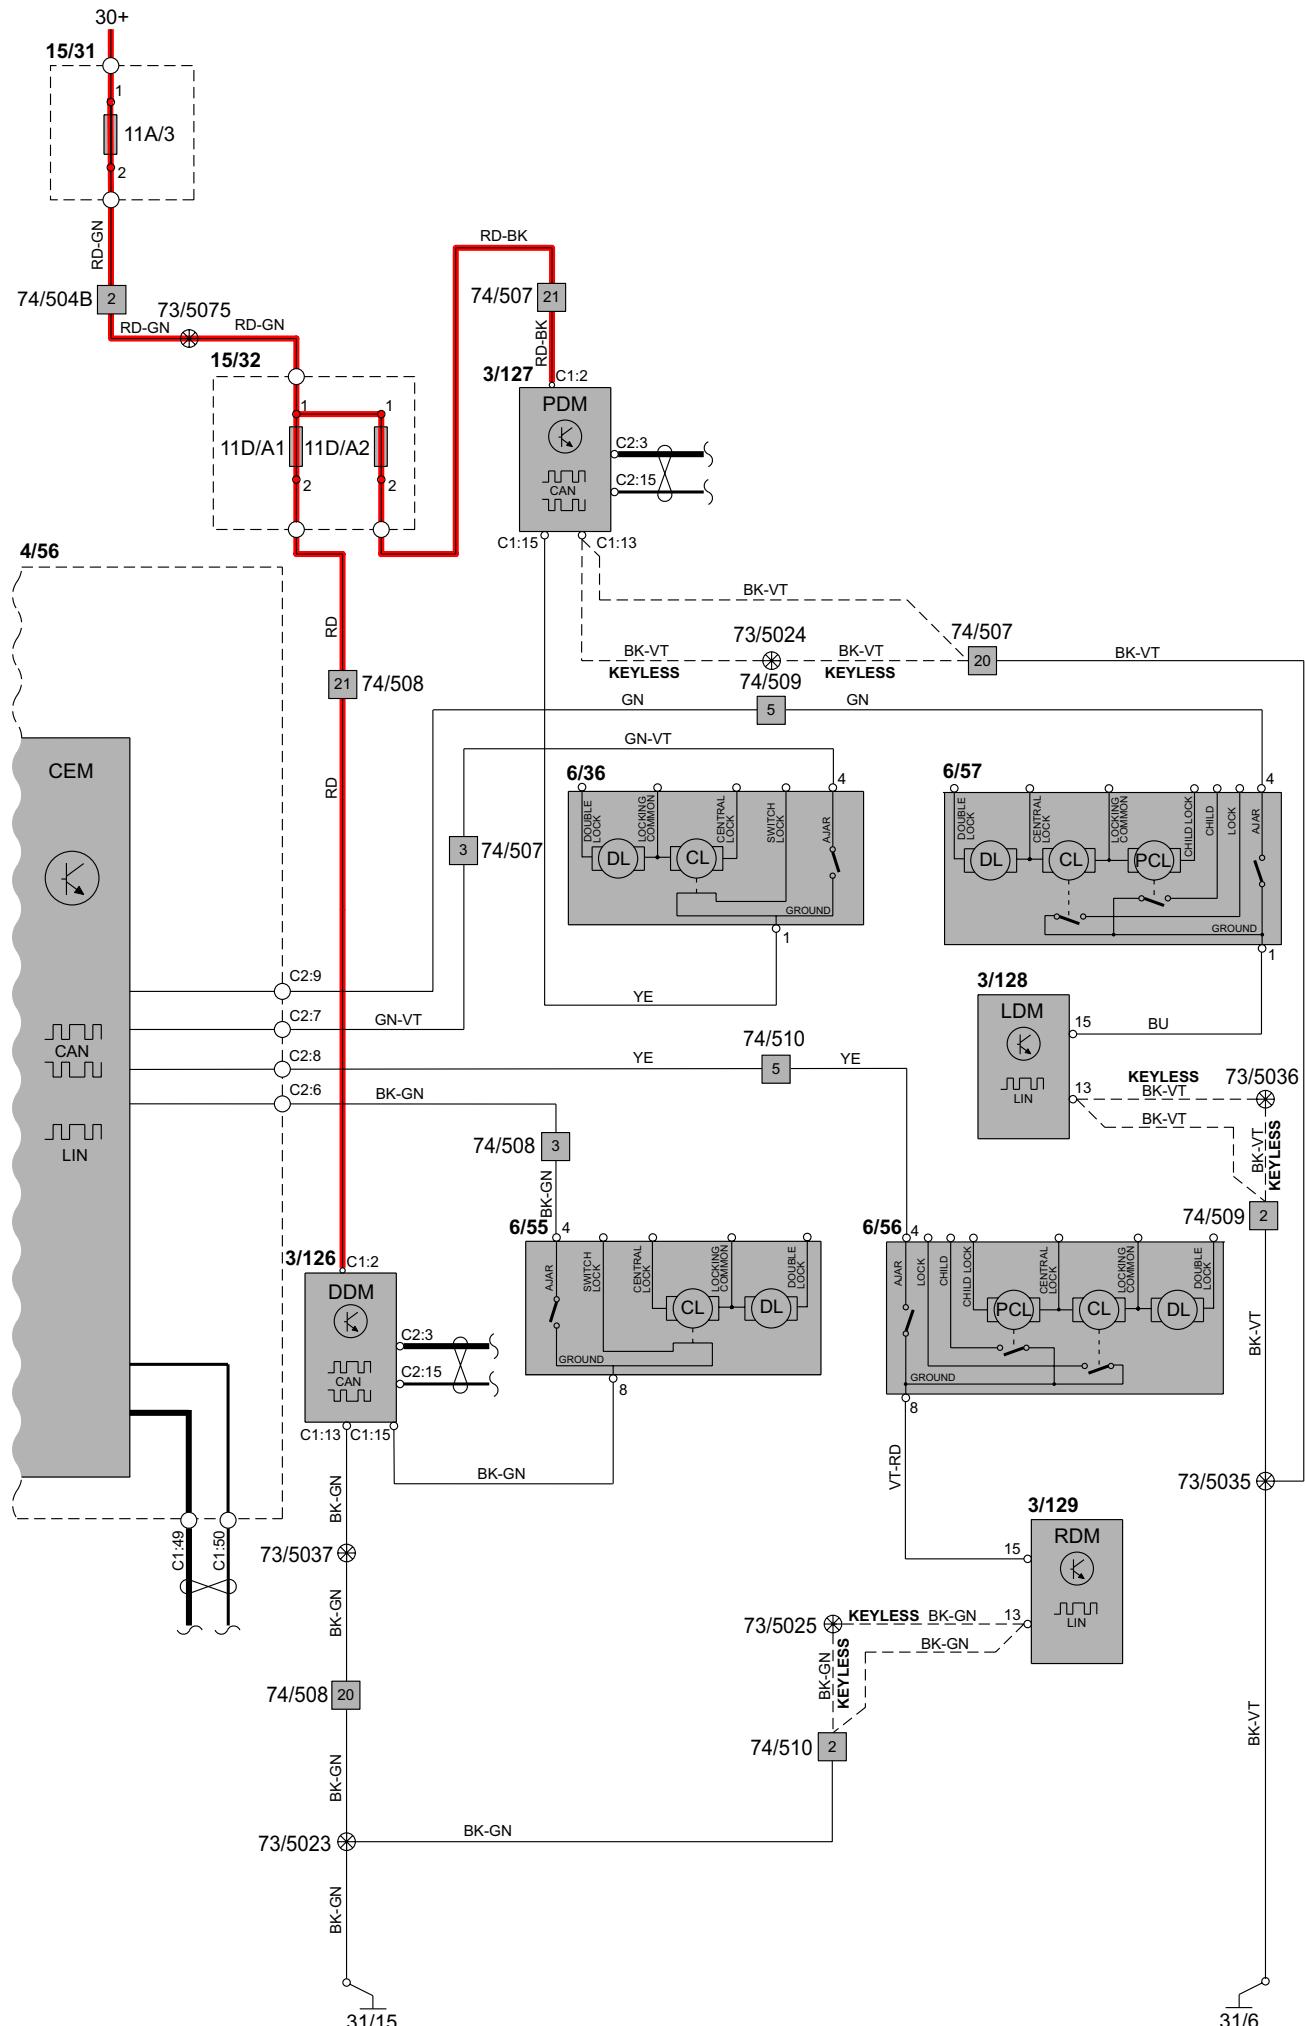


Group 35 Lighting

Active headlights

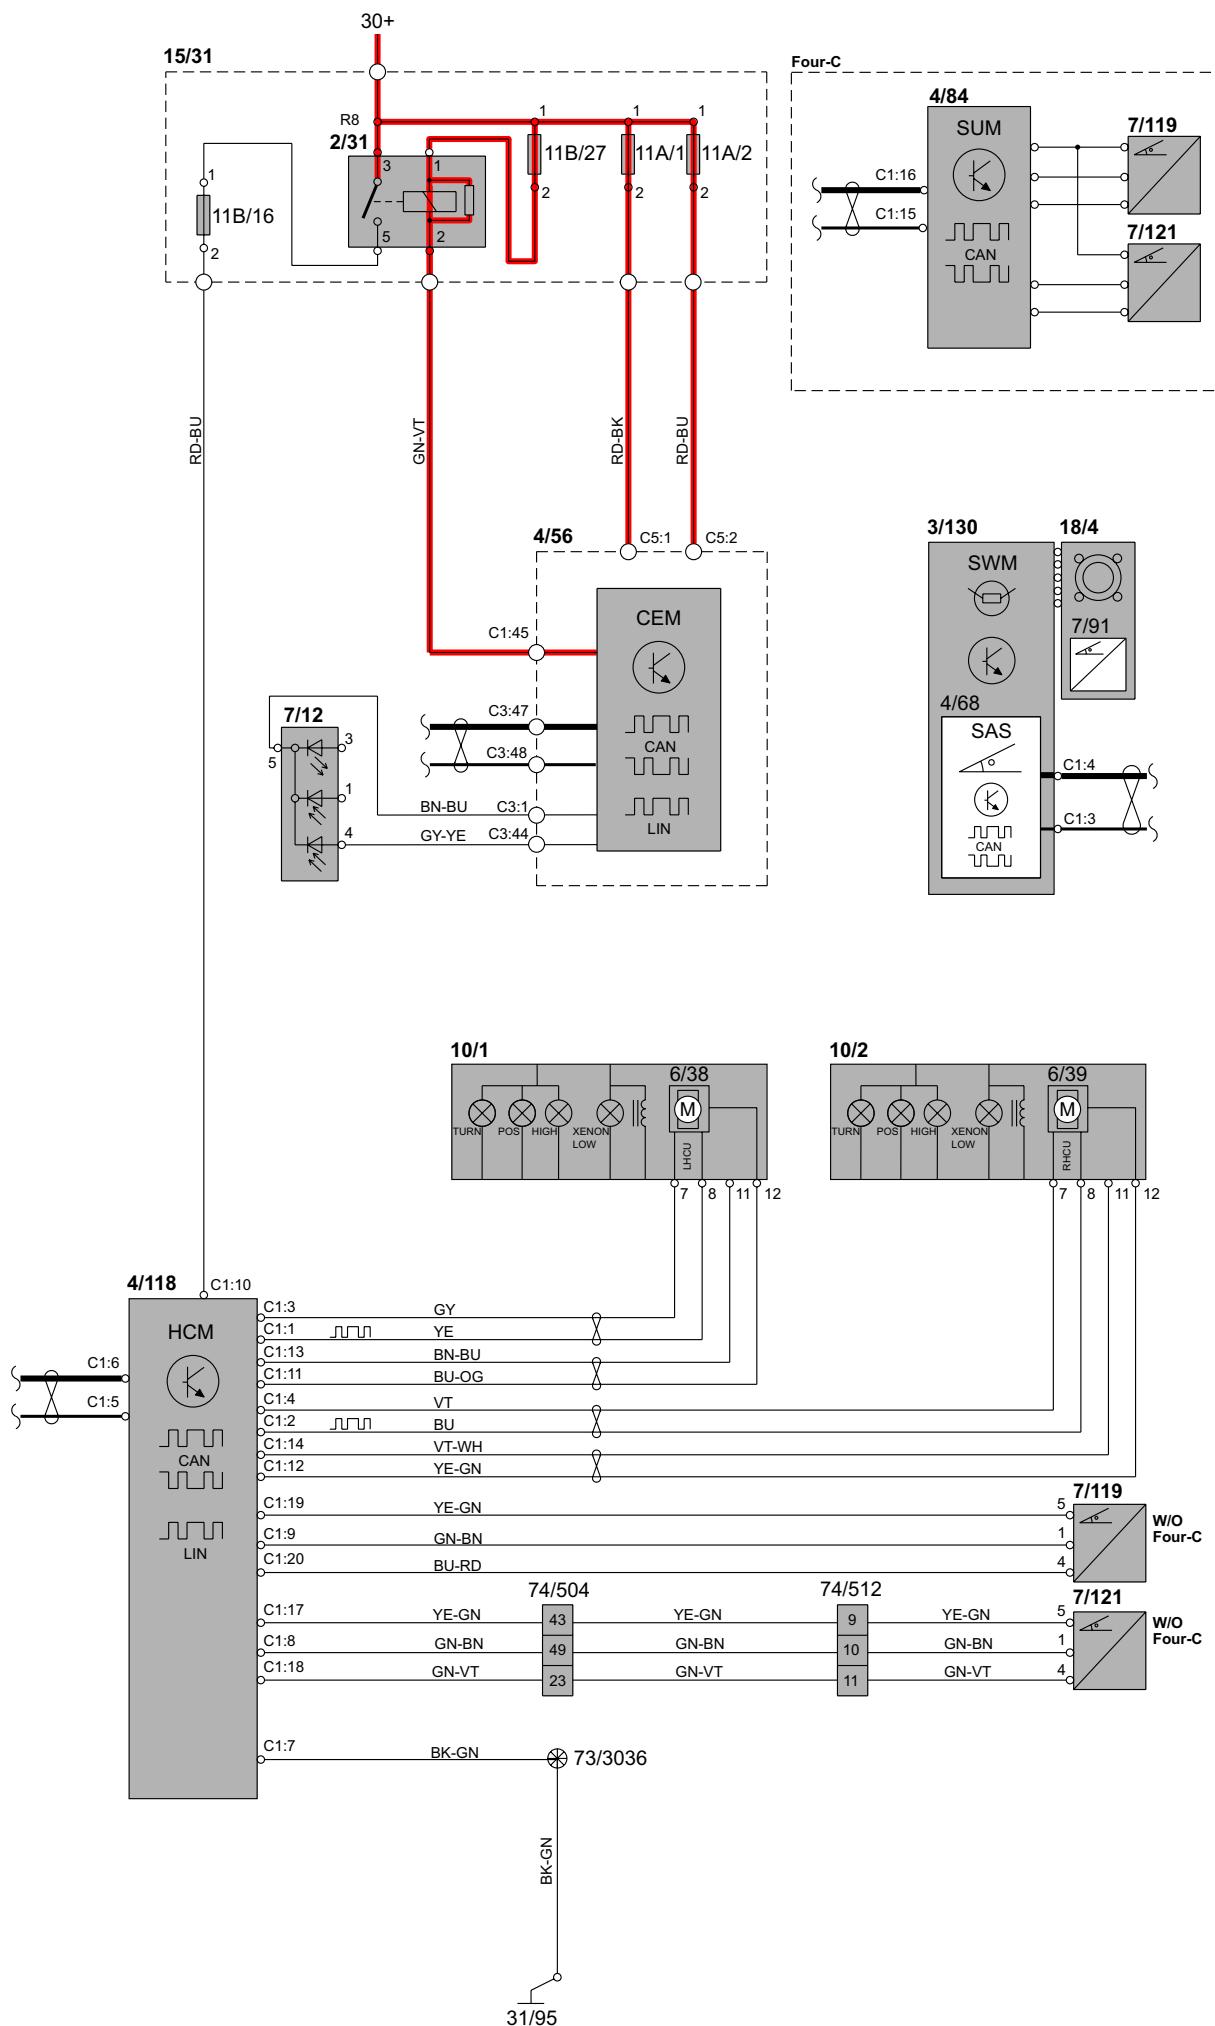


Group 35 Lighting, Accessories

Lighting in sill moldings

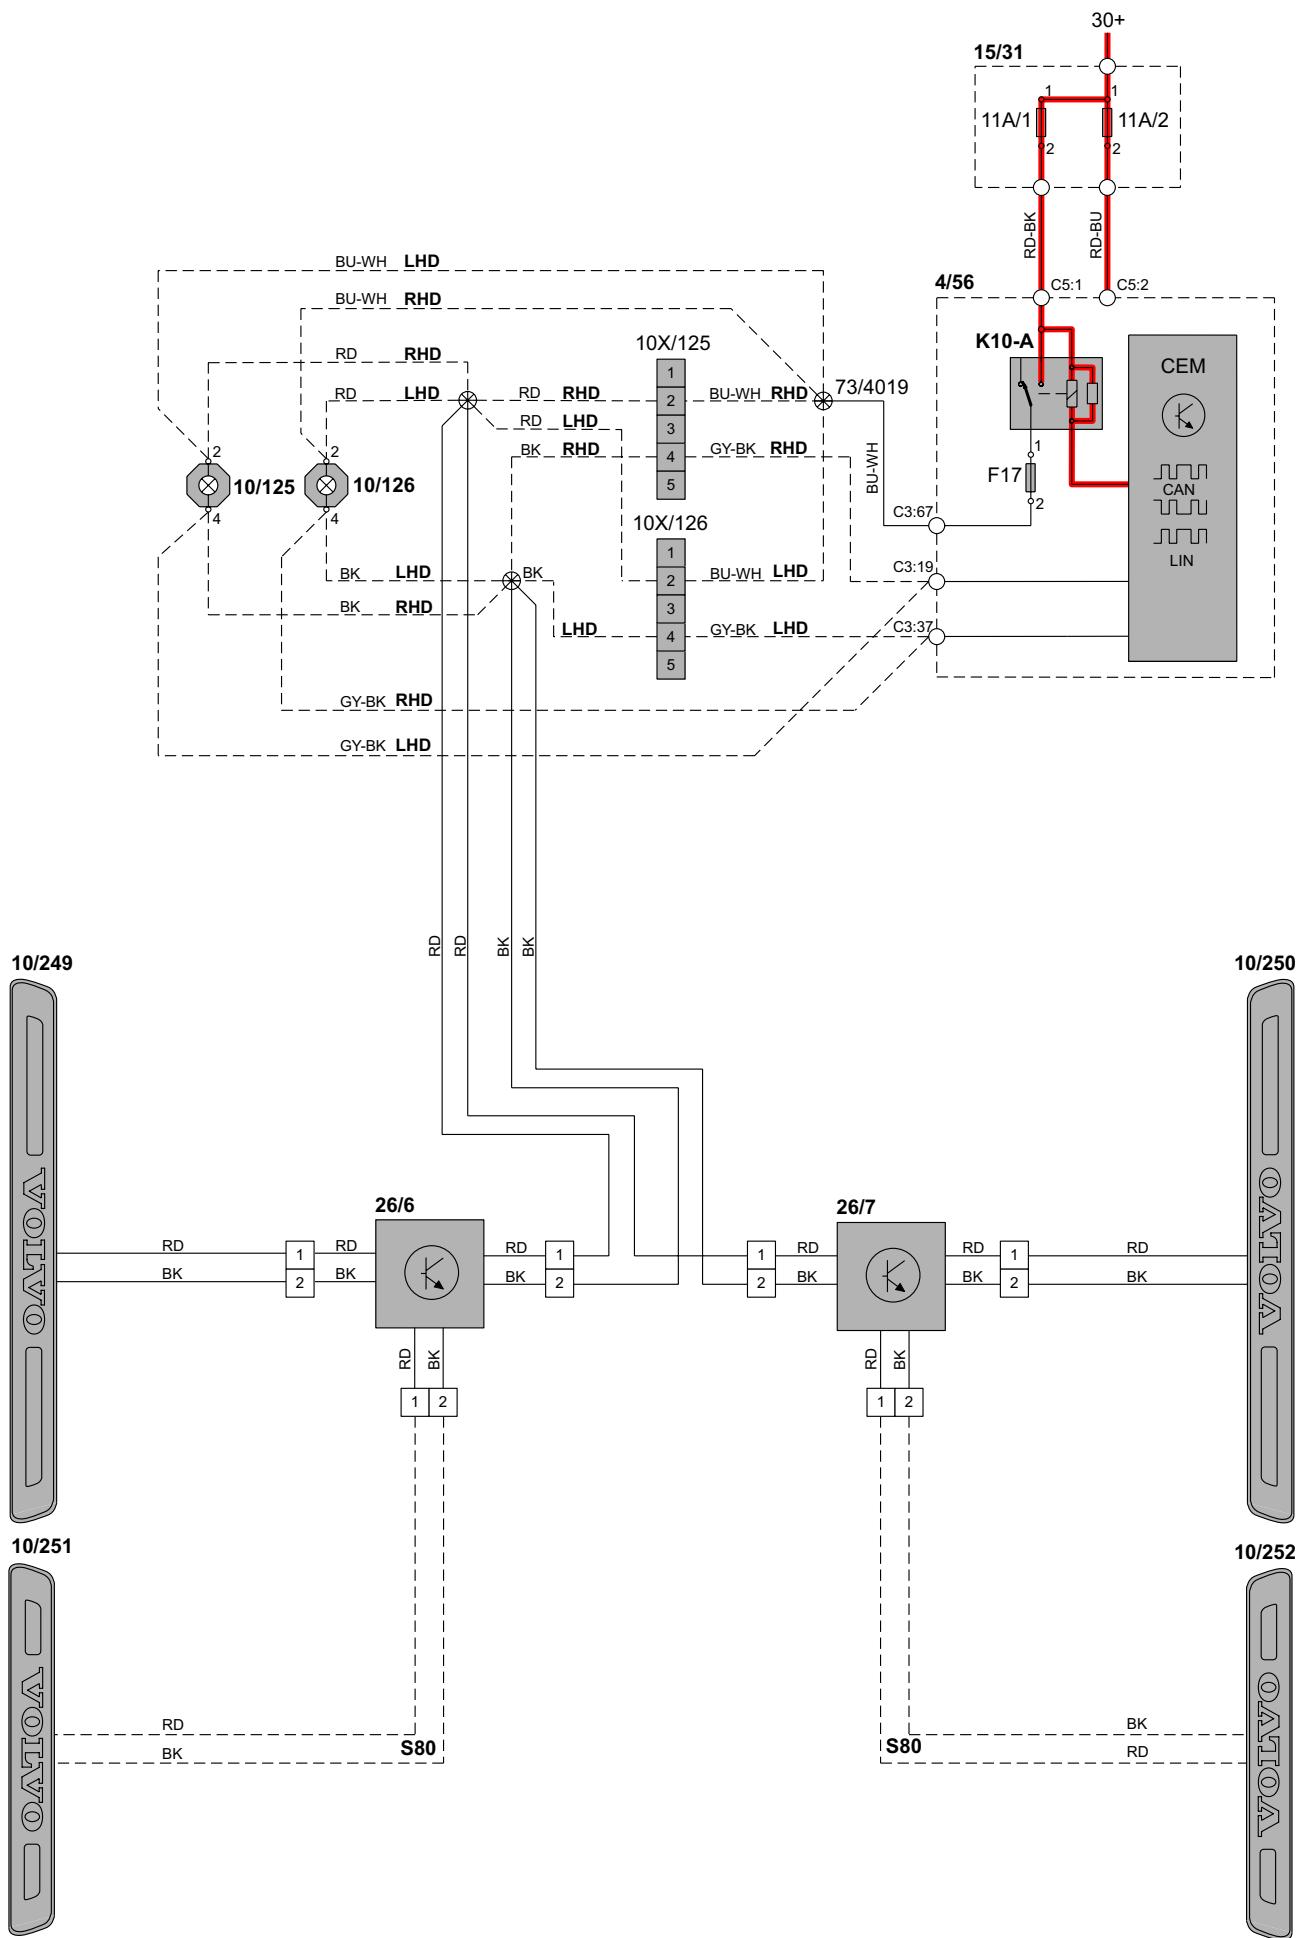


Group 35 Lighting, Accessories

Auxiliary lights

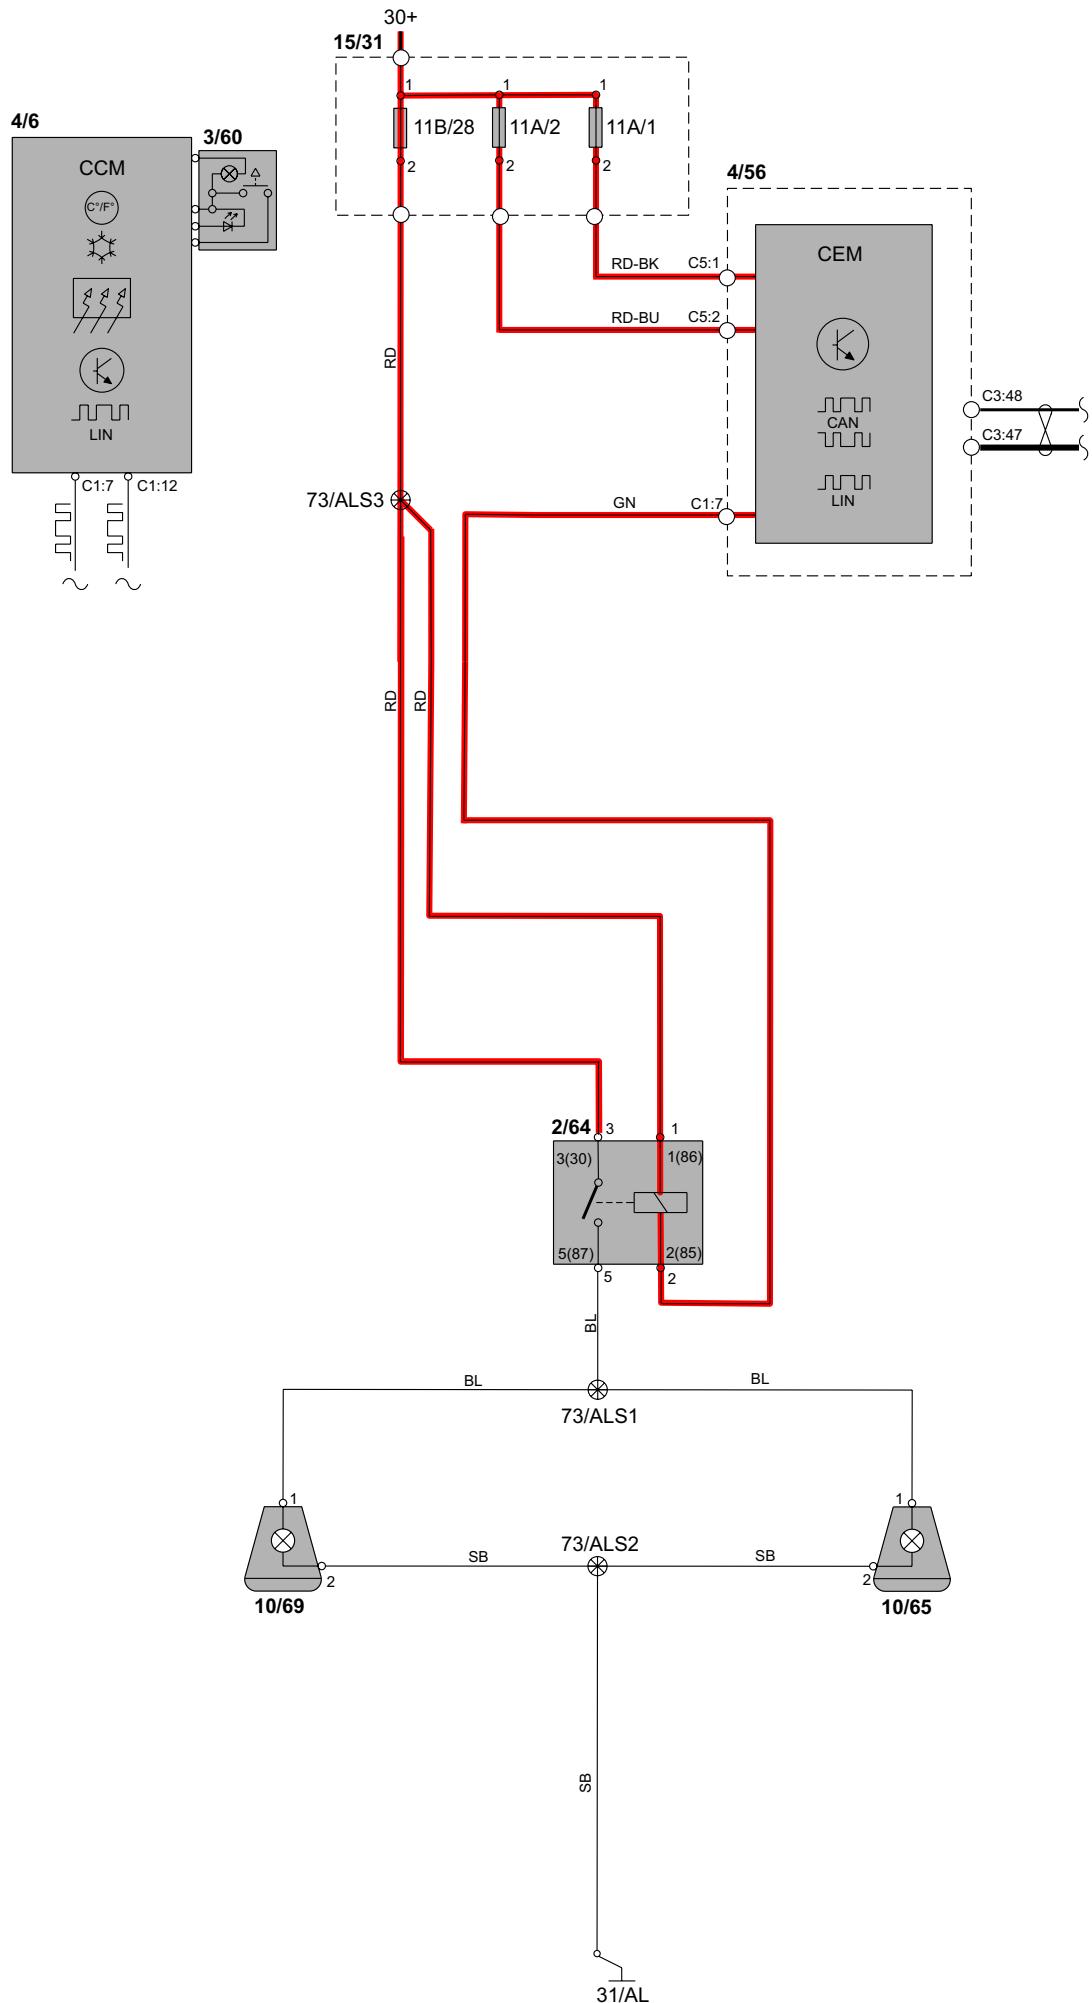


Group 36 Additional electrical equipment

Rain sensor

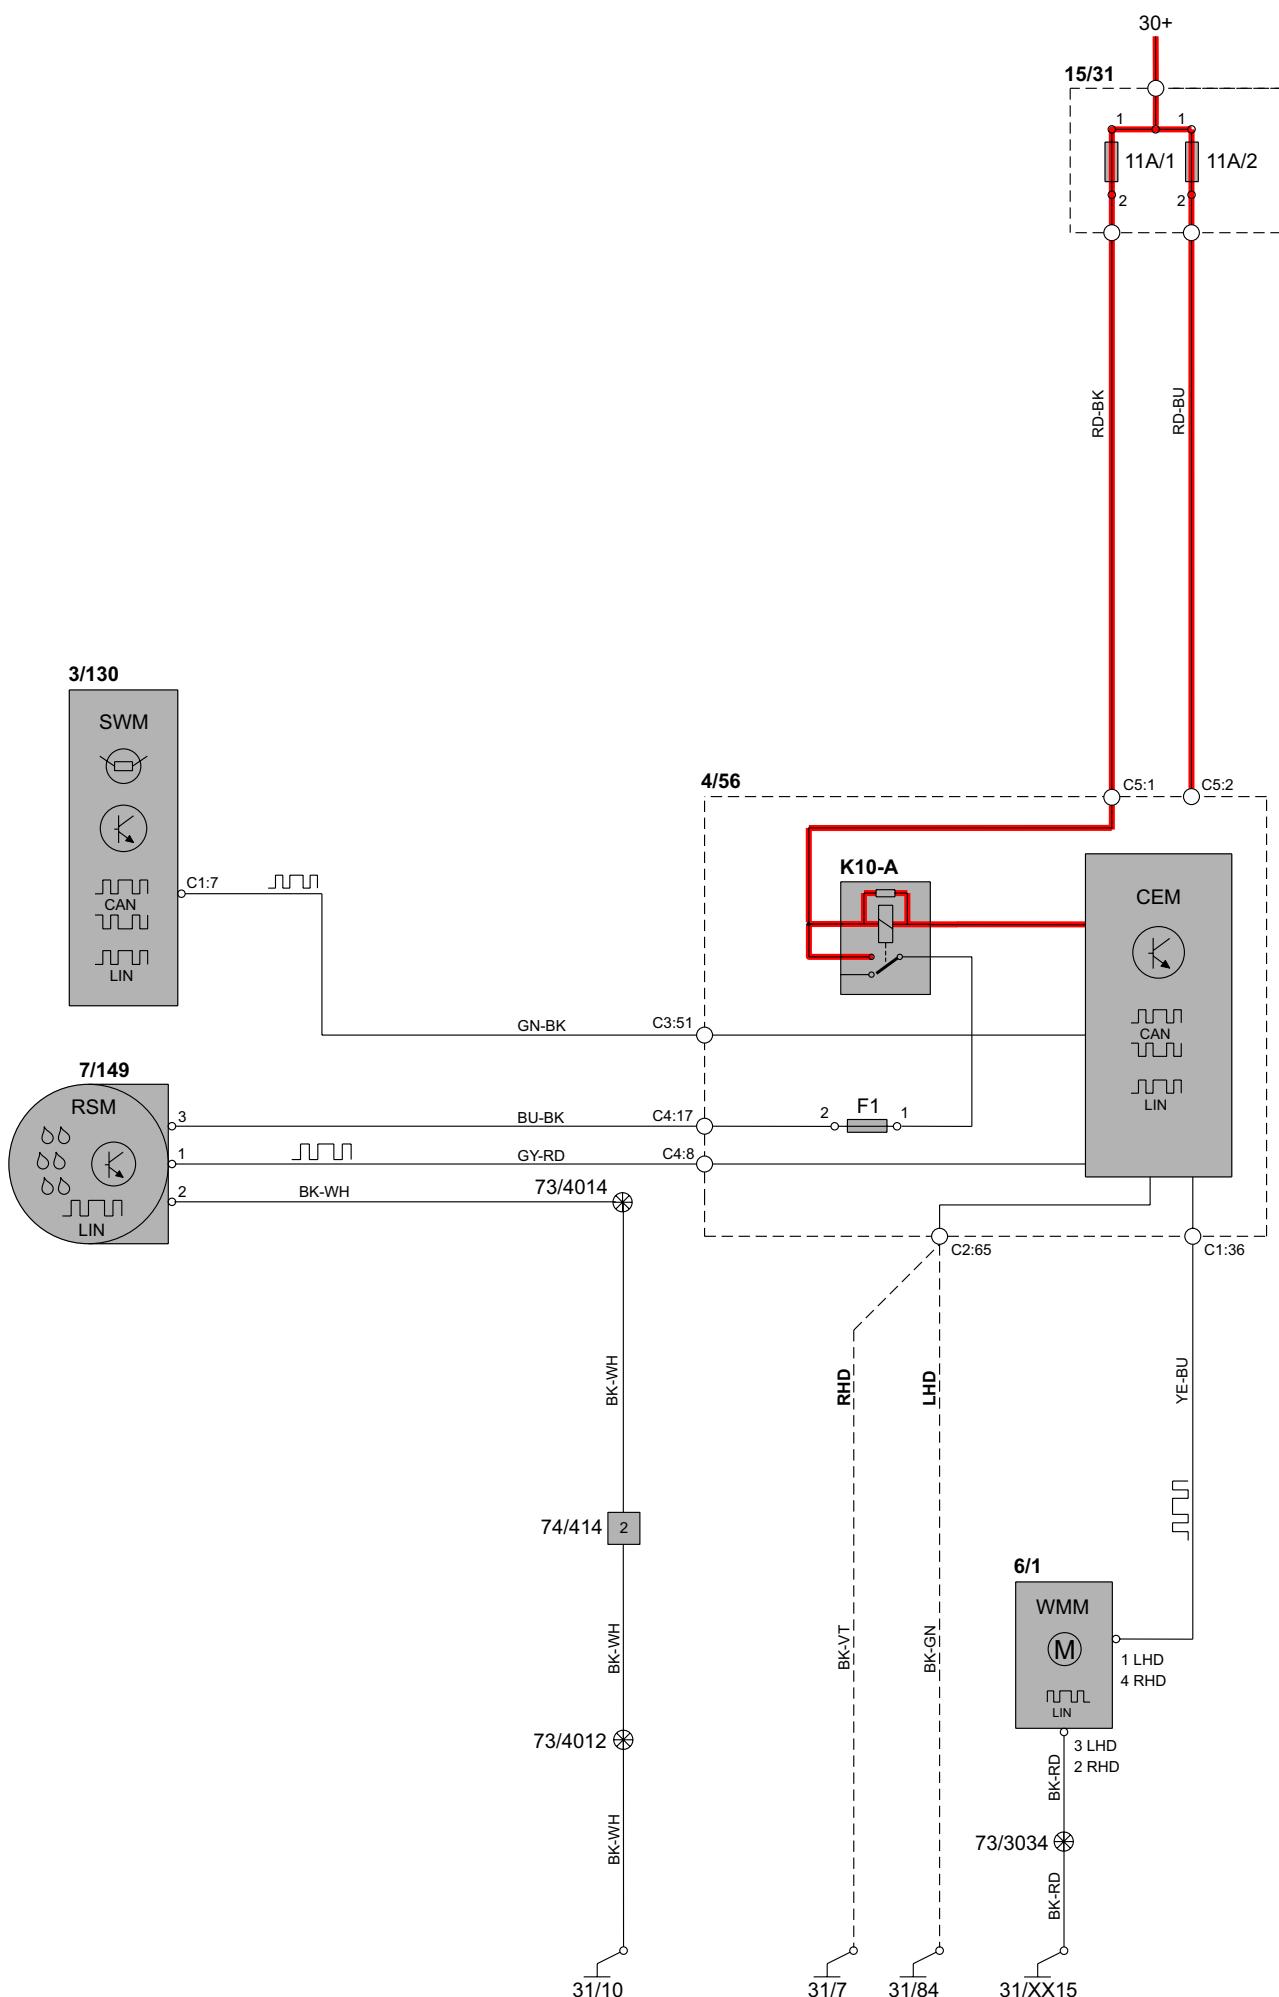


Group 36 Additional electrical equipment

Direction indicator and Hazard warning flashers LHD V70

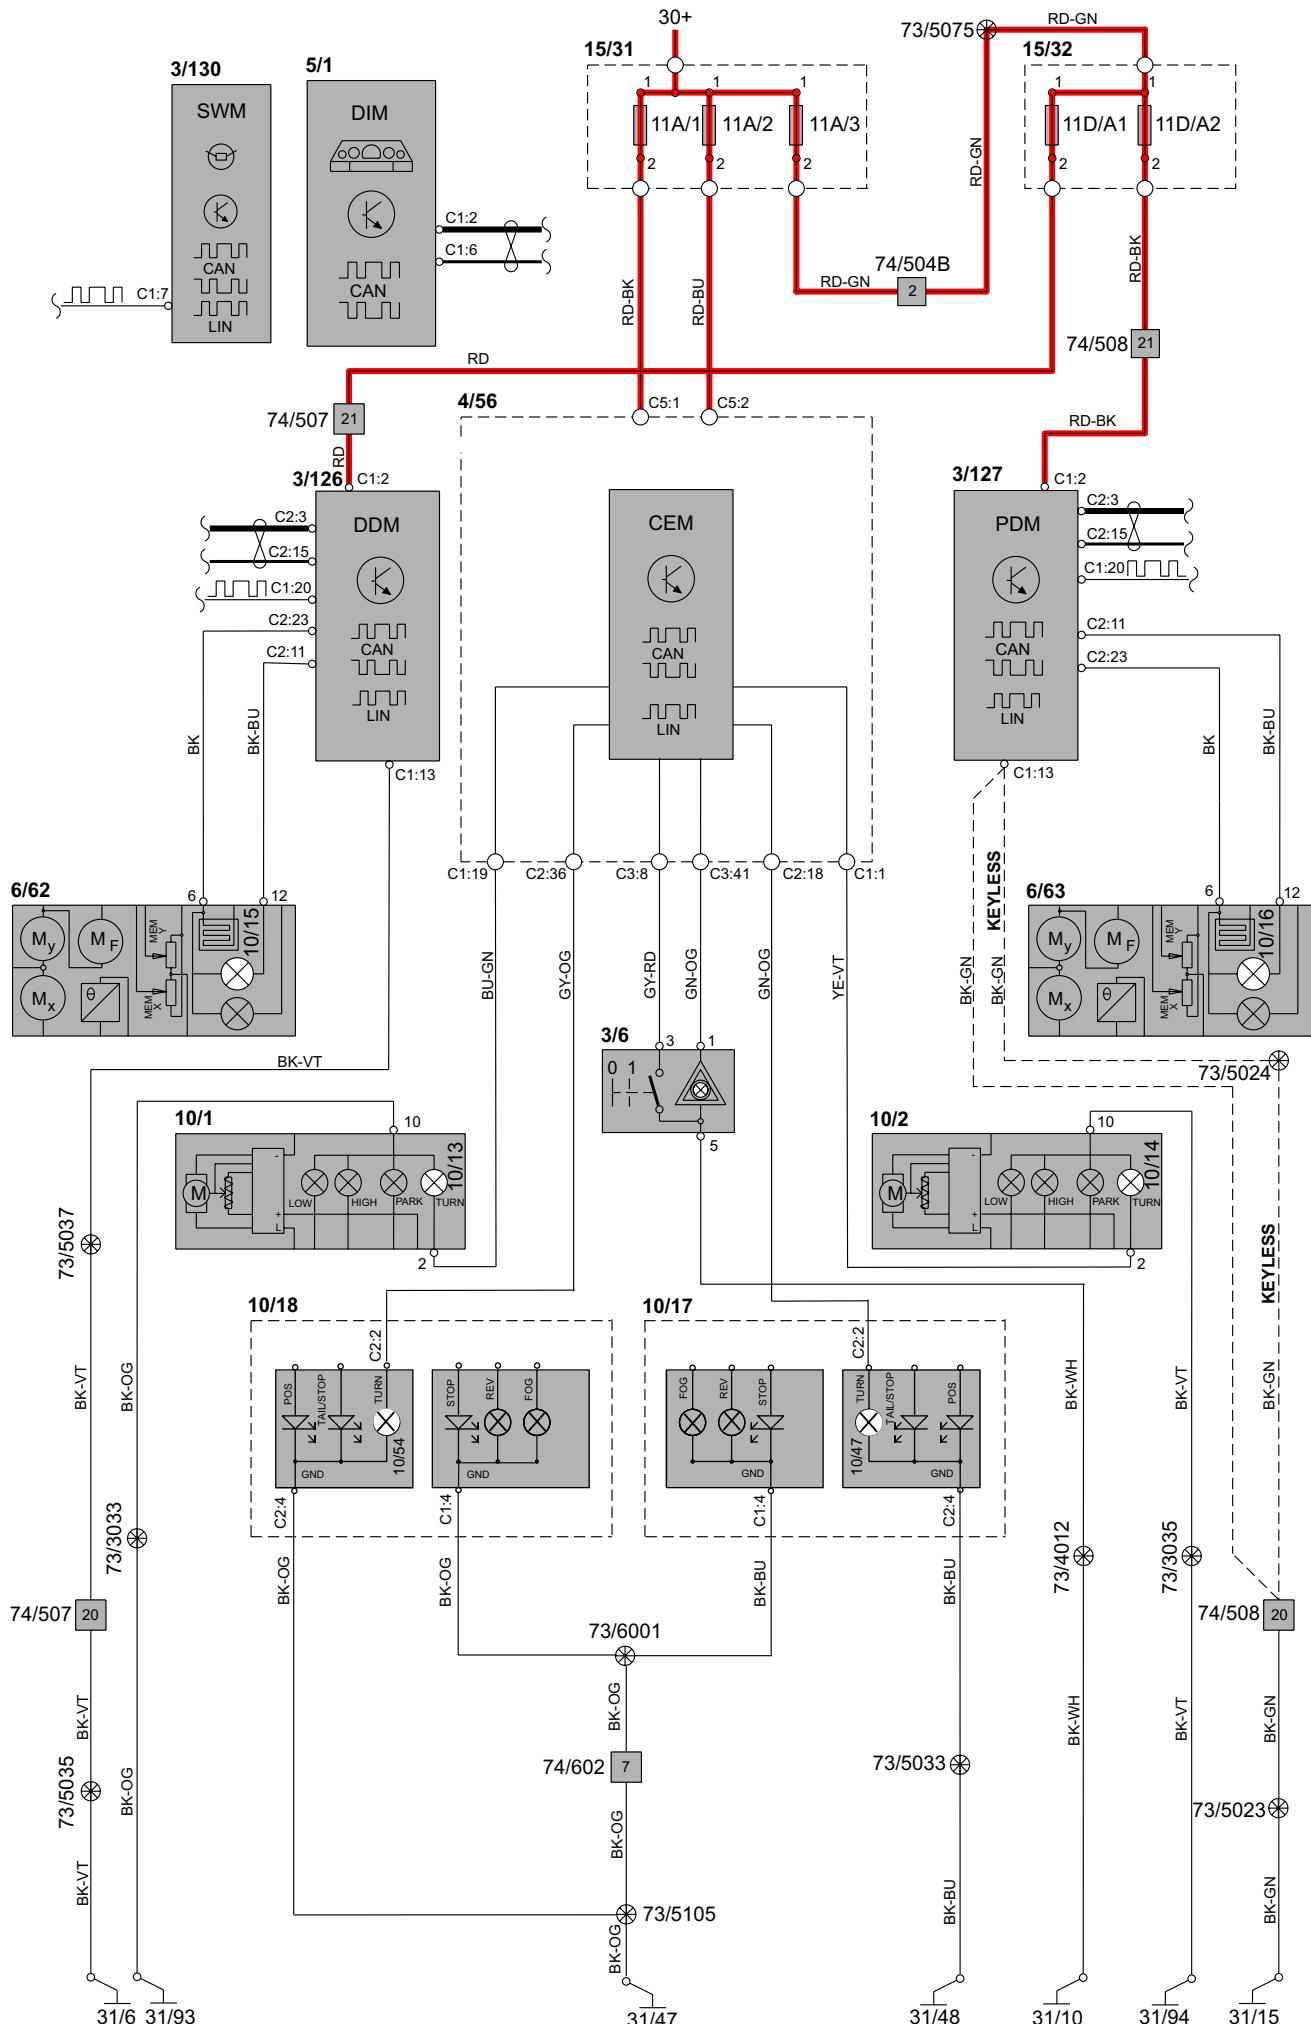


Group 36 Additional electrical equipment

Direction indicator and Hazard warning flashers LHD S80

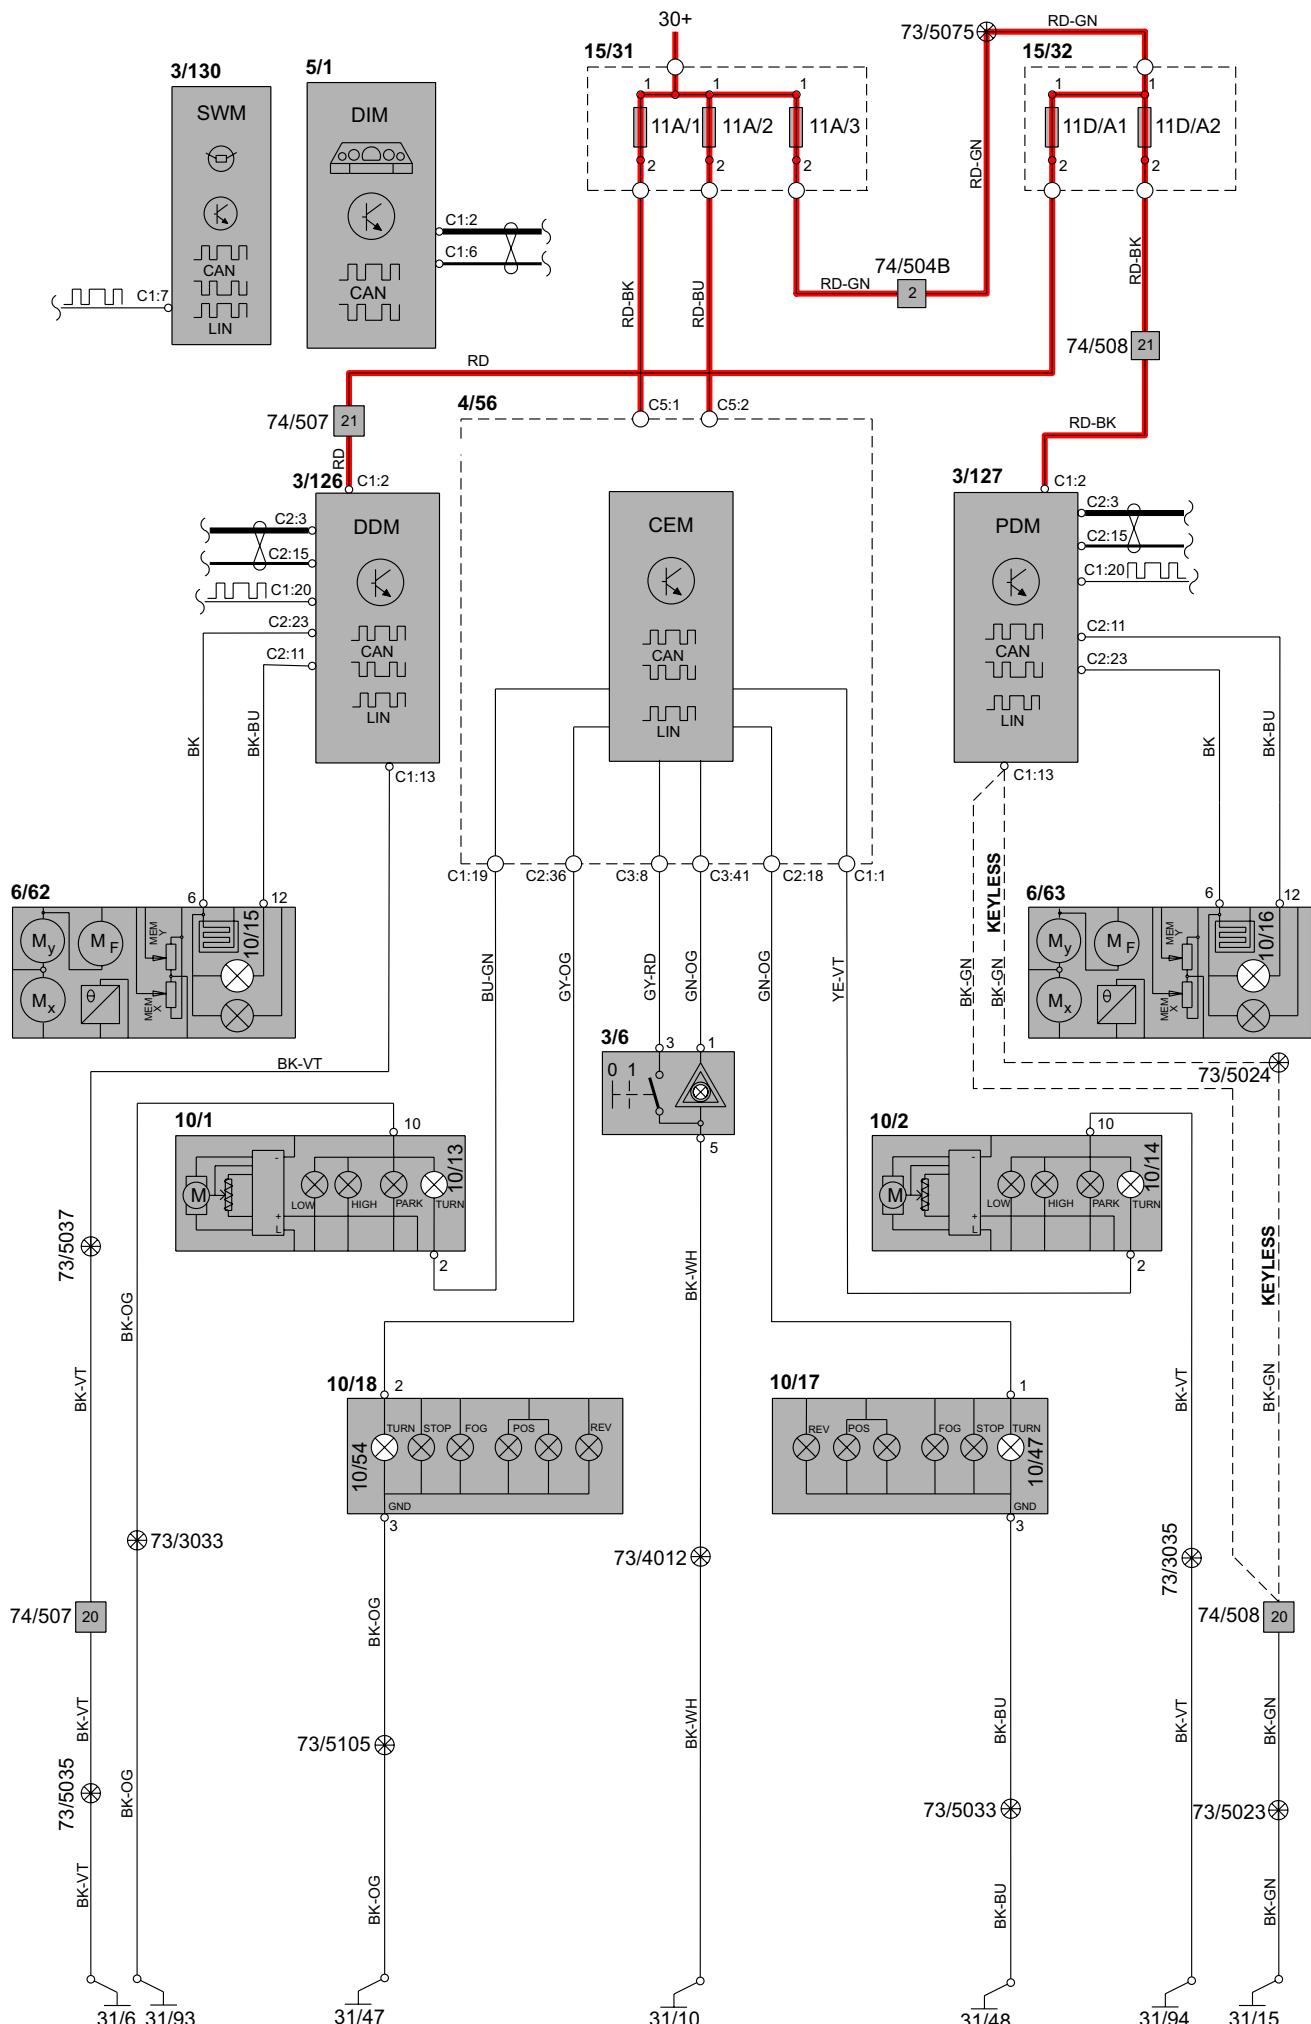


Group 36 Additional electrical equipment

Direction indicator and Hazard warning flashers RHD V70

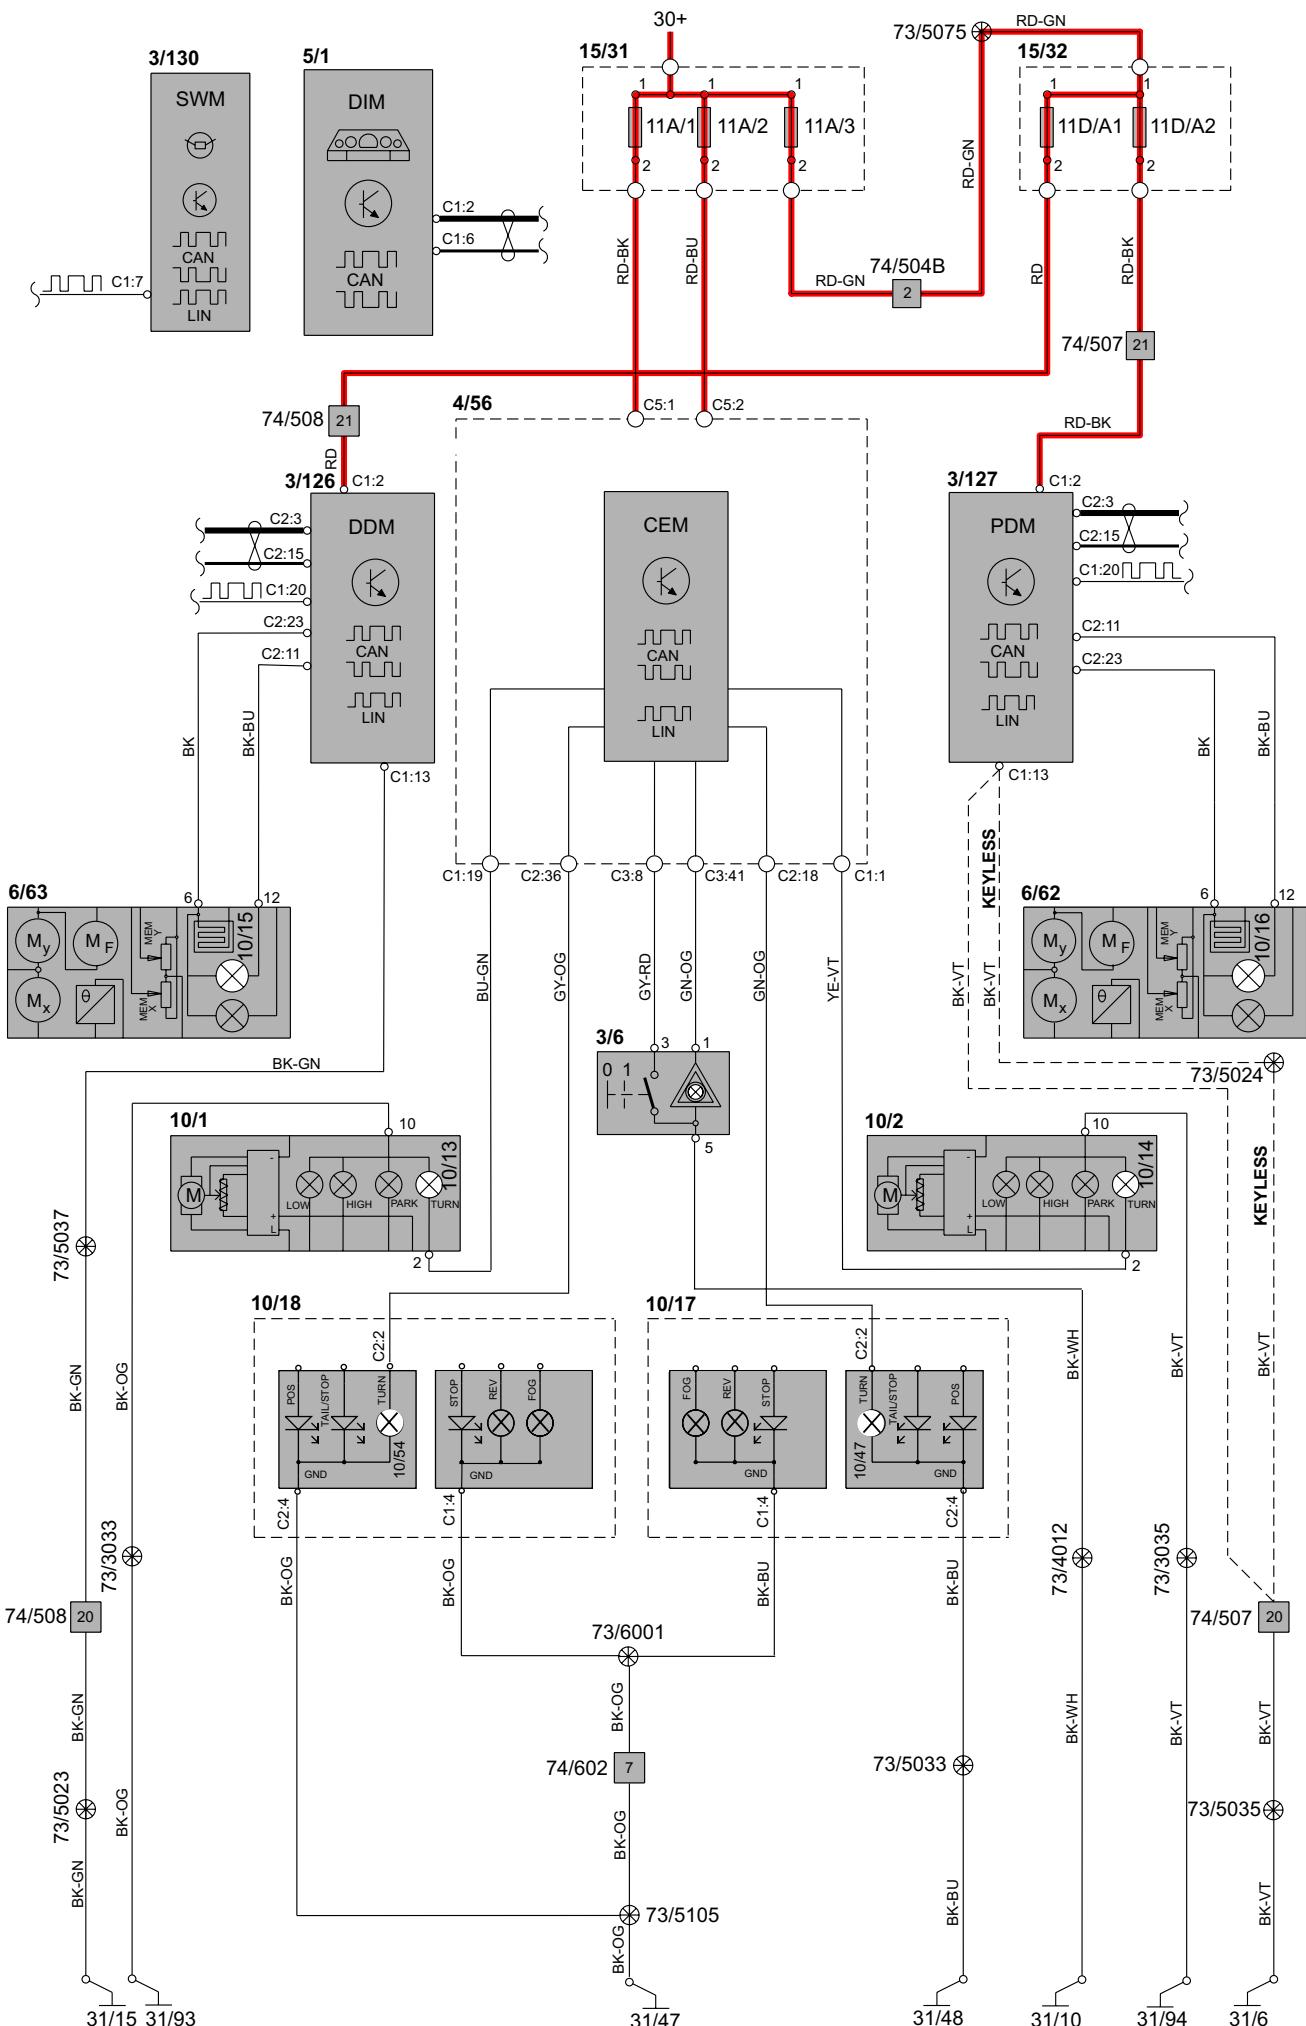


Group 36 Additional electrical equipment

Direction indicator and Hazard warning flashers RHD S80

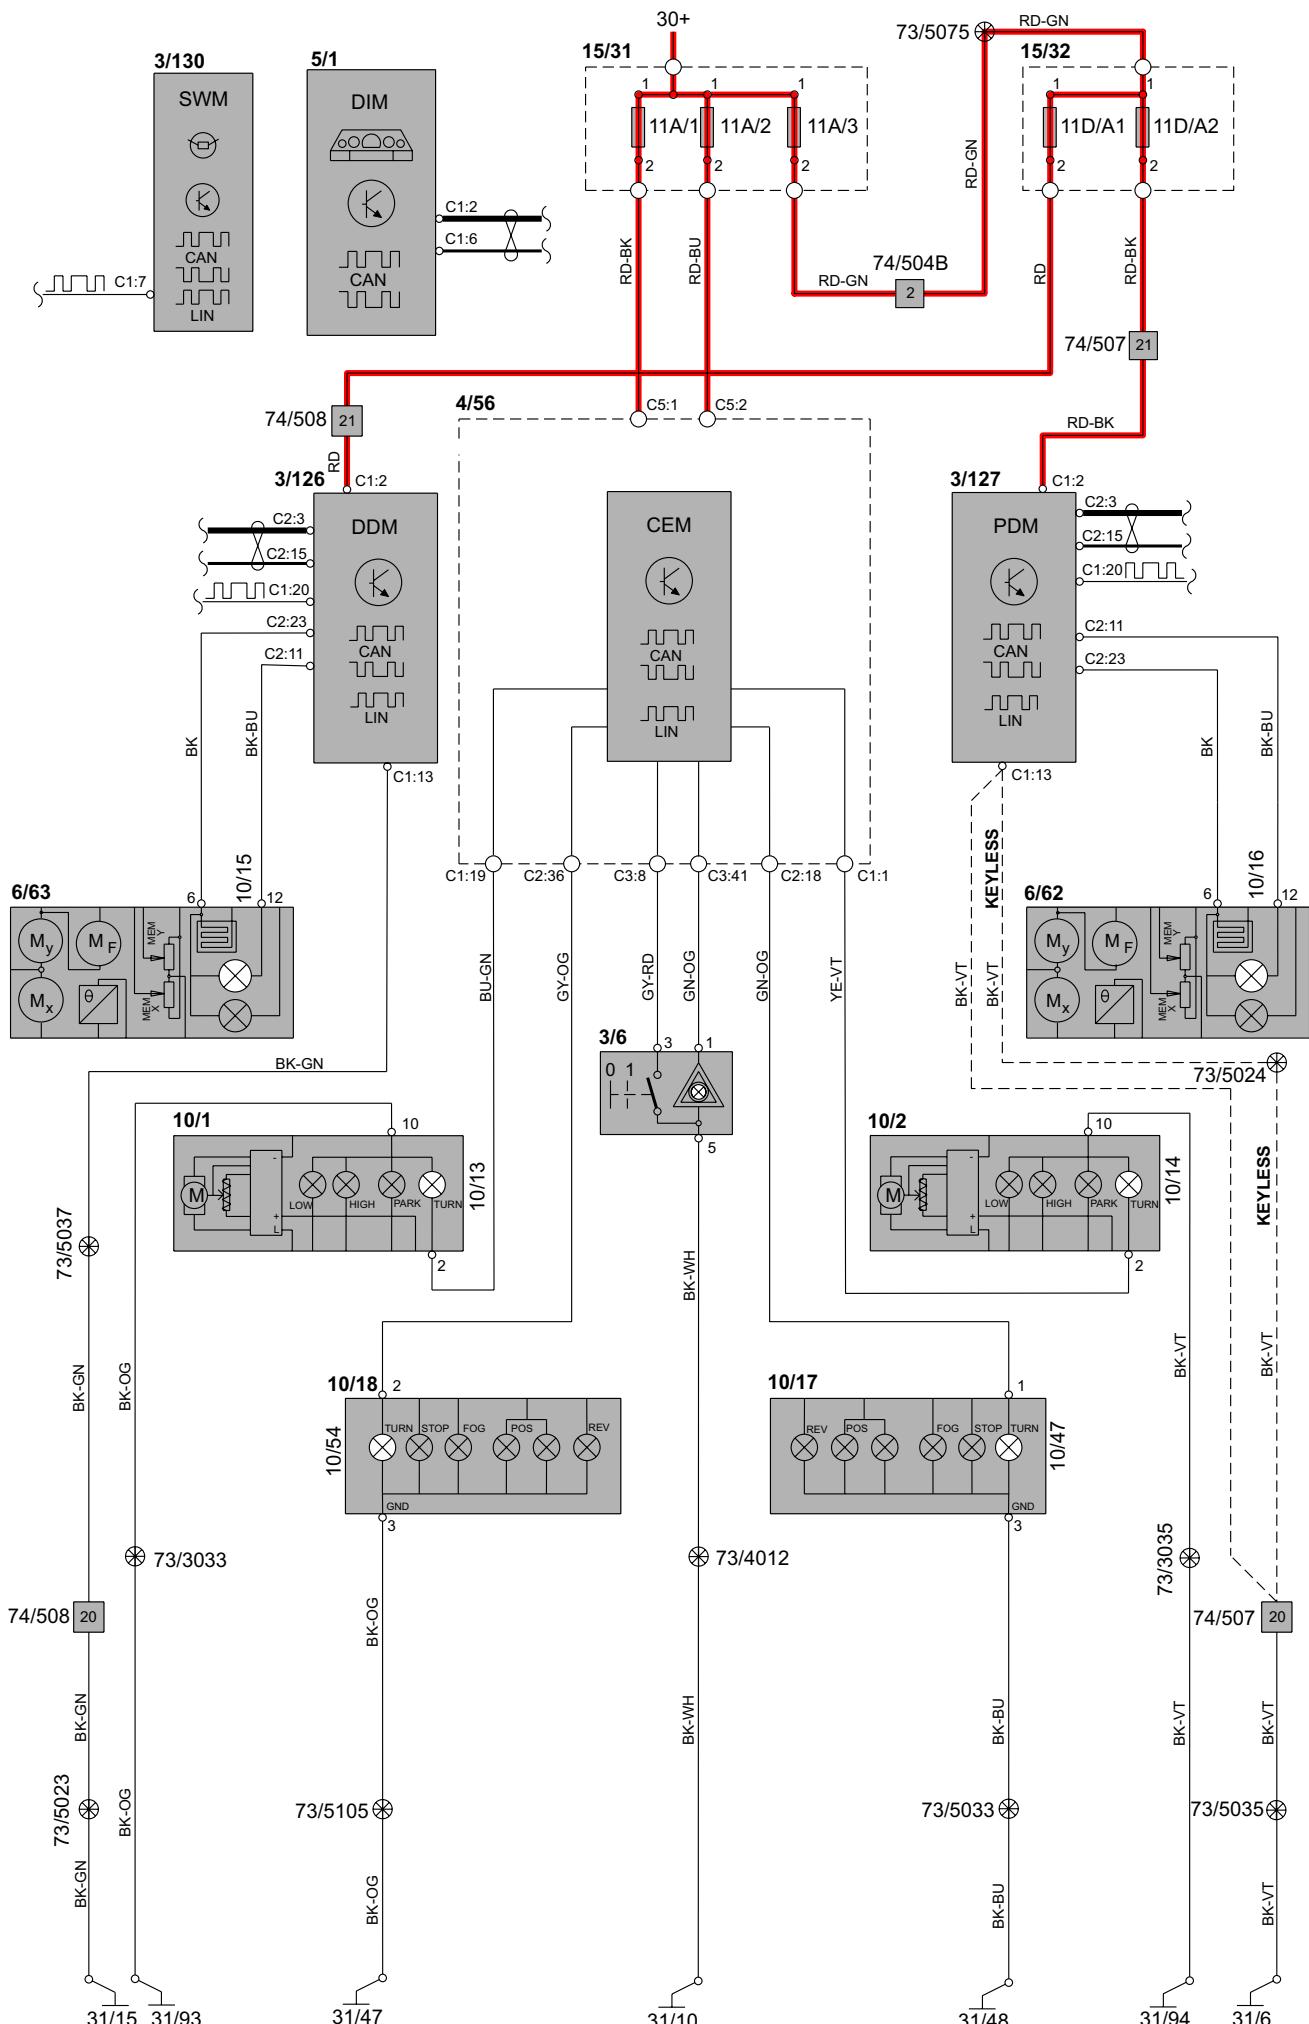


Group 36 Additional electrical equipment

Windshield wiper/washer

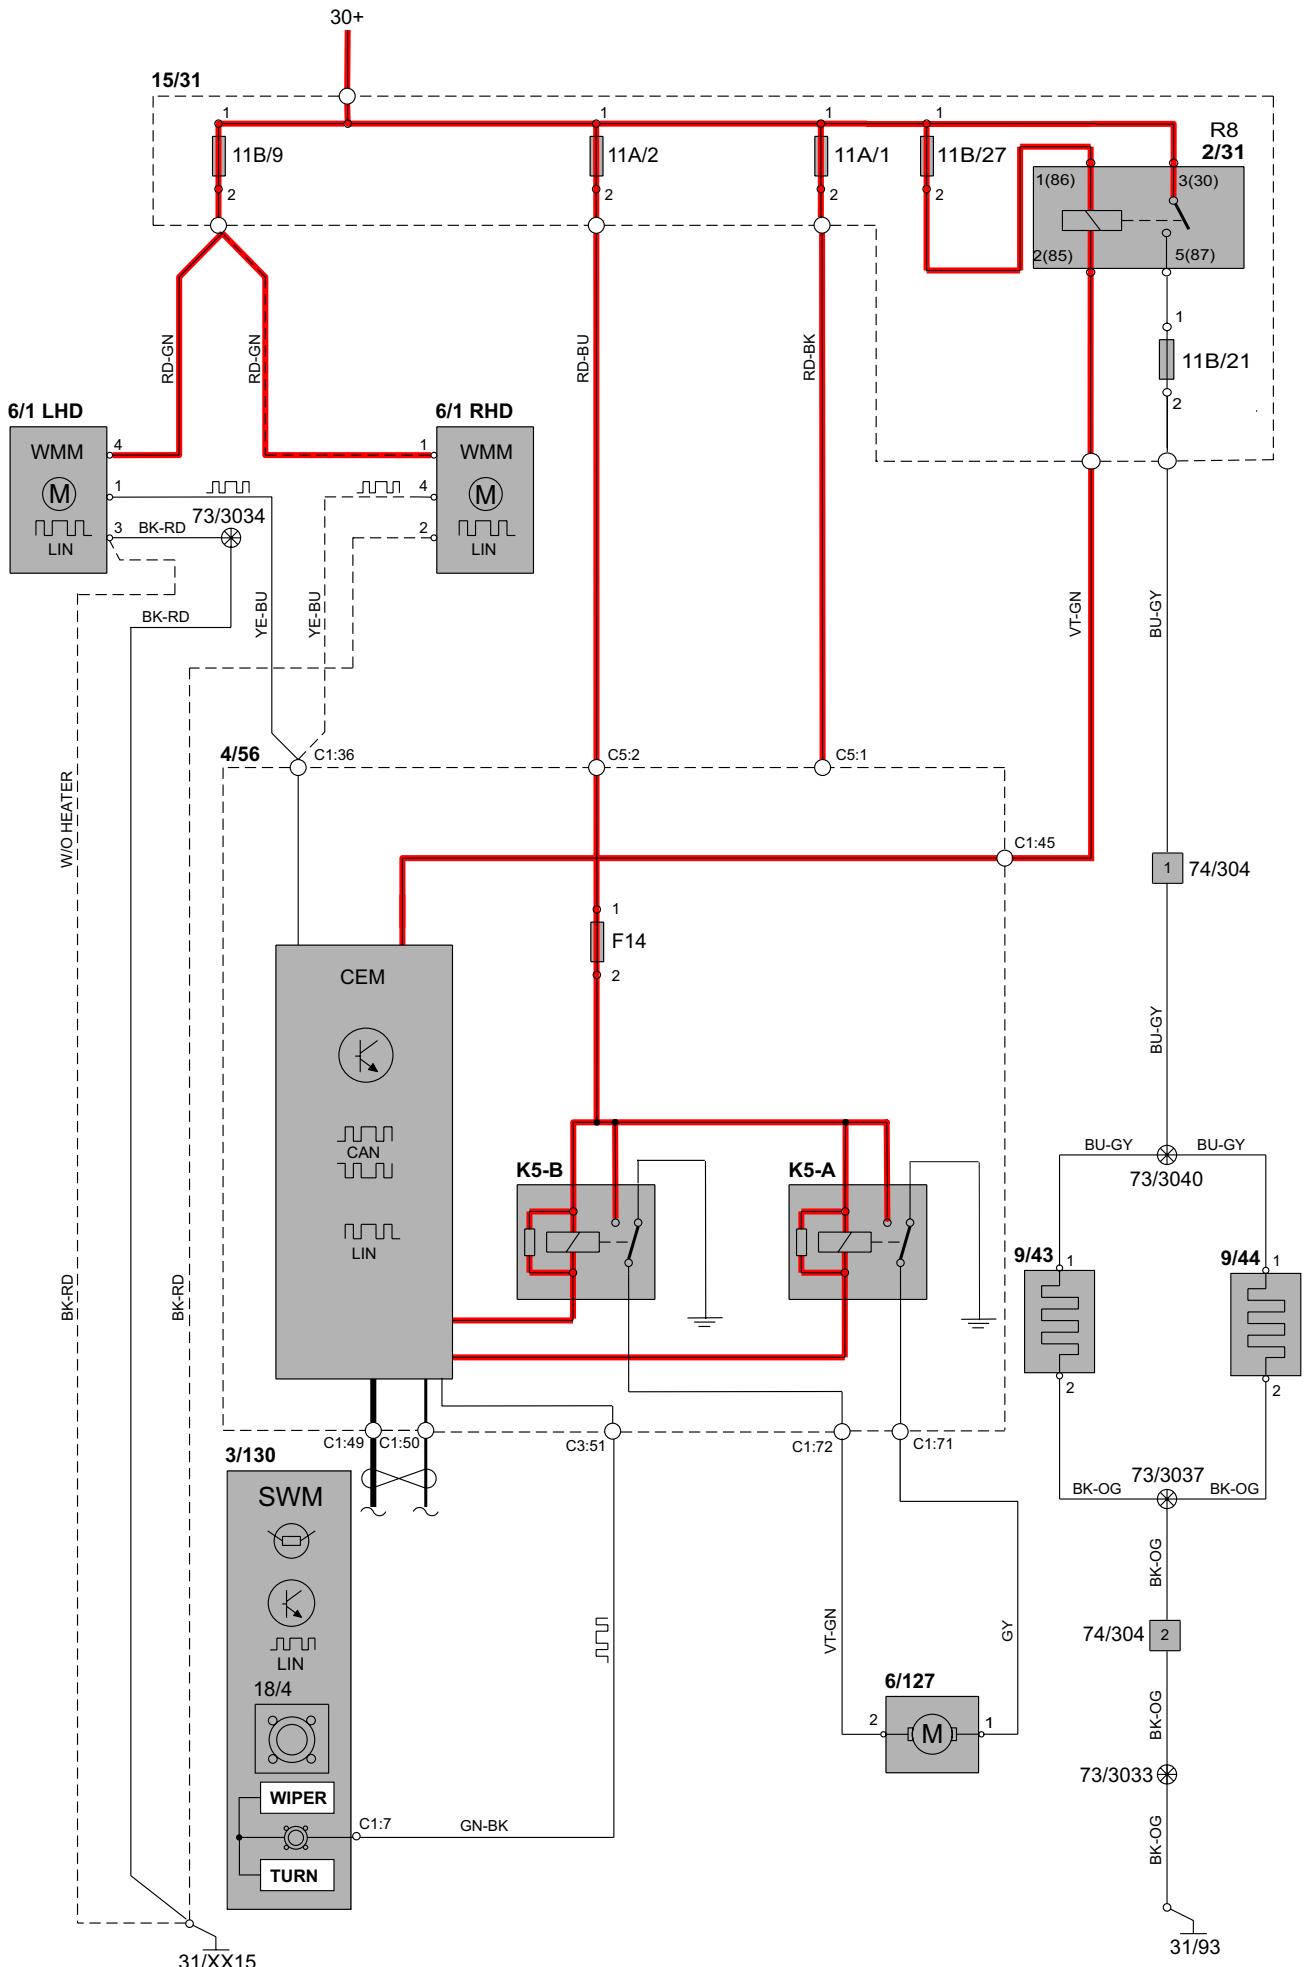


Group 36 Additional electrical equipment

High-pressure headlight washer

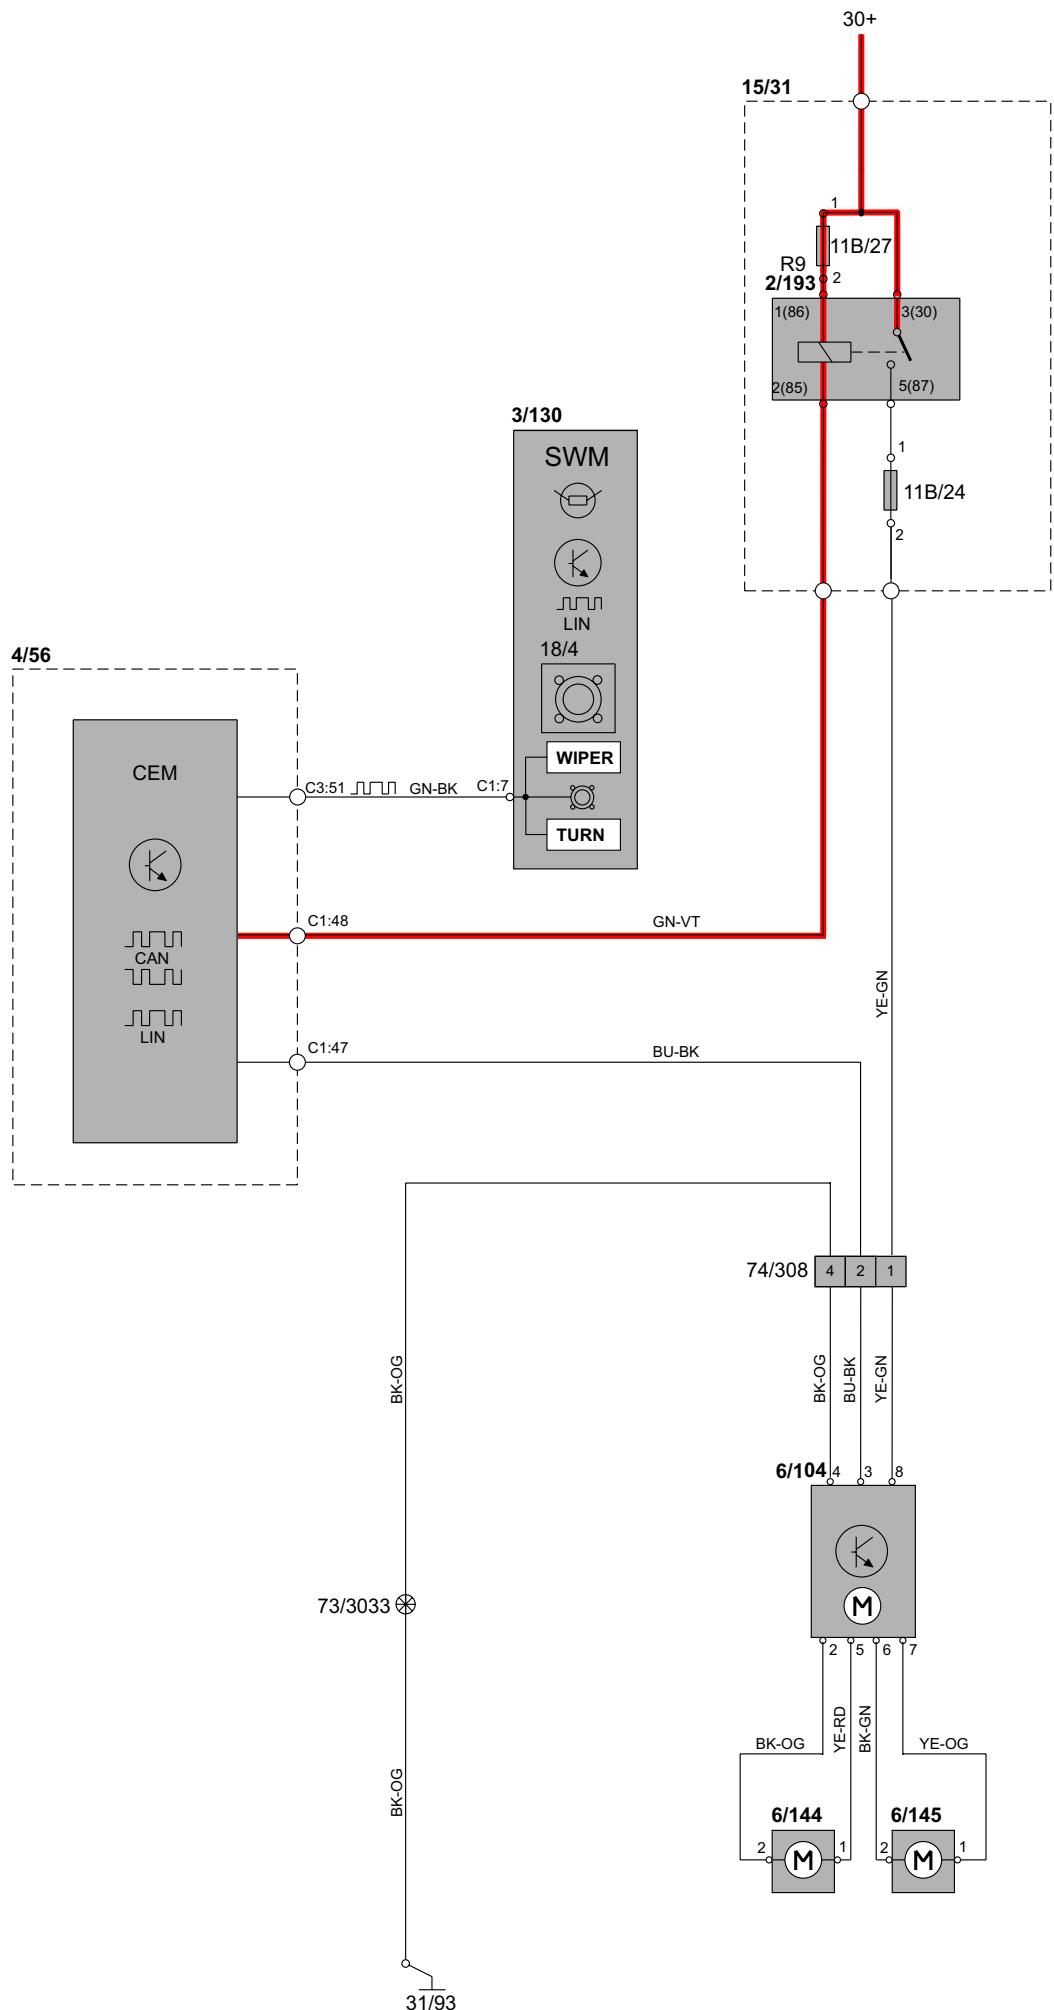


Group 36 Additional electrical equipment

Wiper/washer rear window

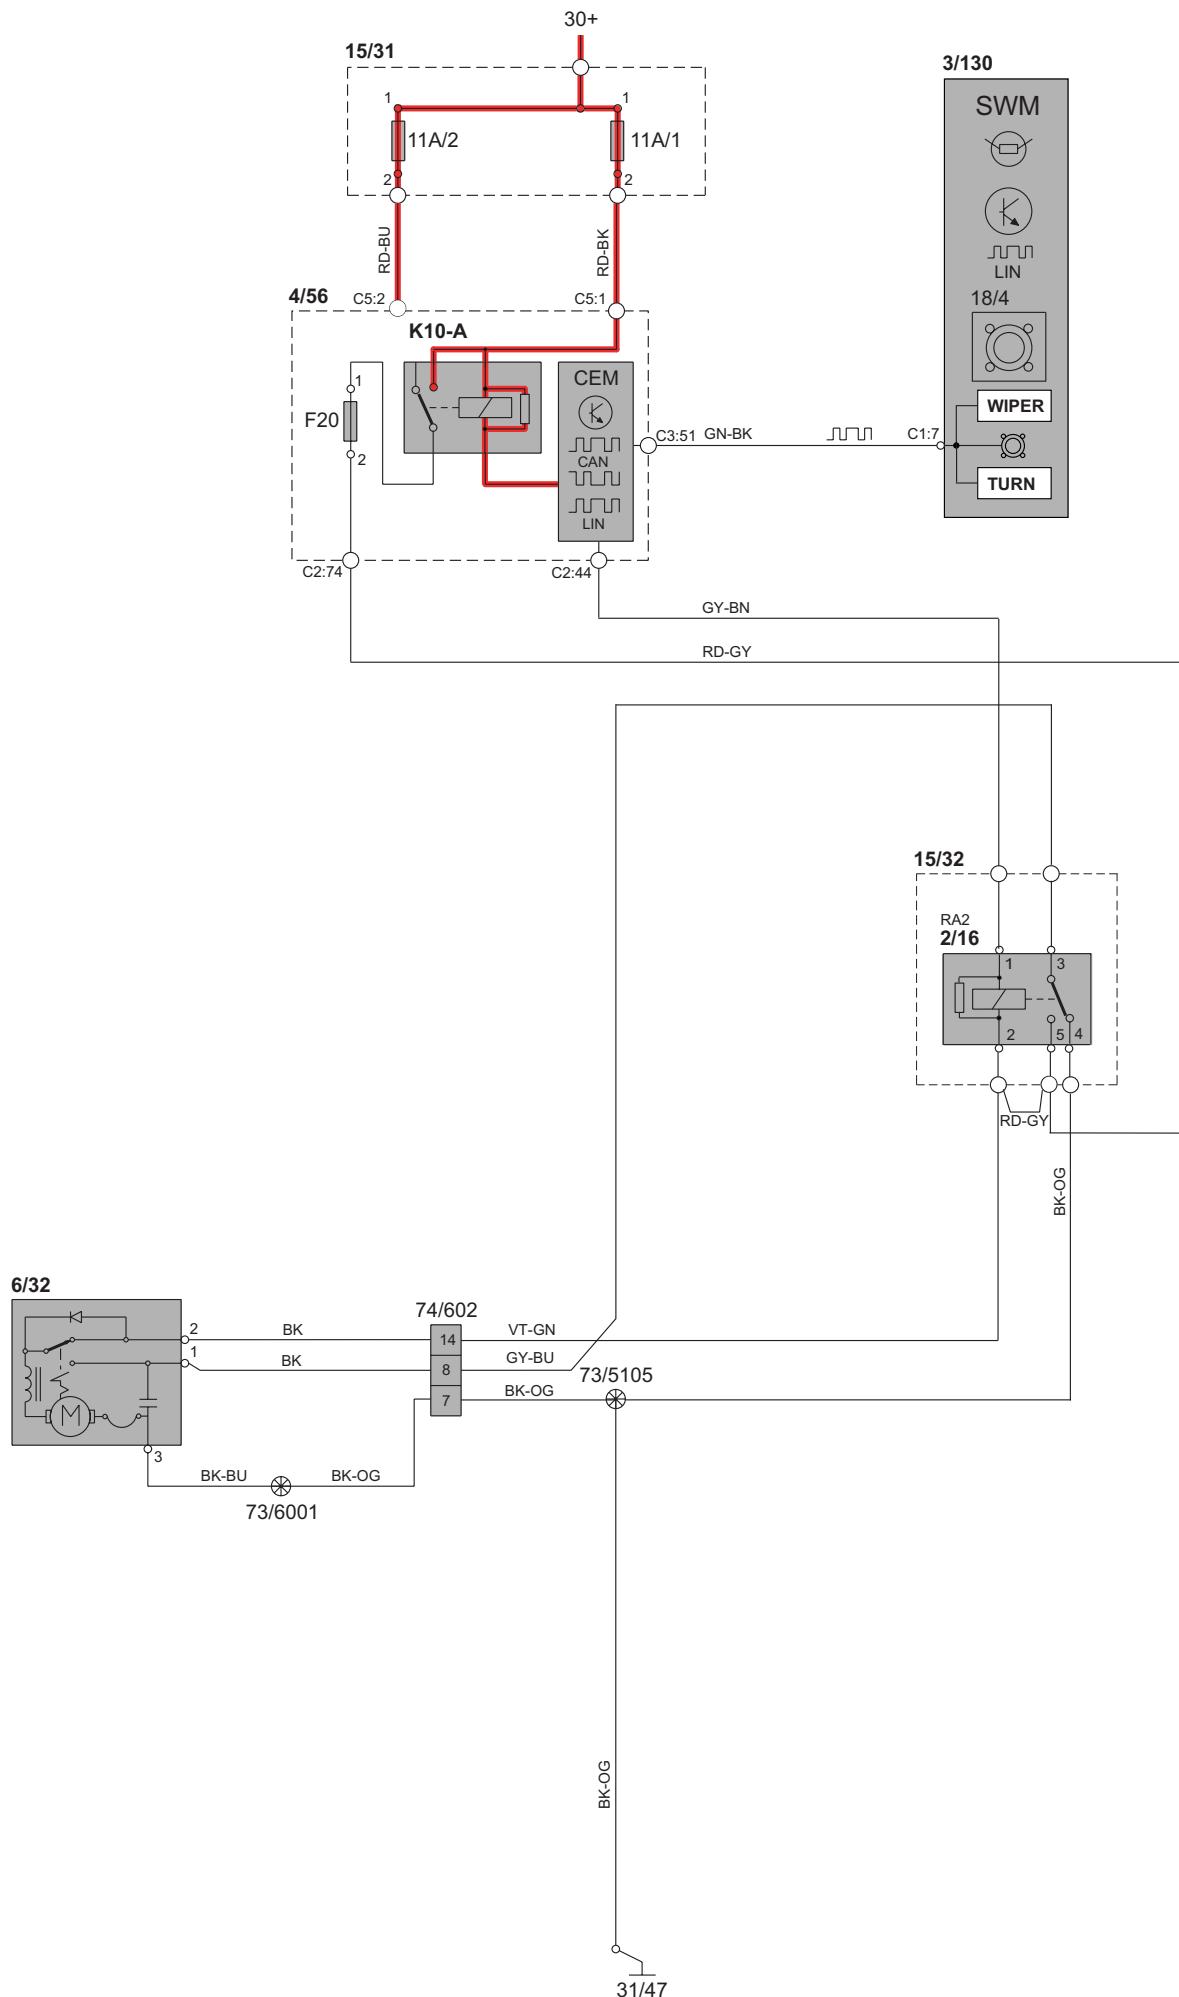


Group 36 Additional electrical equipment

Horn

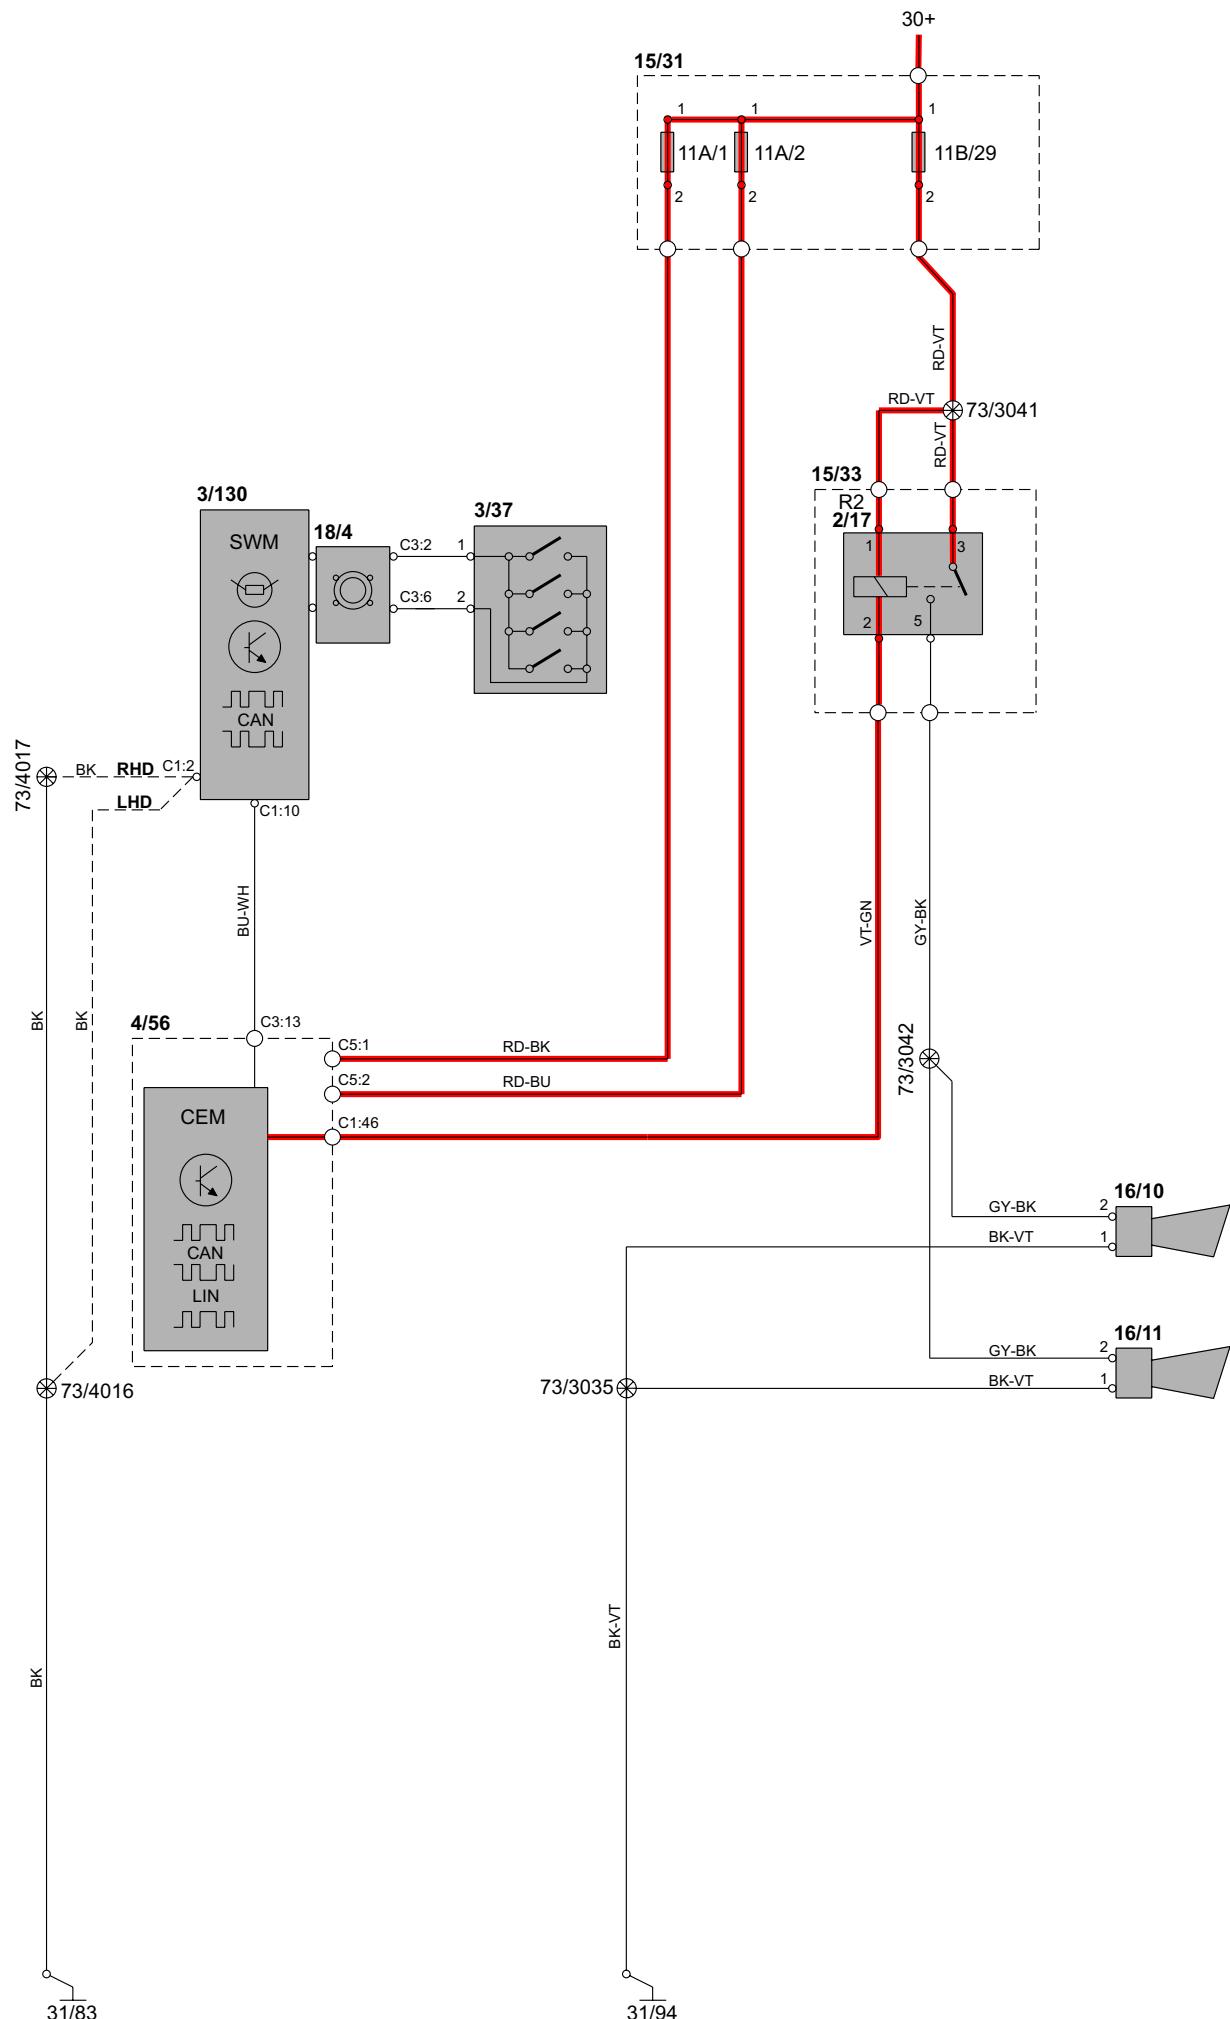


Group 36 Additional electrical equipment

Keyless vehicle 1:2

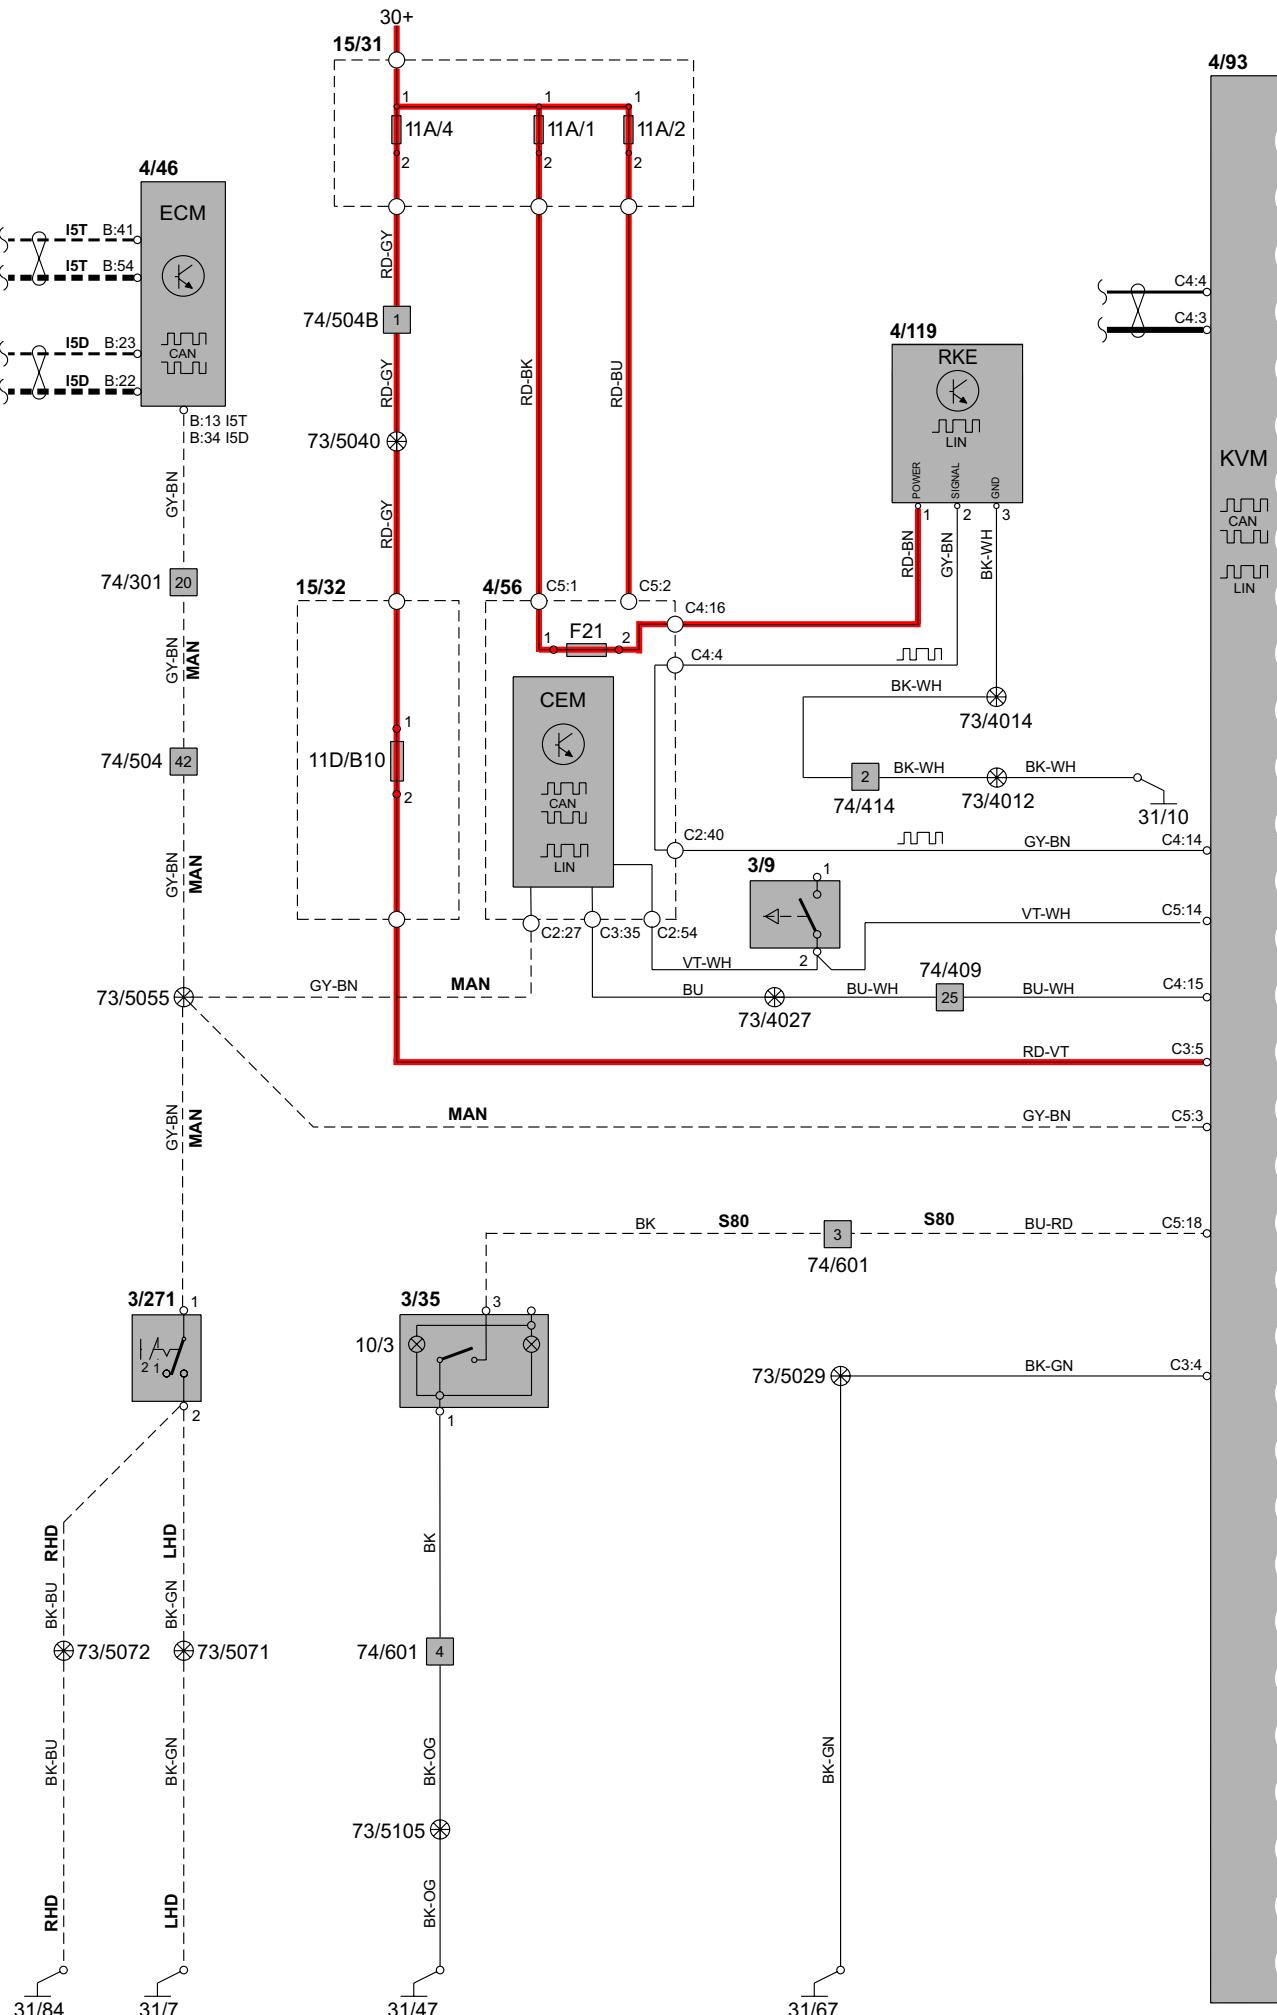


Group 36 Additional electrical equipment

Keyless vehicle 2:2

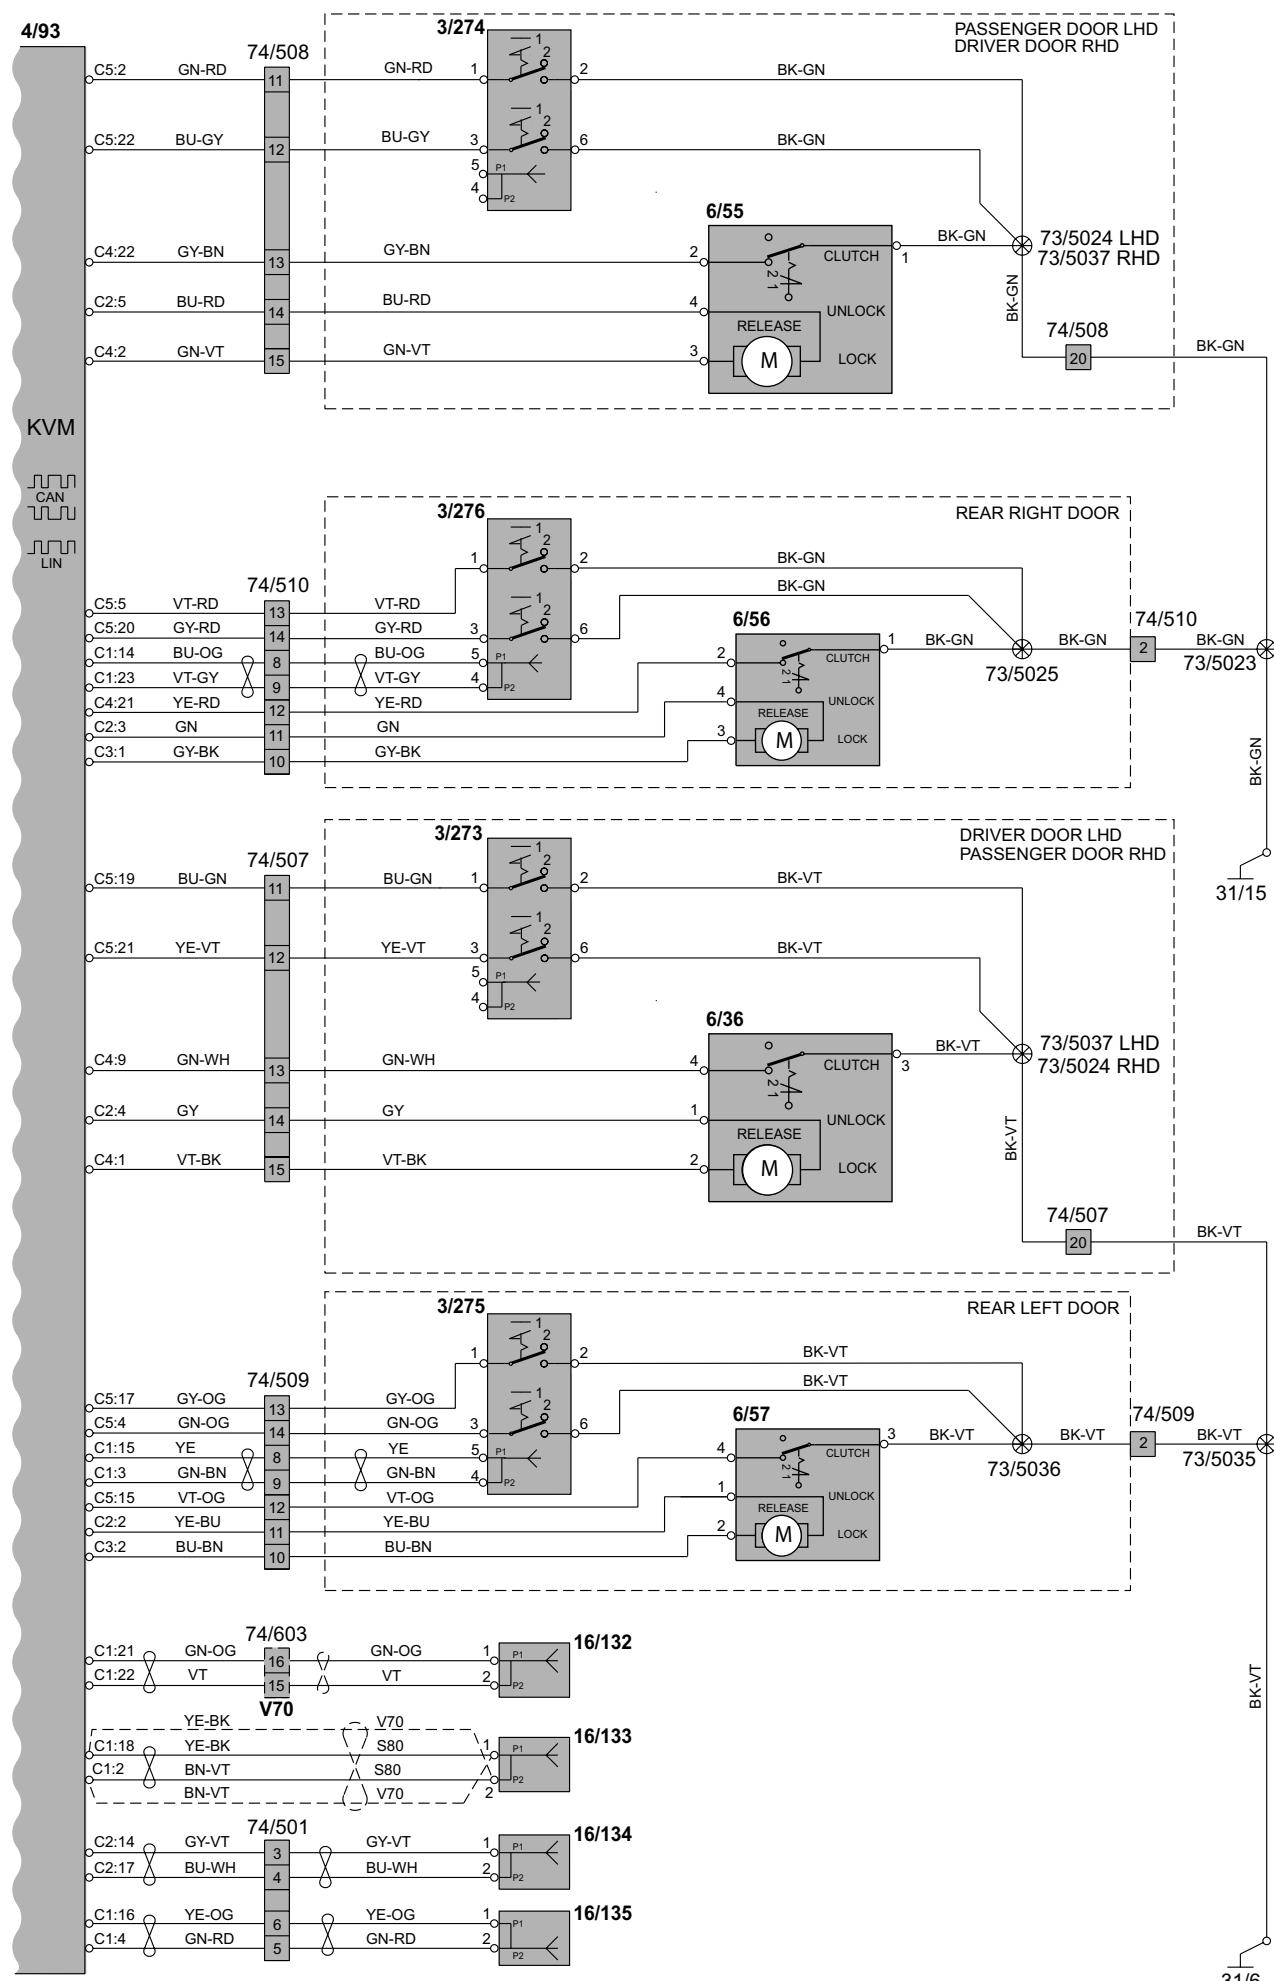


Group 36 Additional electrical equipment

Anti-theft alarm

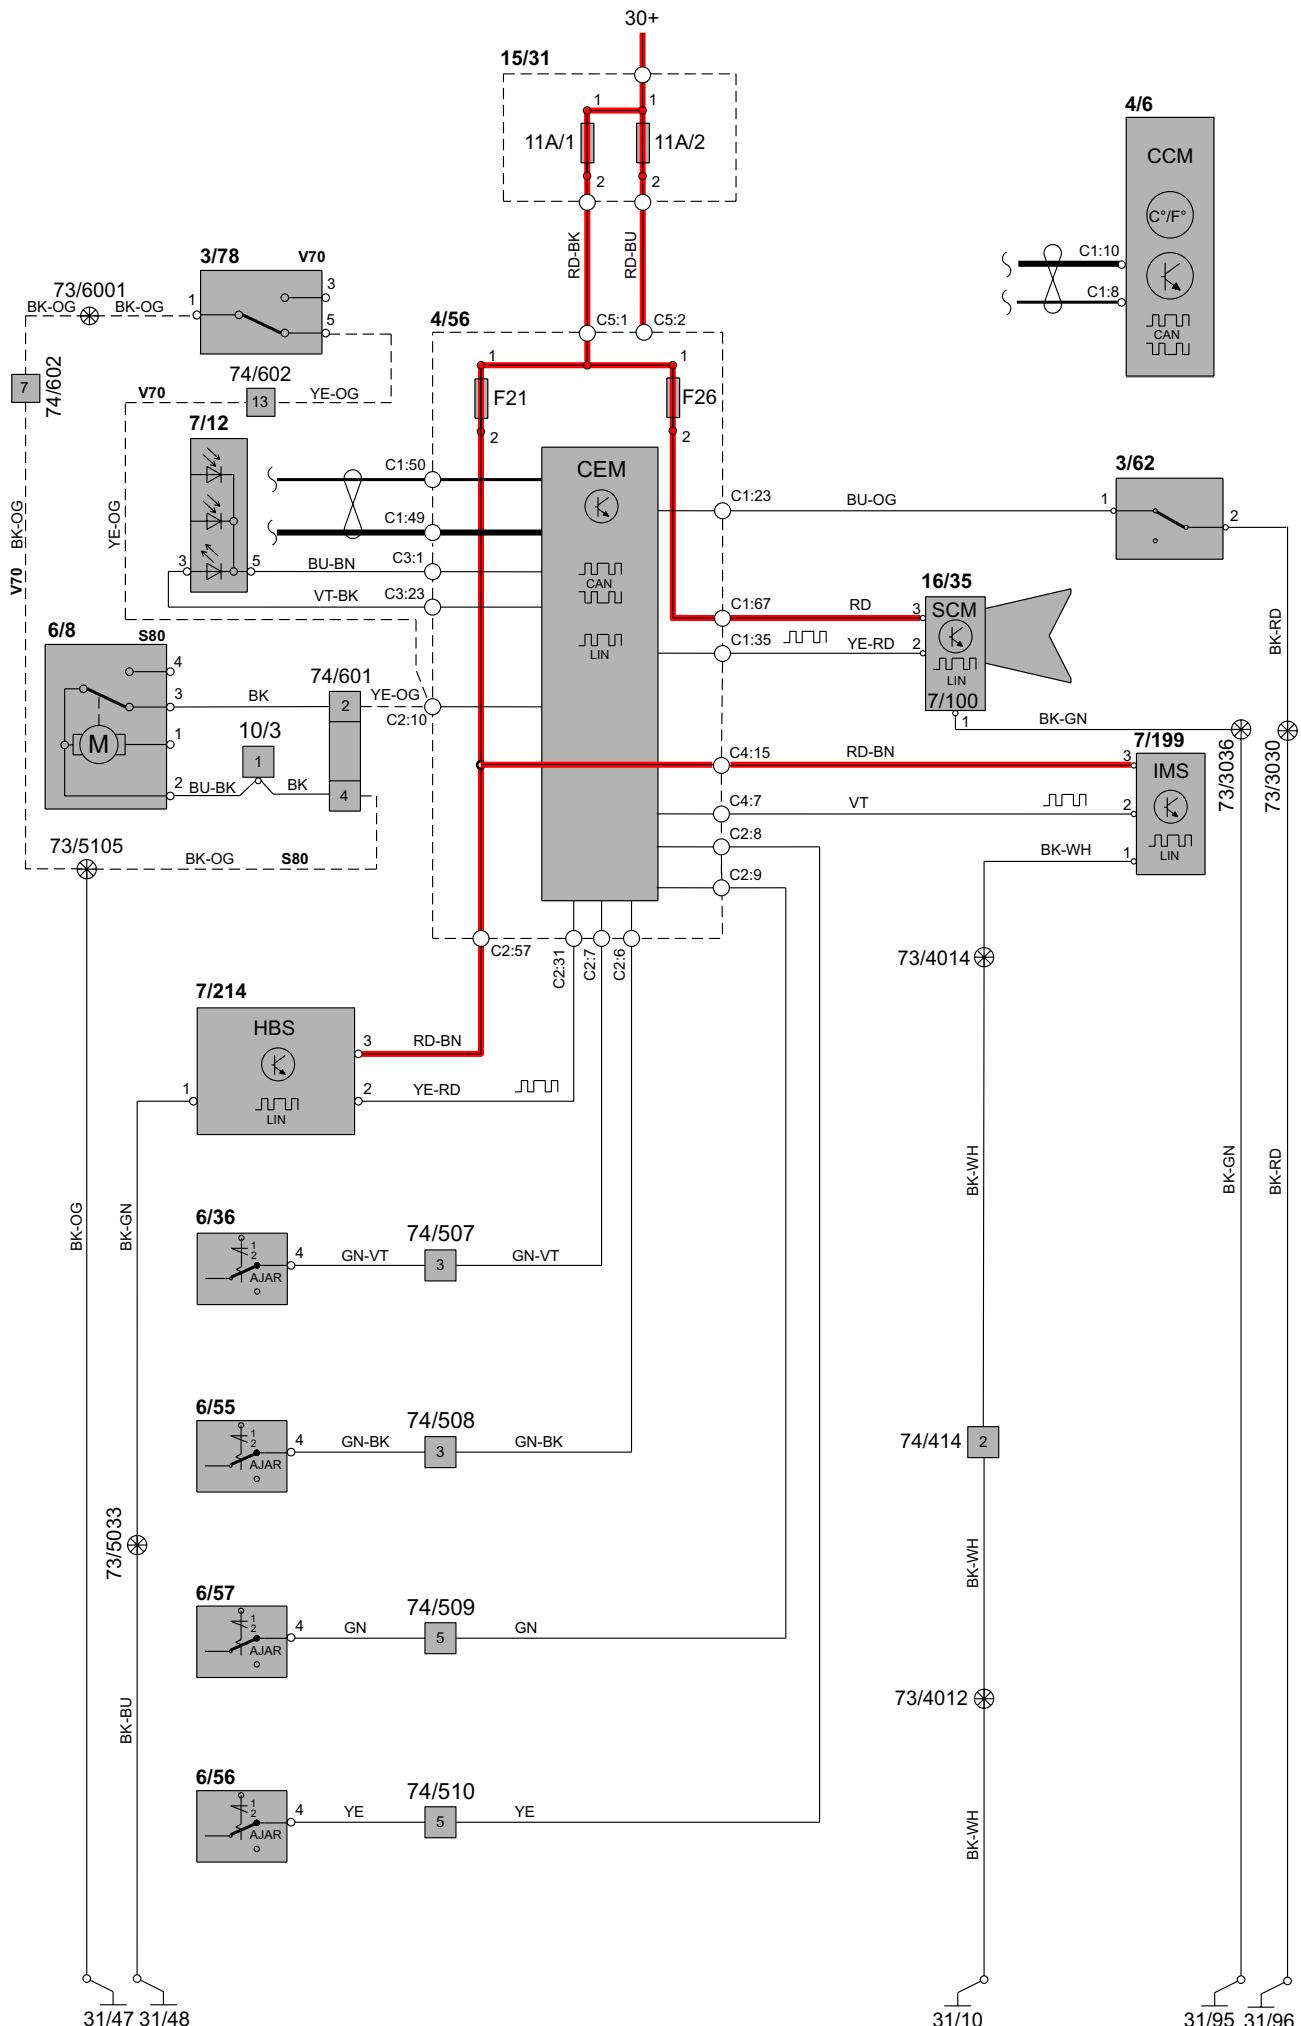


Group 36 Additional electrical equipment

Parking assistance

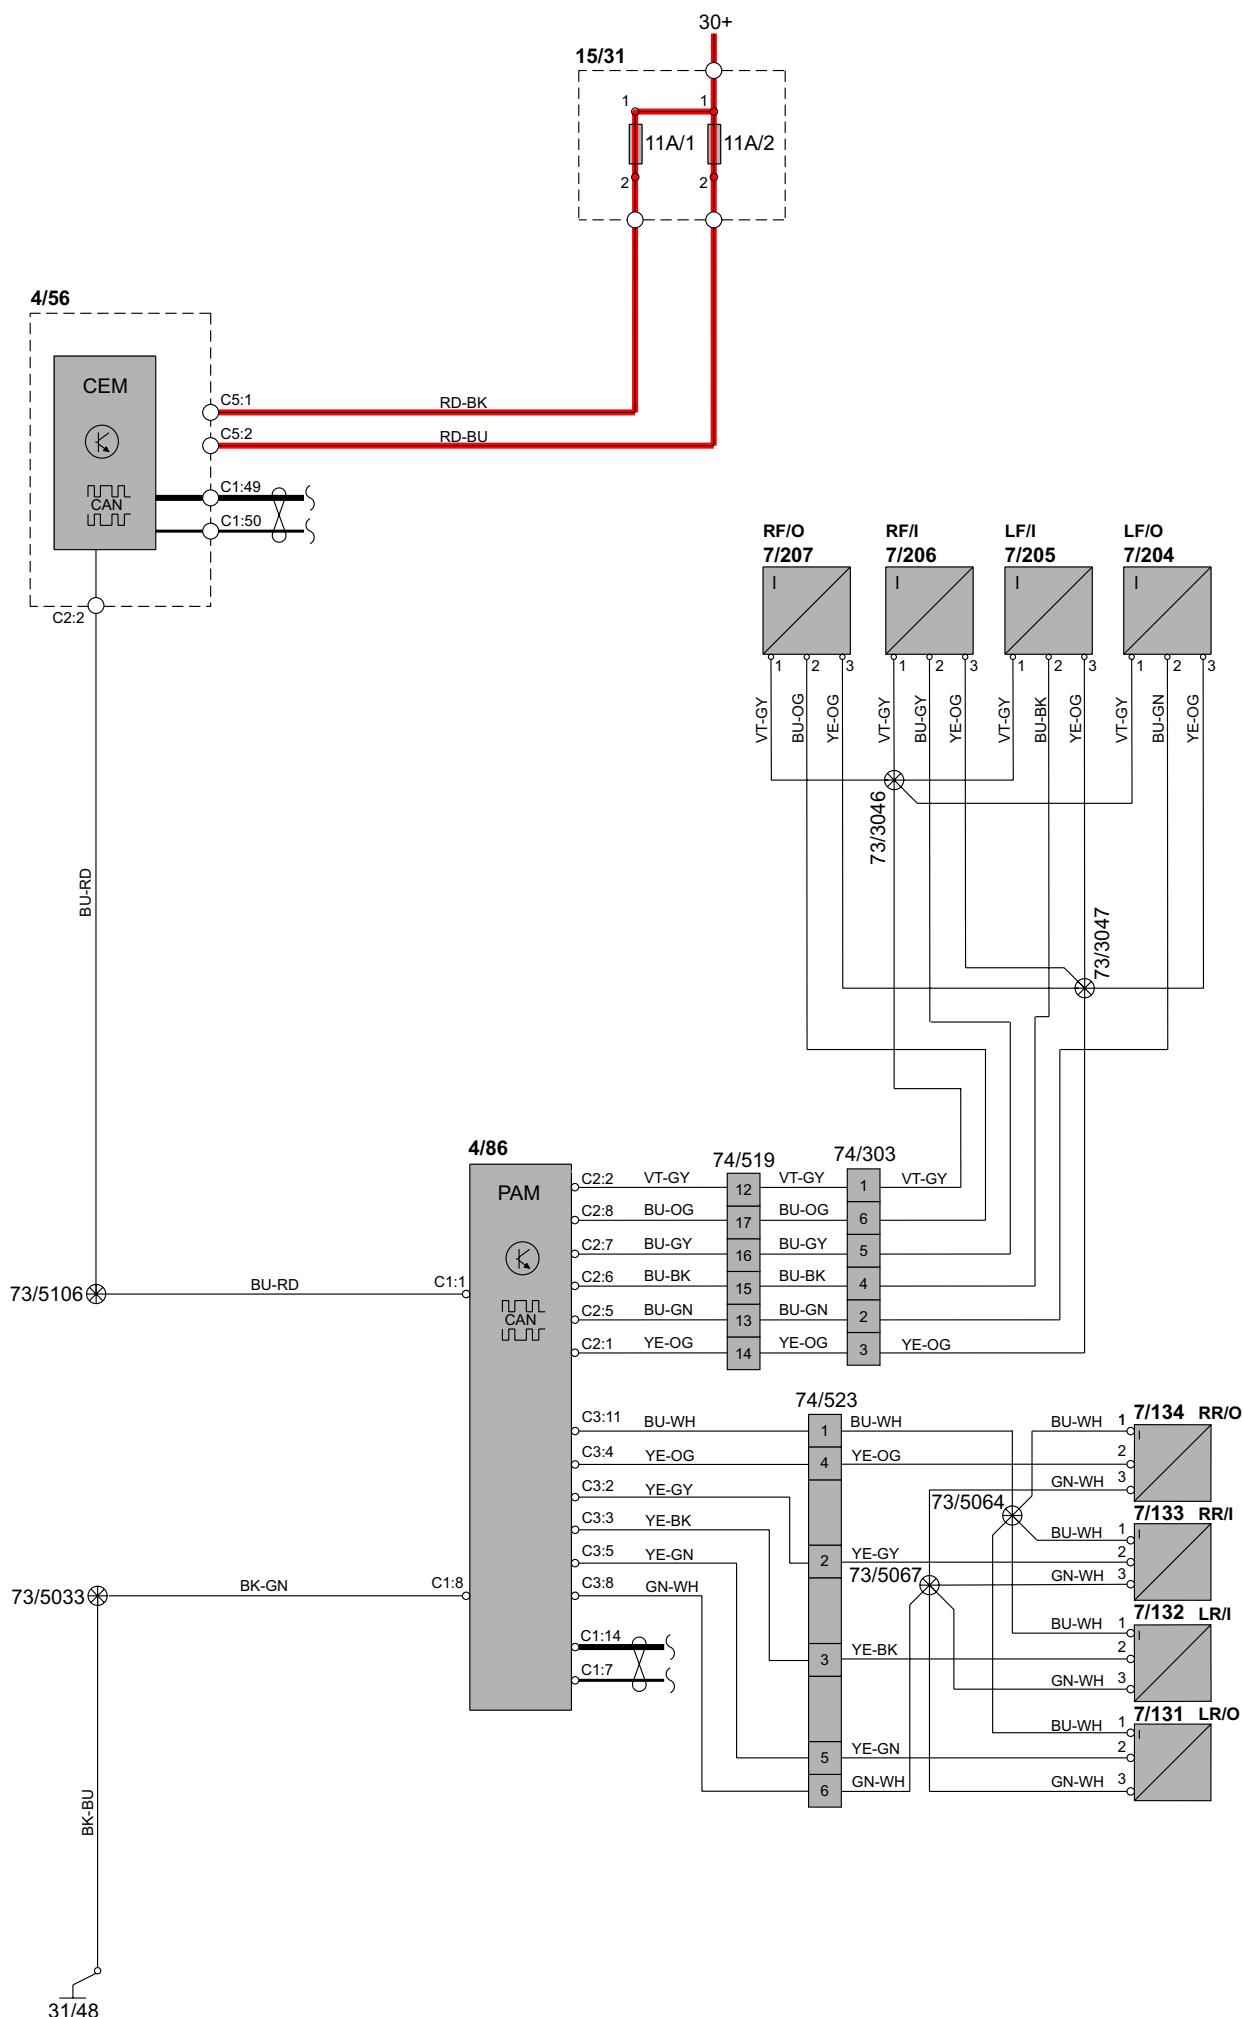


Group 36 Additional electrical equipment

Collision warning with brake servo

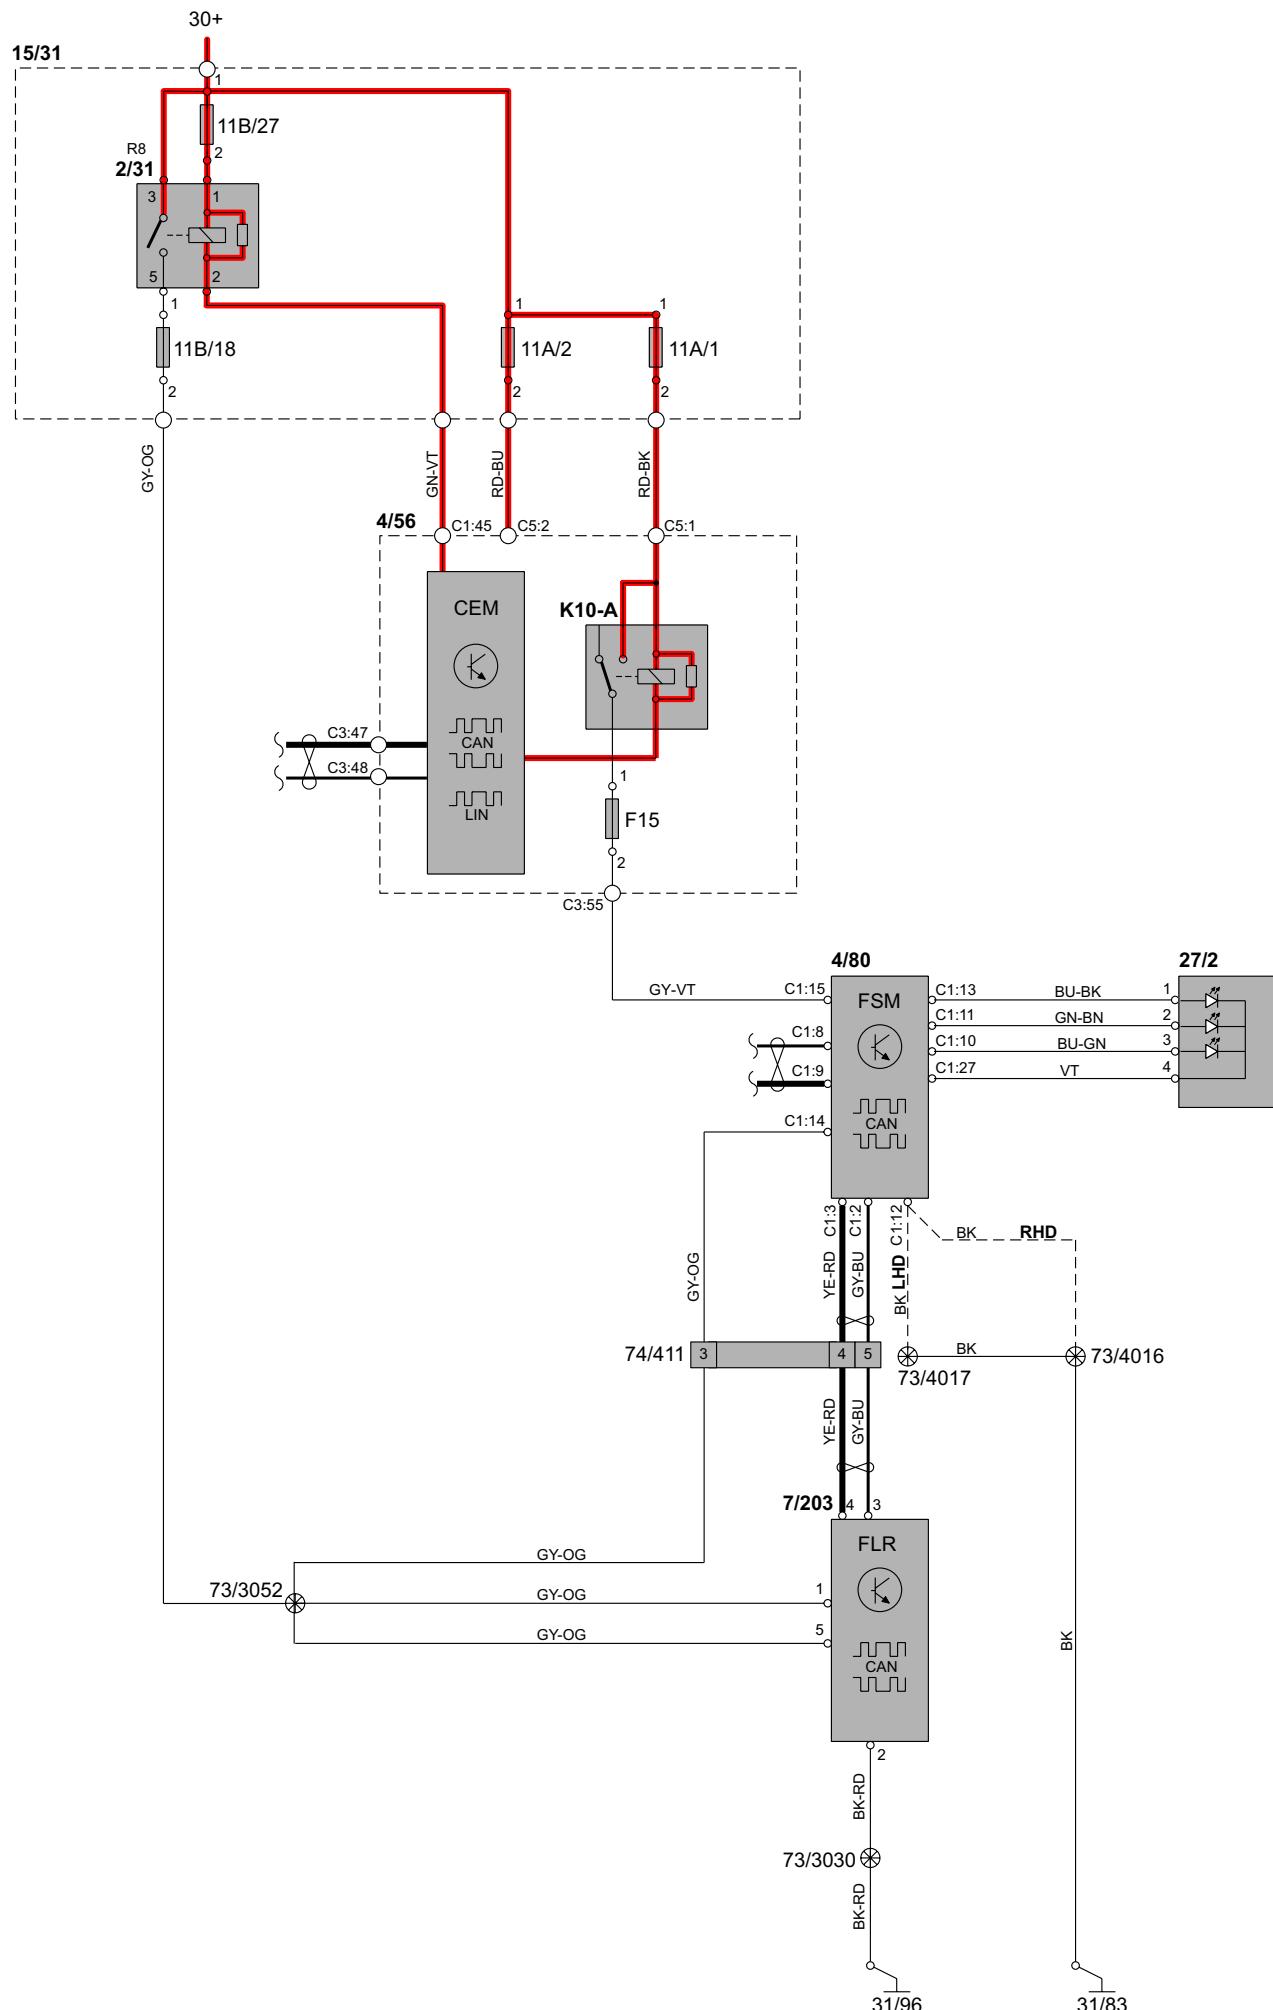


Group 36 Additional electrical equipment

Tire pressure warning (TPMS)

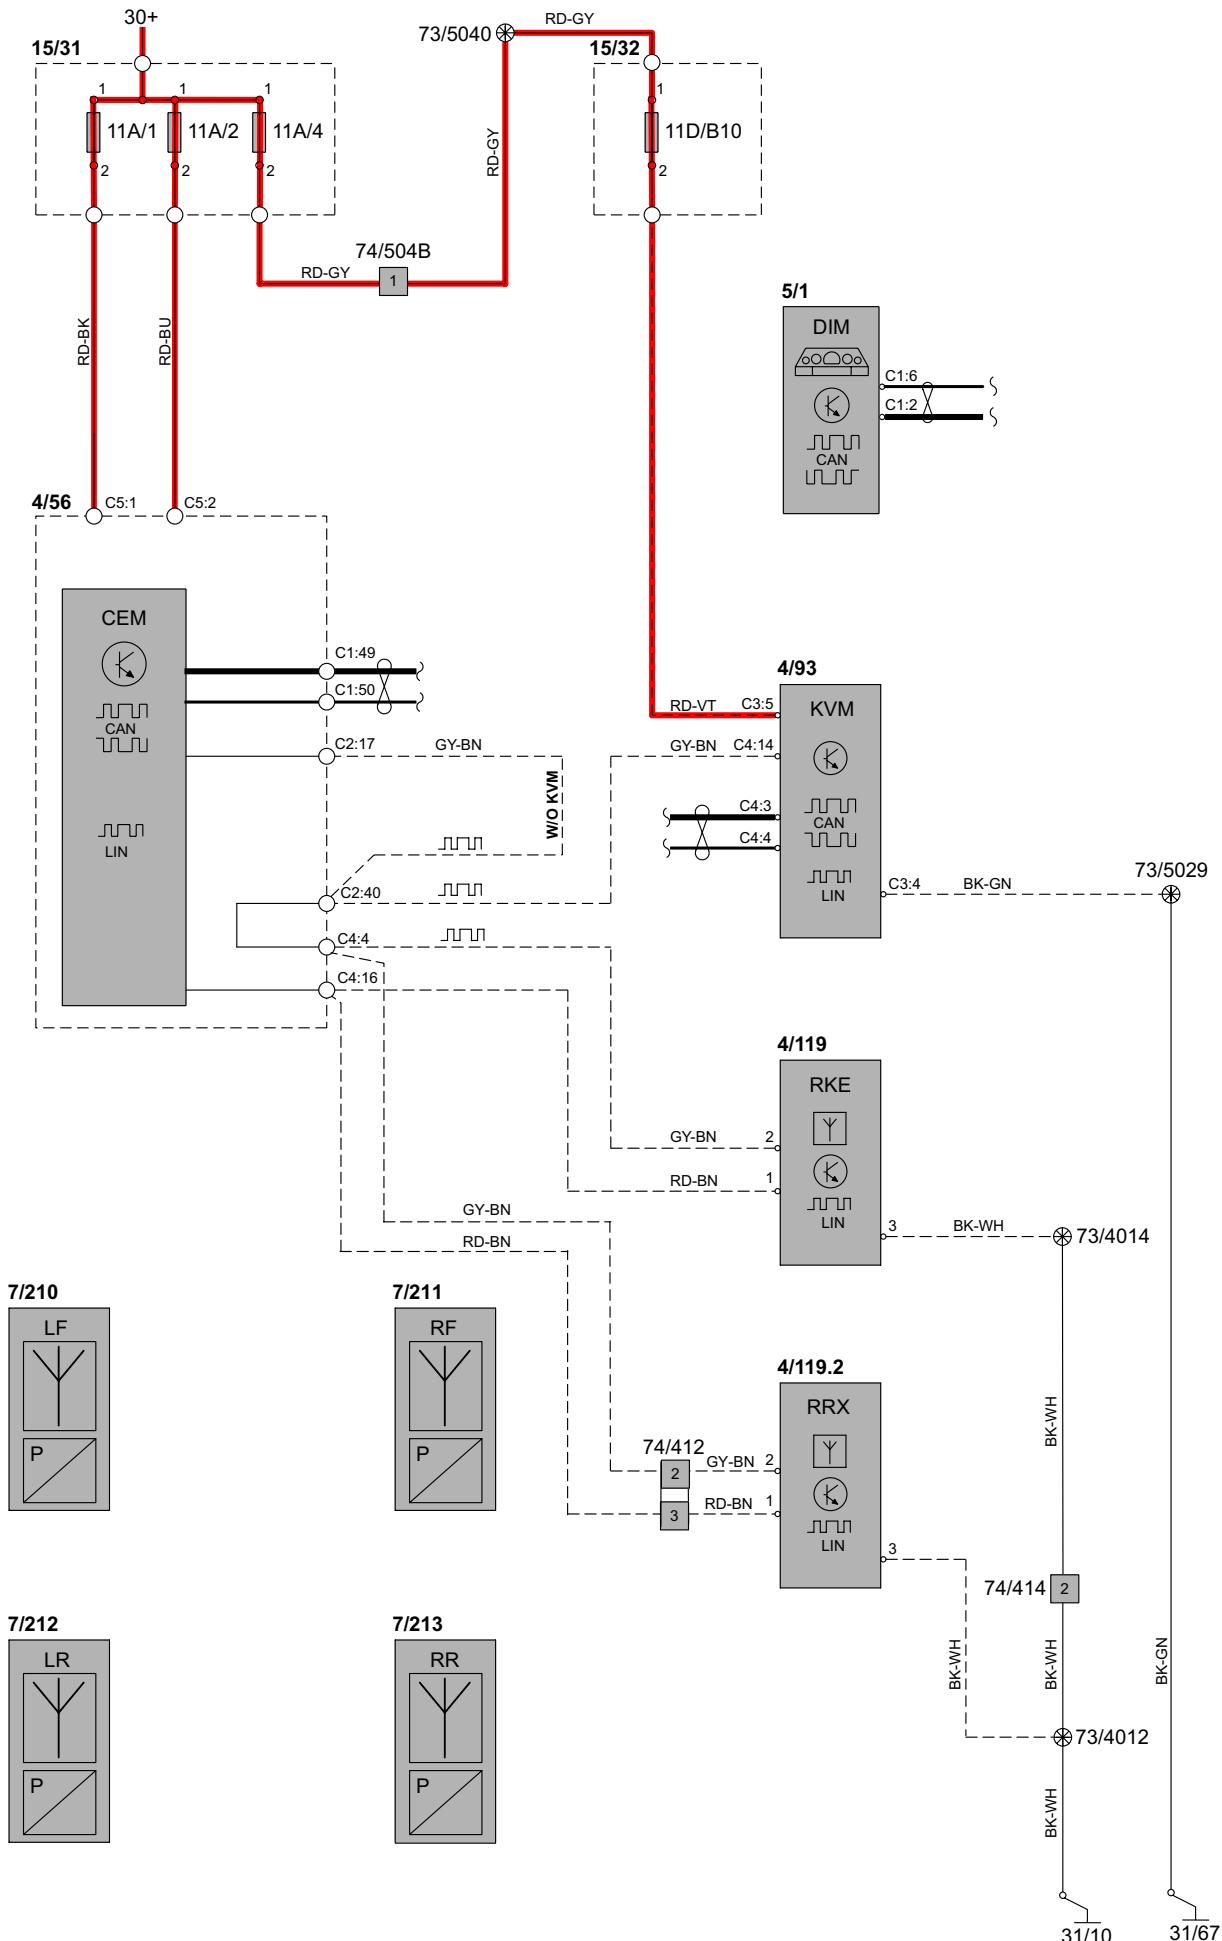


Group 37 Wiring and fuses

Diagnostics system

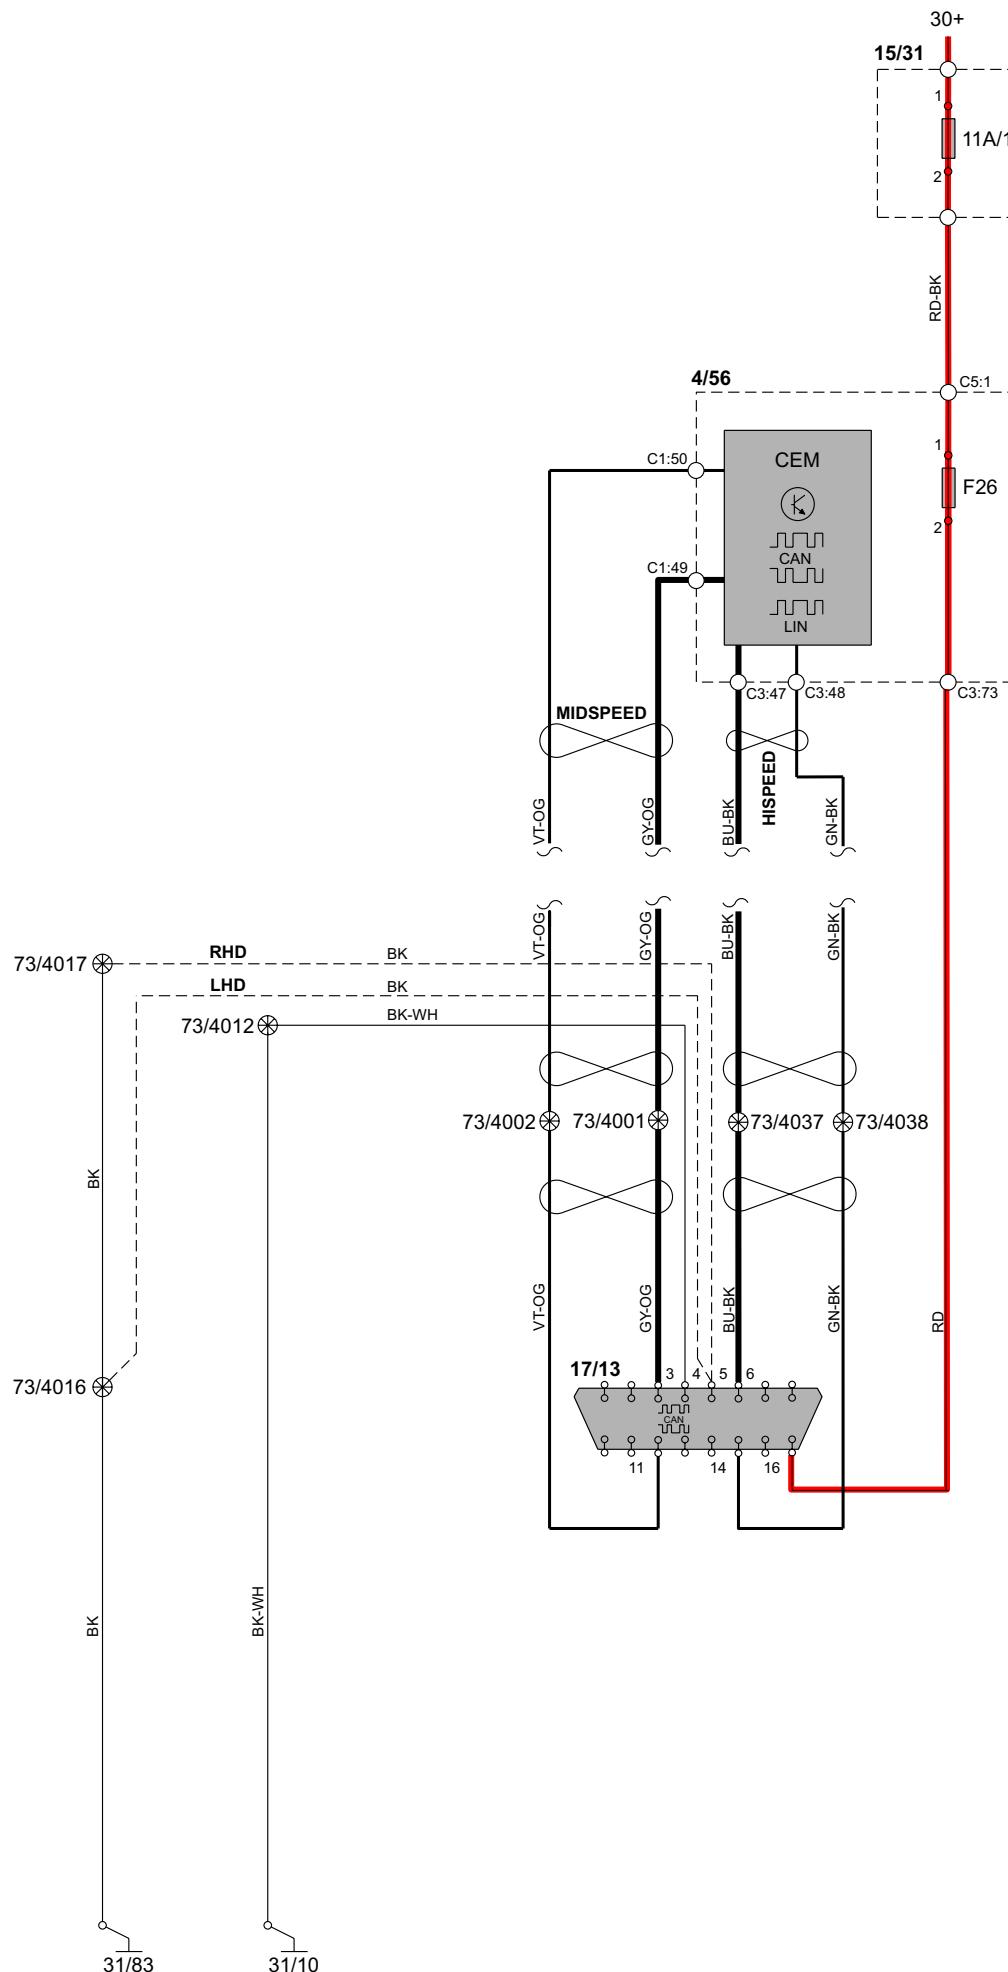


Group 37 Wiring and fuses

12V outlet

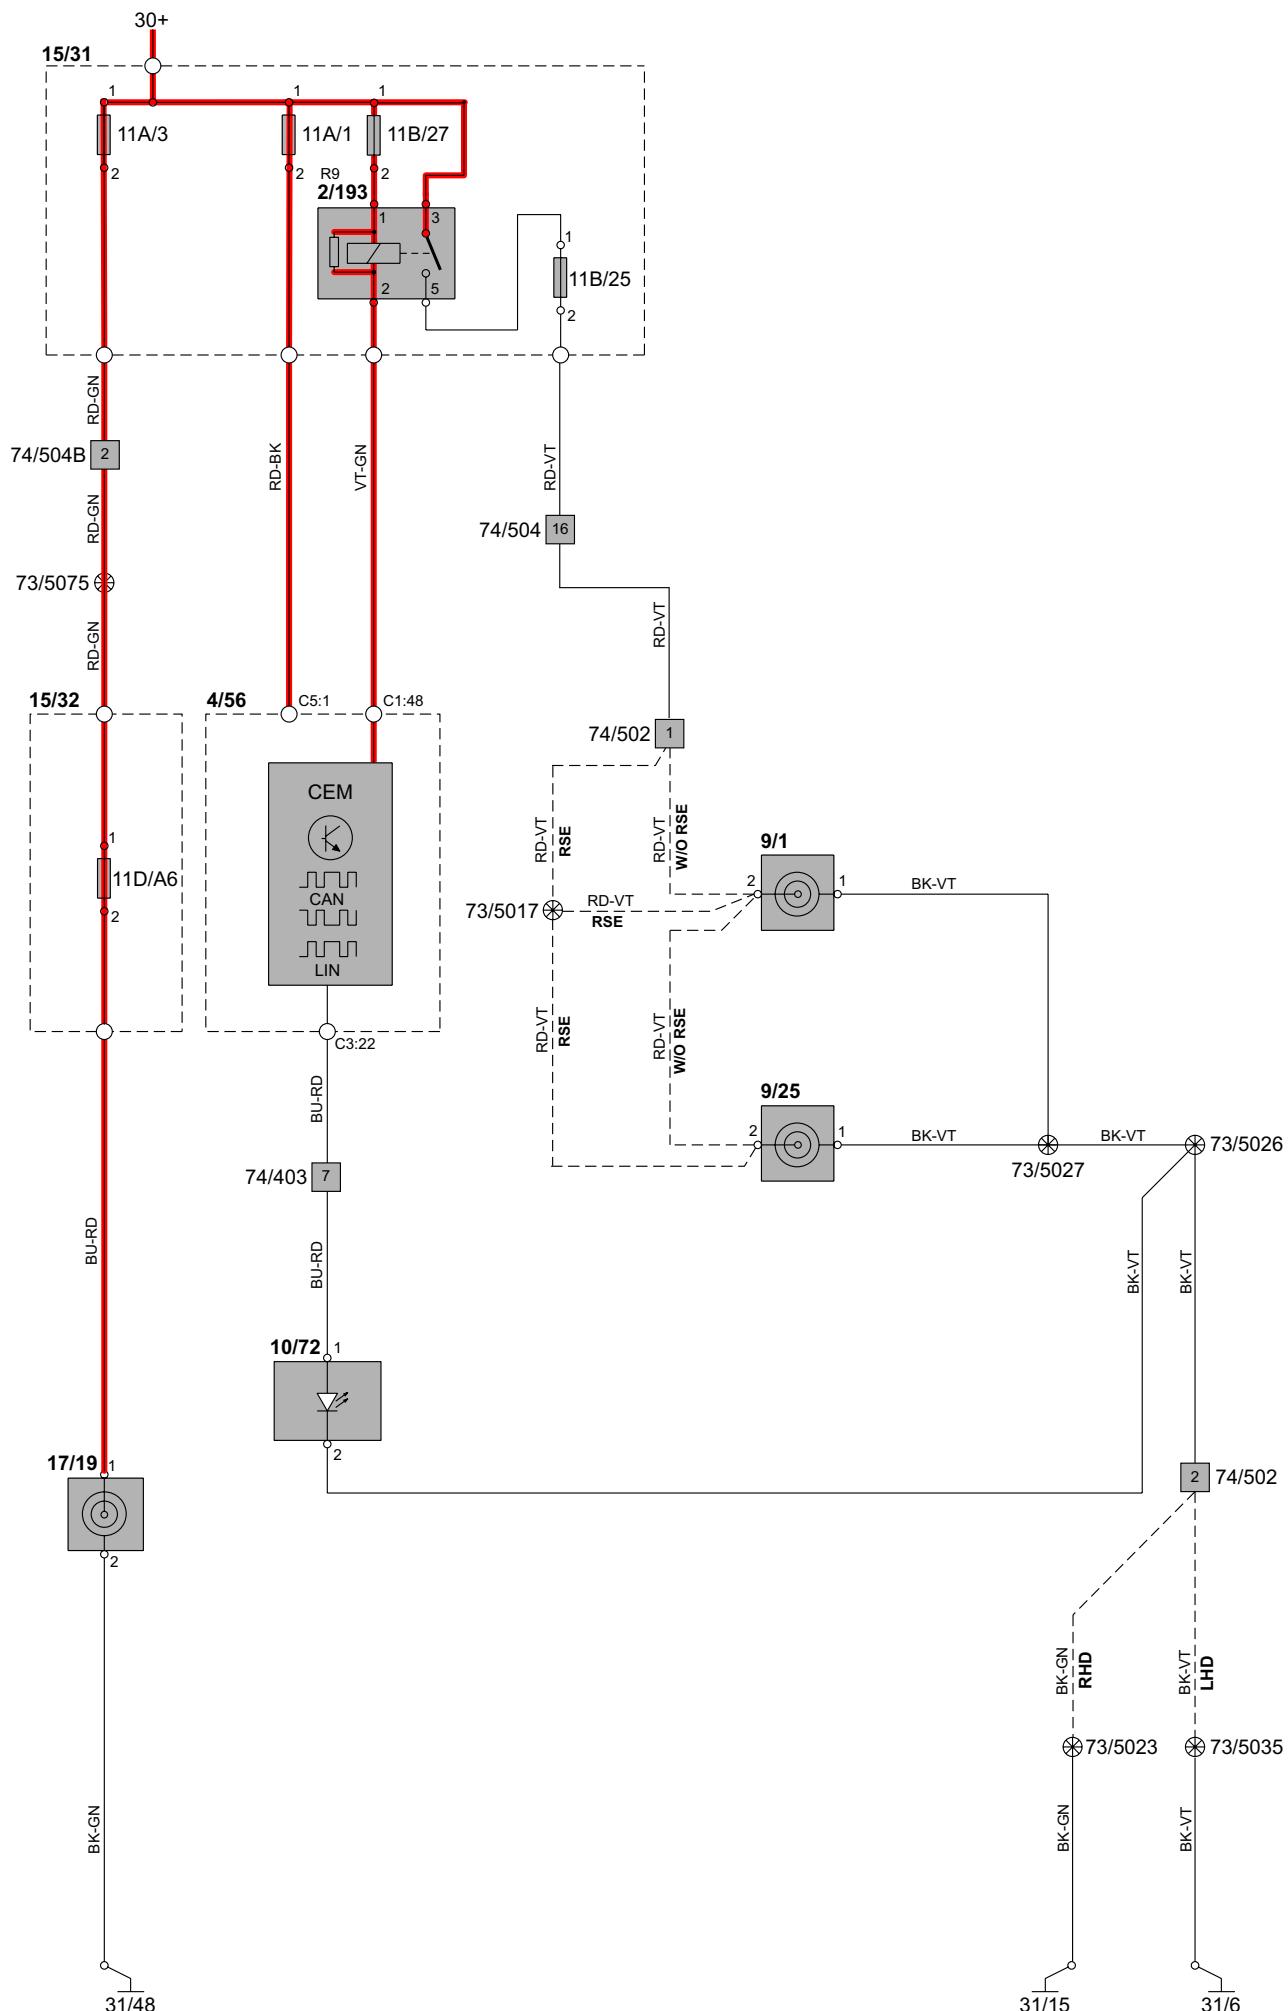


Group 37 Wiring and fuses, Accessories

Tow hitch cable harness, 4-pin V70

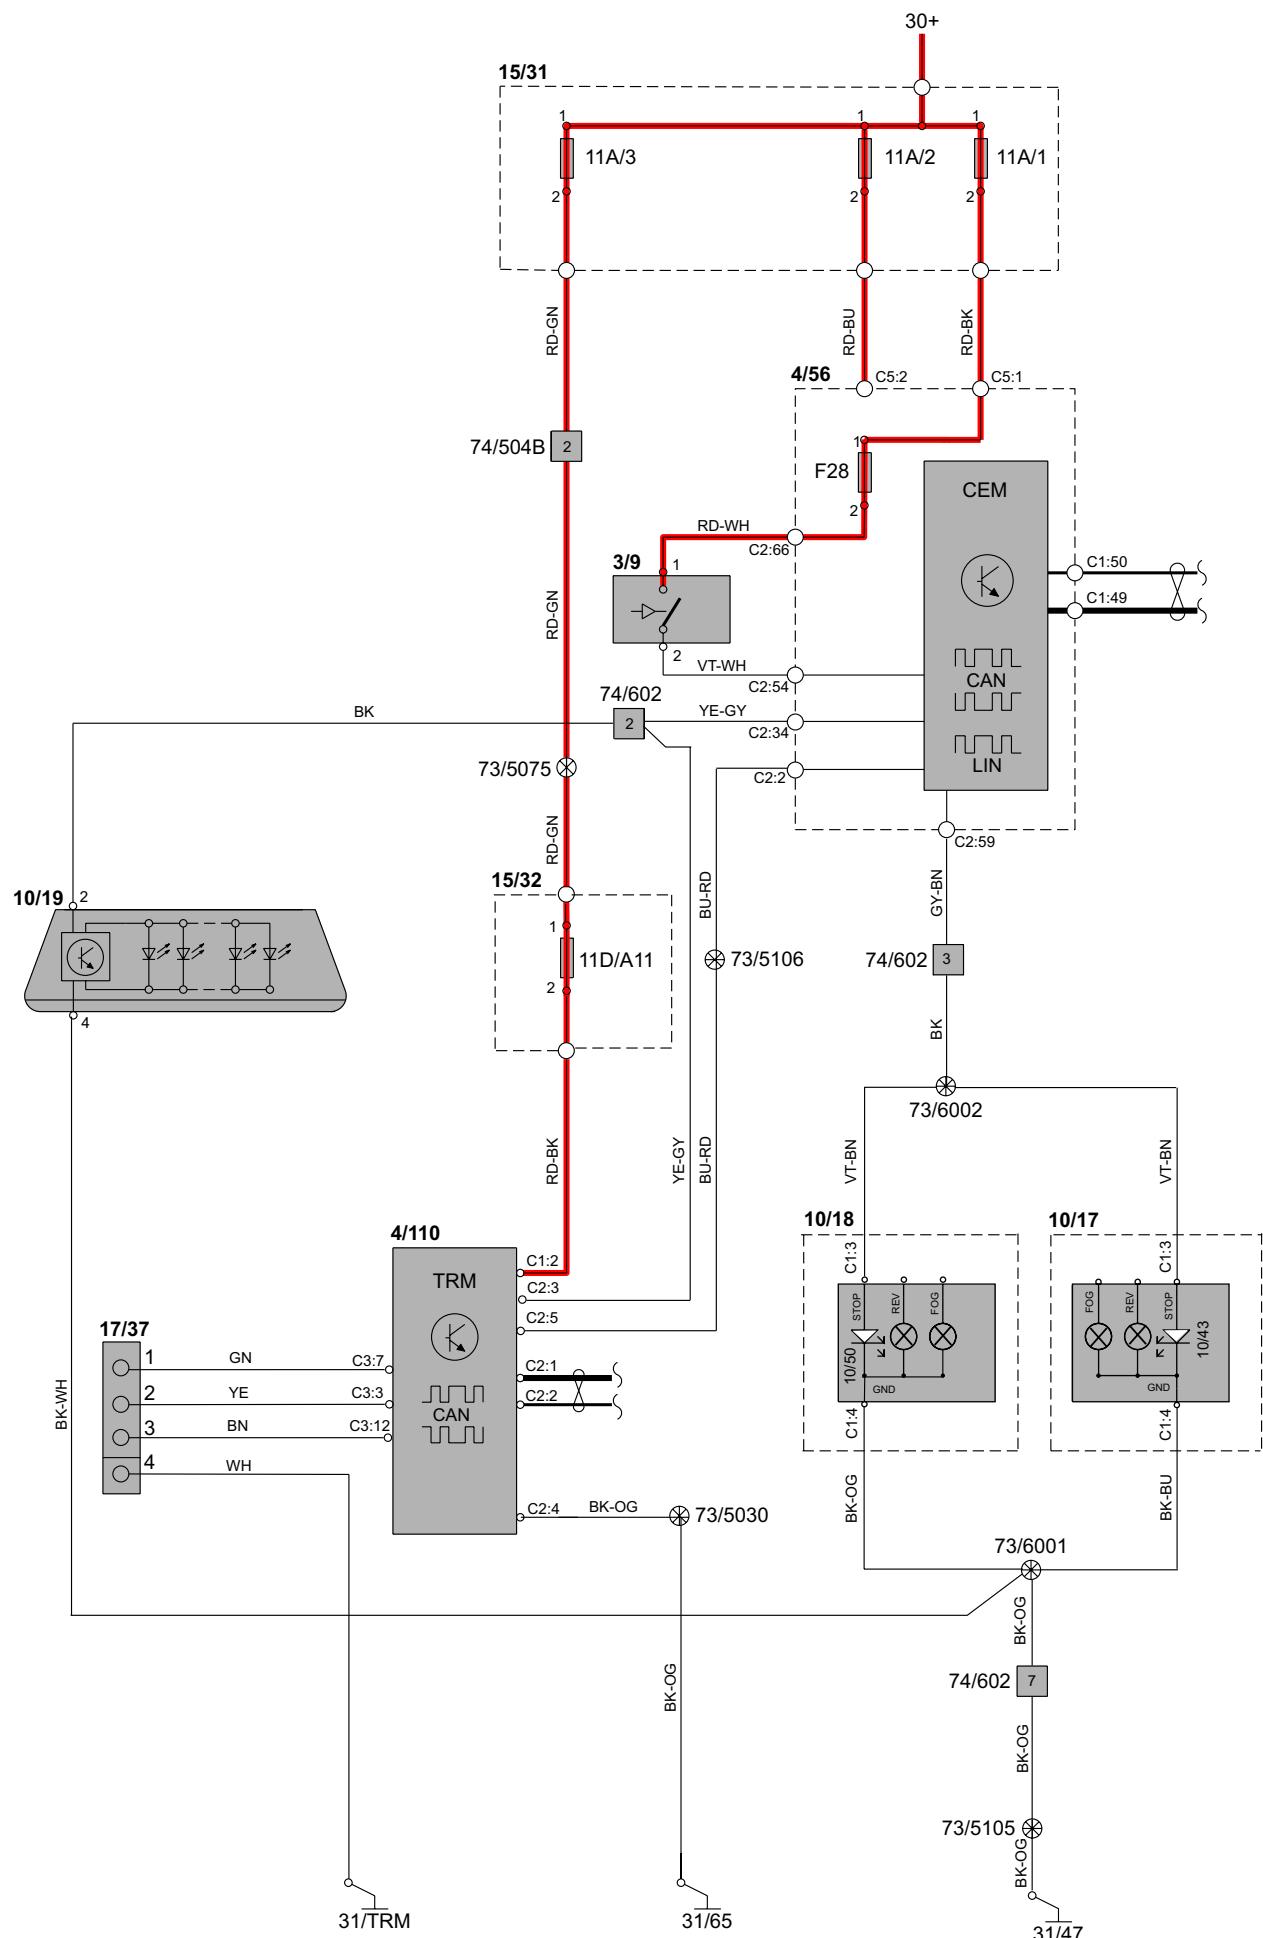


Group 37 Wiring and fuses, Accessories

Tow hitch cable harness, 4-pin S80

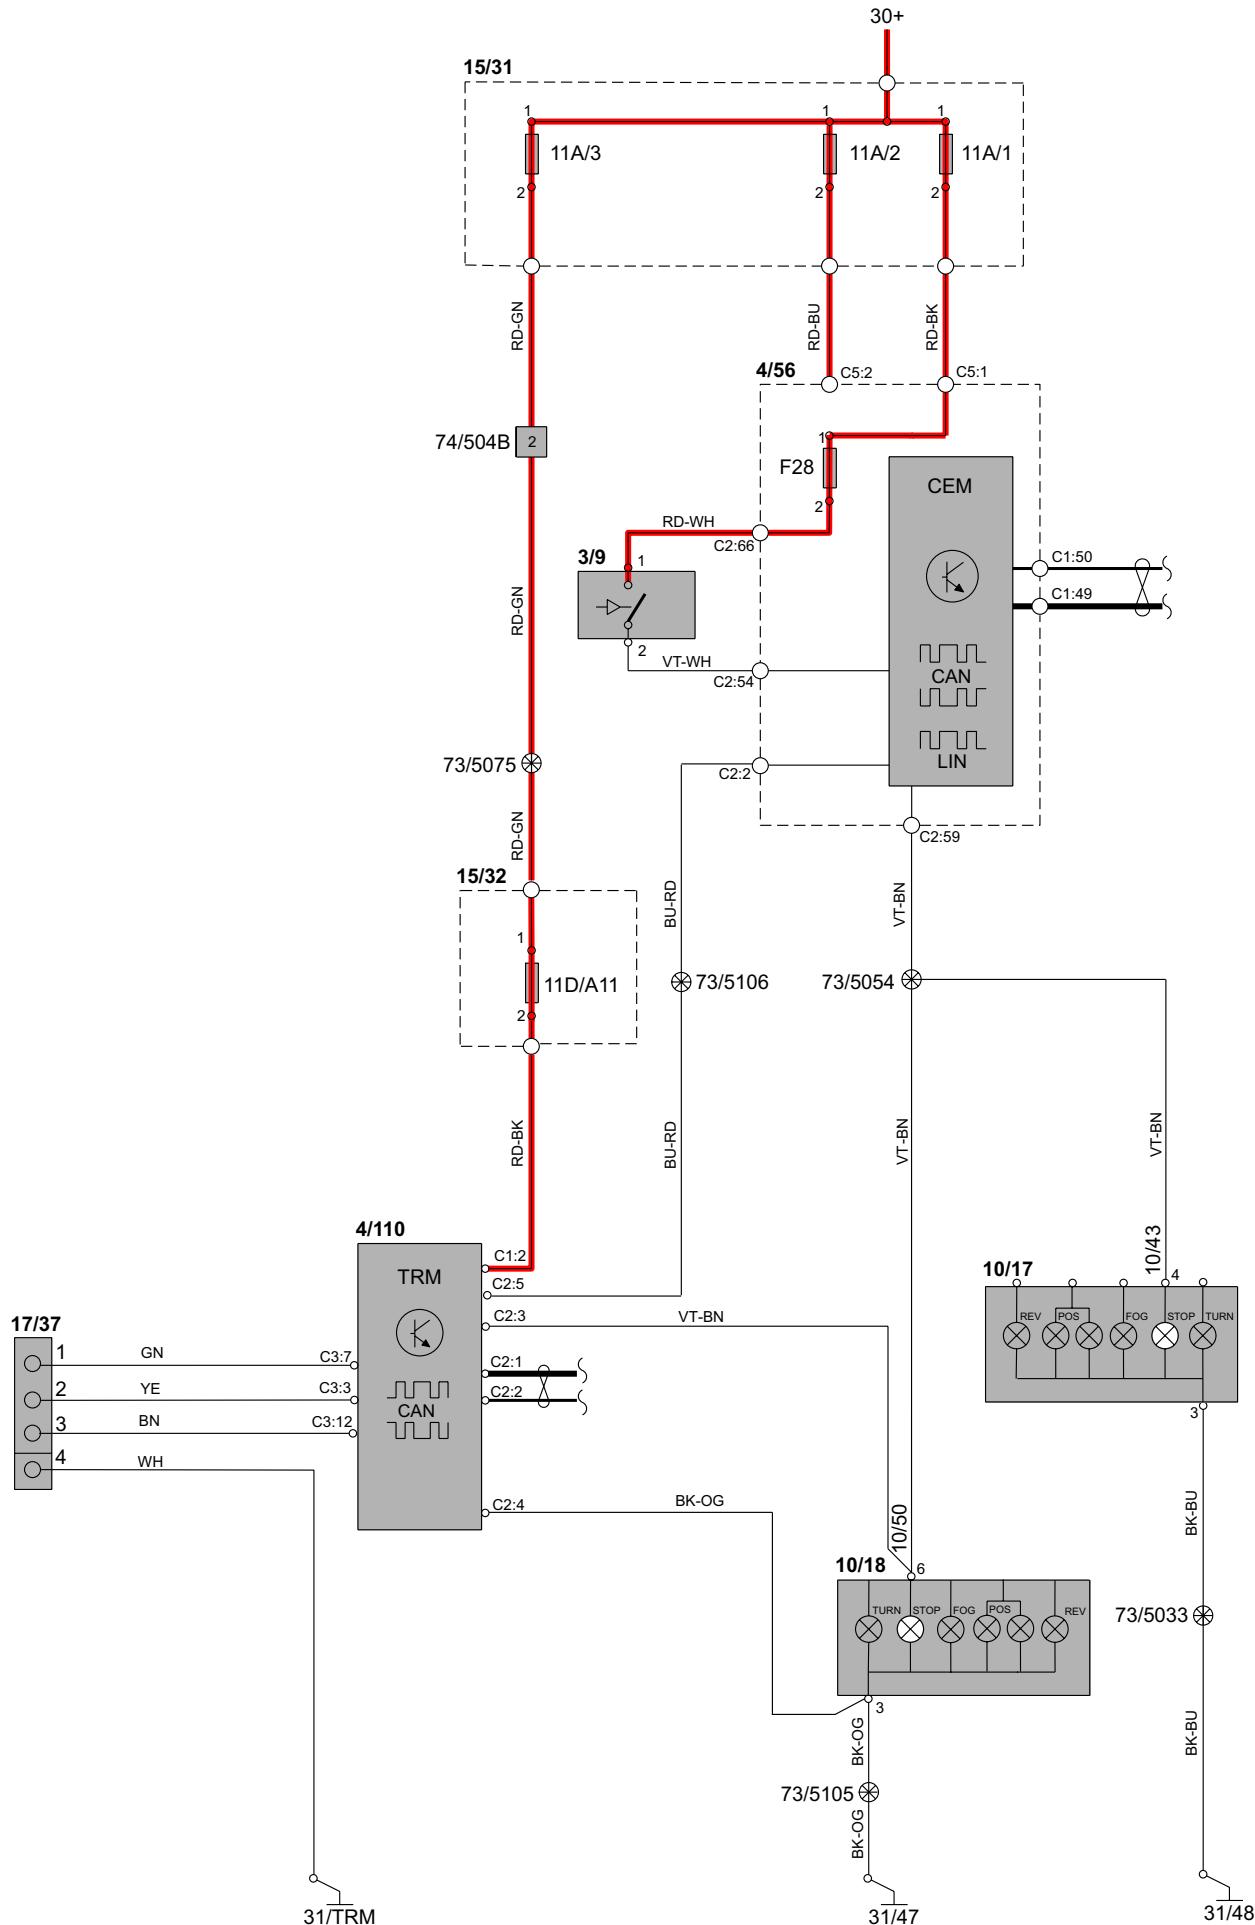


Group 37 Wiring and fuses, Accessories

Tow hitch cable harness, 7-pin V70

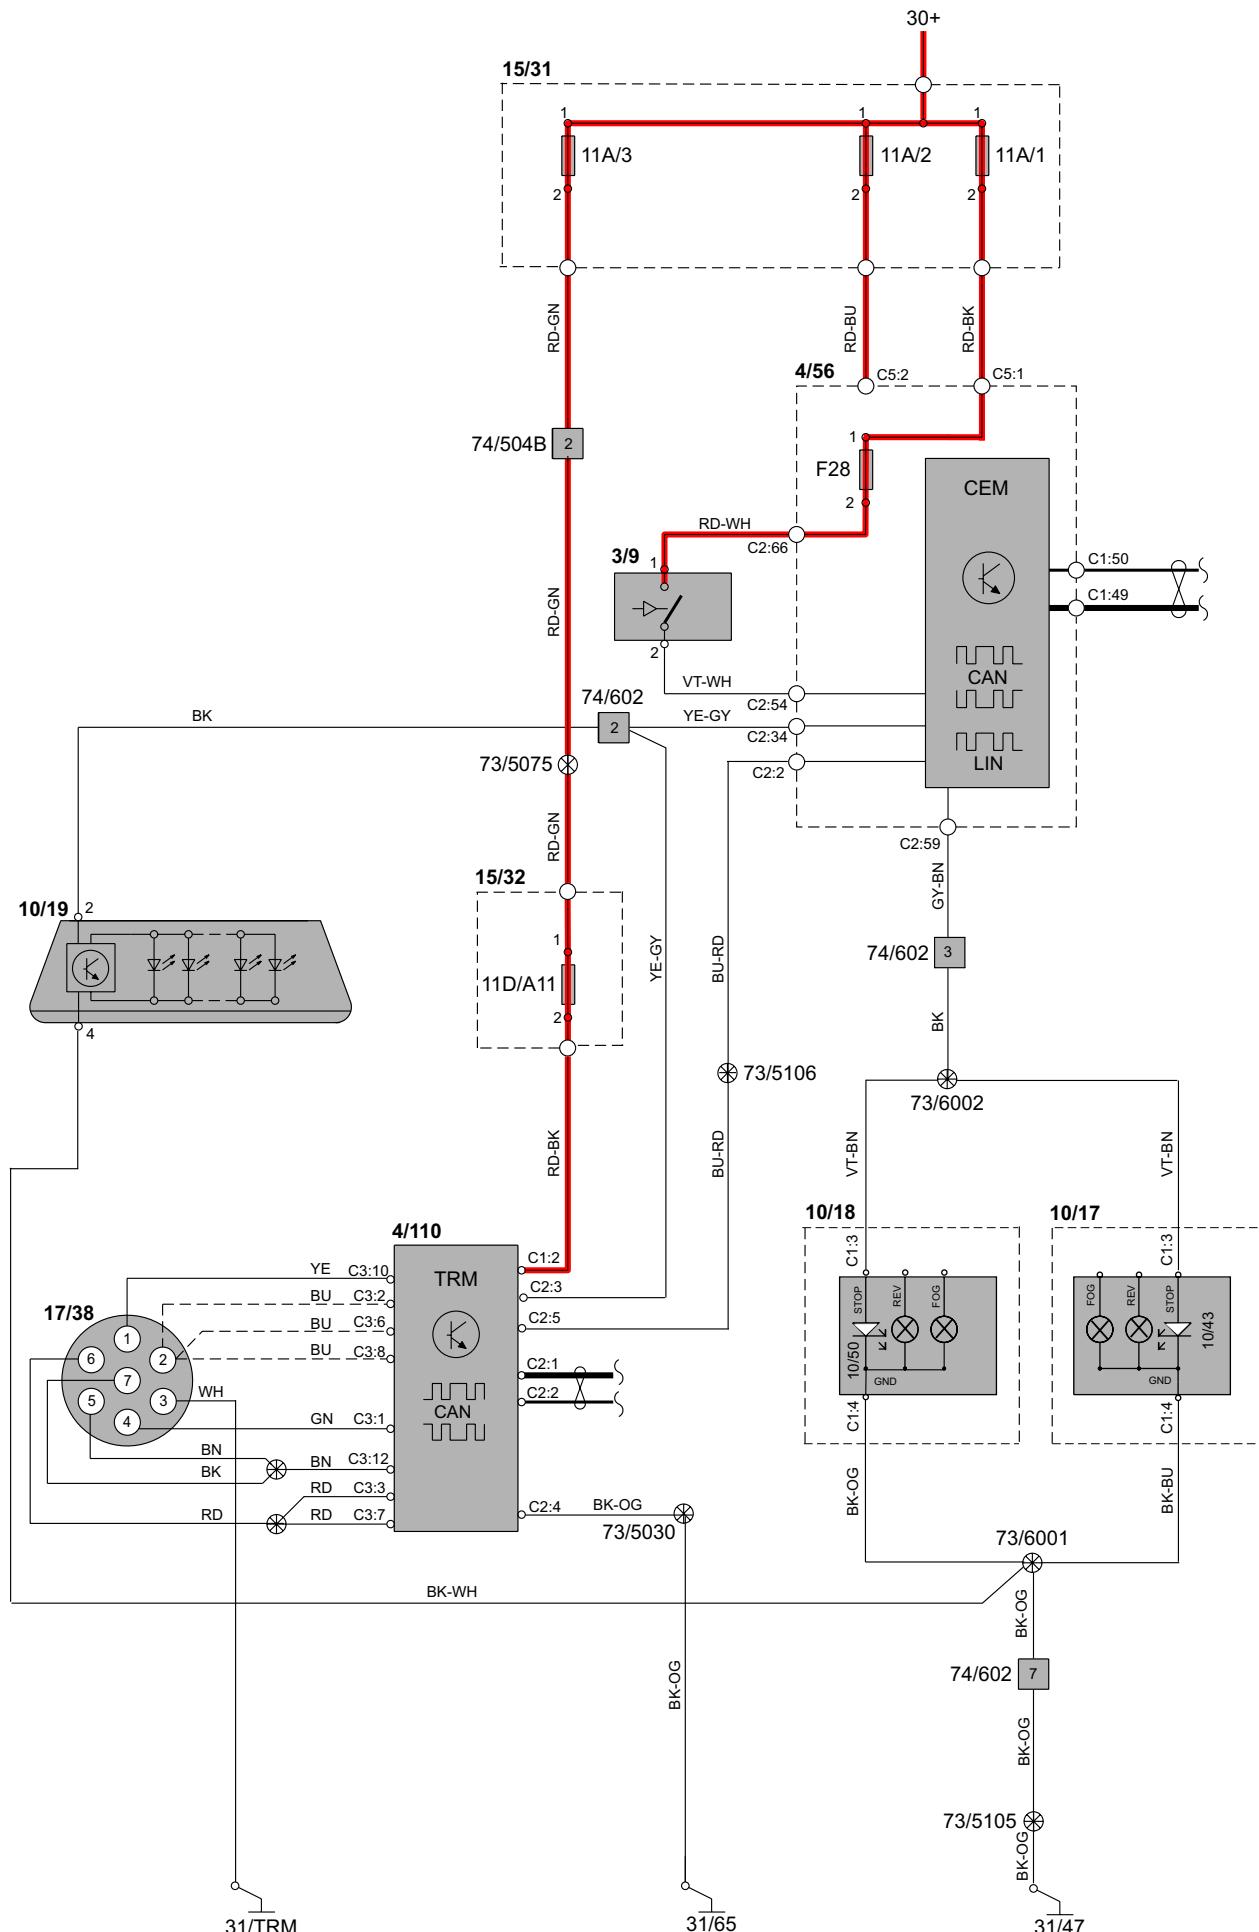


**Group 37 Wiring and fuses, Accessories
Tow hitch cable harness, 7-pin S80**

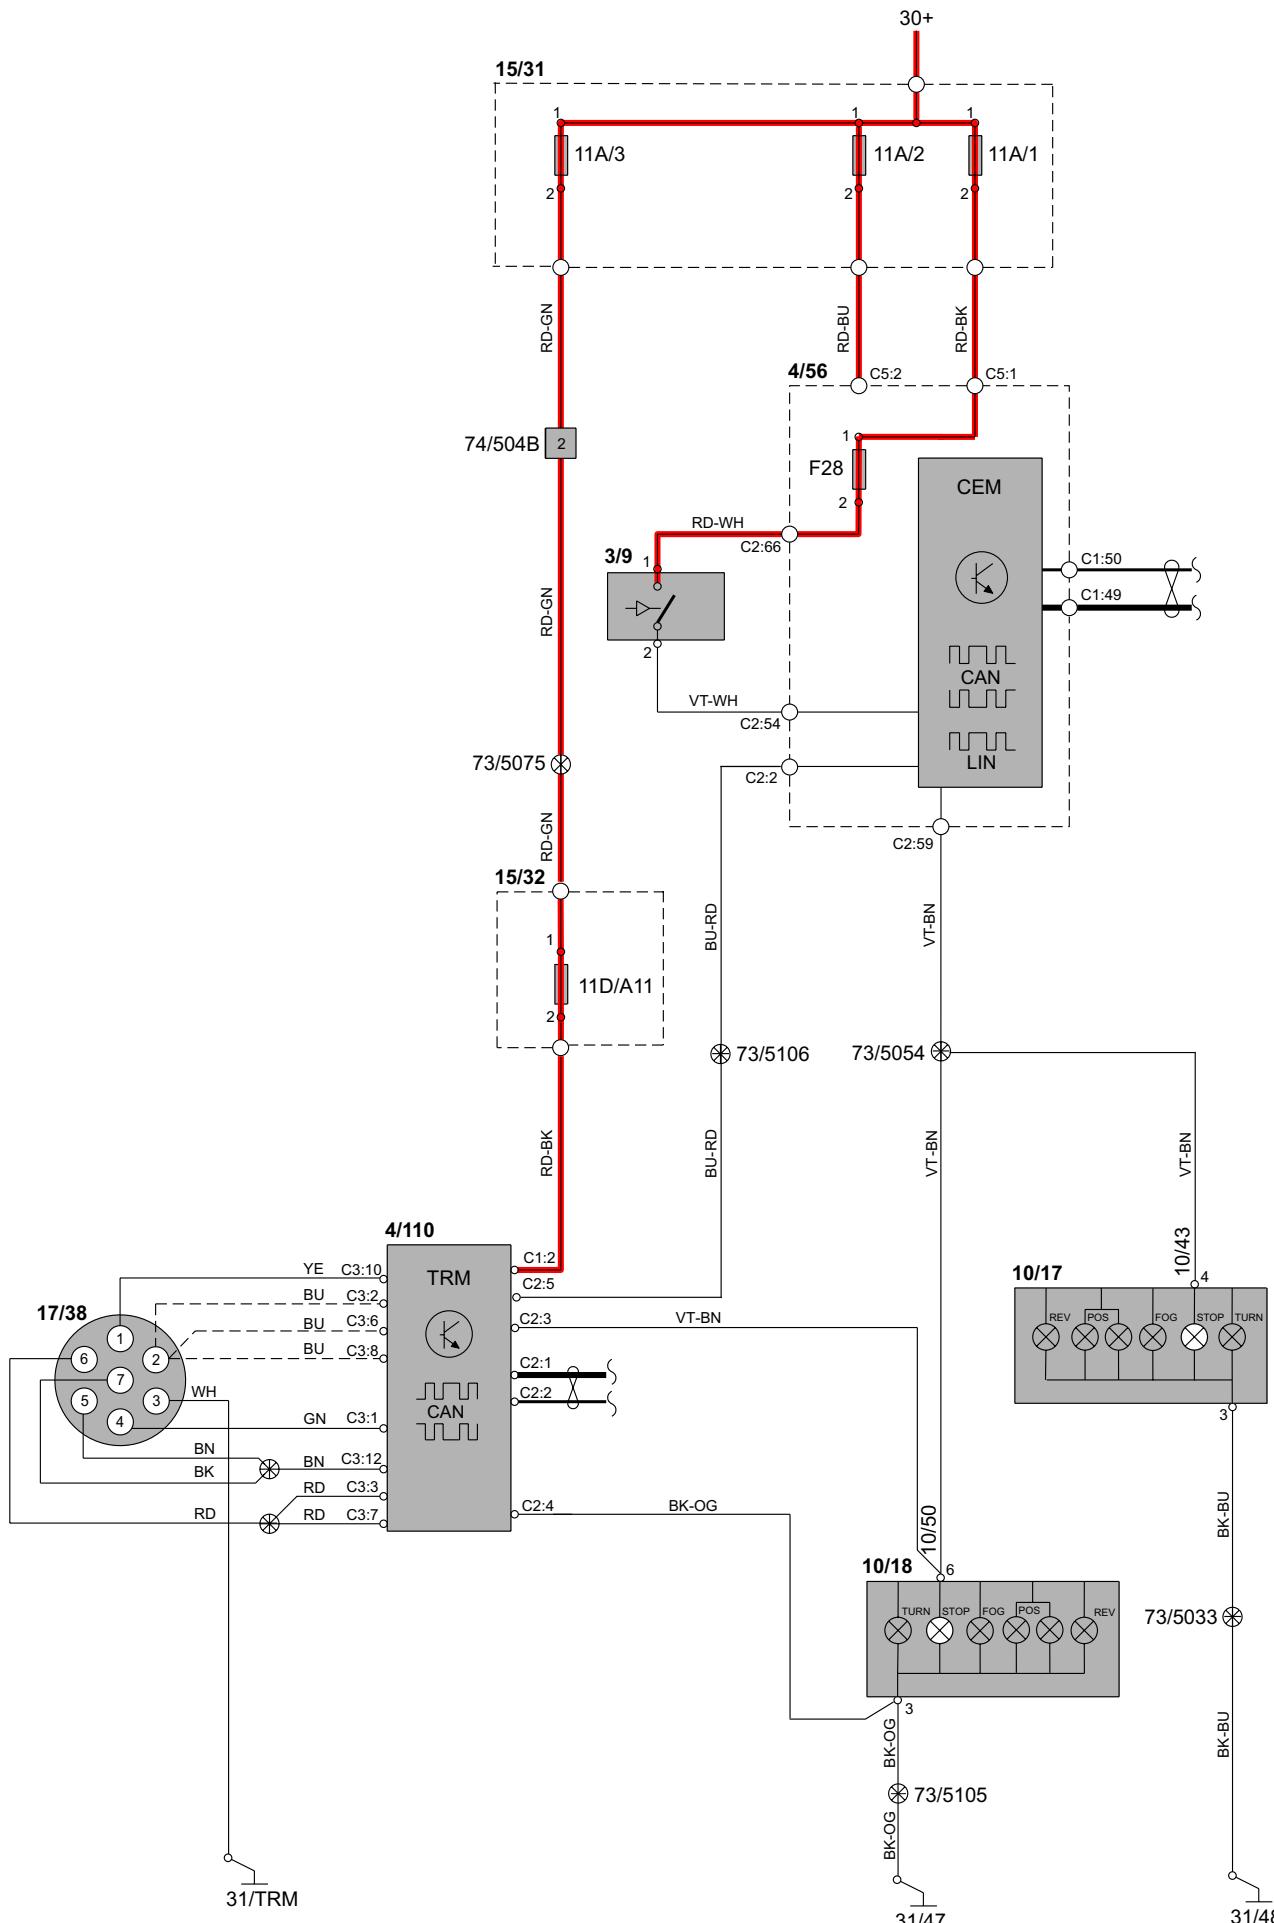


Group 37 Wiring and fuses, Accessories

Tow hitch cable harness, 13-pin V70

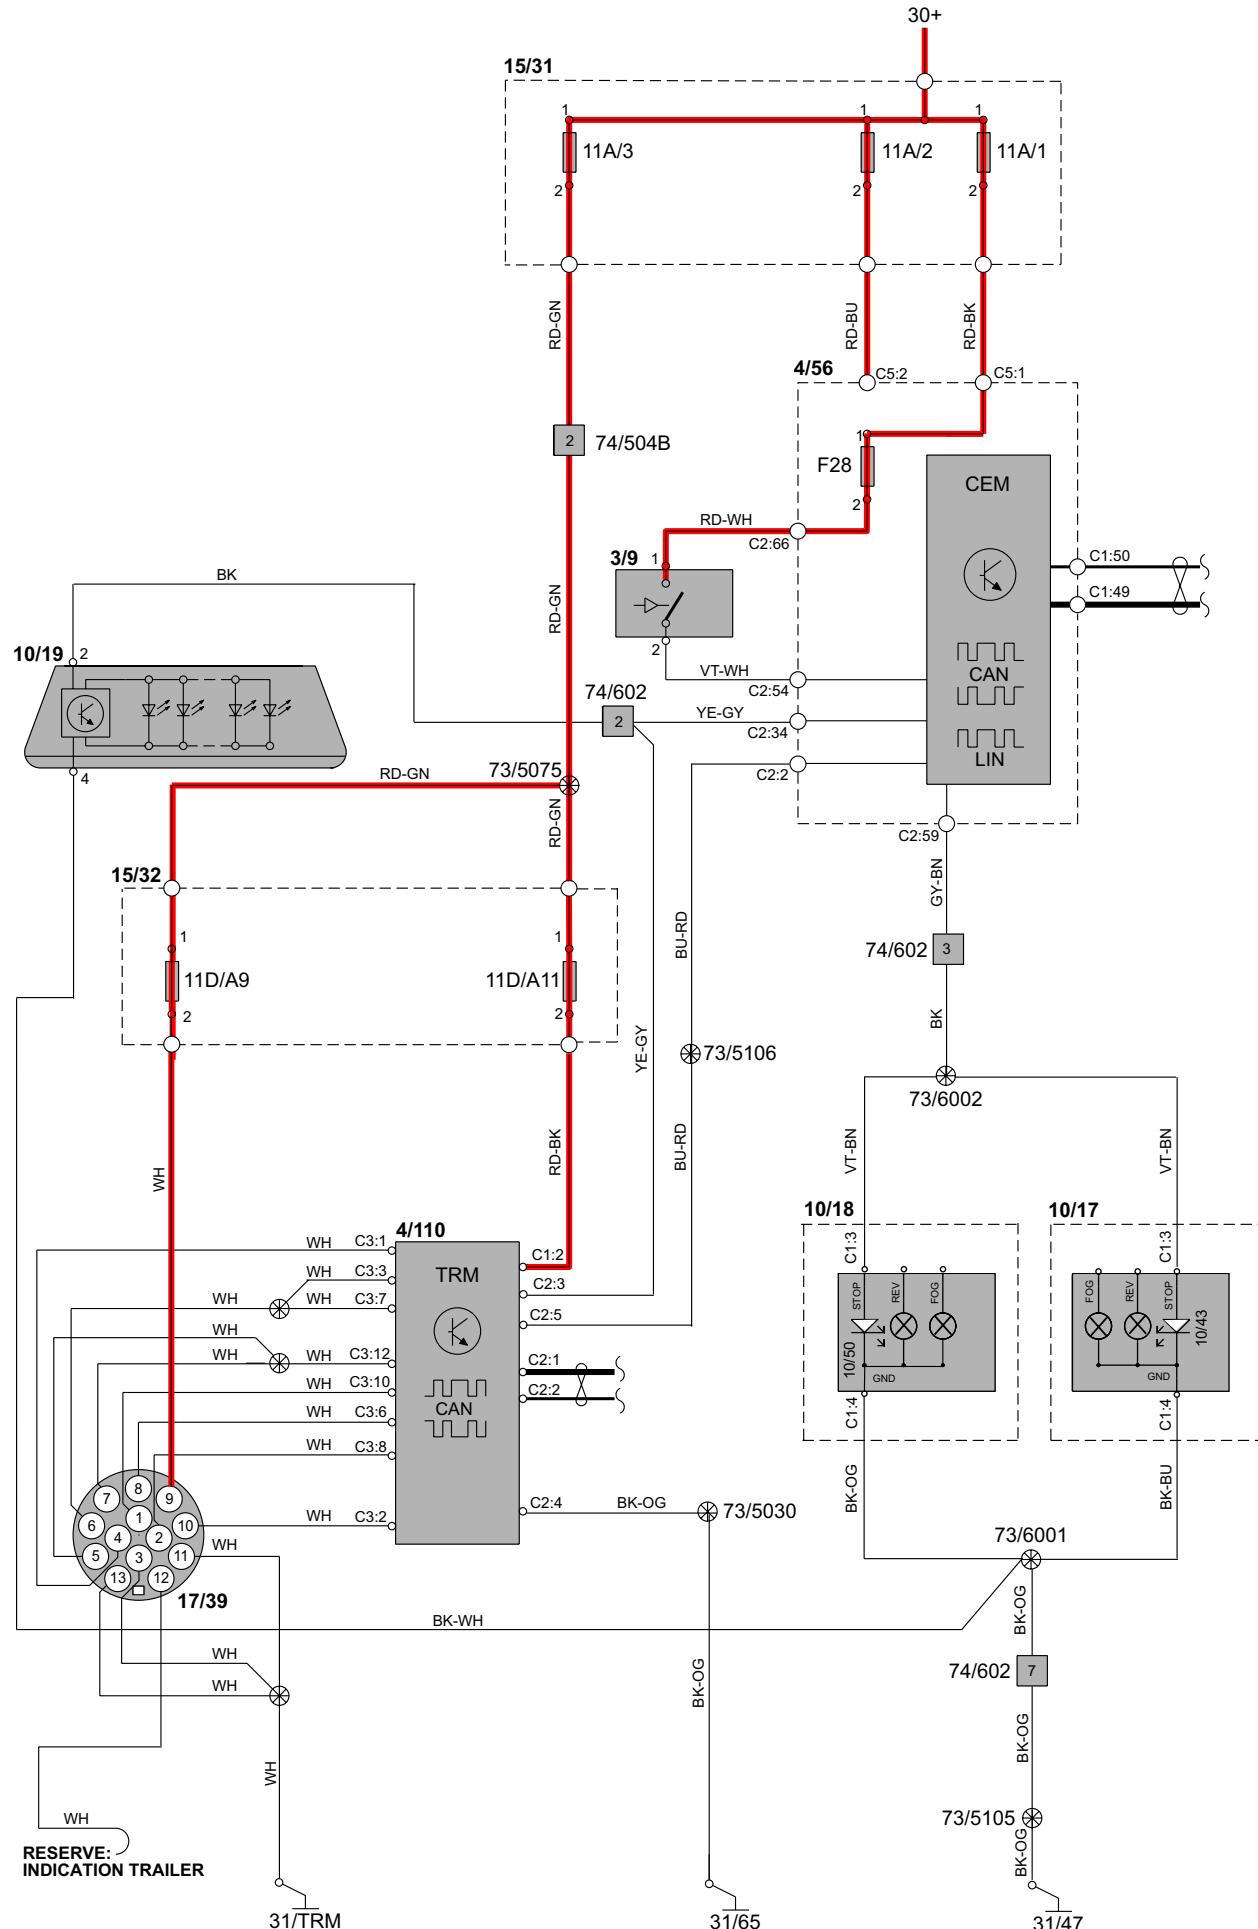


Group 37 Wiring and fuses, Accessories

Tow hitch cable harness, 13-pin S80

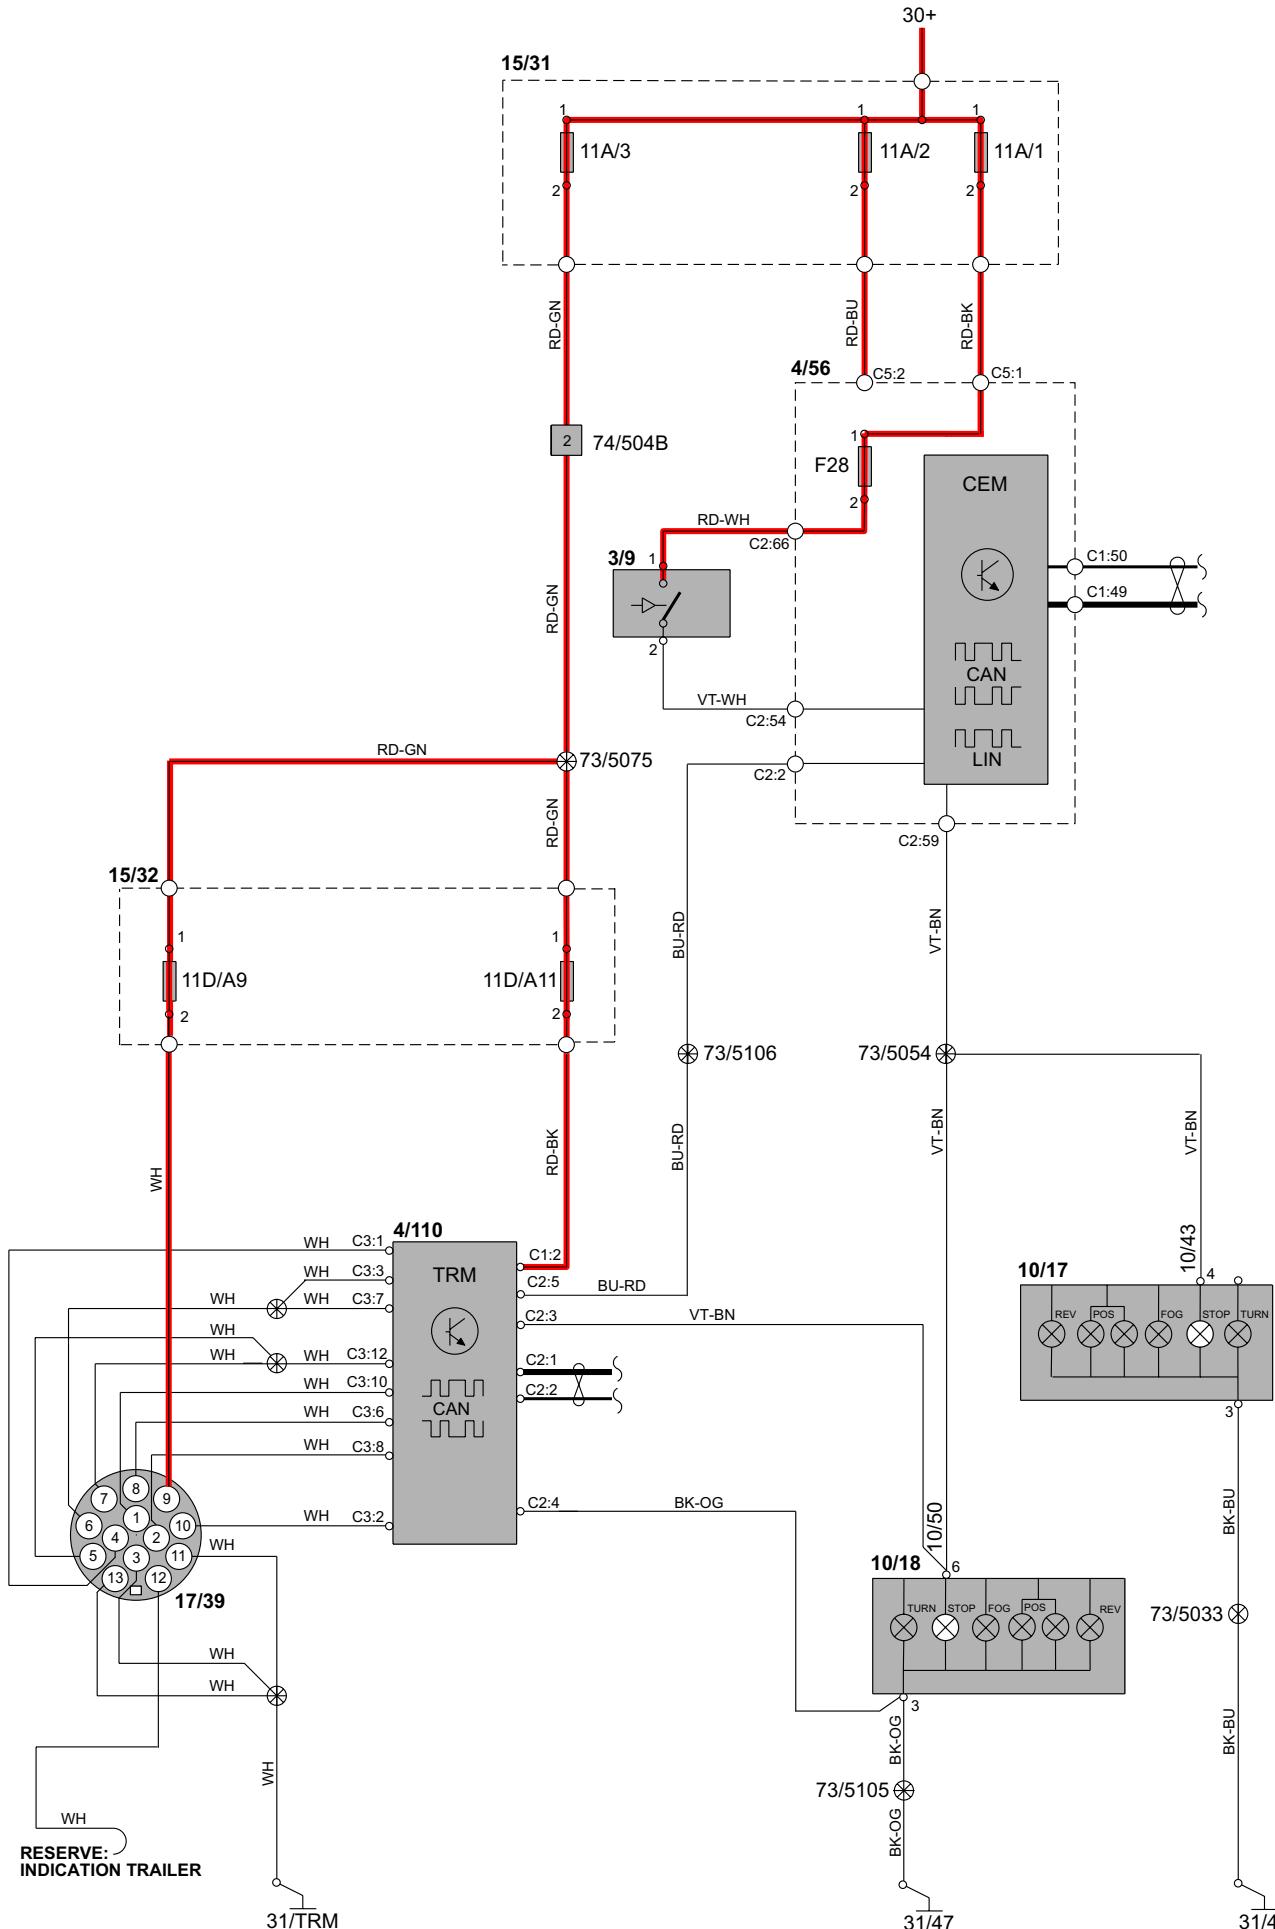


Group 37 Wiring and fuses, Accessories

Accessory USB unit (AUU)

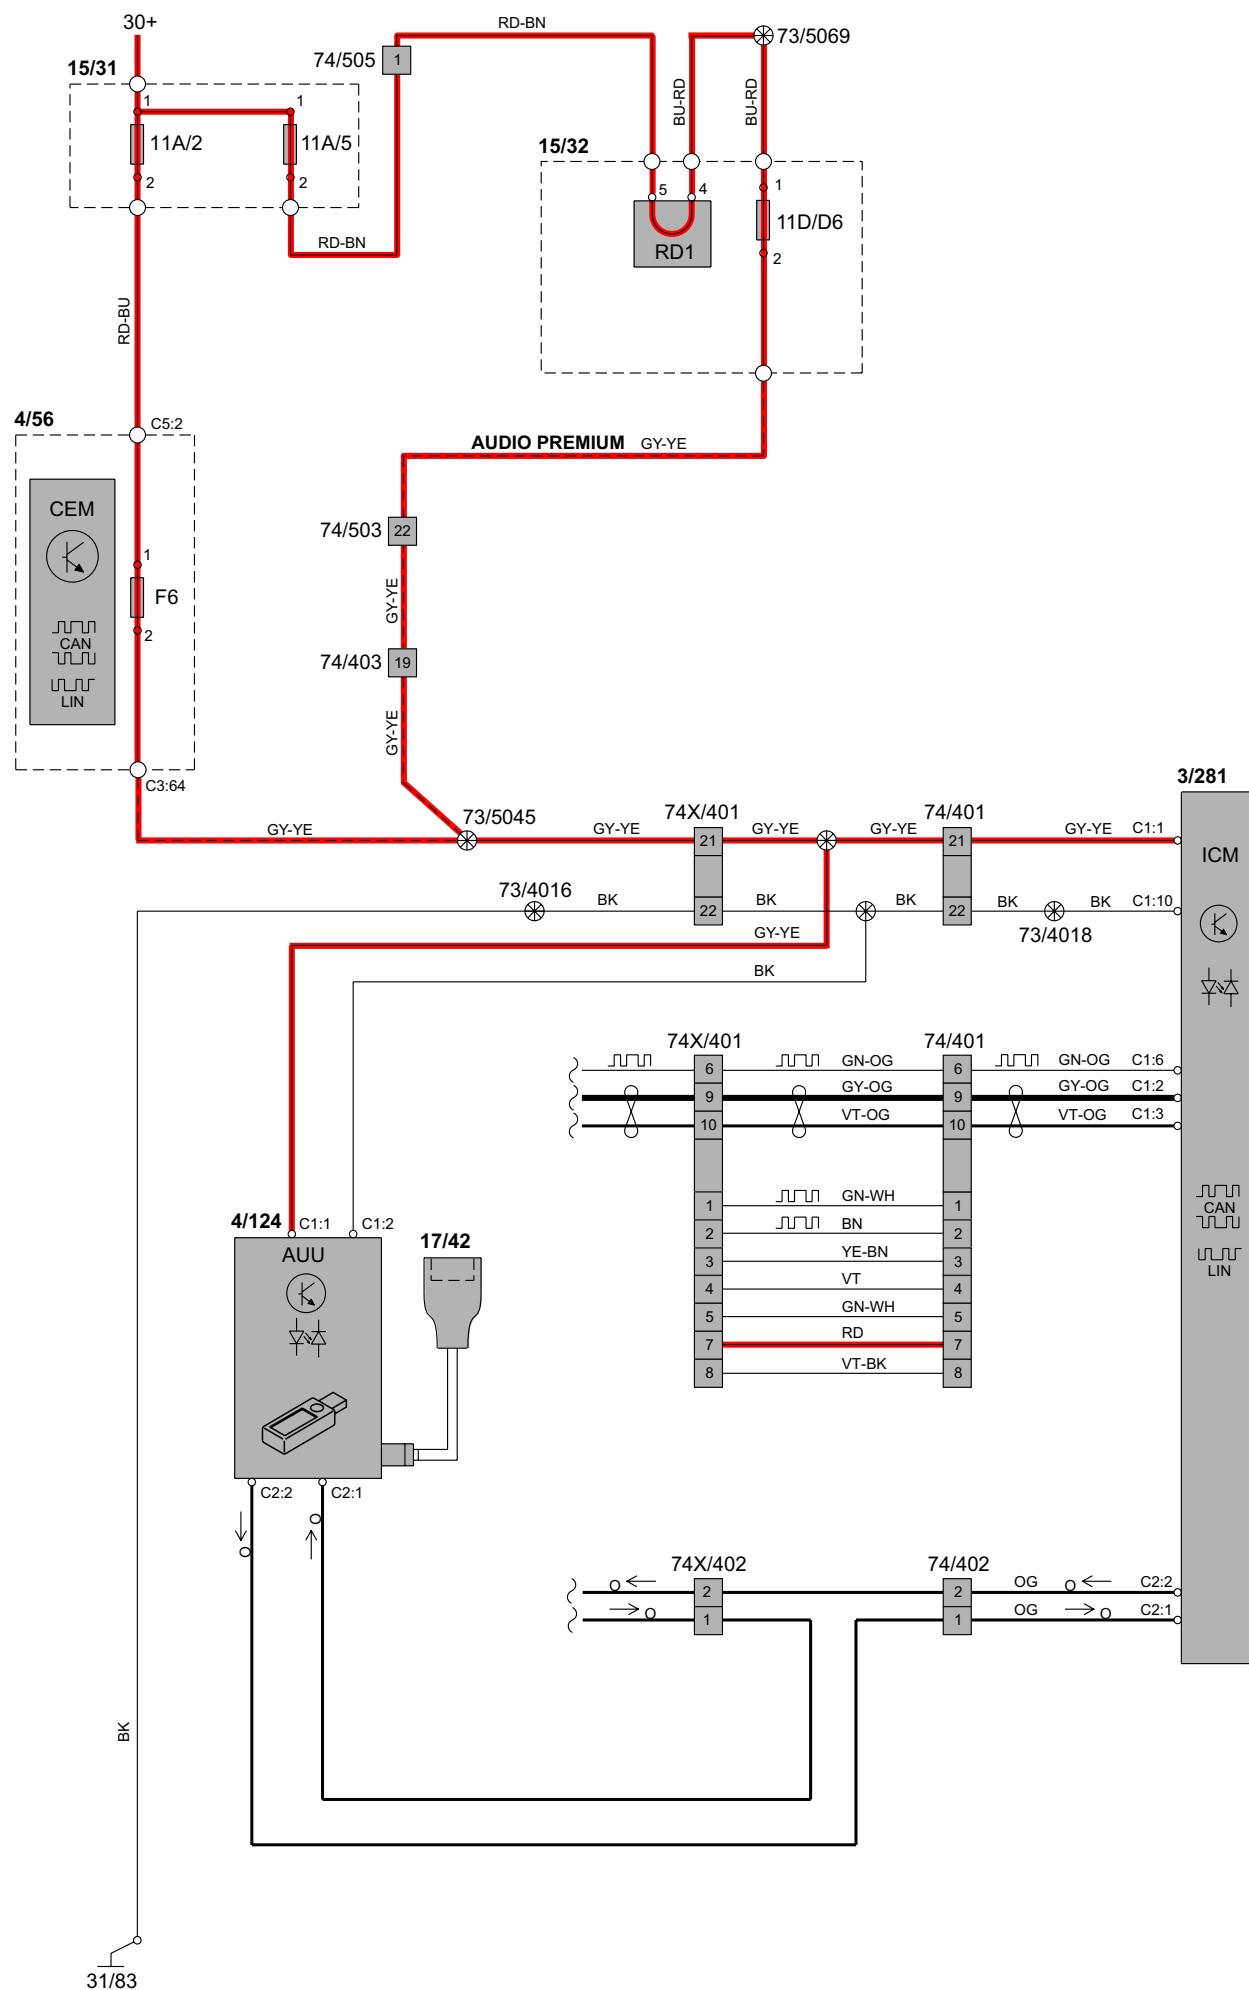


Group 38 Instruments

Seat belt reminder

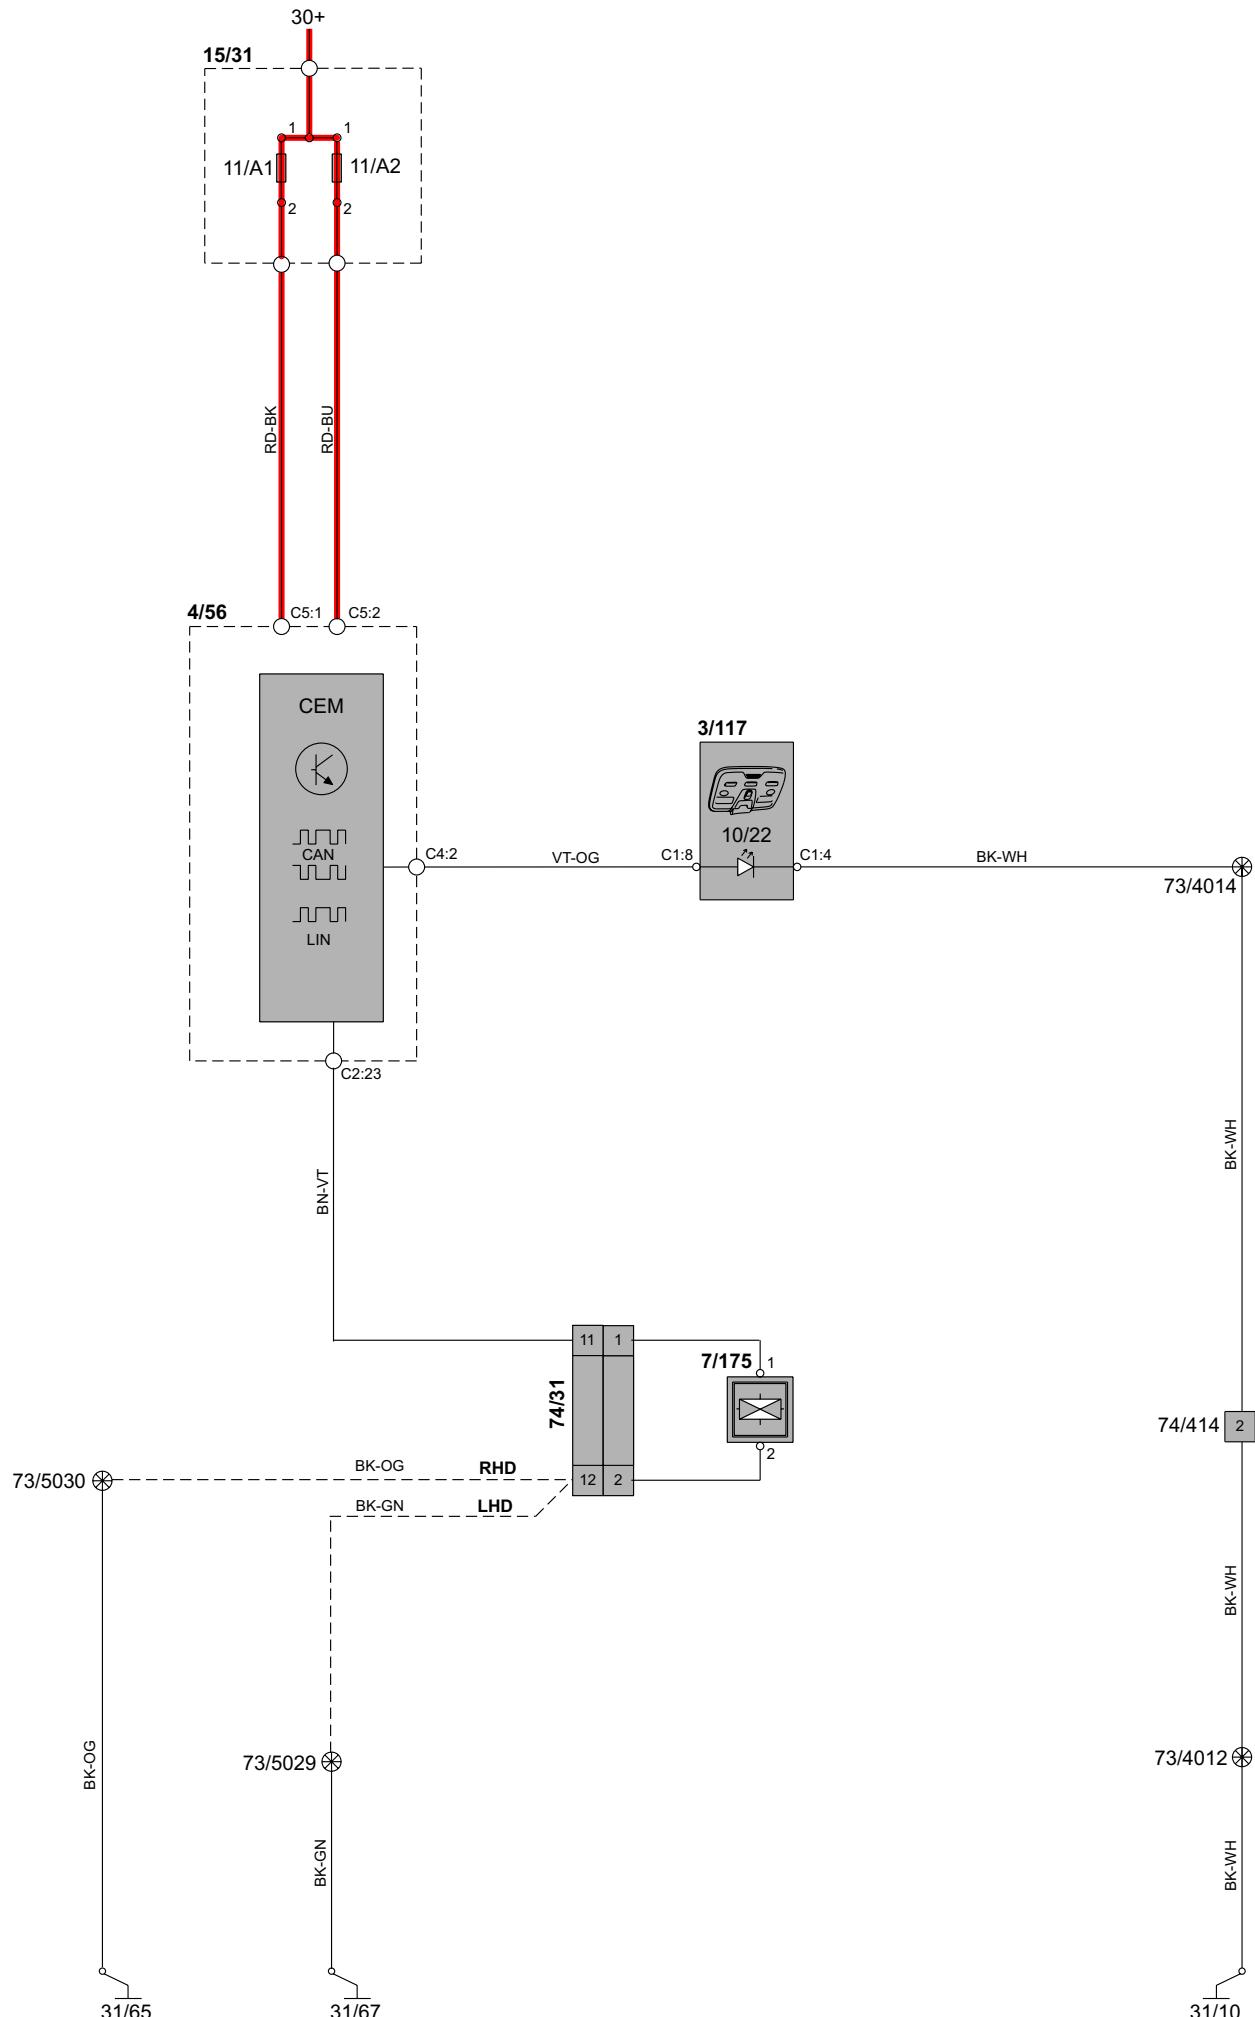


Group 38 Instruments

Driver information module

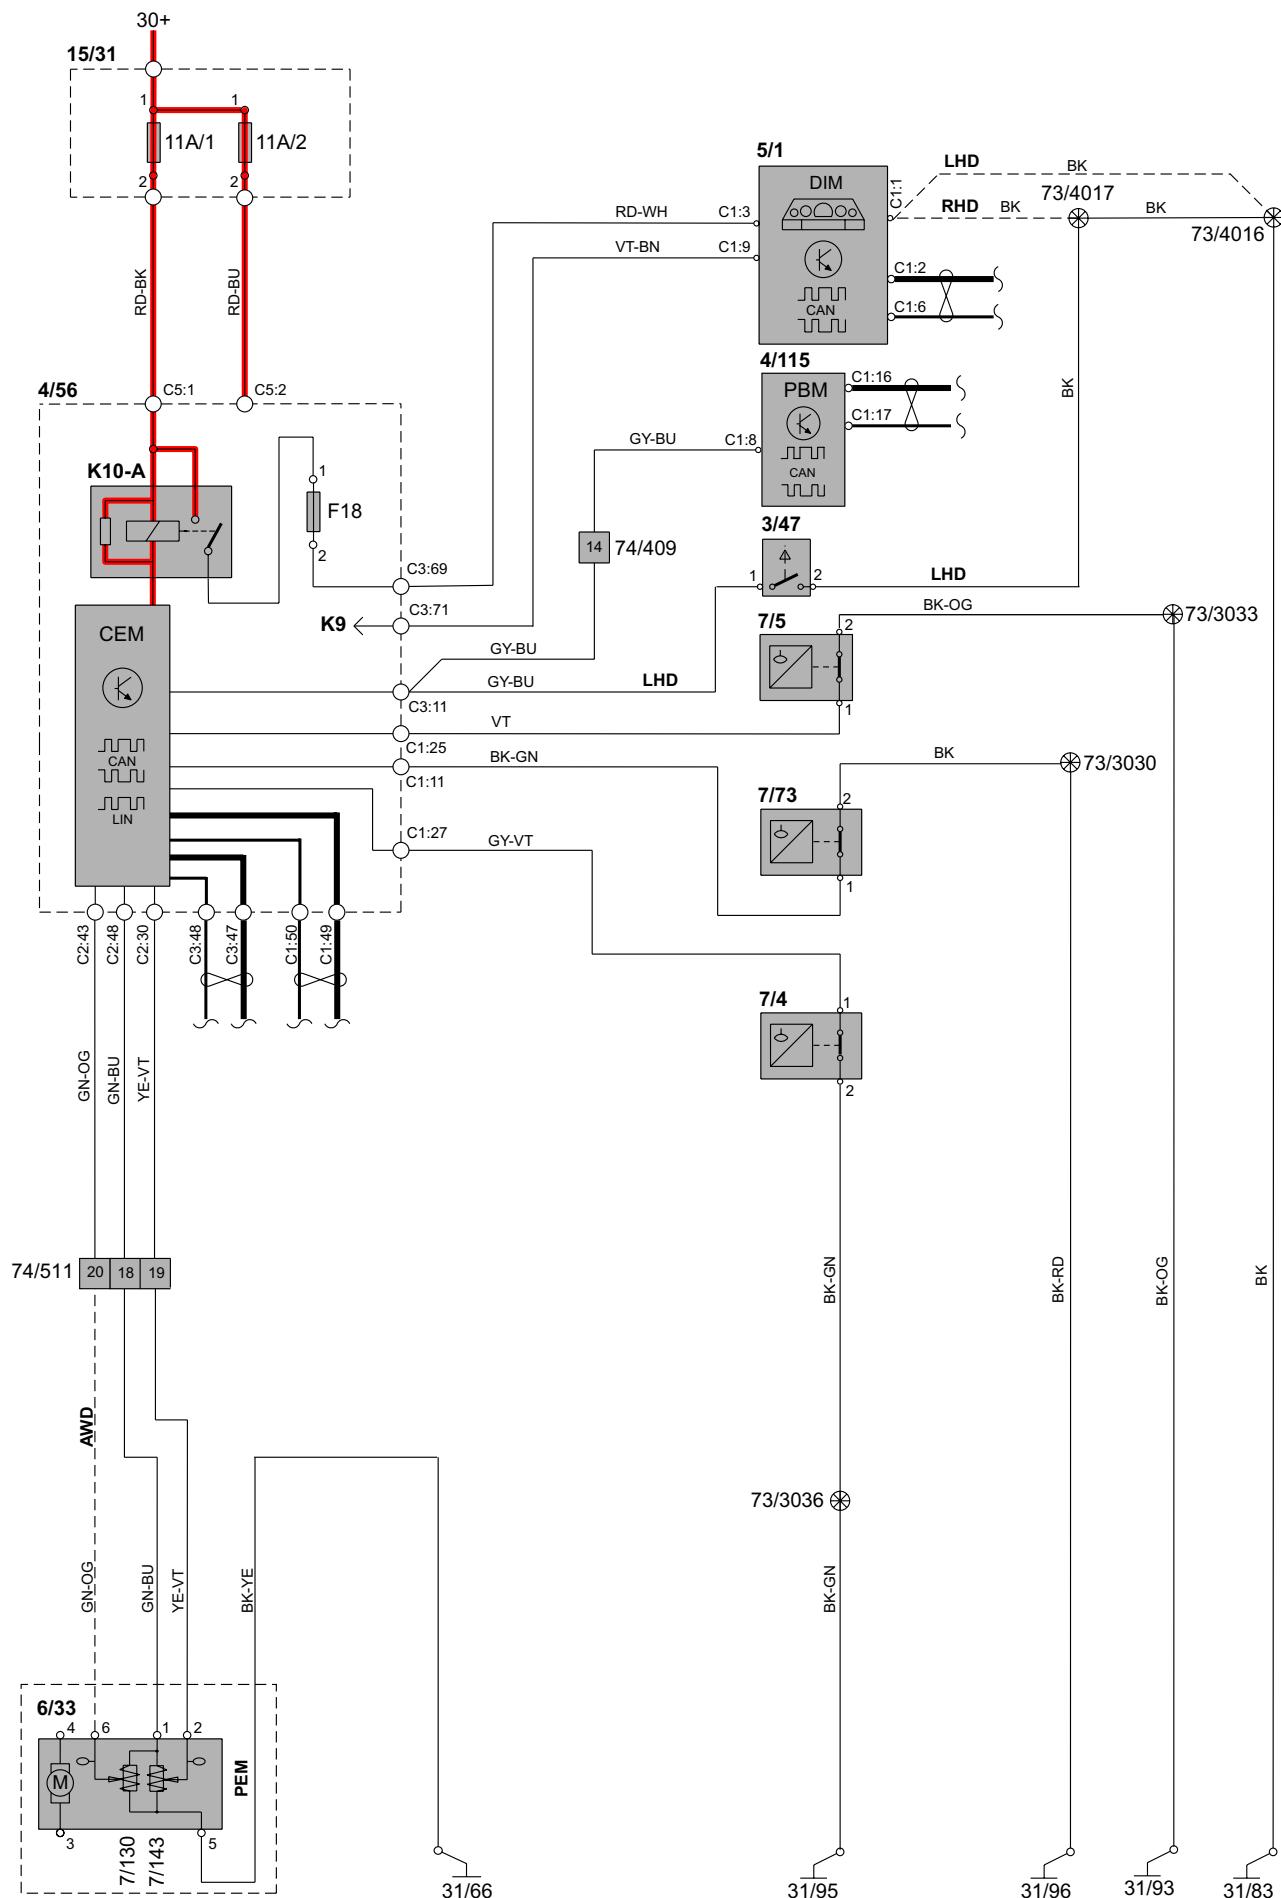


Group 39 Other Audio Premium 1:3

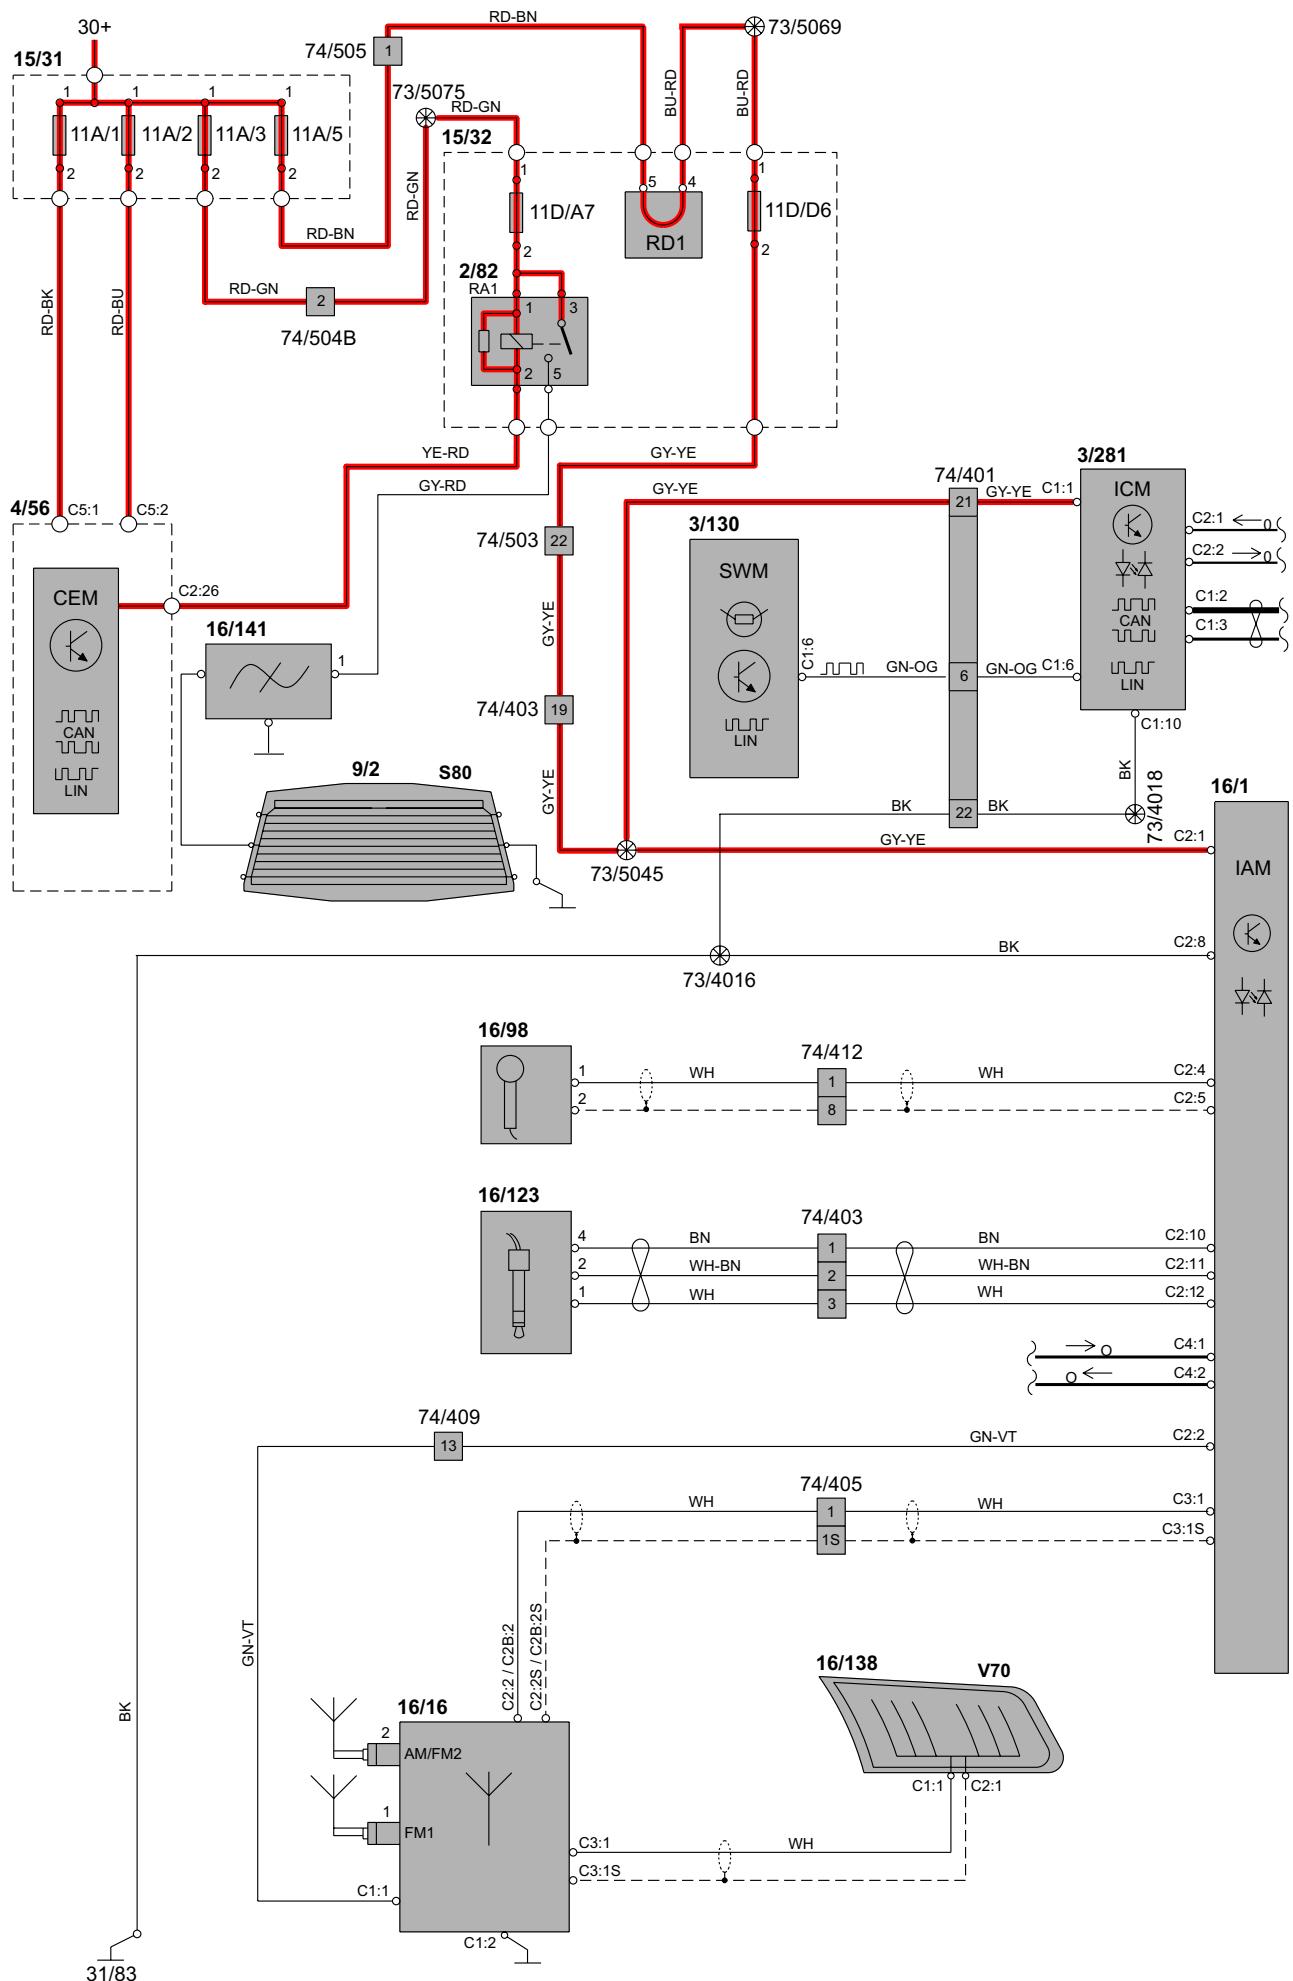


Group 39 Other

Audio Premium 2:3

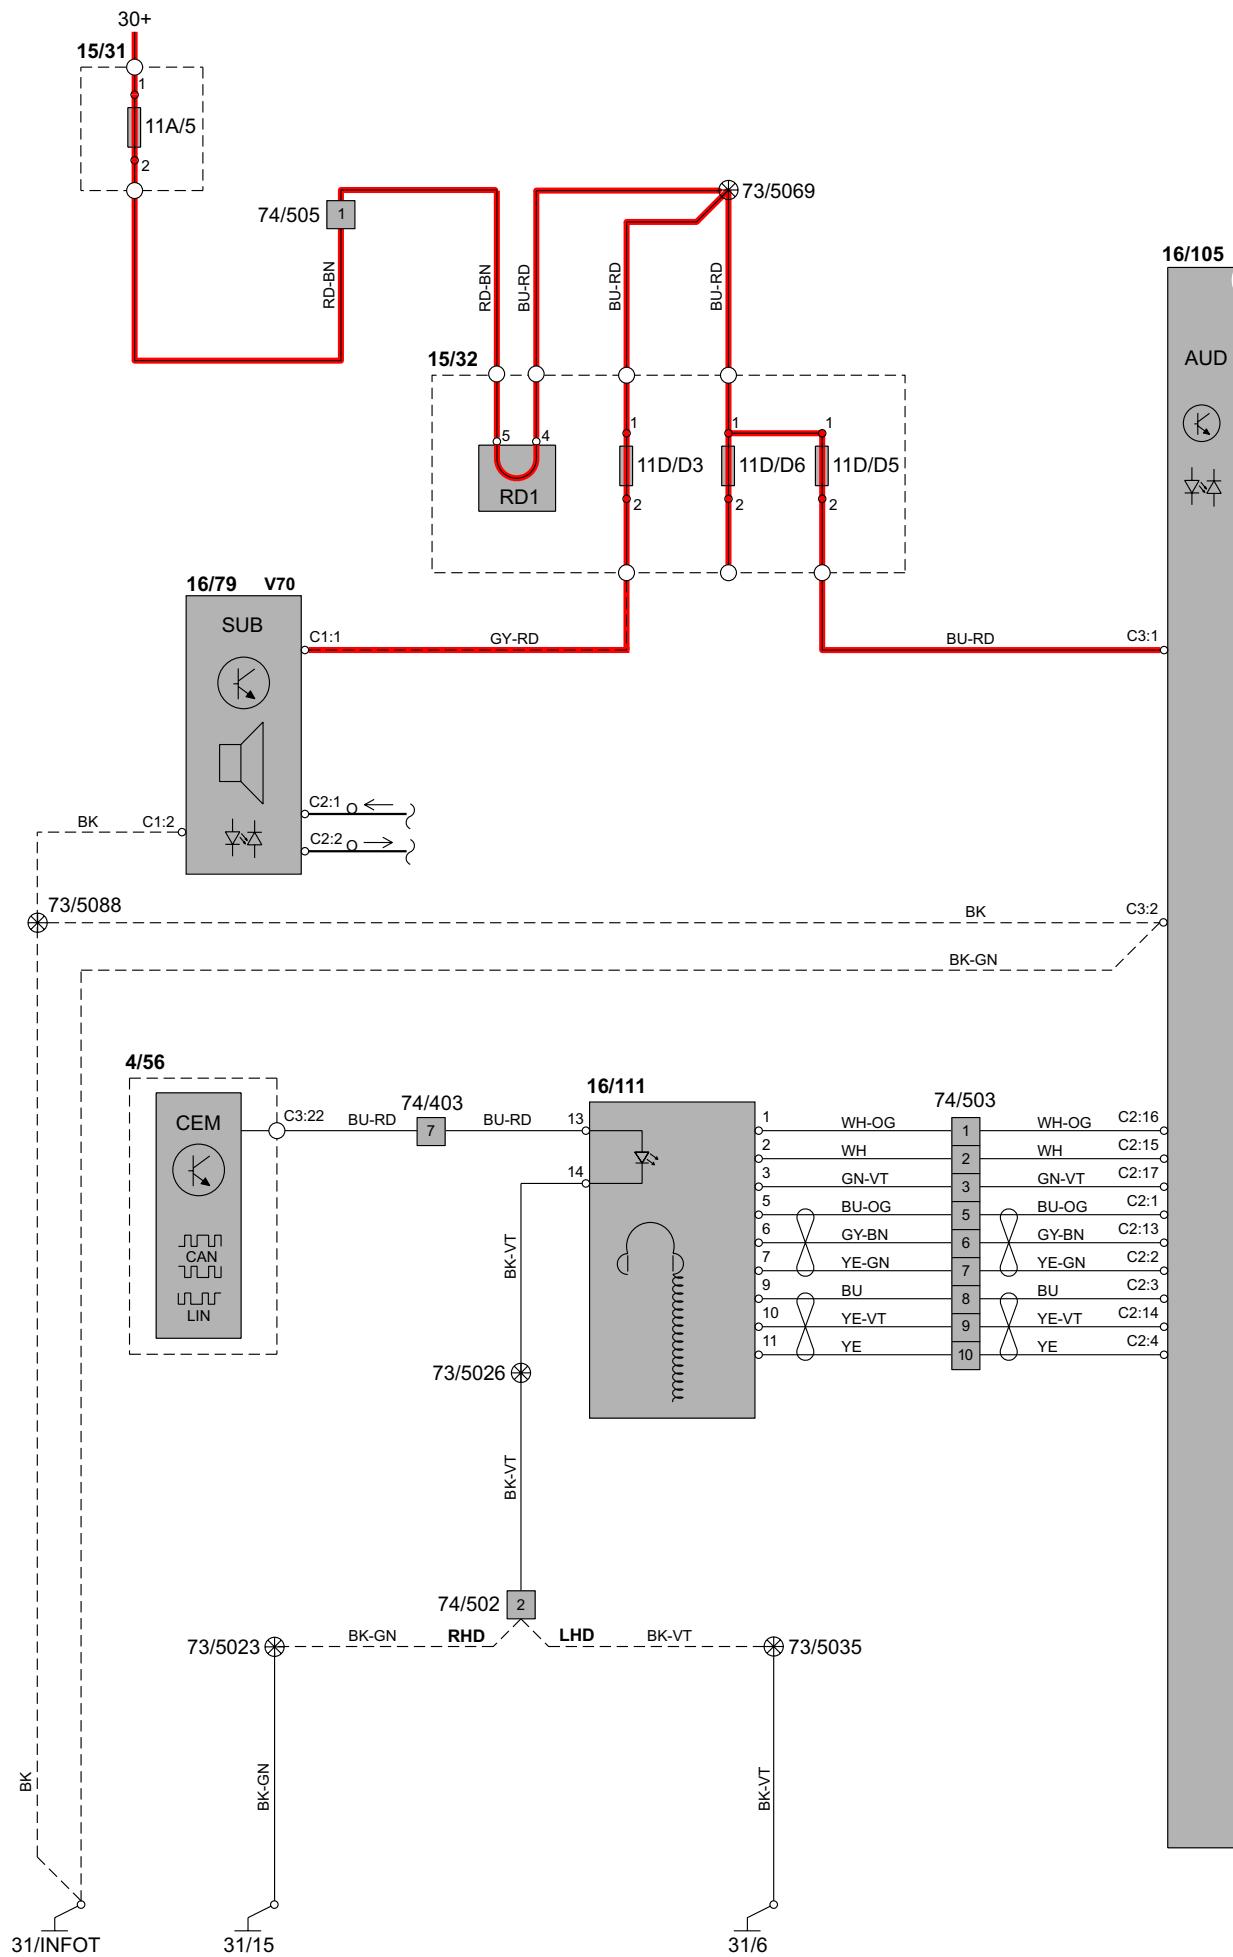


Group 39 Other

Audio Premium 3:3

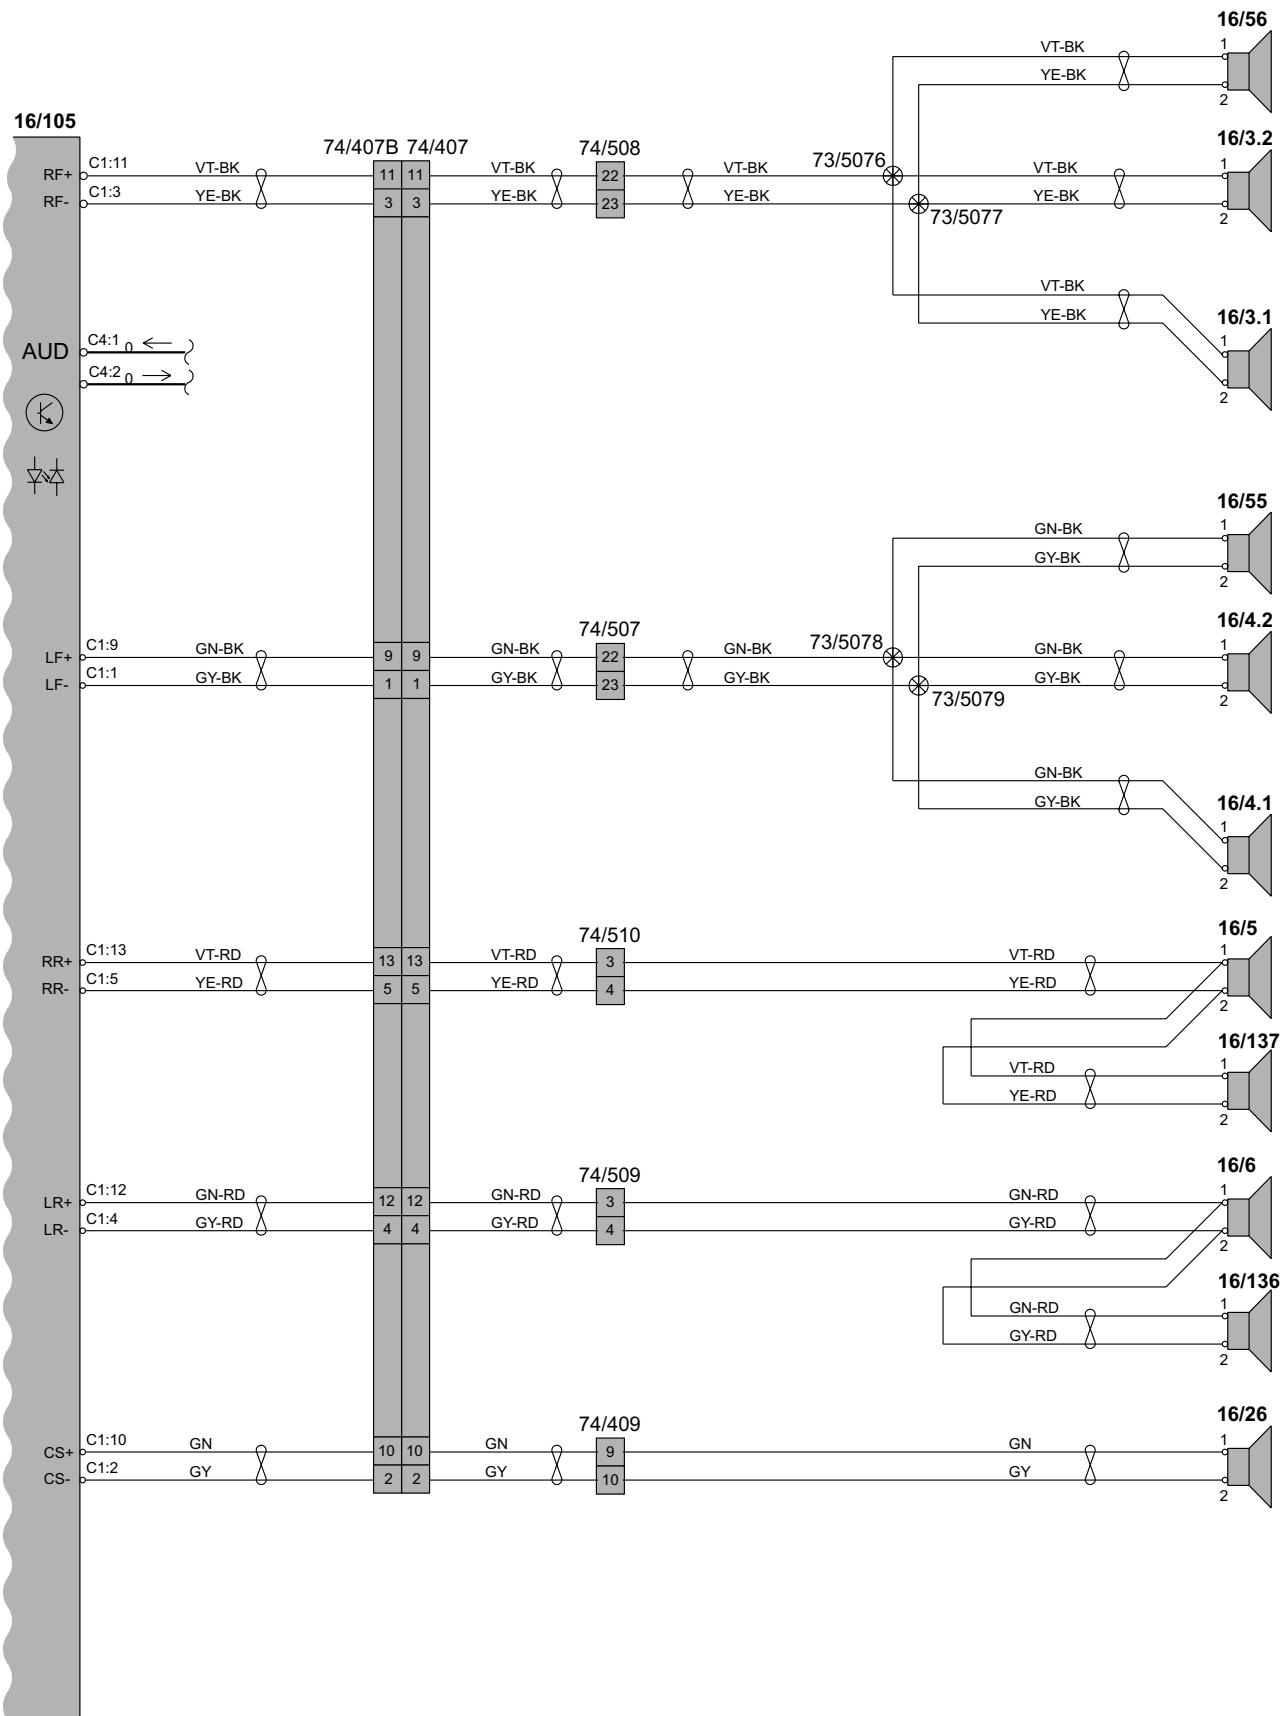


Group 39 Other

Audio 1:2

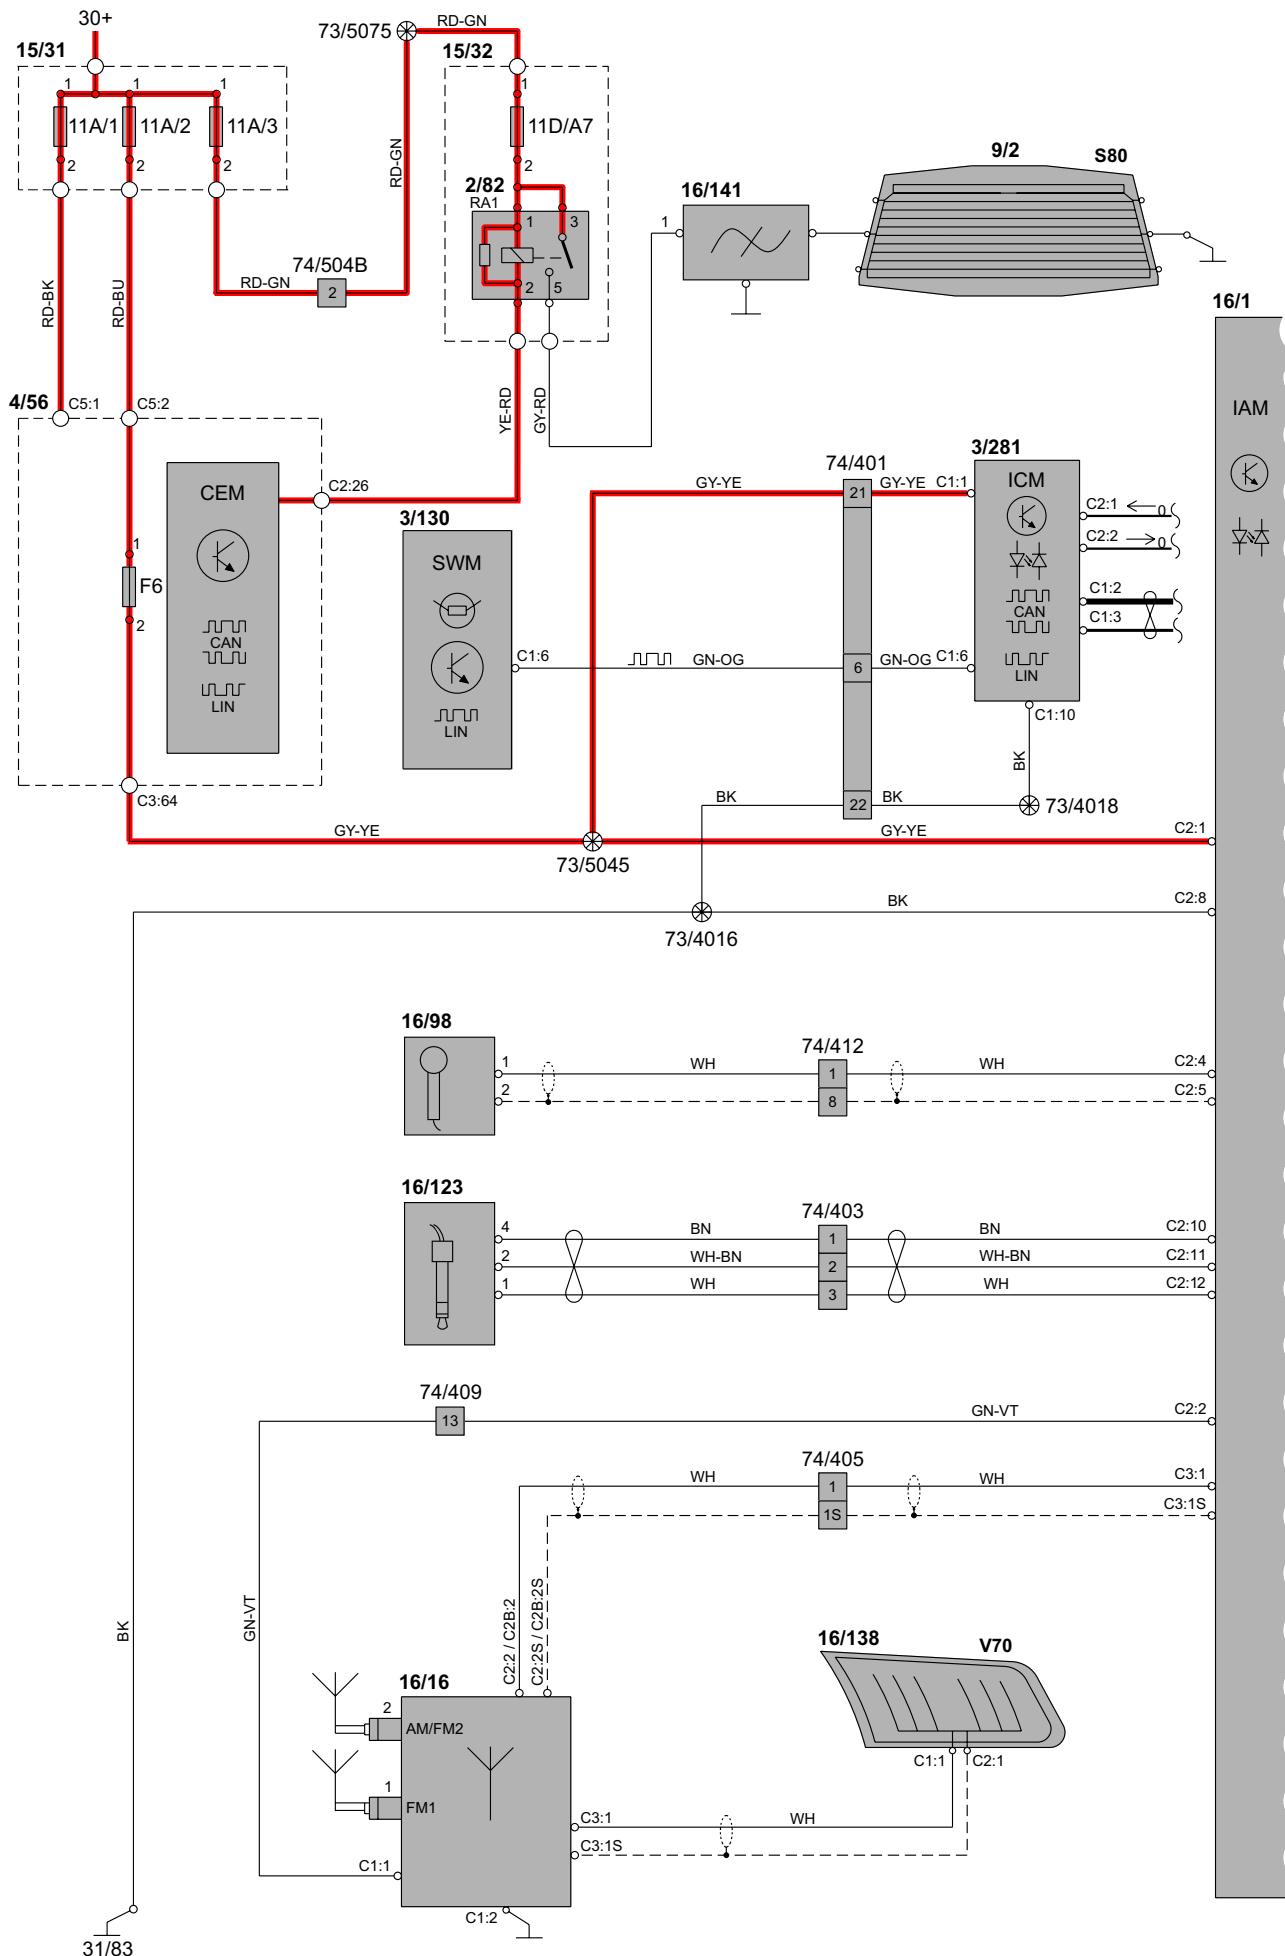


Group 39 Other


Audio 2:2

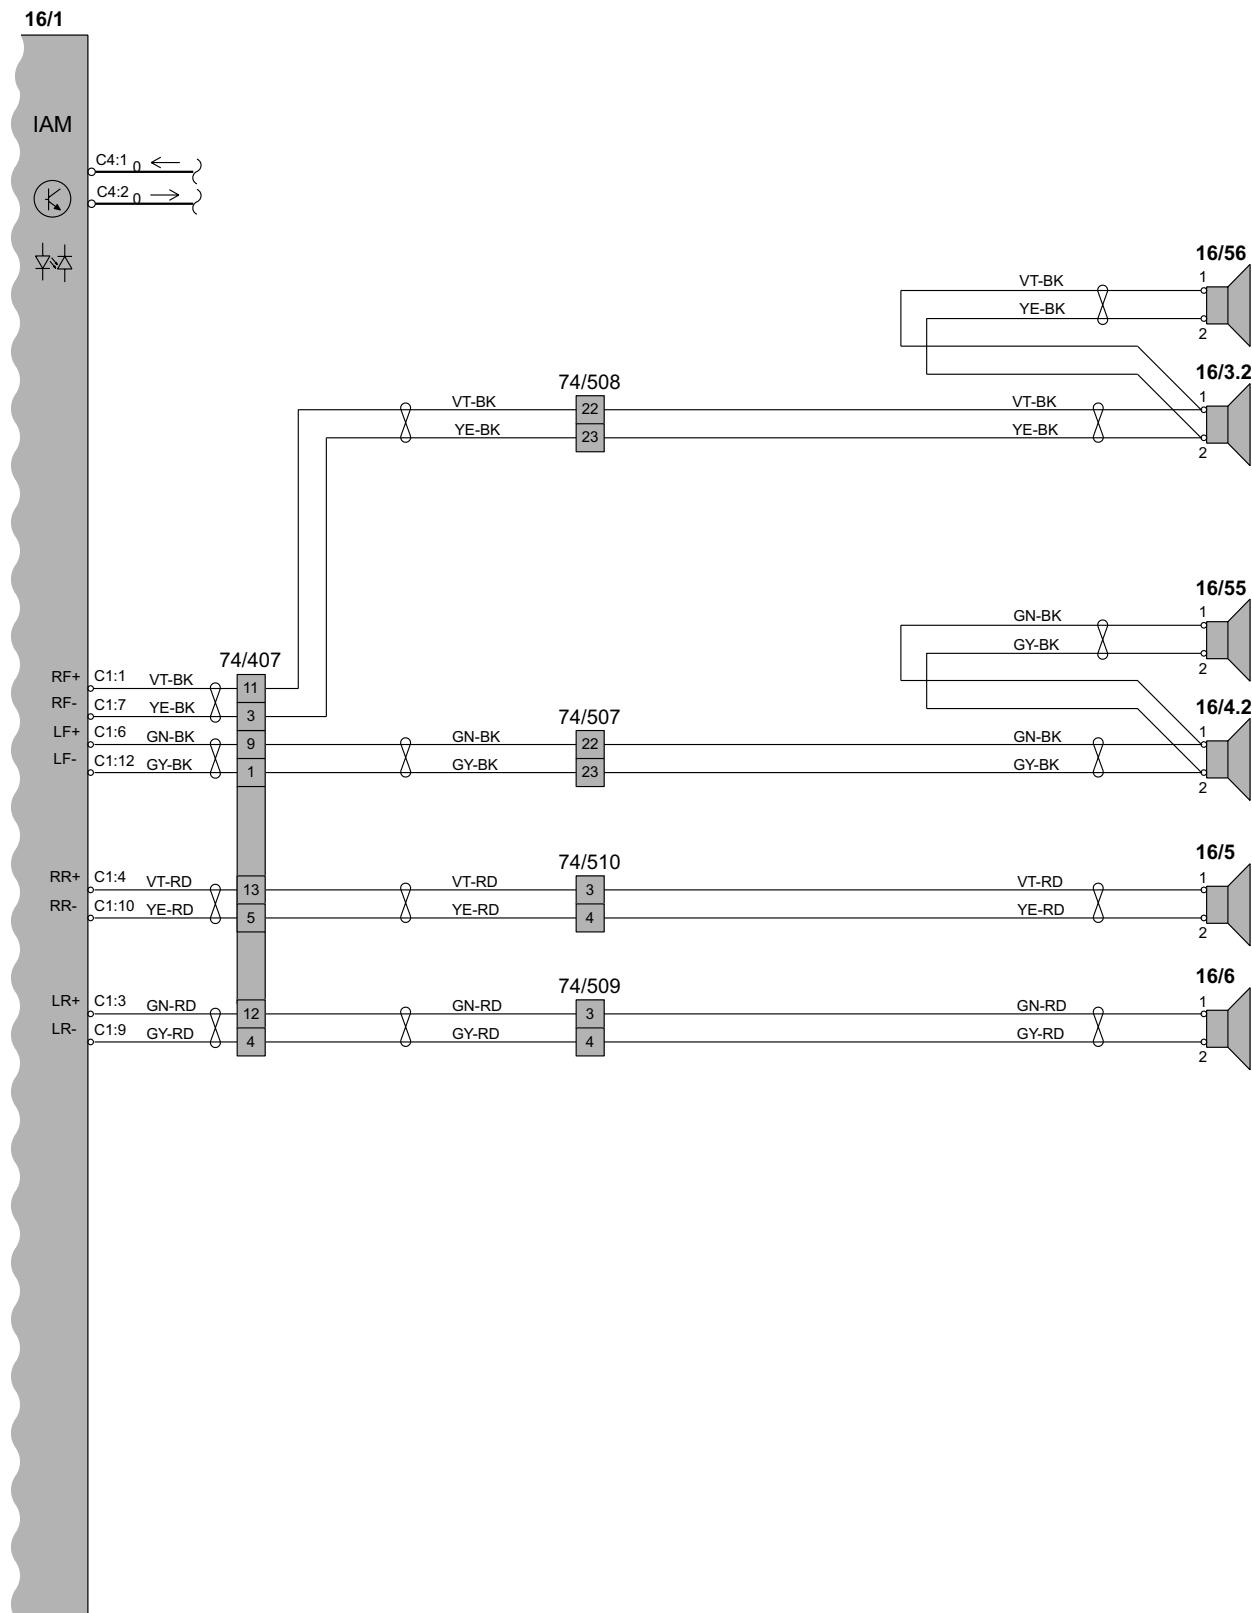


Group 39 Other Cellular phone 1:2

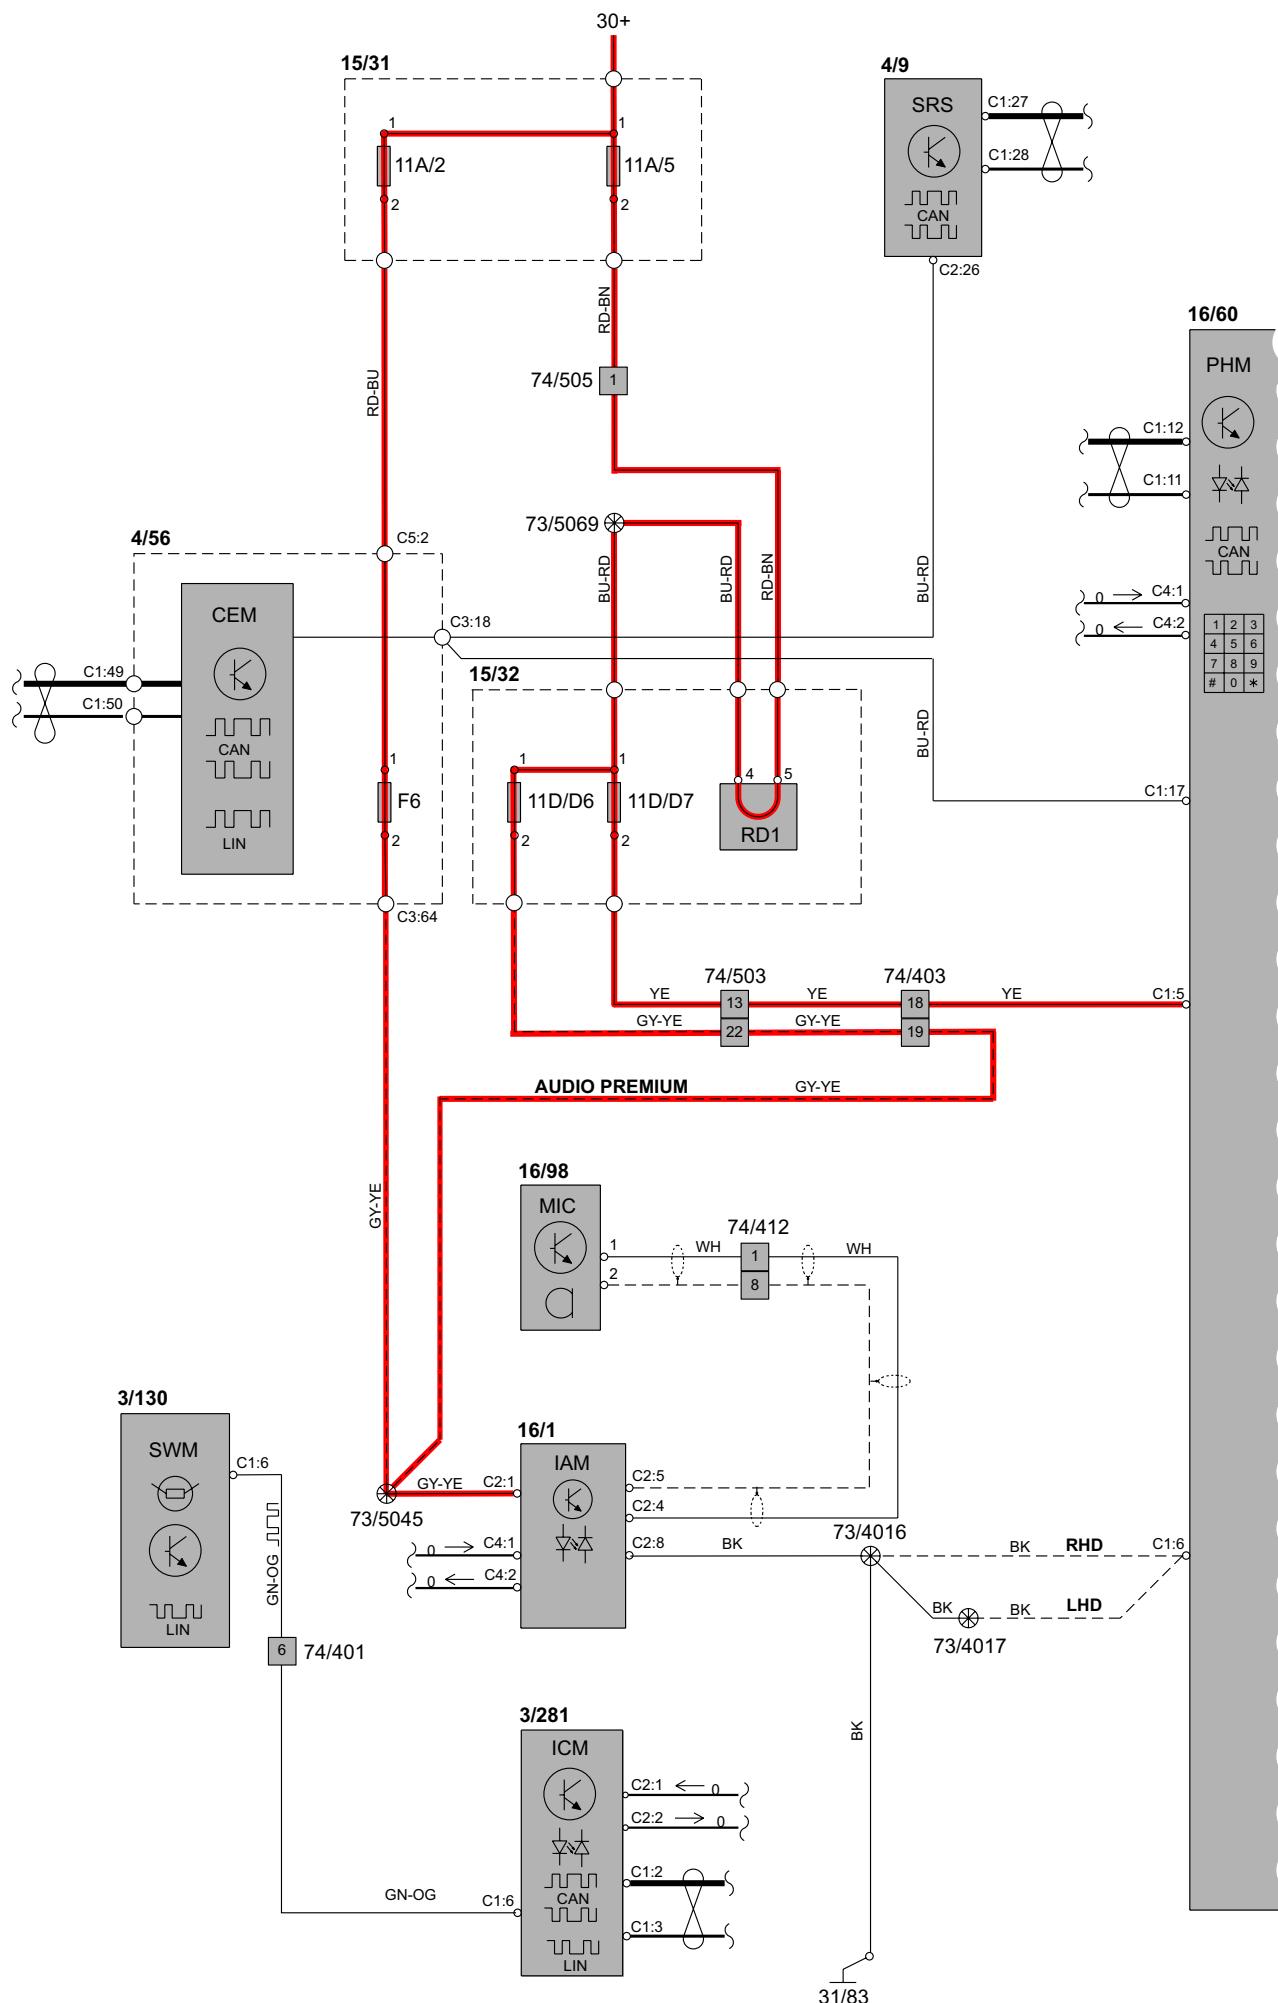

Group 39 Other Cellular phone 2:2

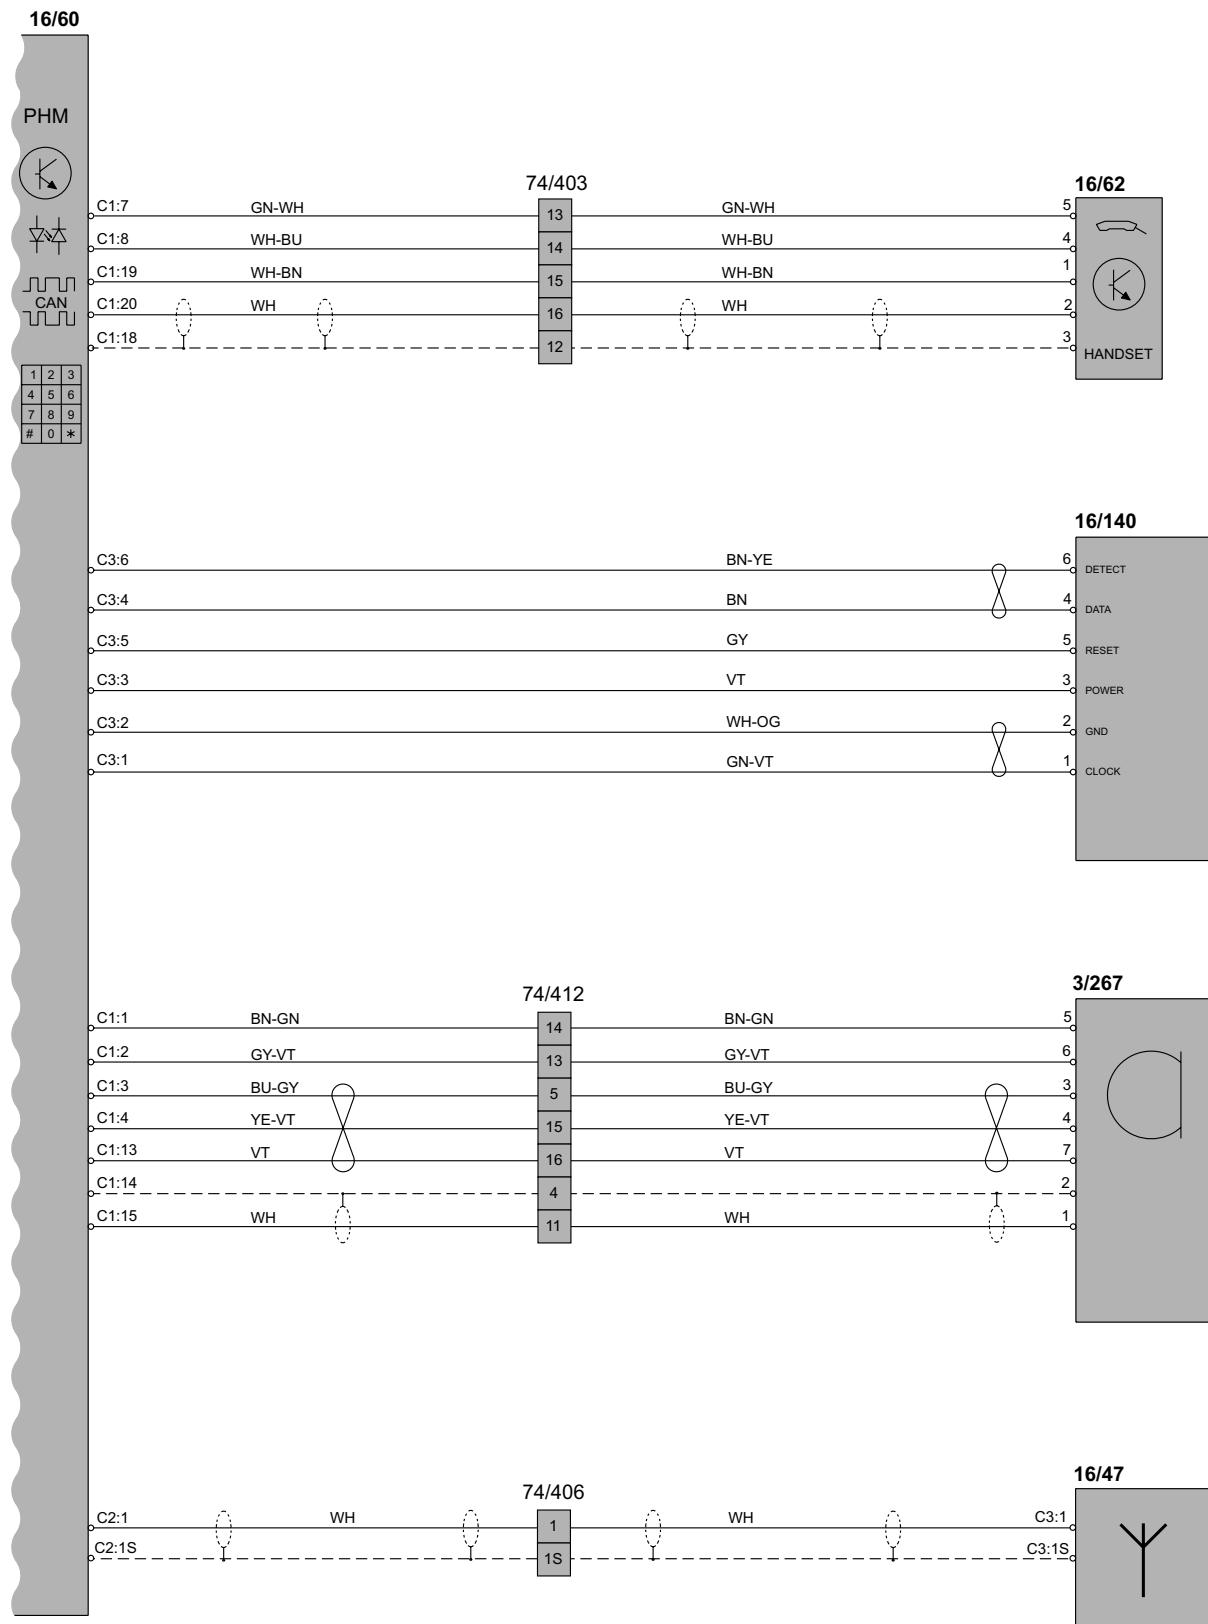


Group 39 Other Bluetooth phone system

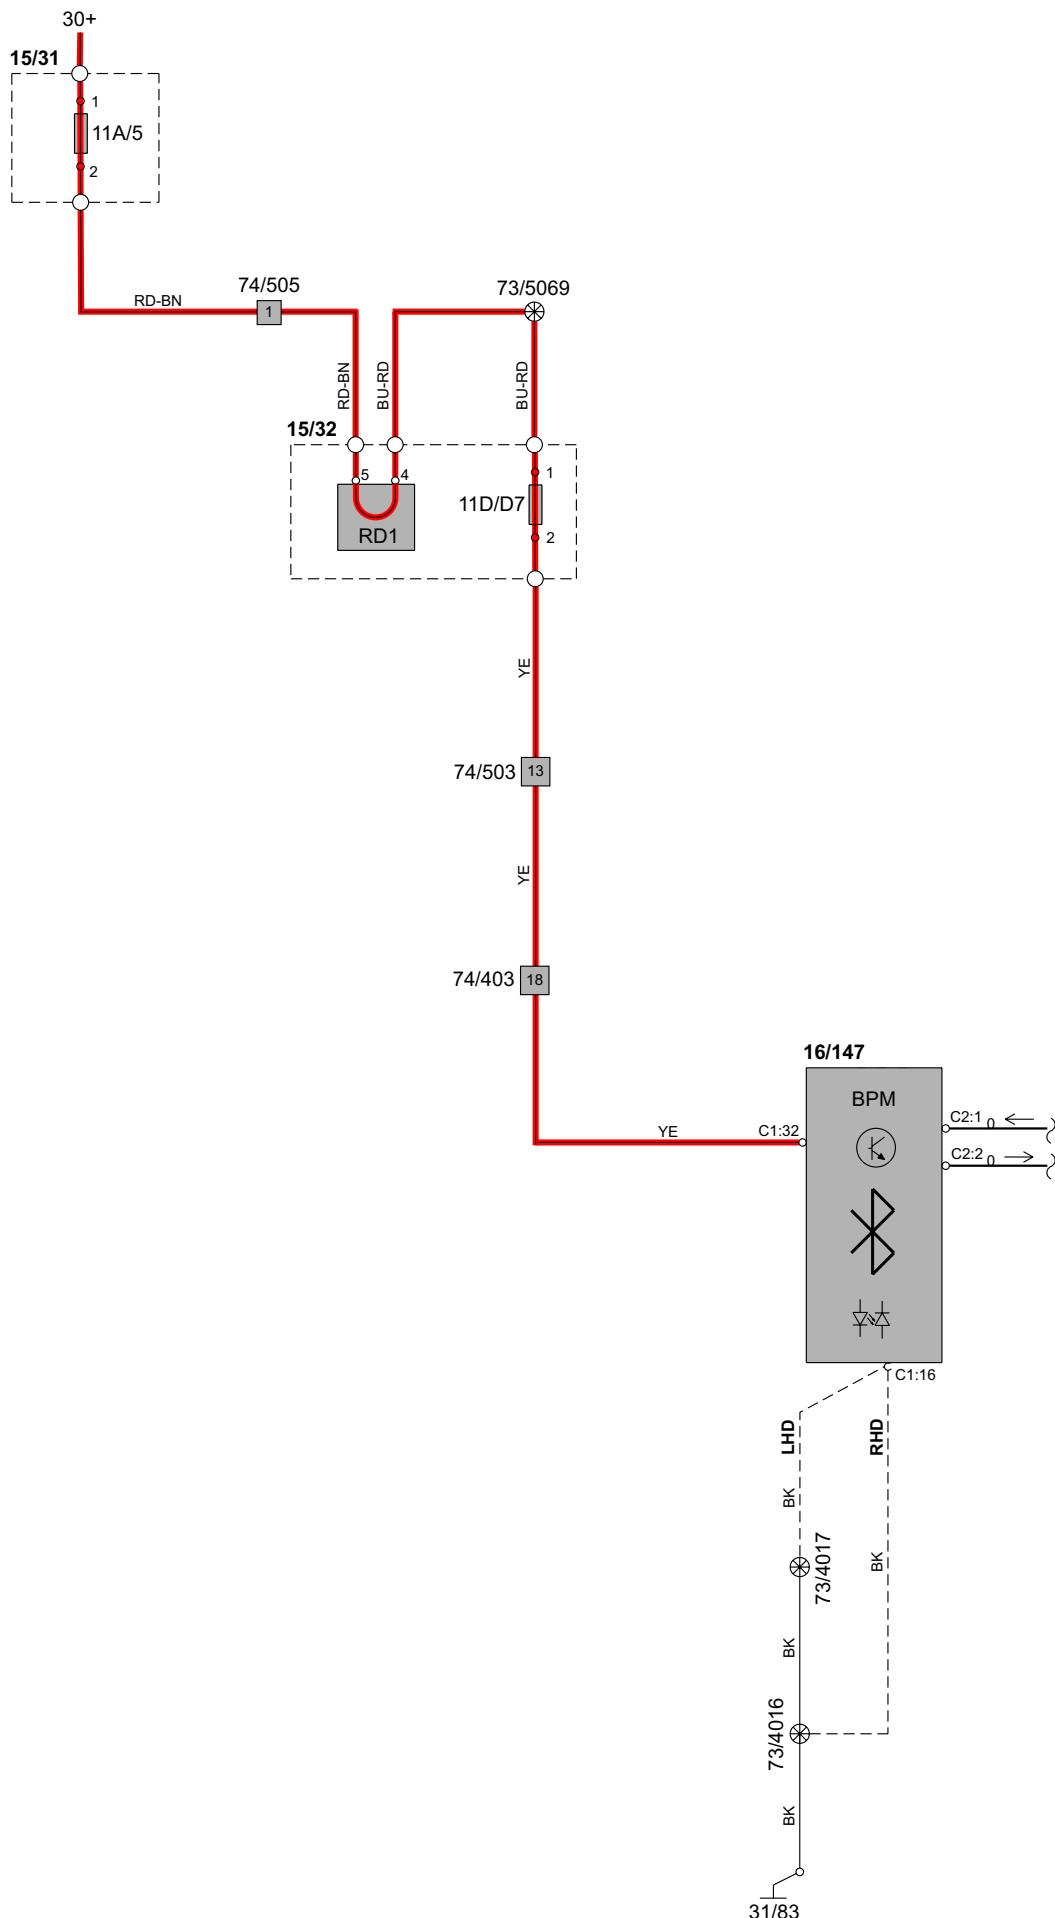


Group 39 Other, Accessories

Bluetooth Handsfree

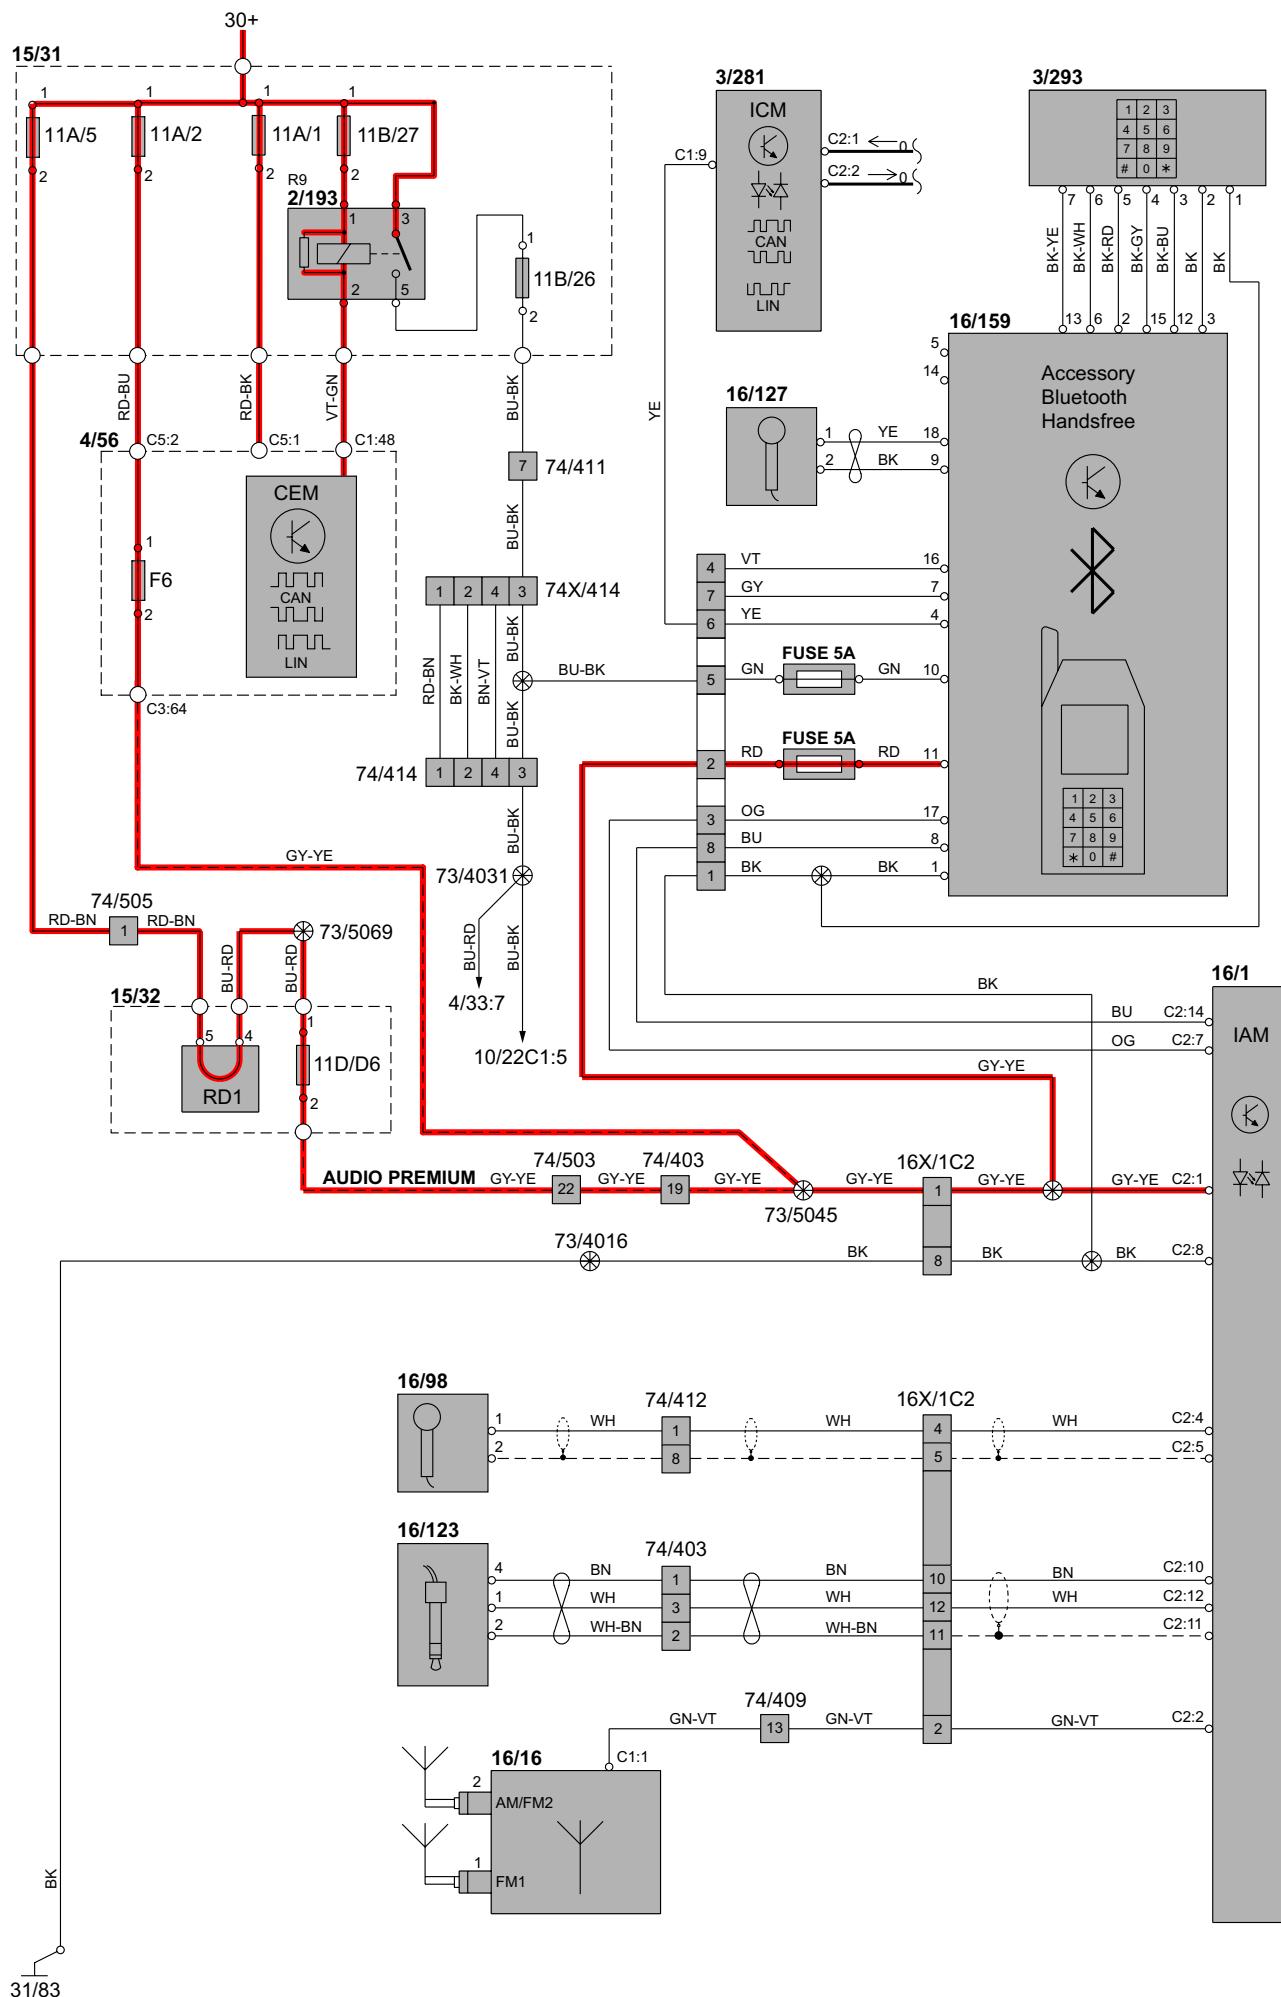


Group 39 Other

Multimedia & Traffic information

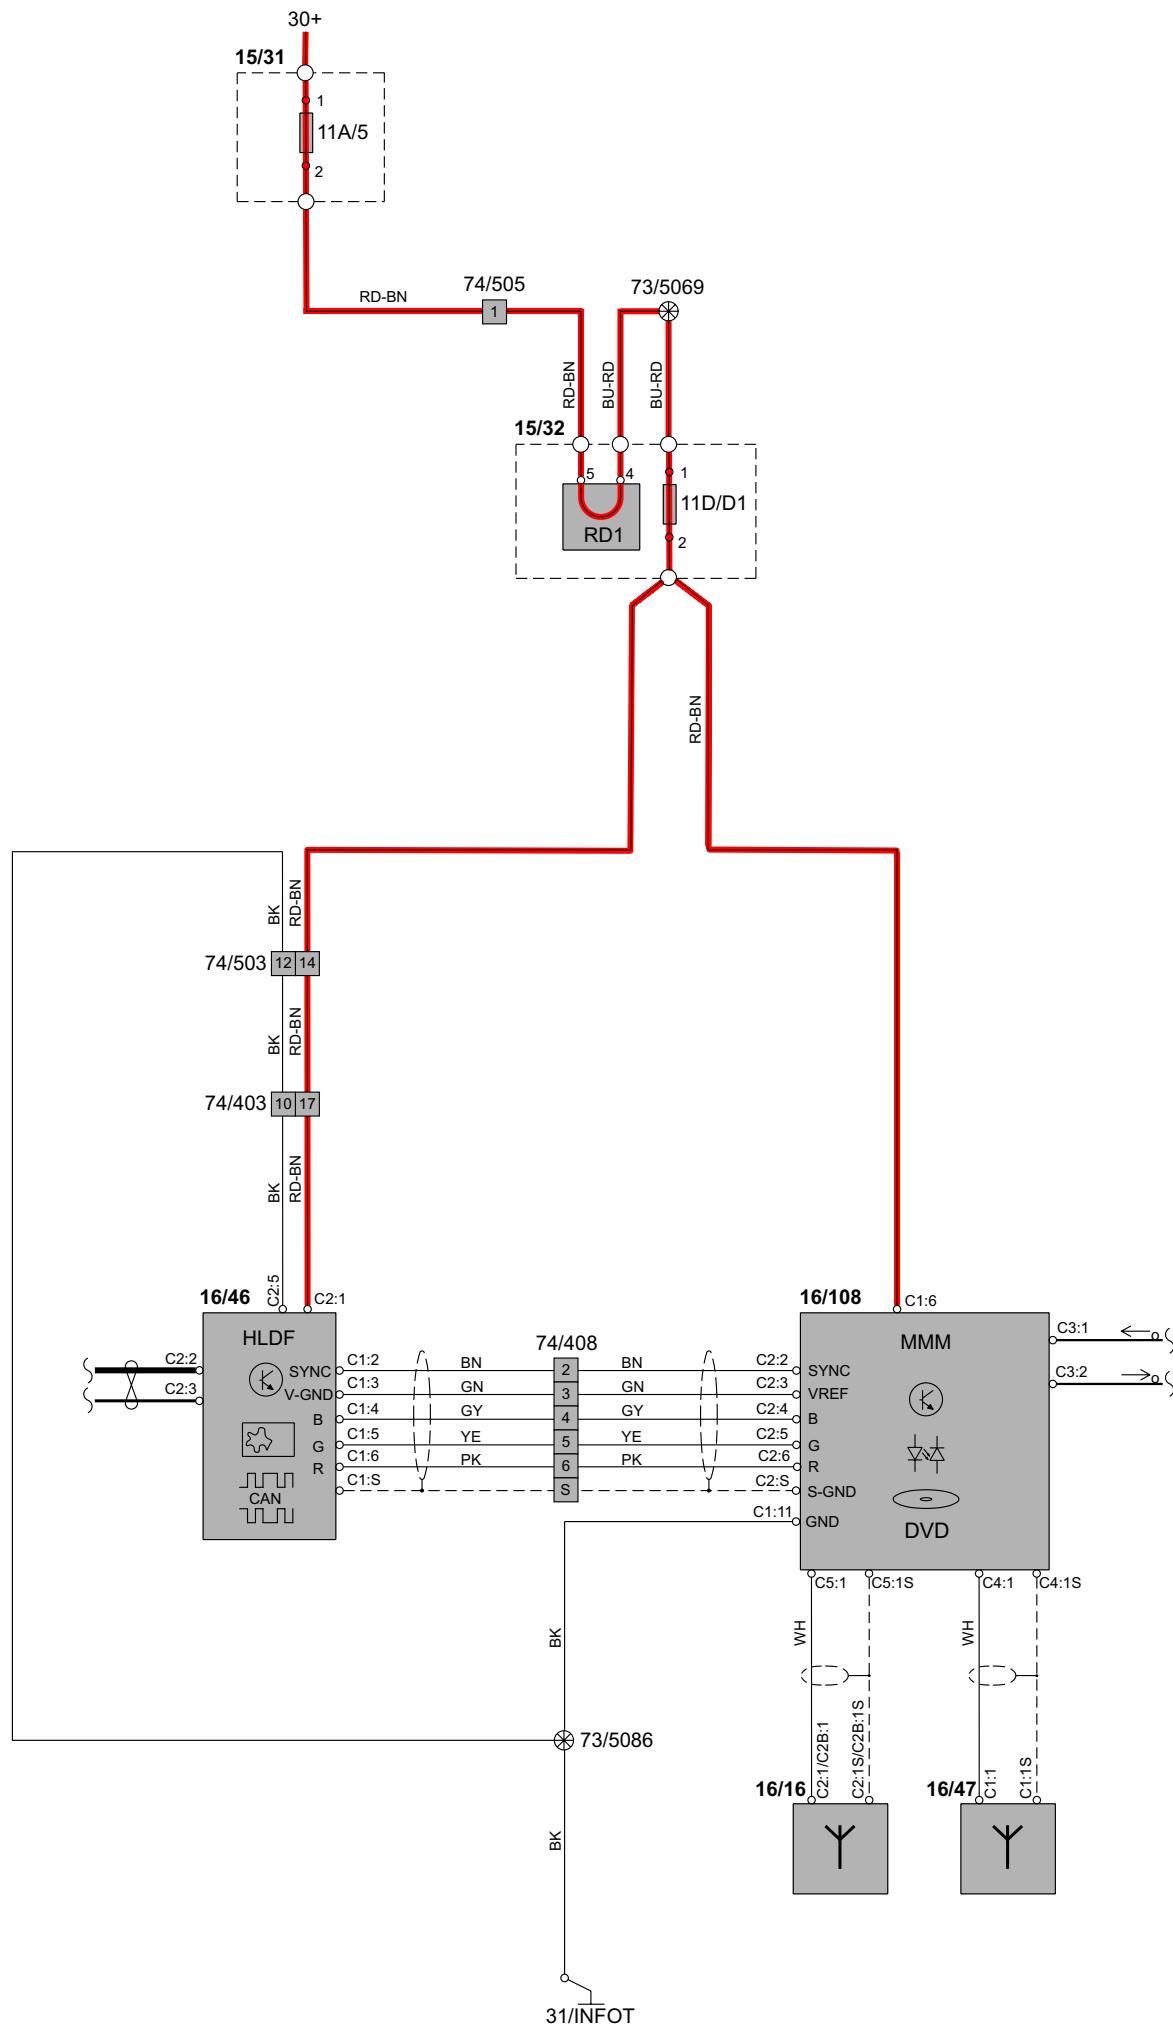


Group 39 Other

Rear seat entertainment

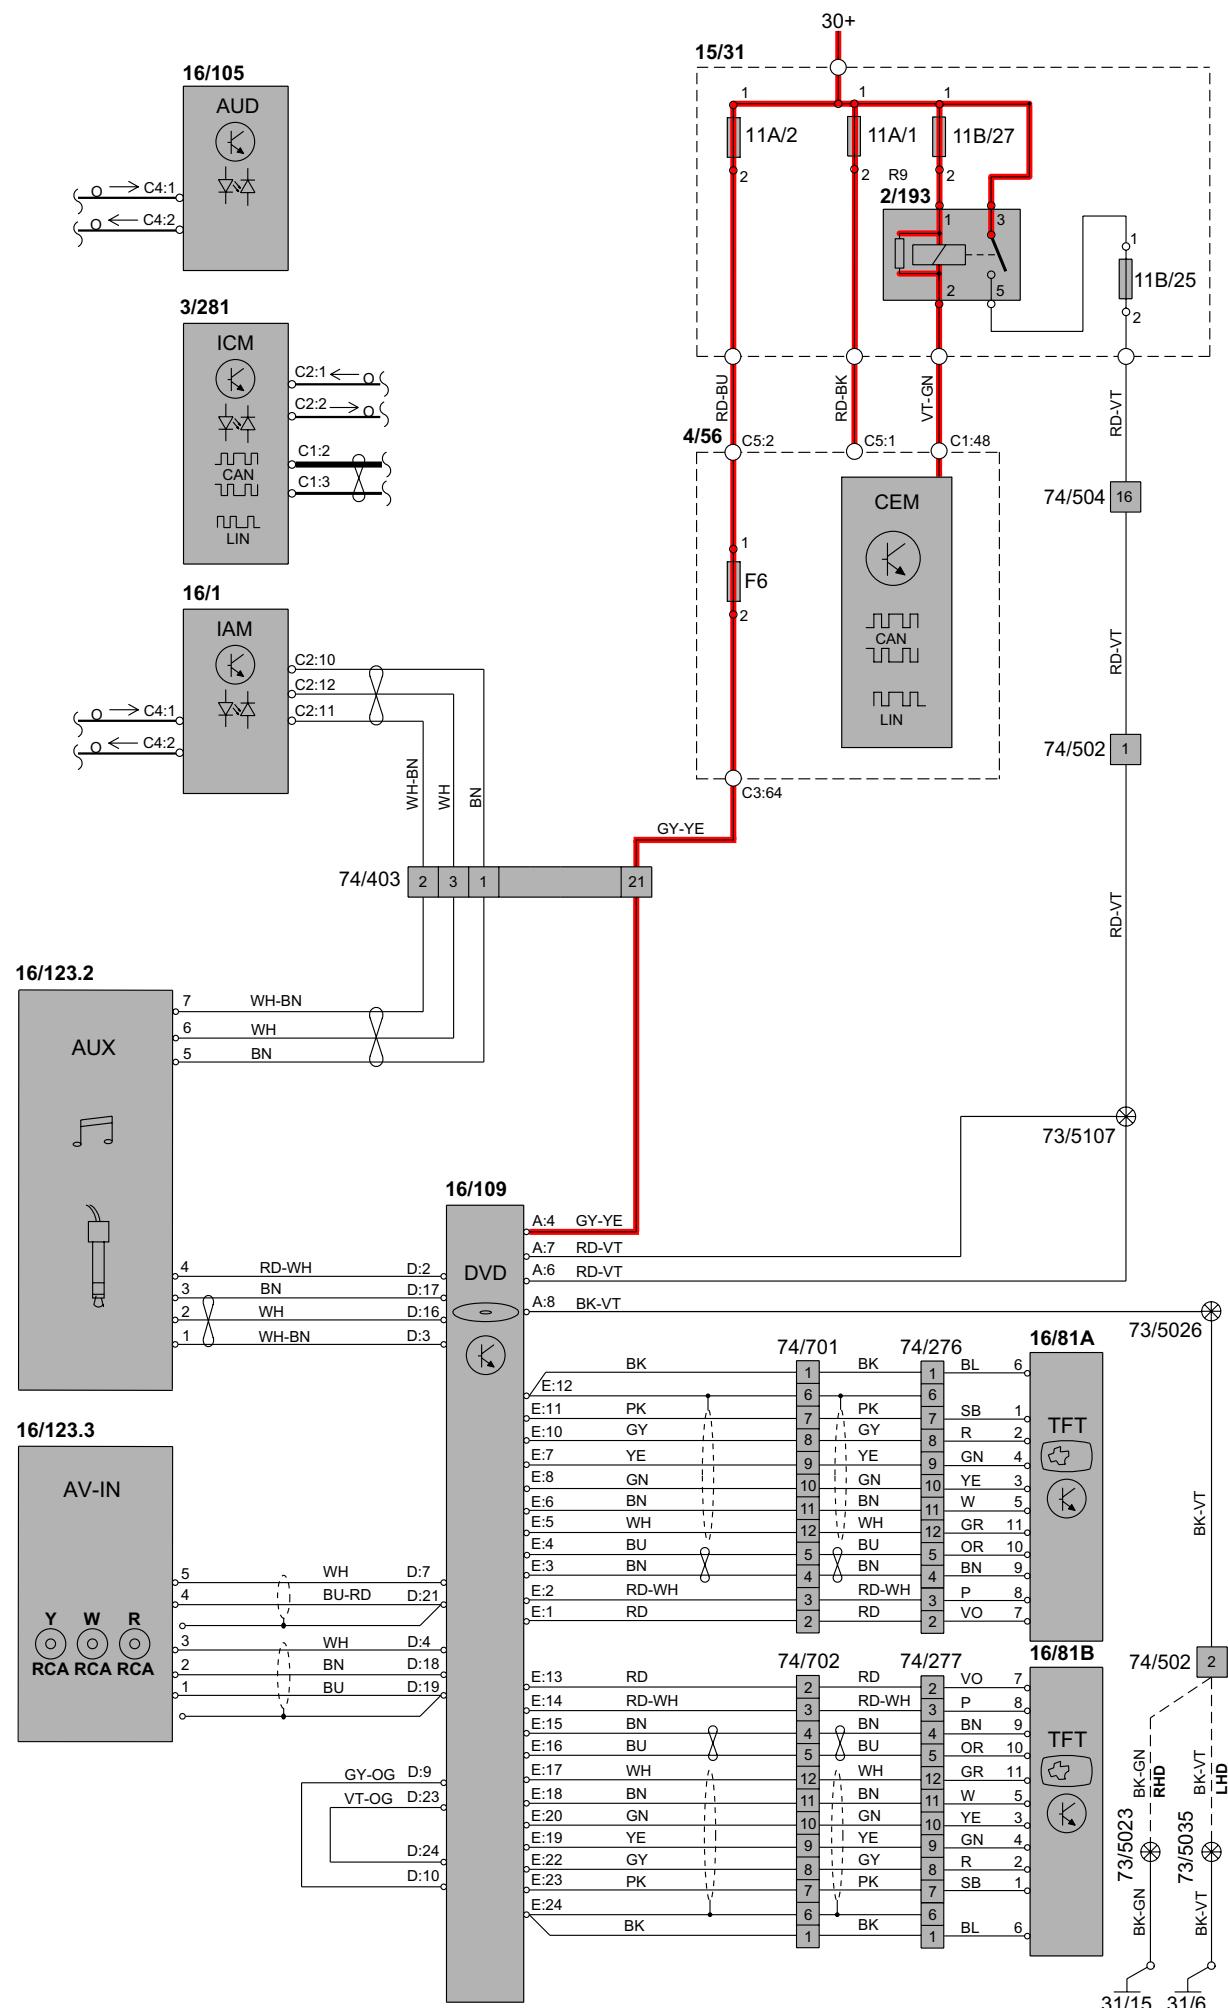


Group 39 Other, Accessories

Satellite radio

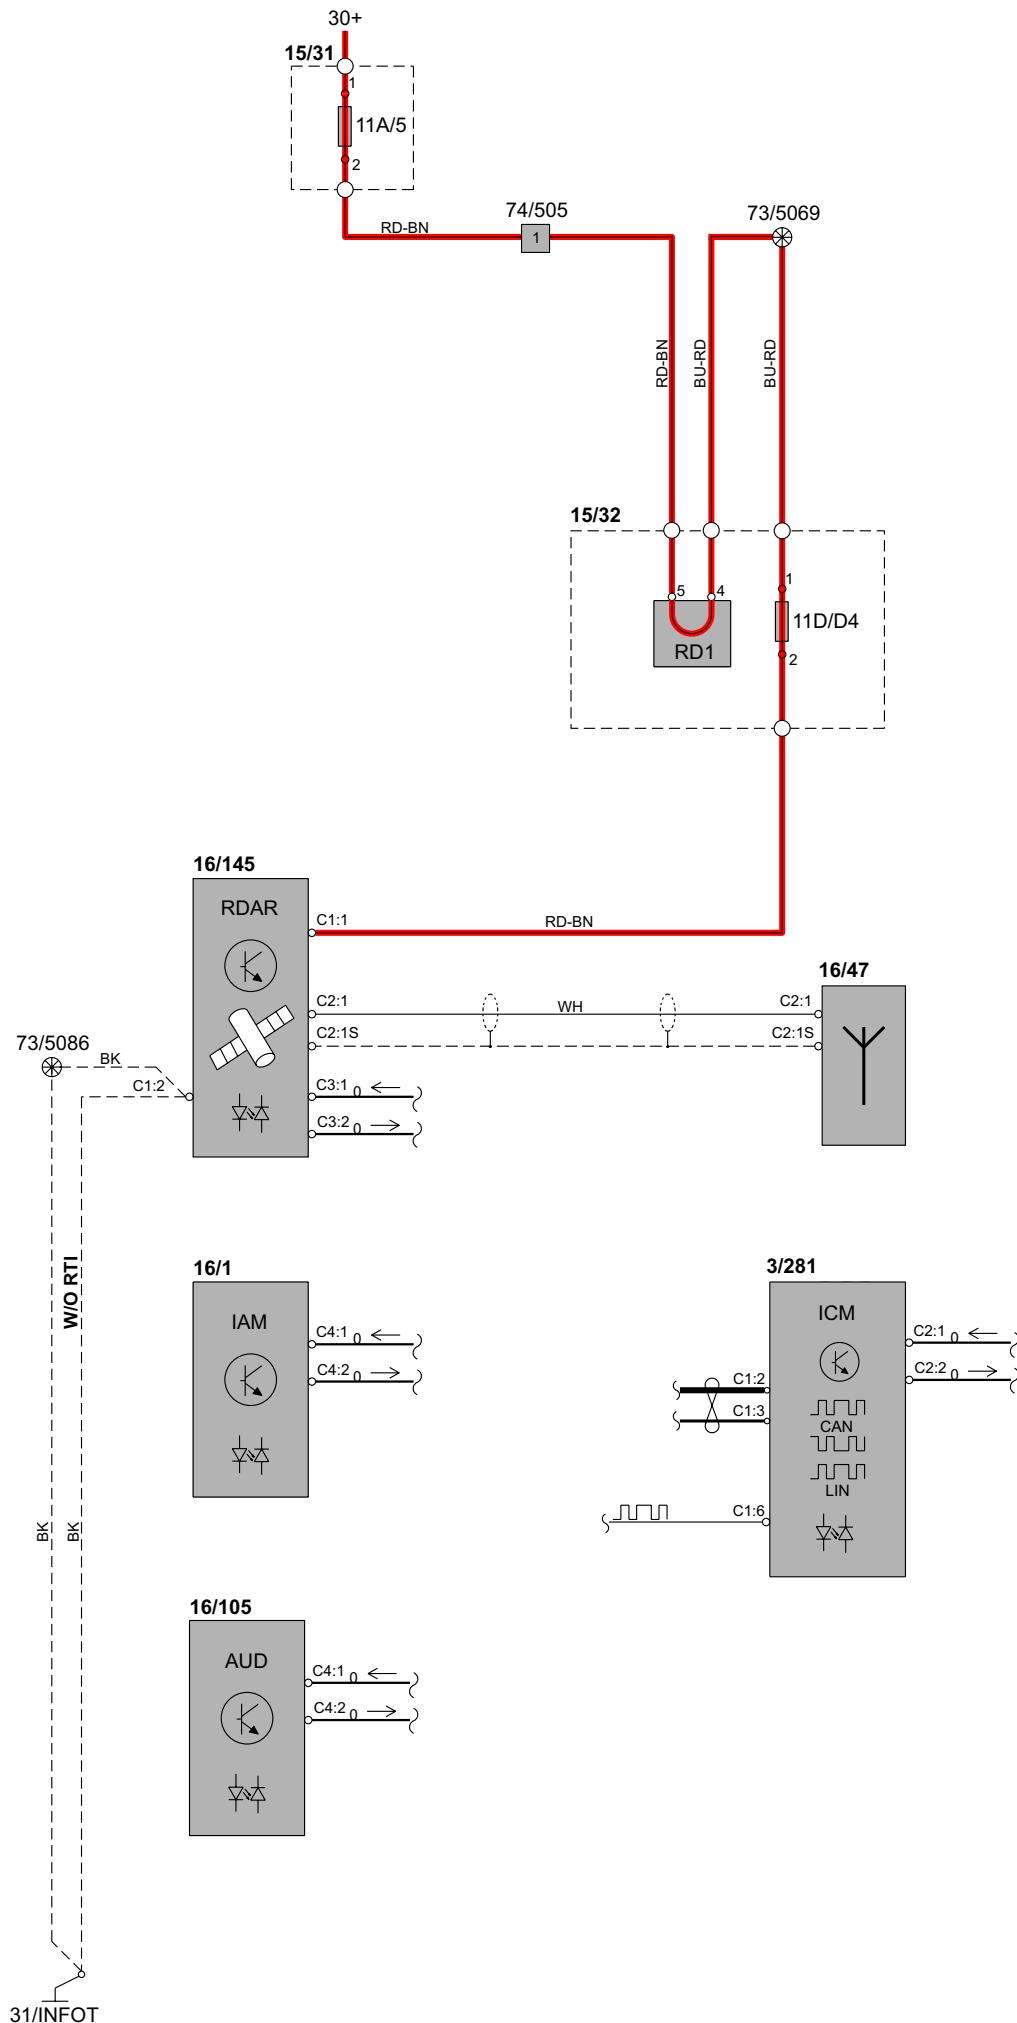


Group 39 Other, Accessories

Parking camera

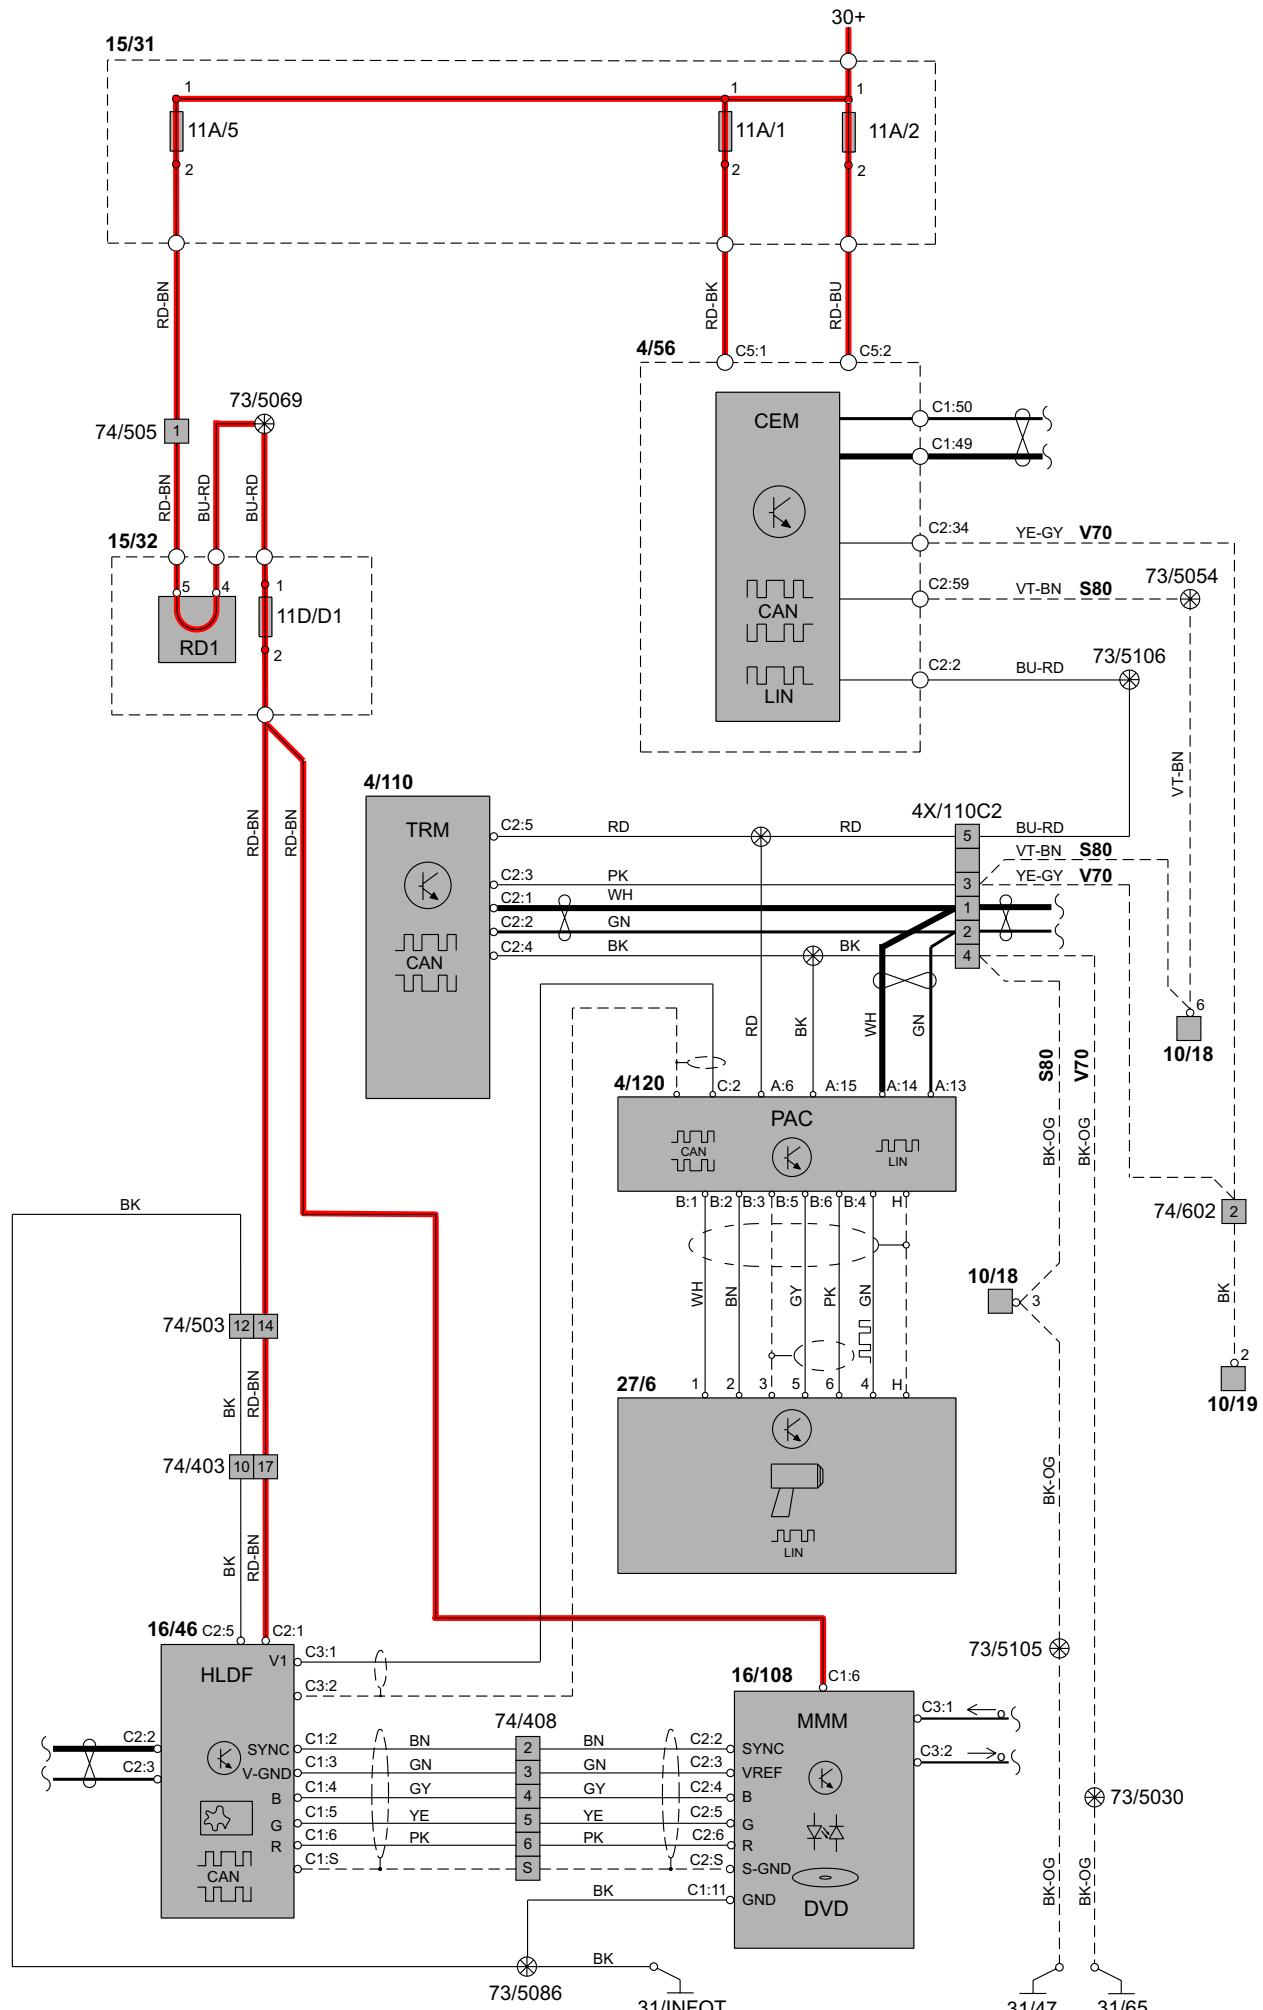


Group 39 Other, Accessories

Navigation system, portable

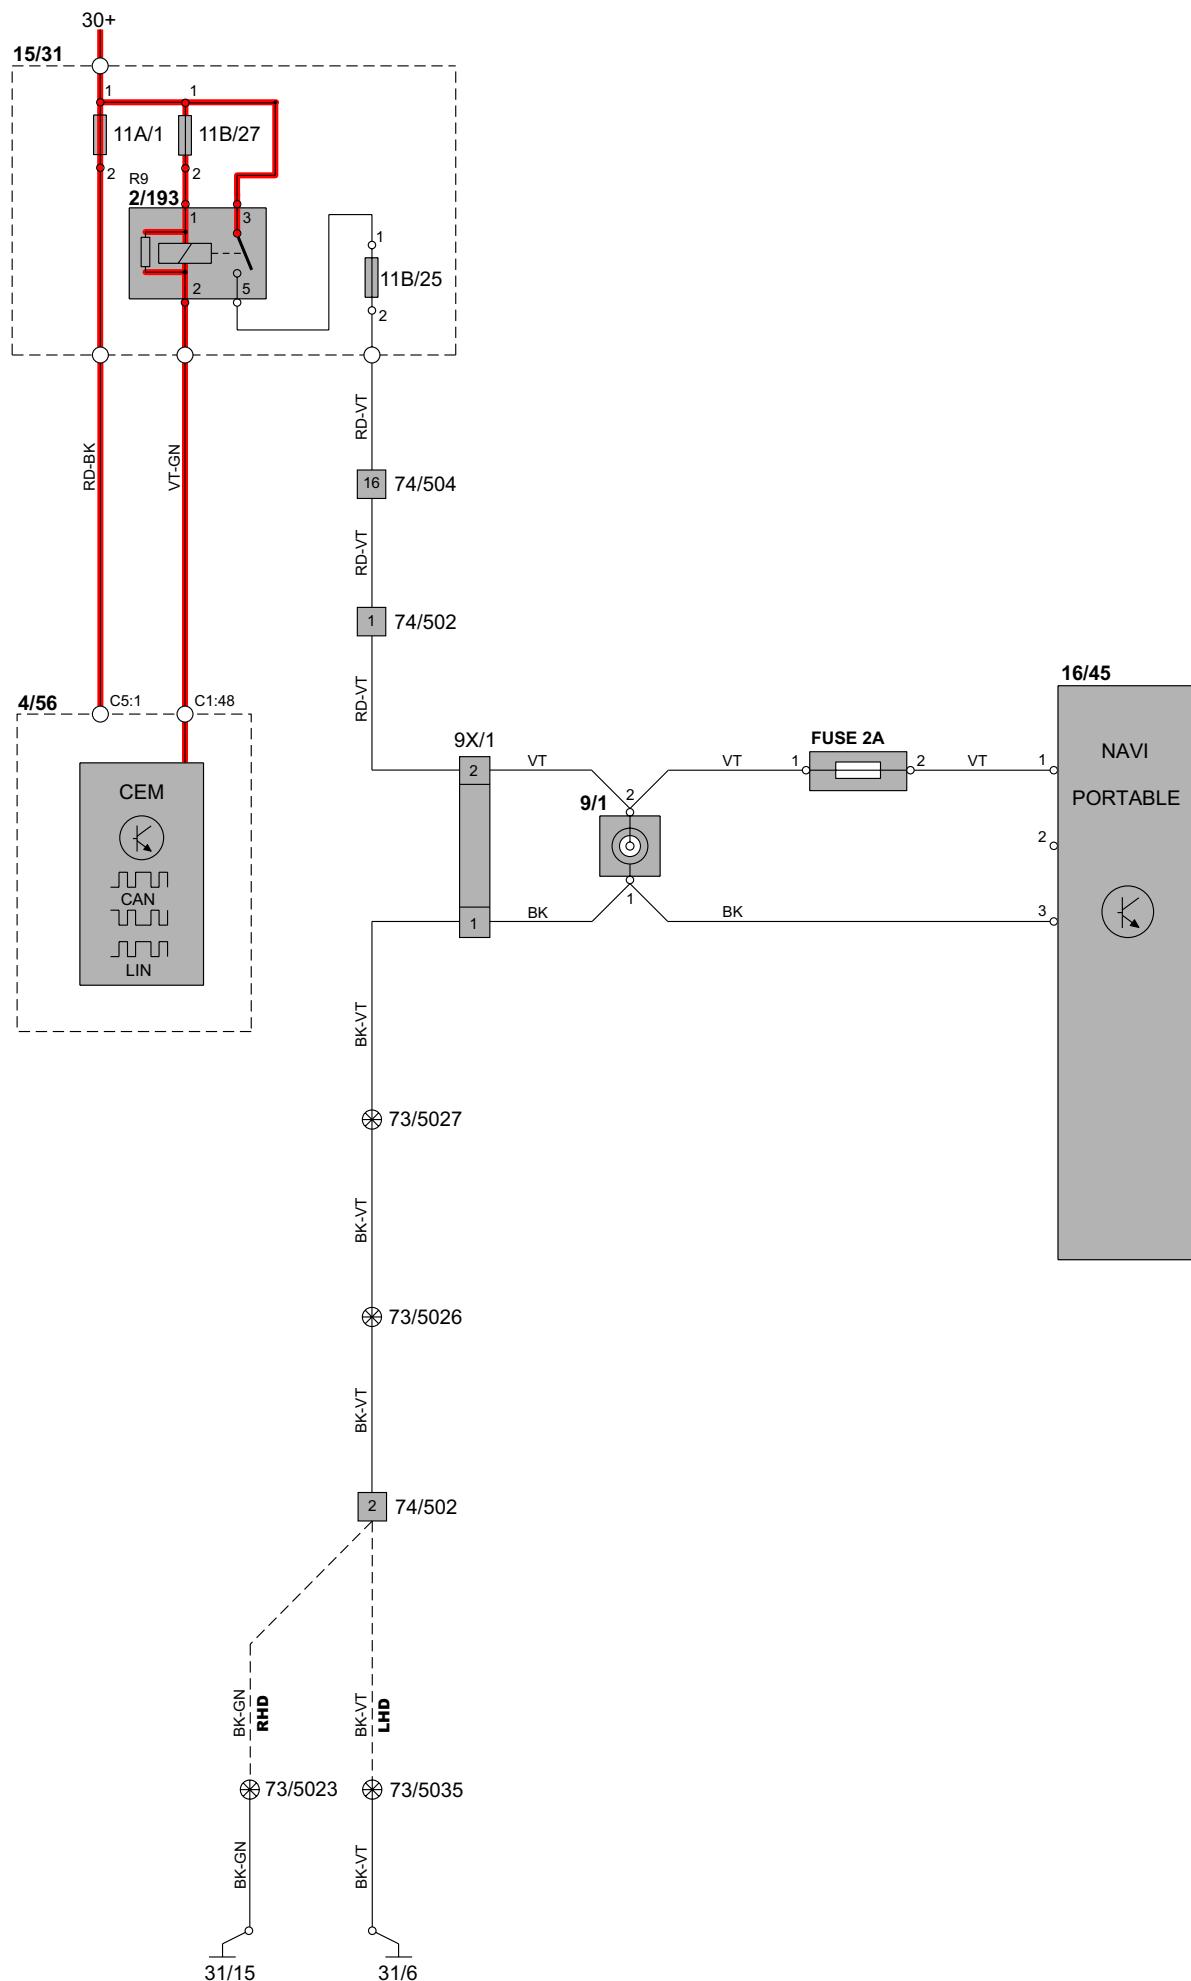


Group 43 Transmission

M66 transmission

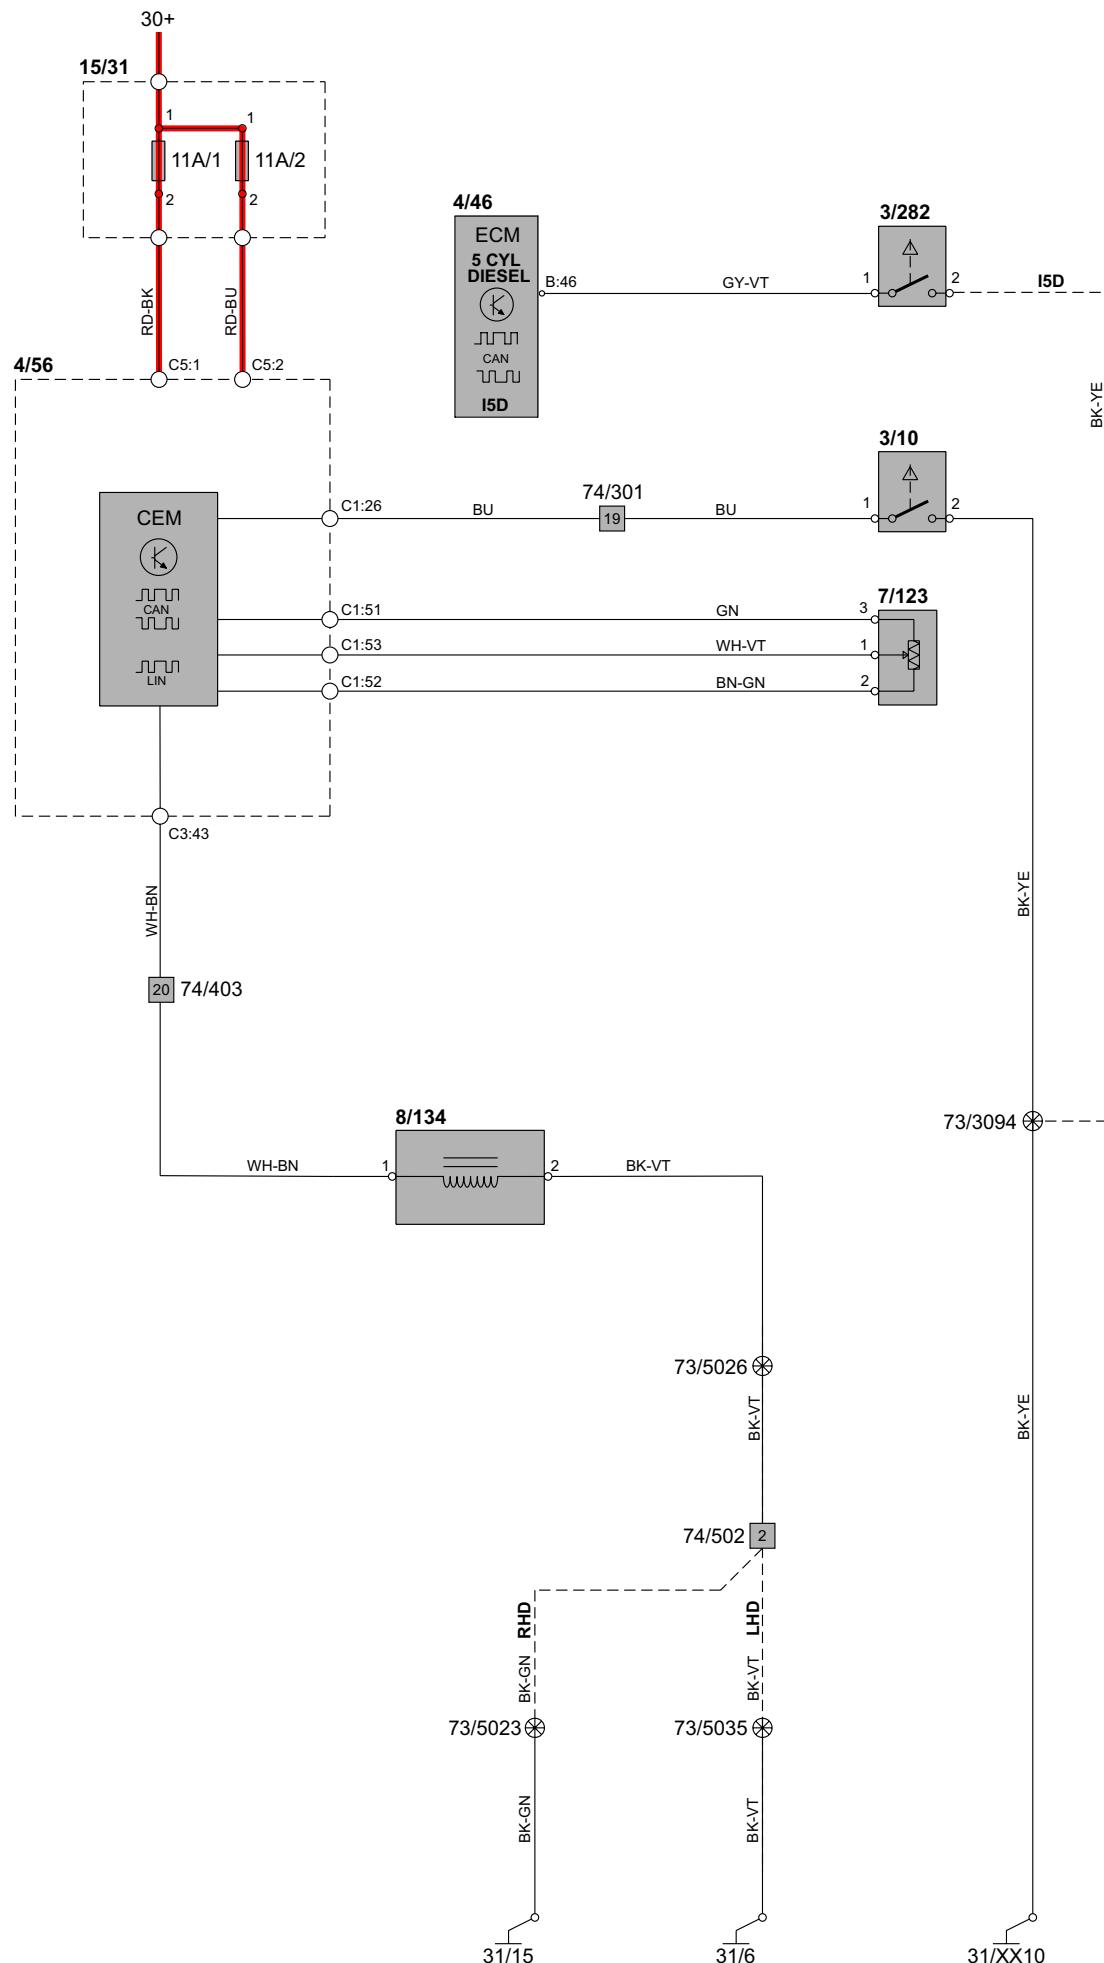


Group 43 Transmission

Automatic transmission TF-80SC AWD

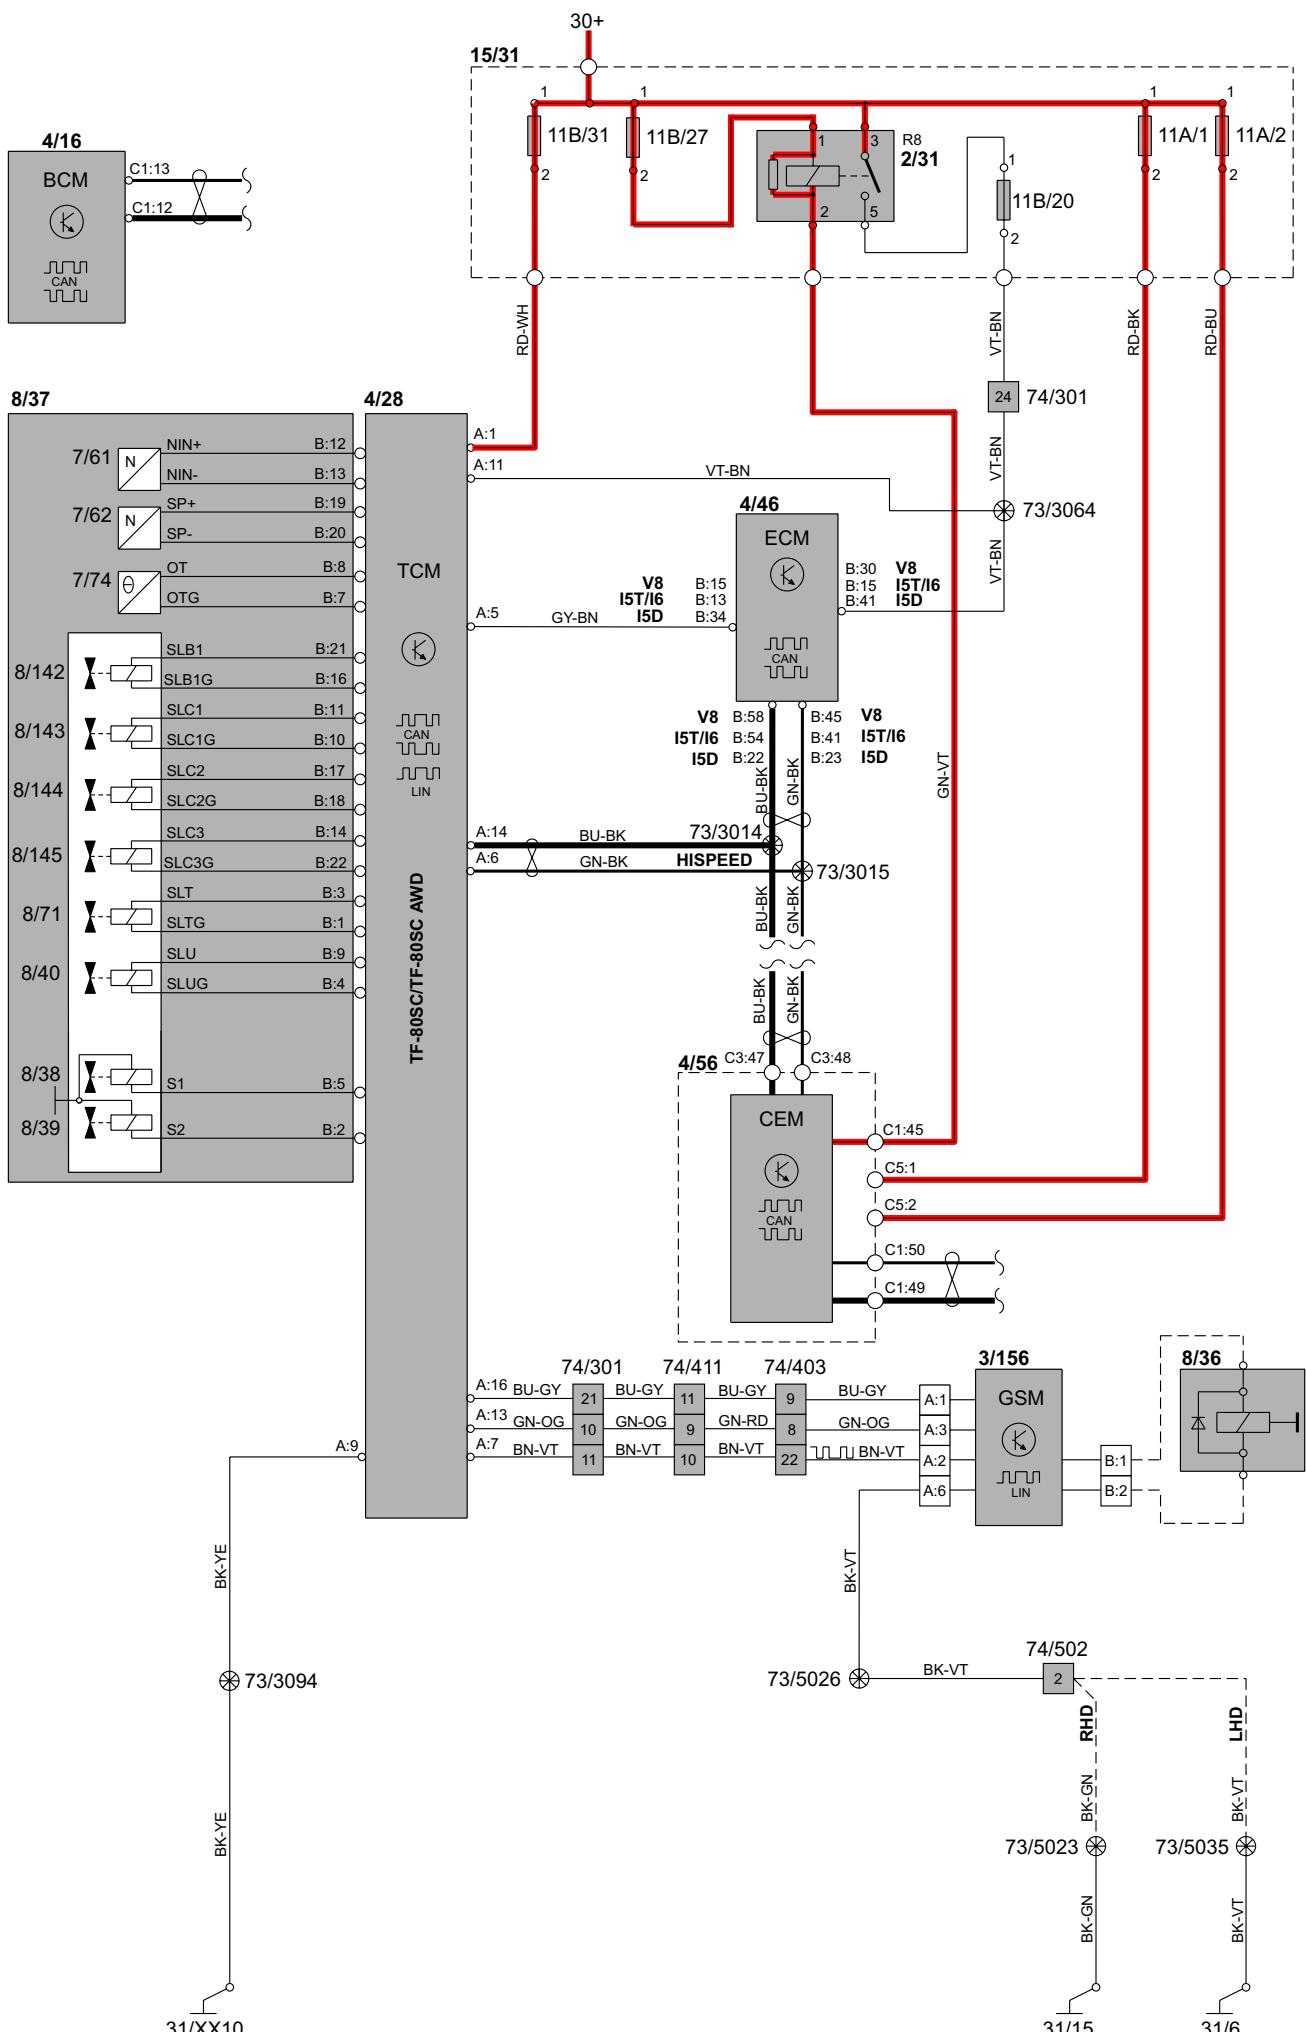


Group 43 Transmission

Differential Electronic Module (DEM)

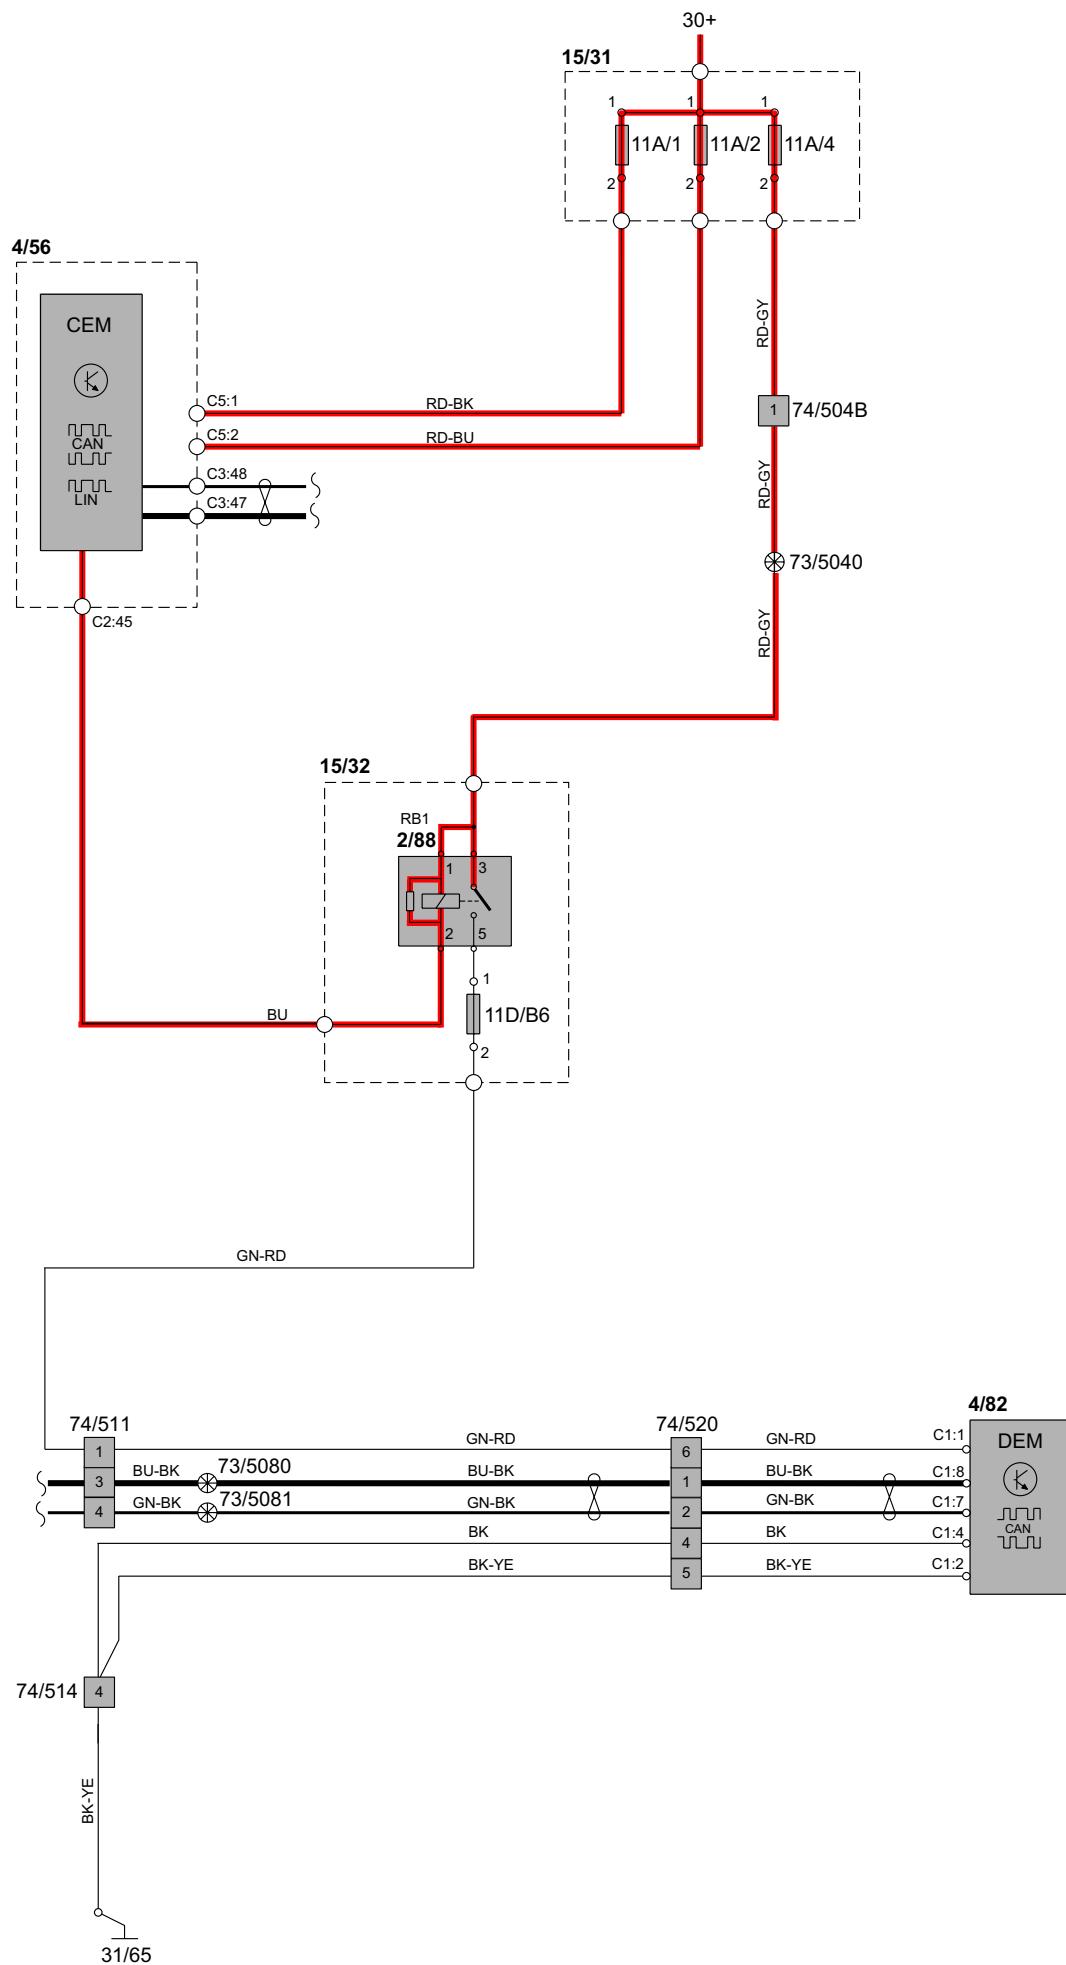


Group 55 Parking brake

Electronic parking brake

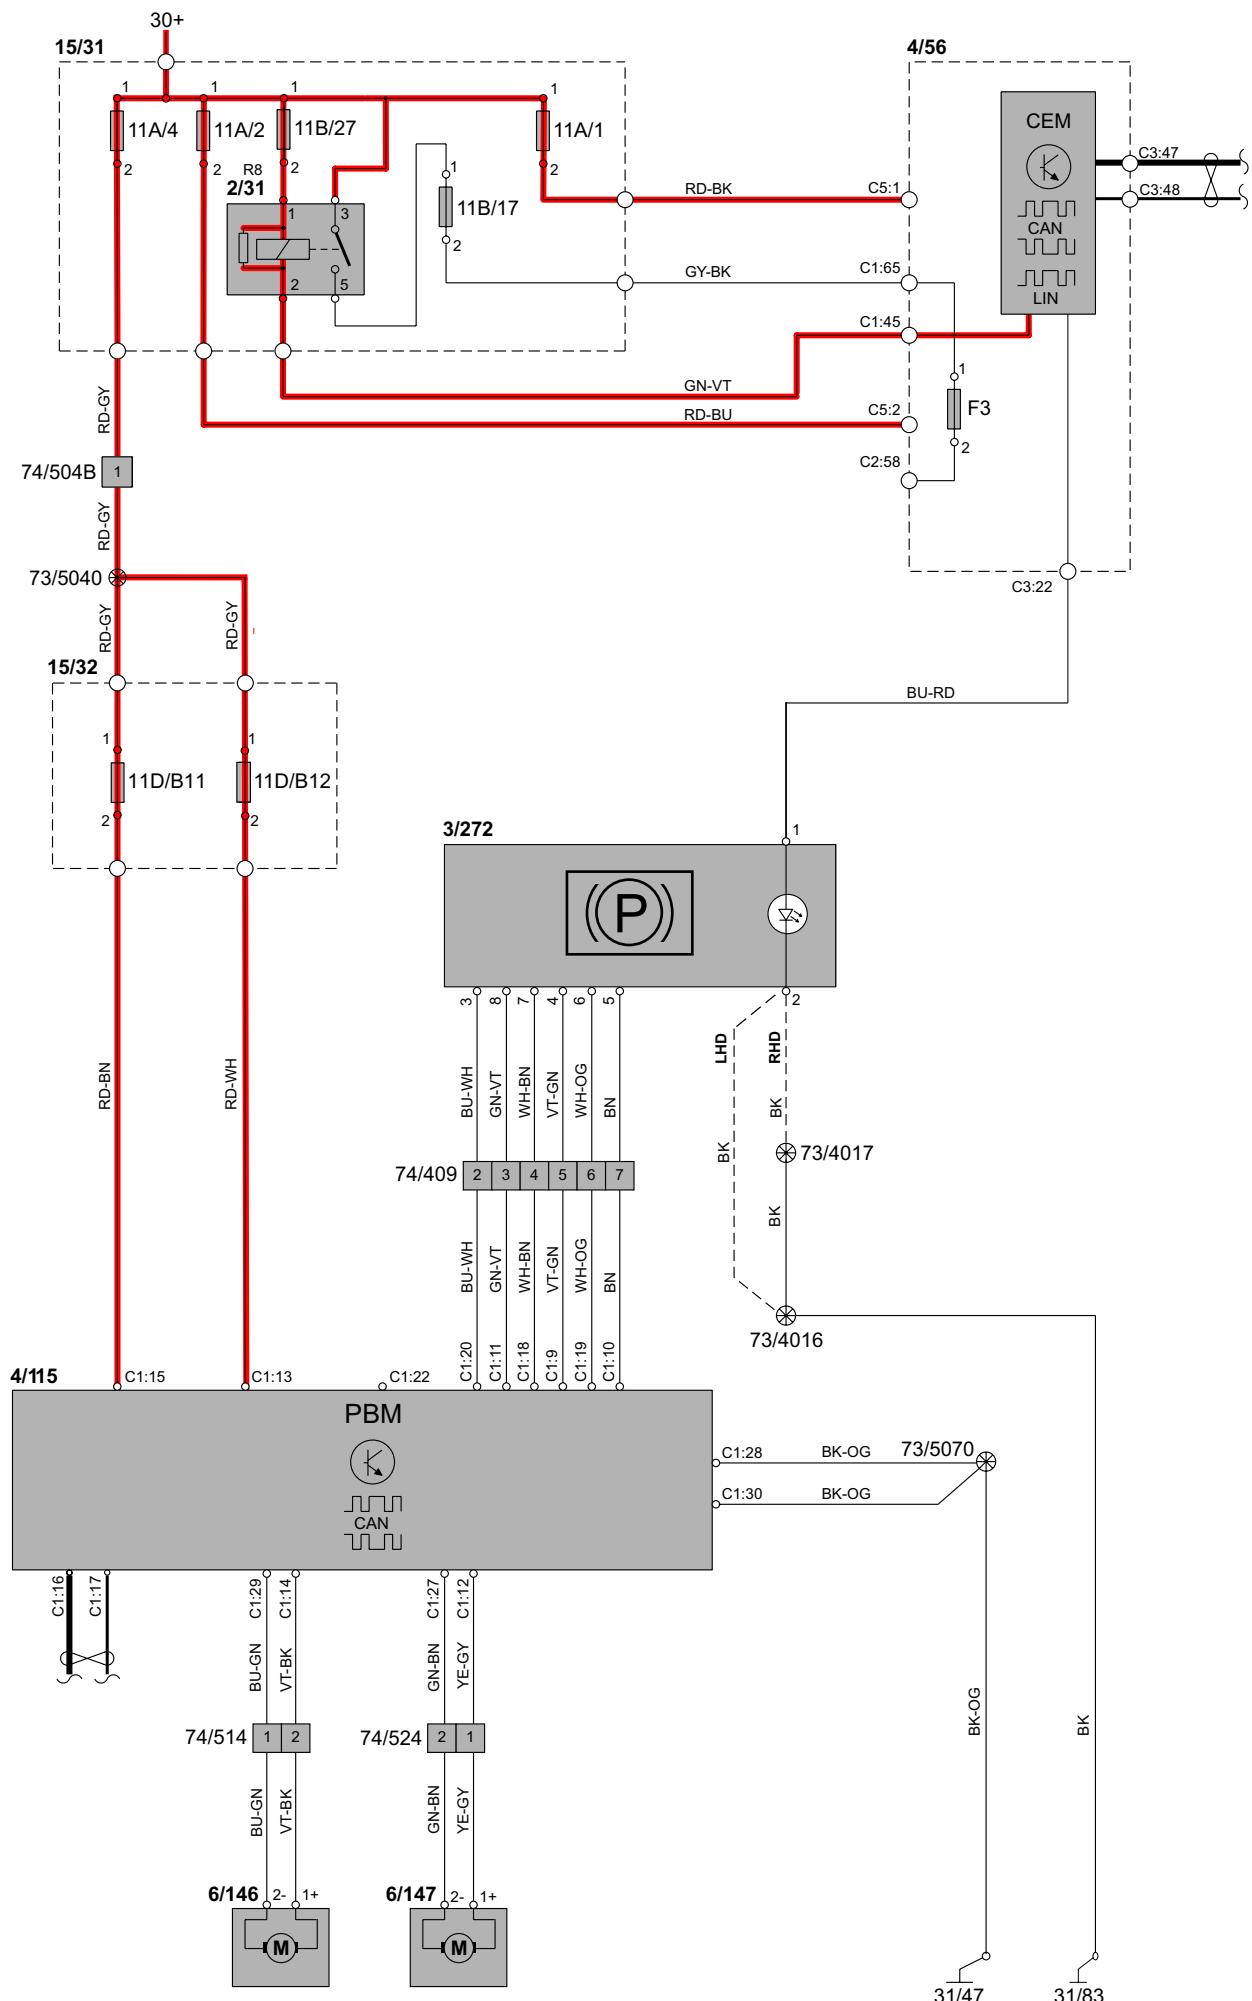


Group 59 Brake system

Brake control system & DSTC

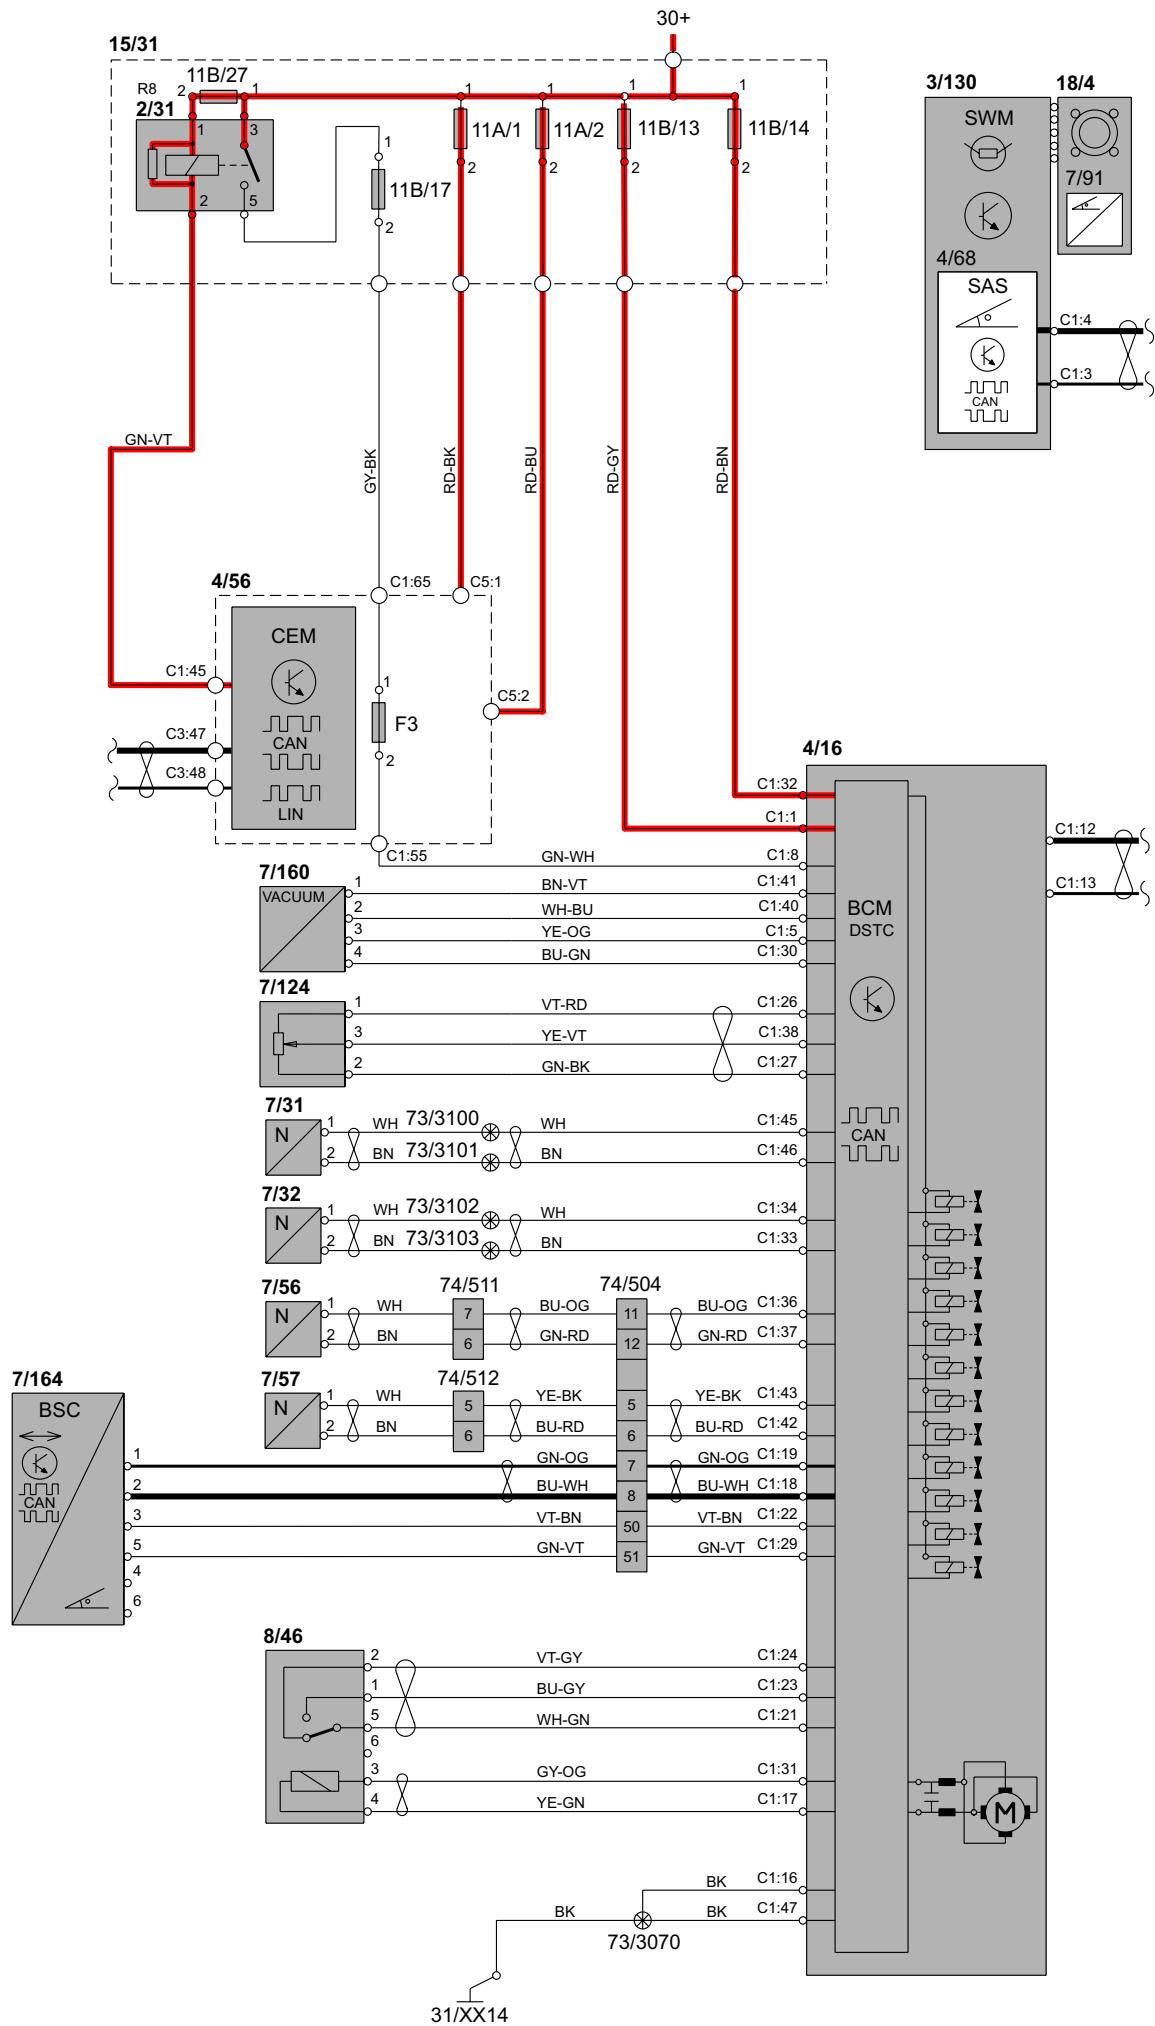


Group 64 Steering

Electronic power steering

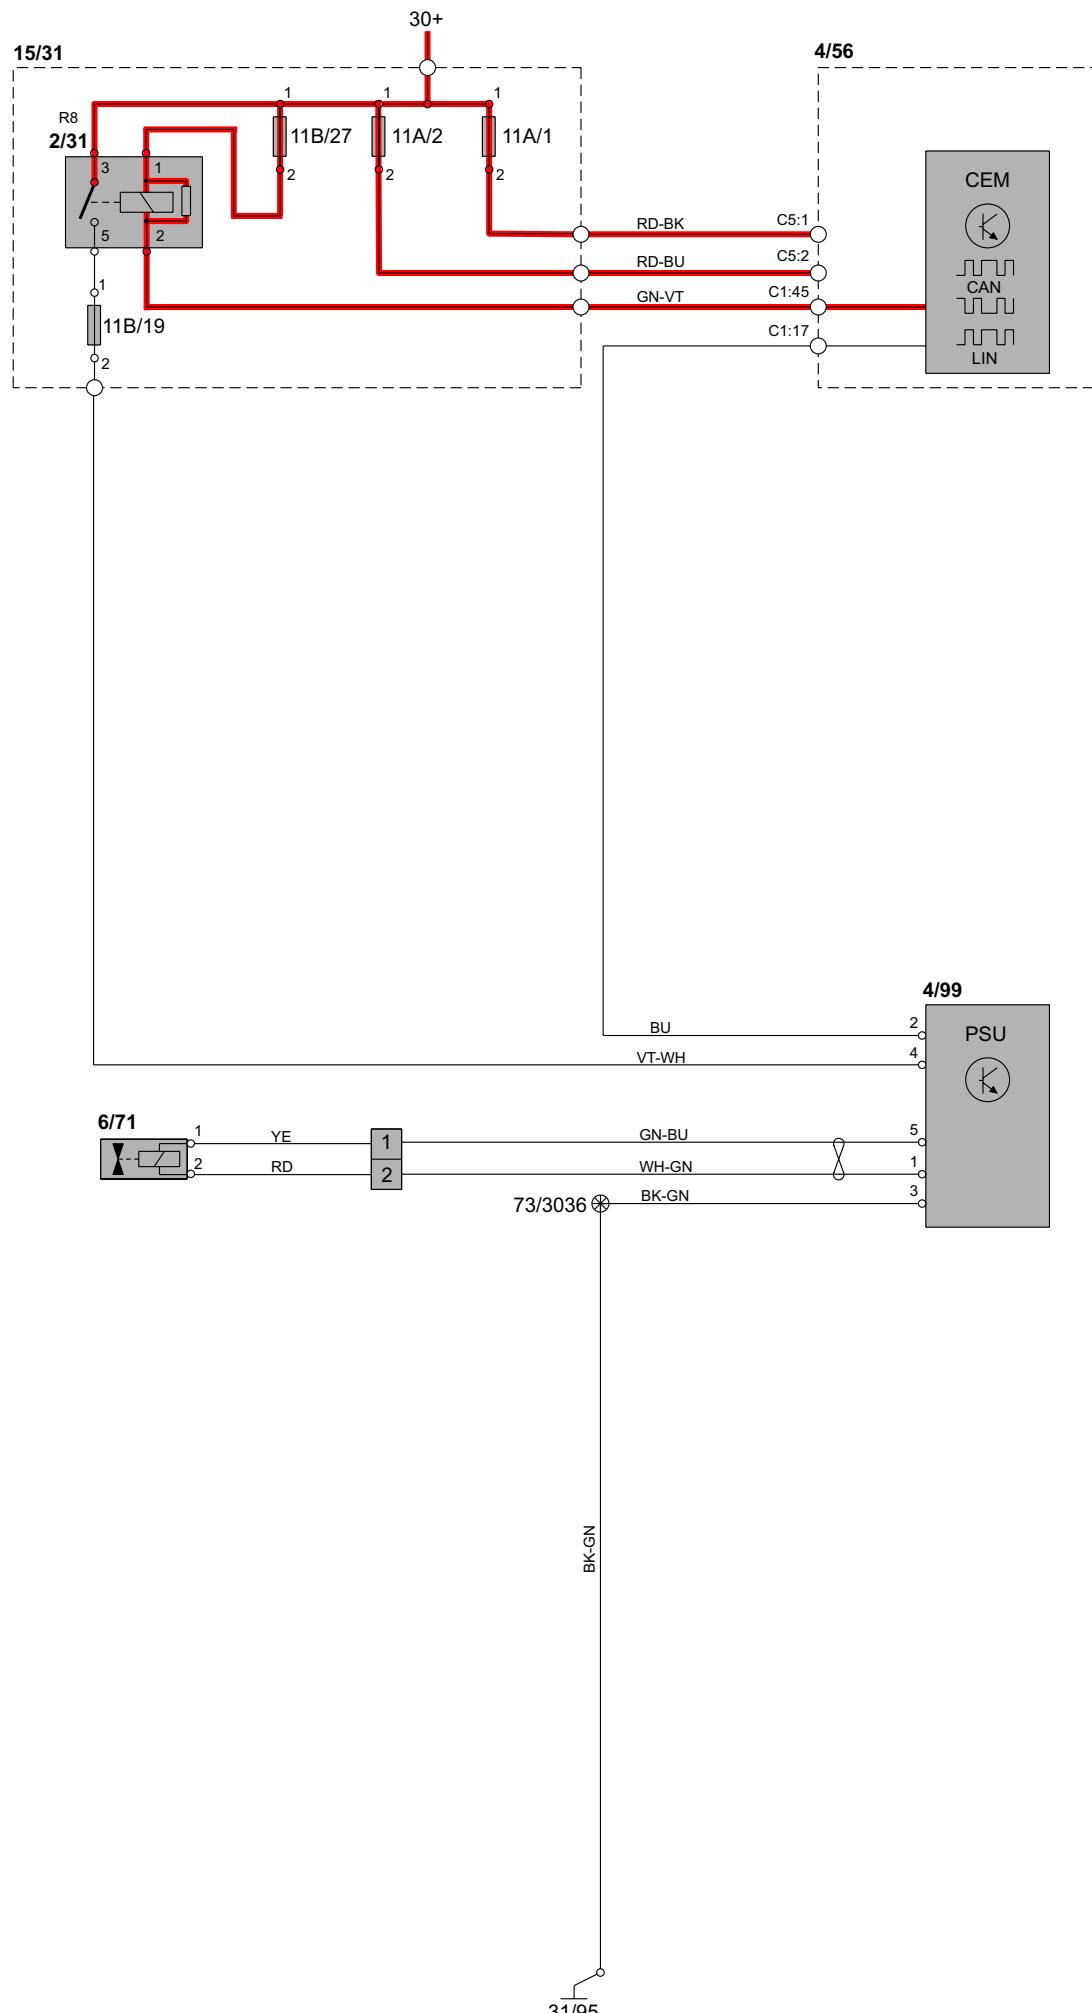


Group 76 Shock absorbers

Four-C

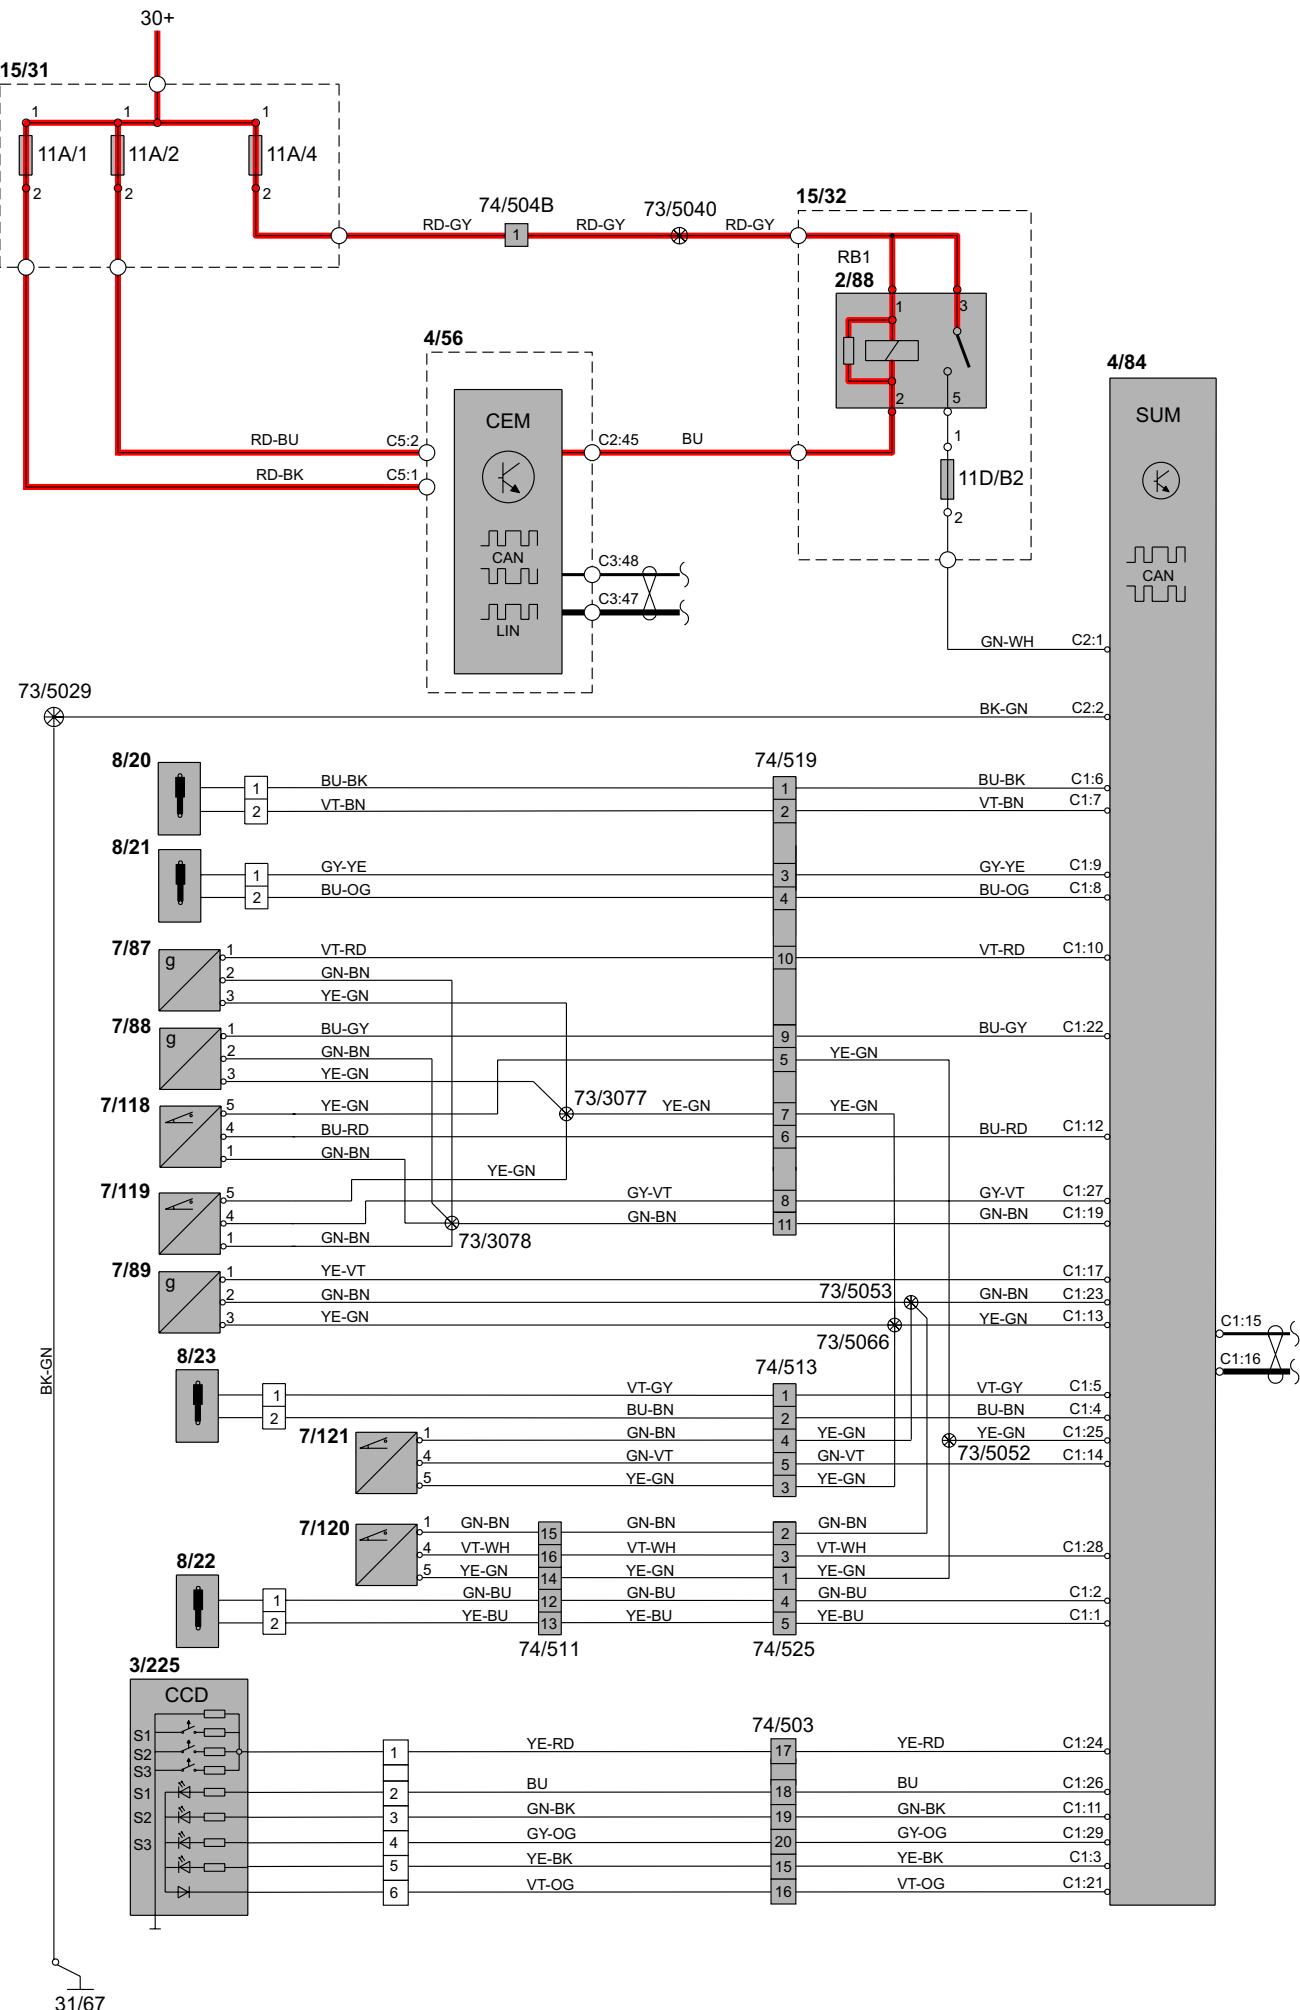


Group 83 Doors and openings

Central locking, front doors, LHD

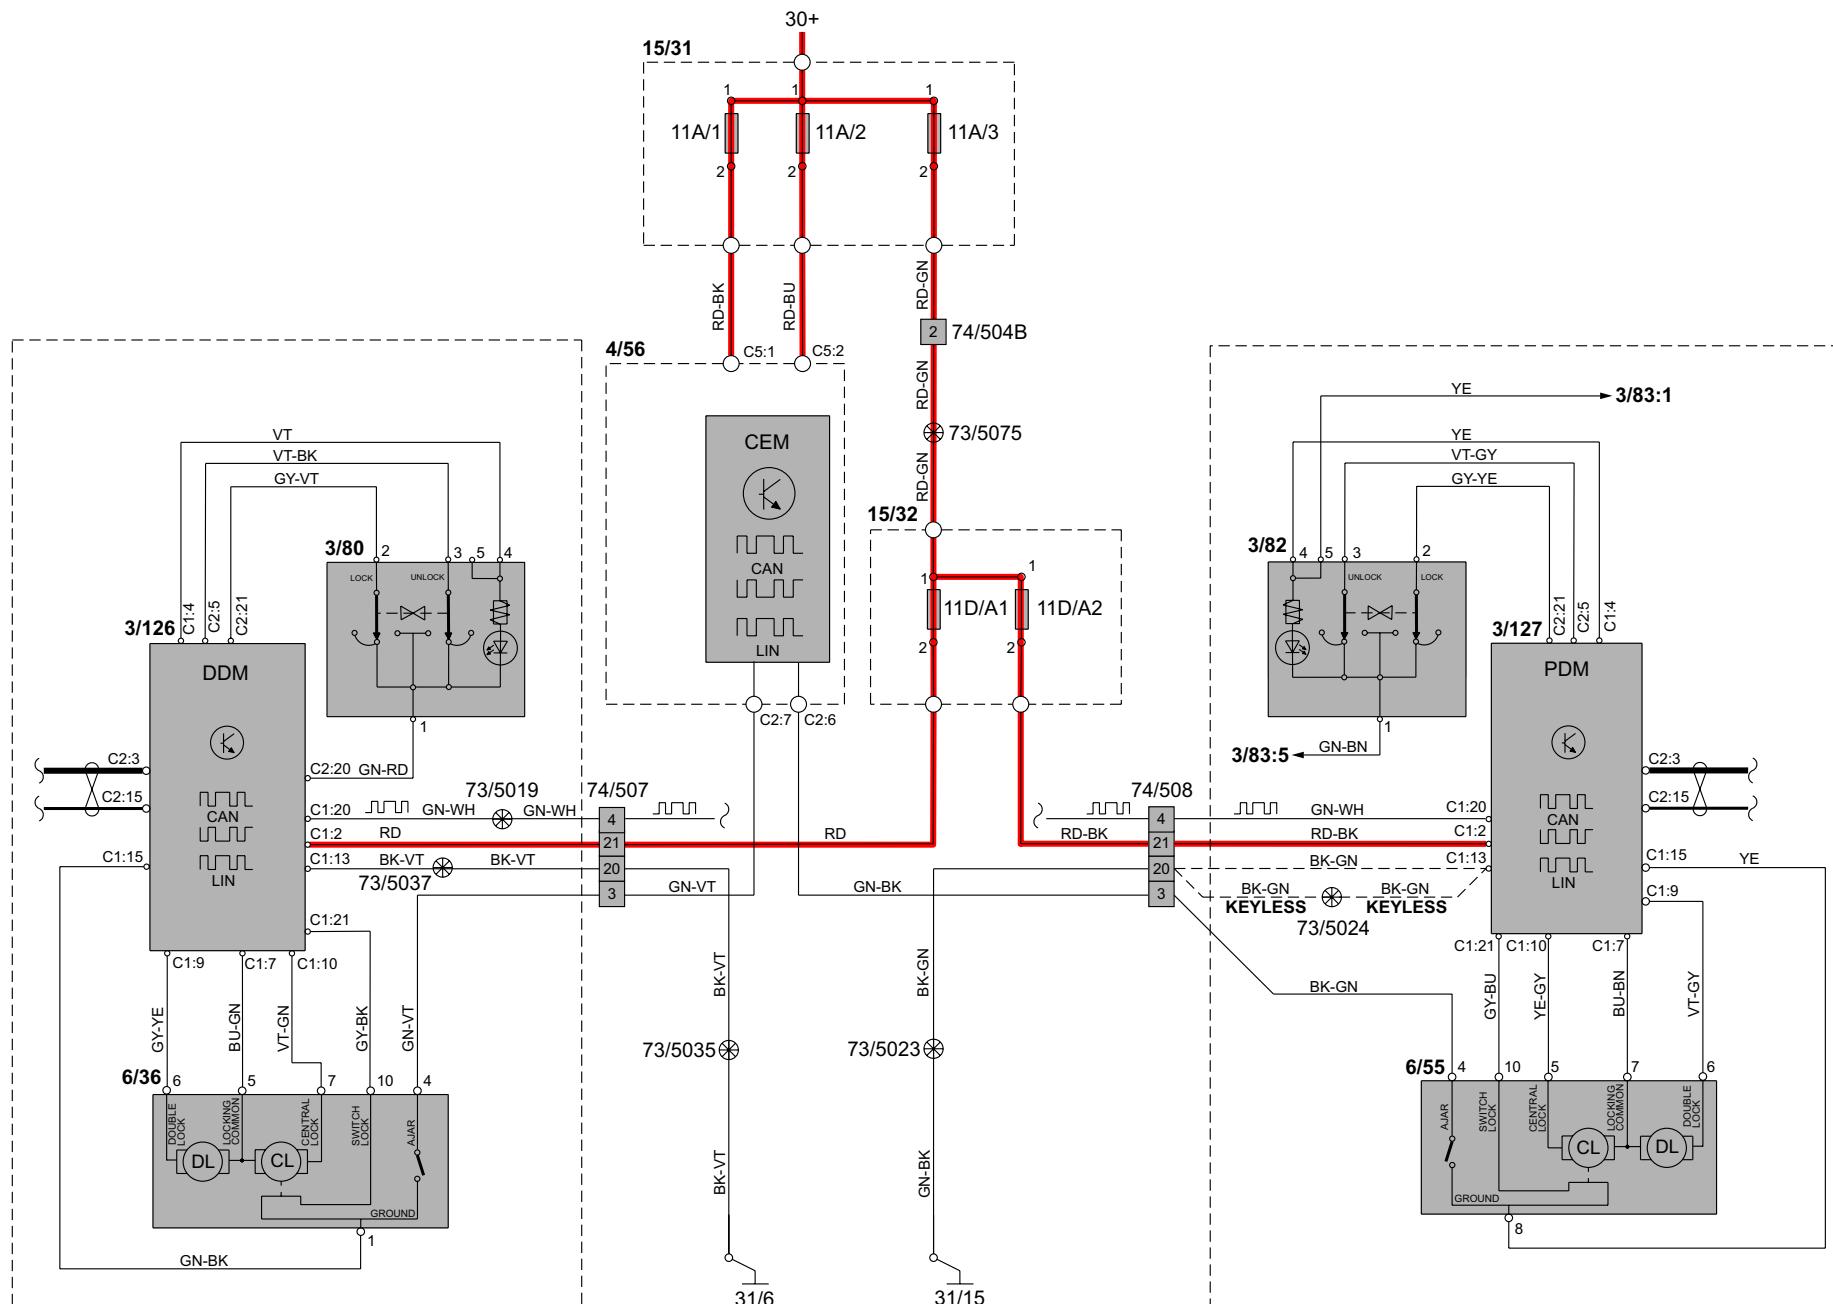


Group 83 Doors and openings

Central locking, front doors, RHD

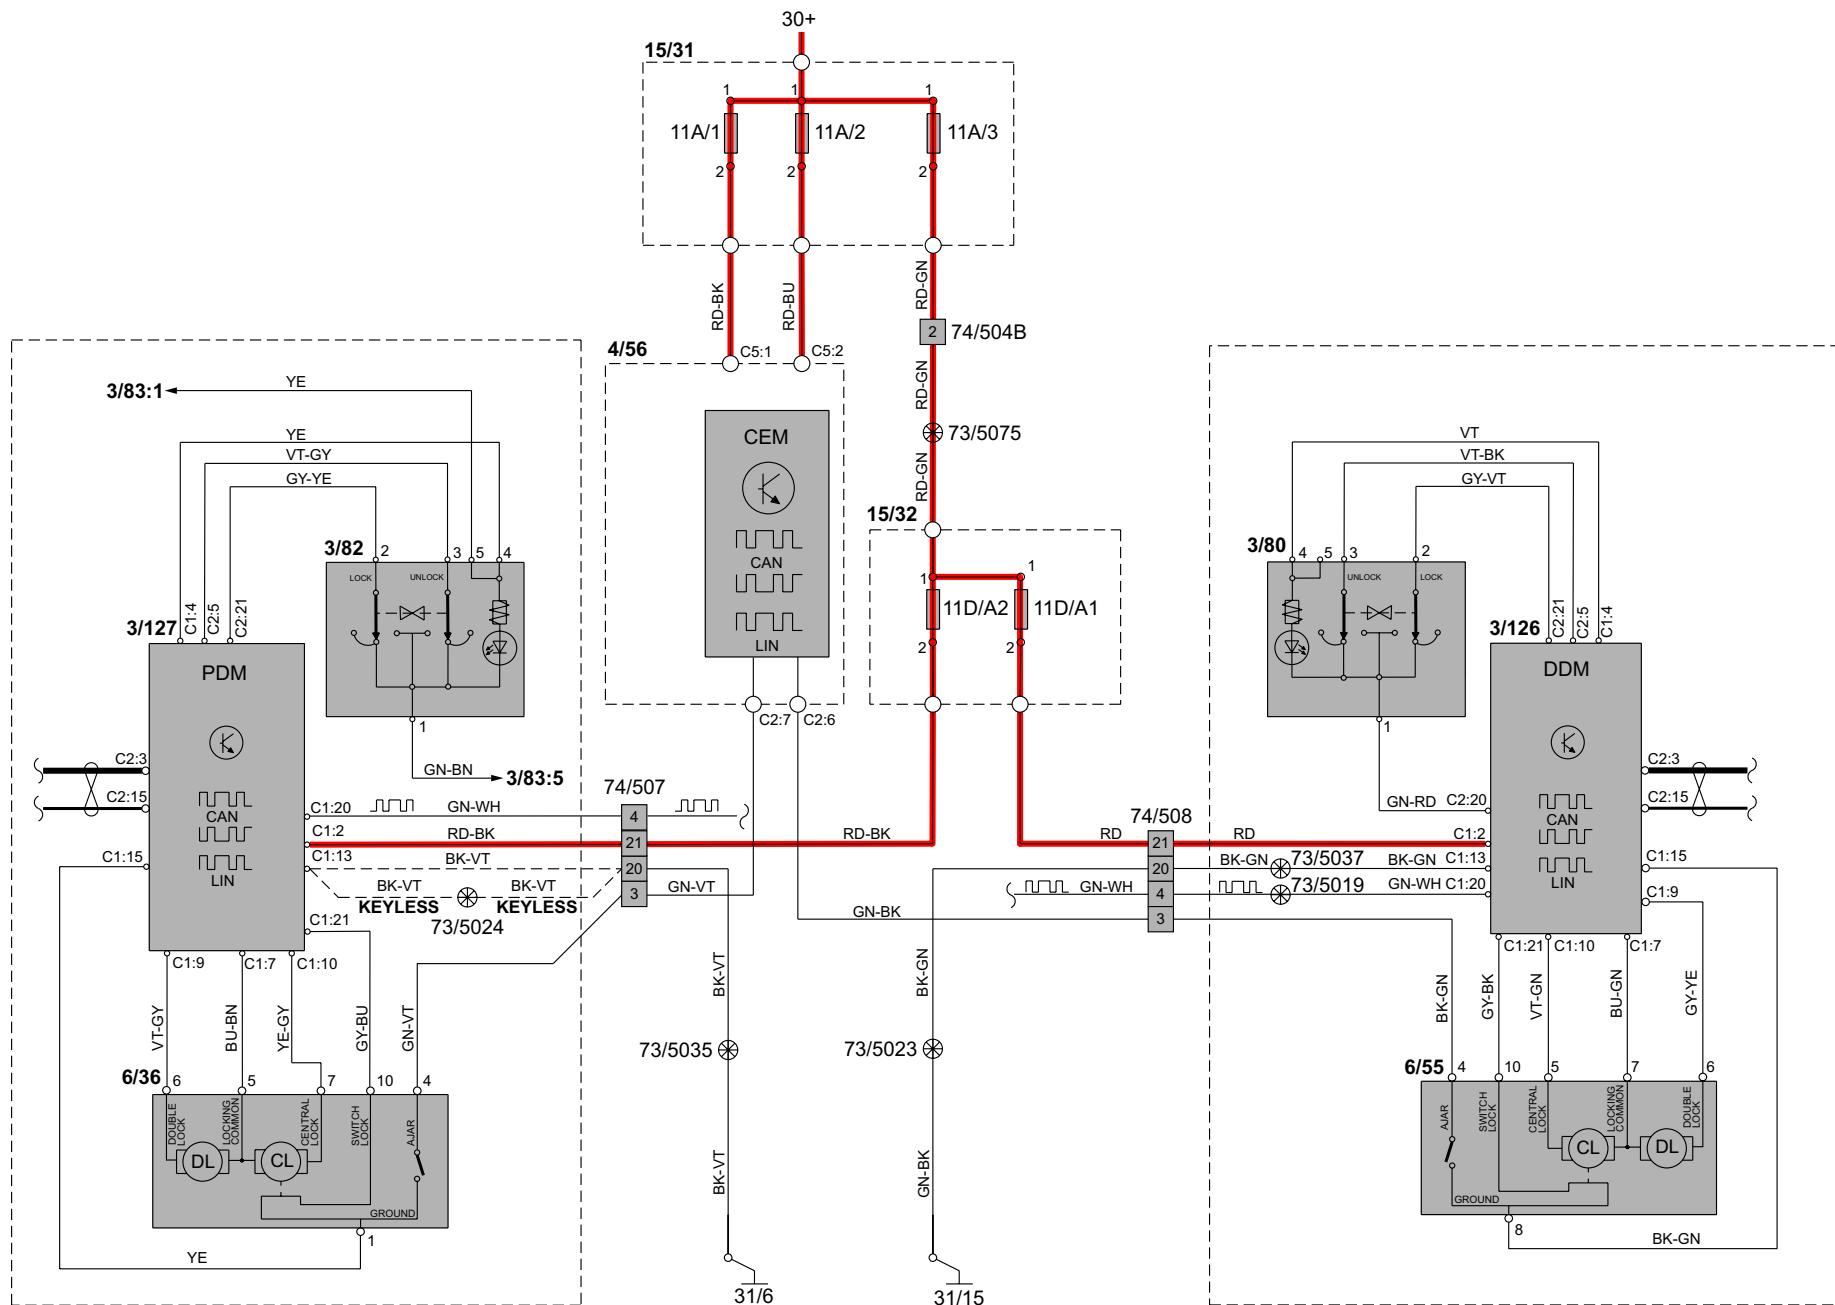


Group 83 Doors and openings

Central locking, rear doors

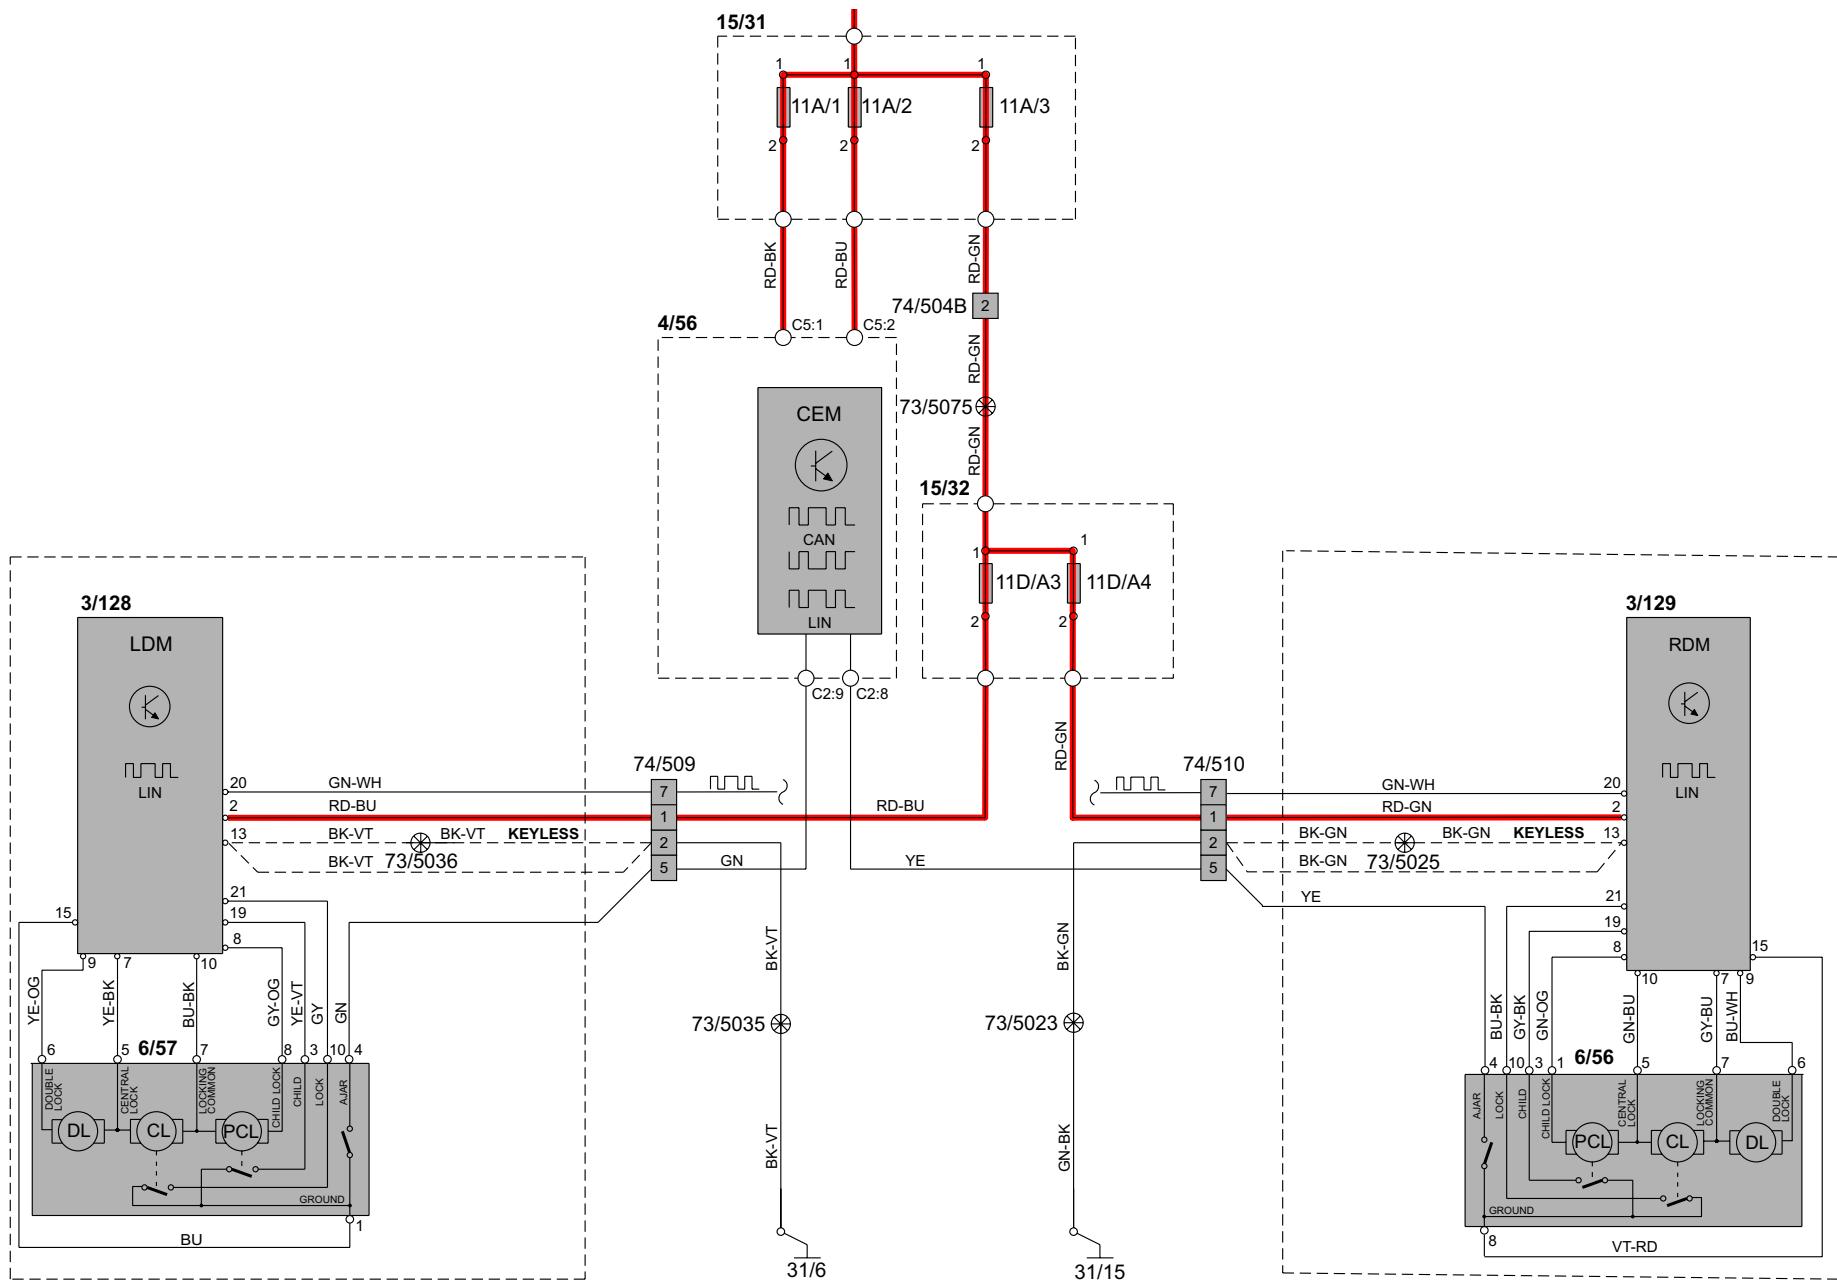


Group 83 Doors and openings

Central locking, trunk lid V70

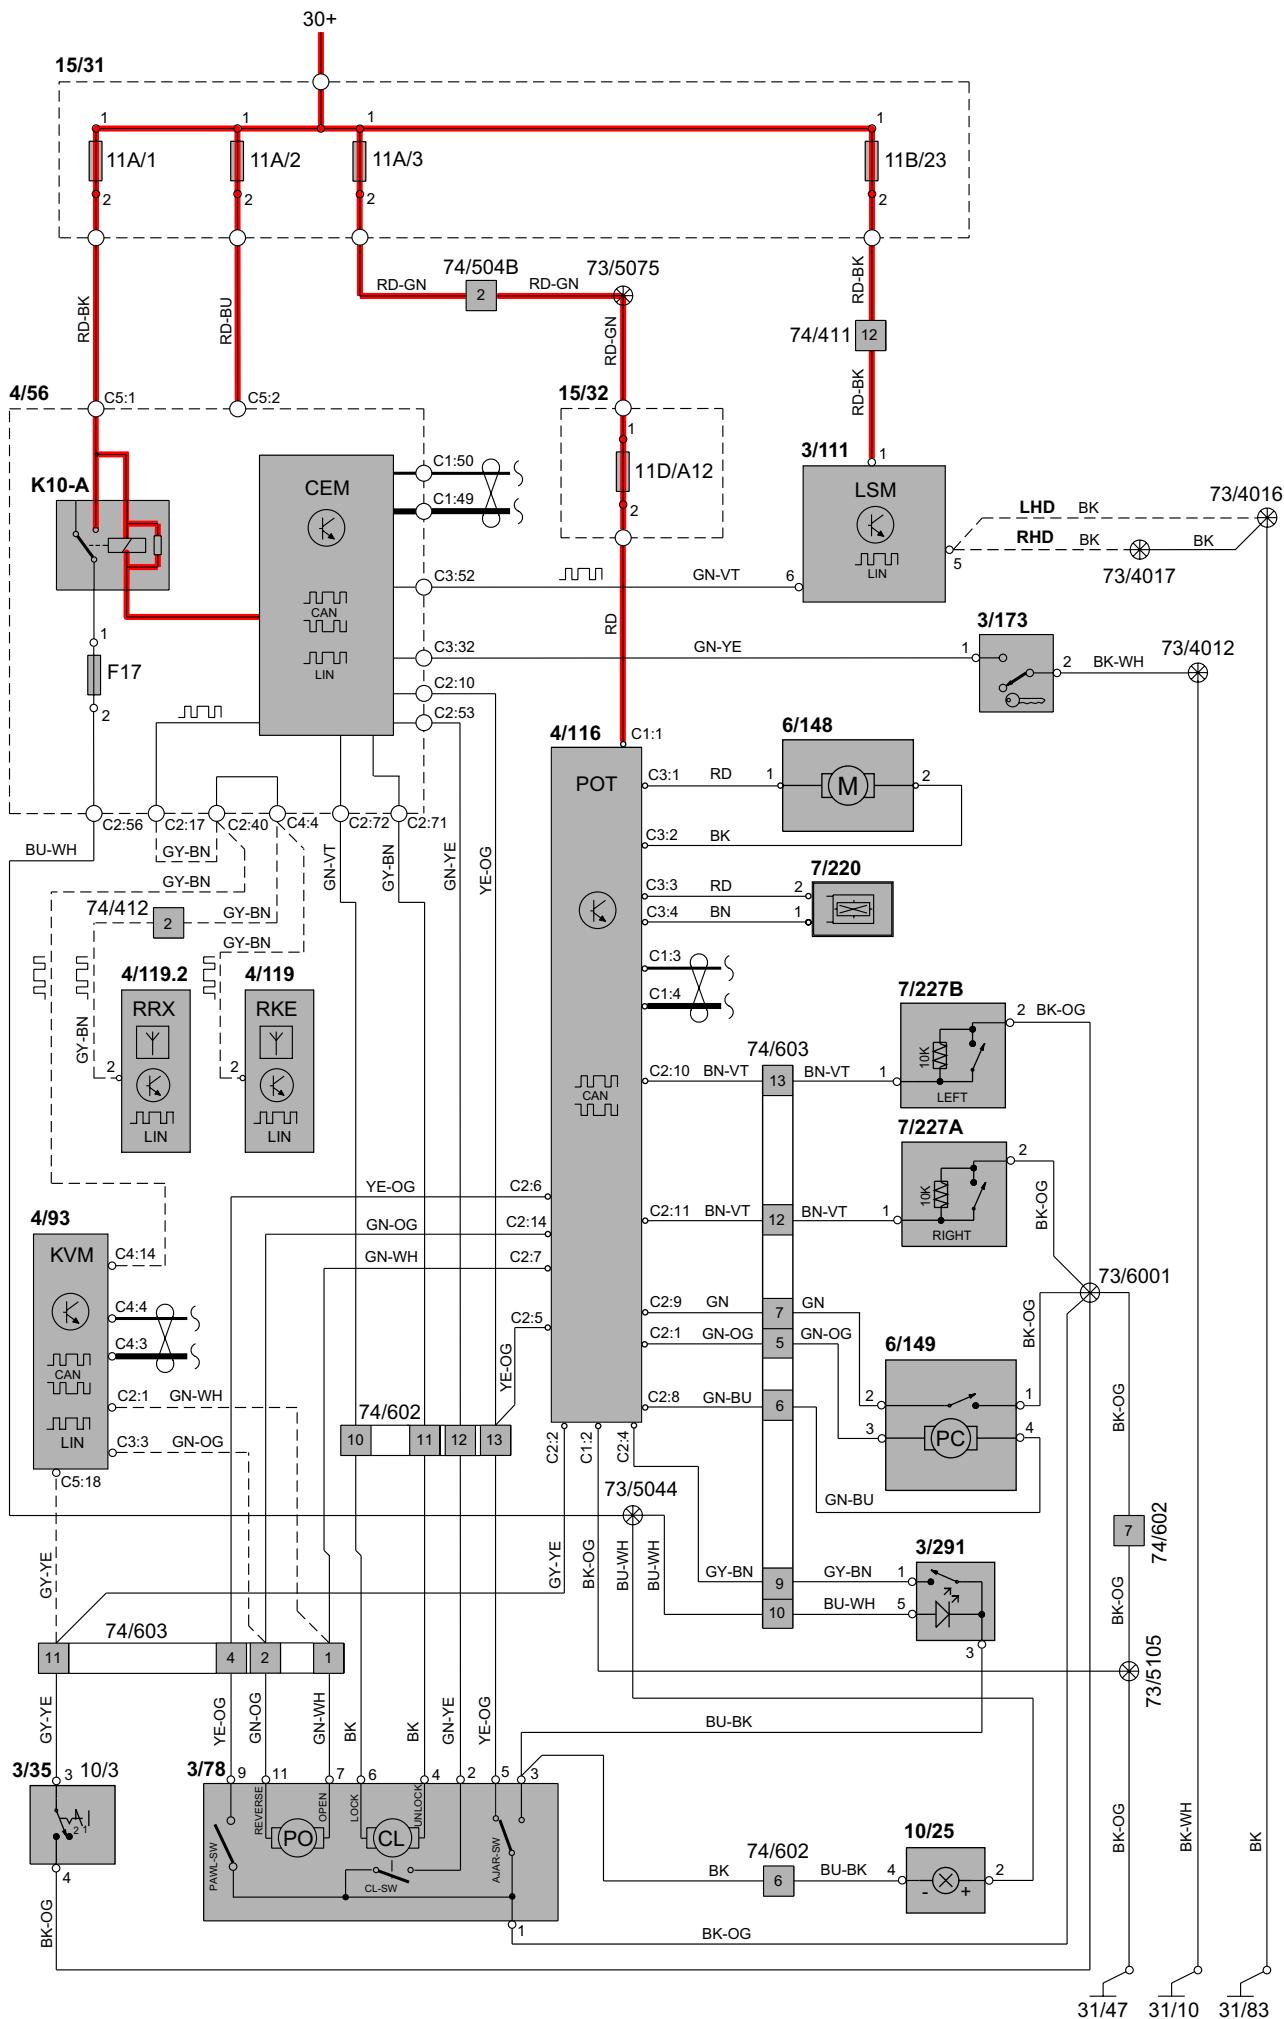


Group 83 Doors and openings

Central locking, trunk lid S80

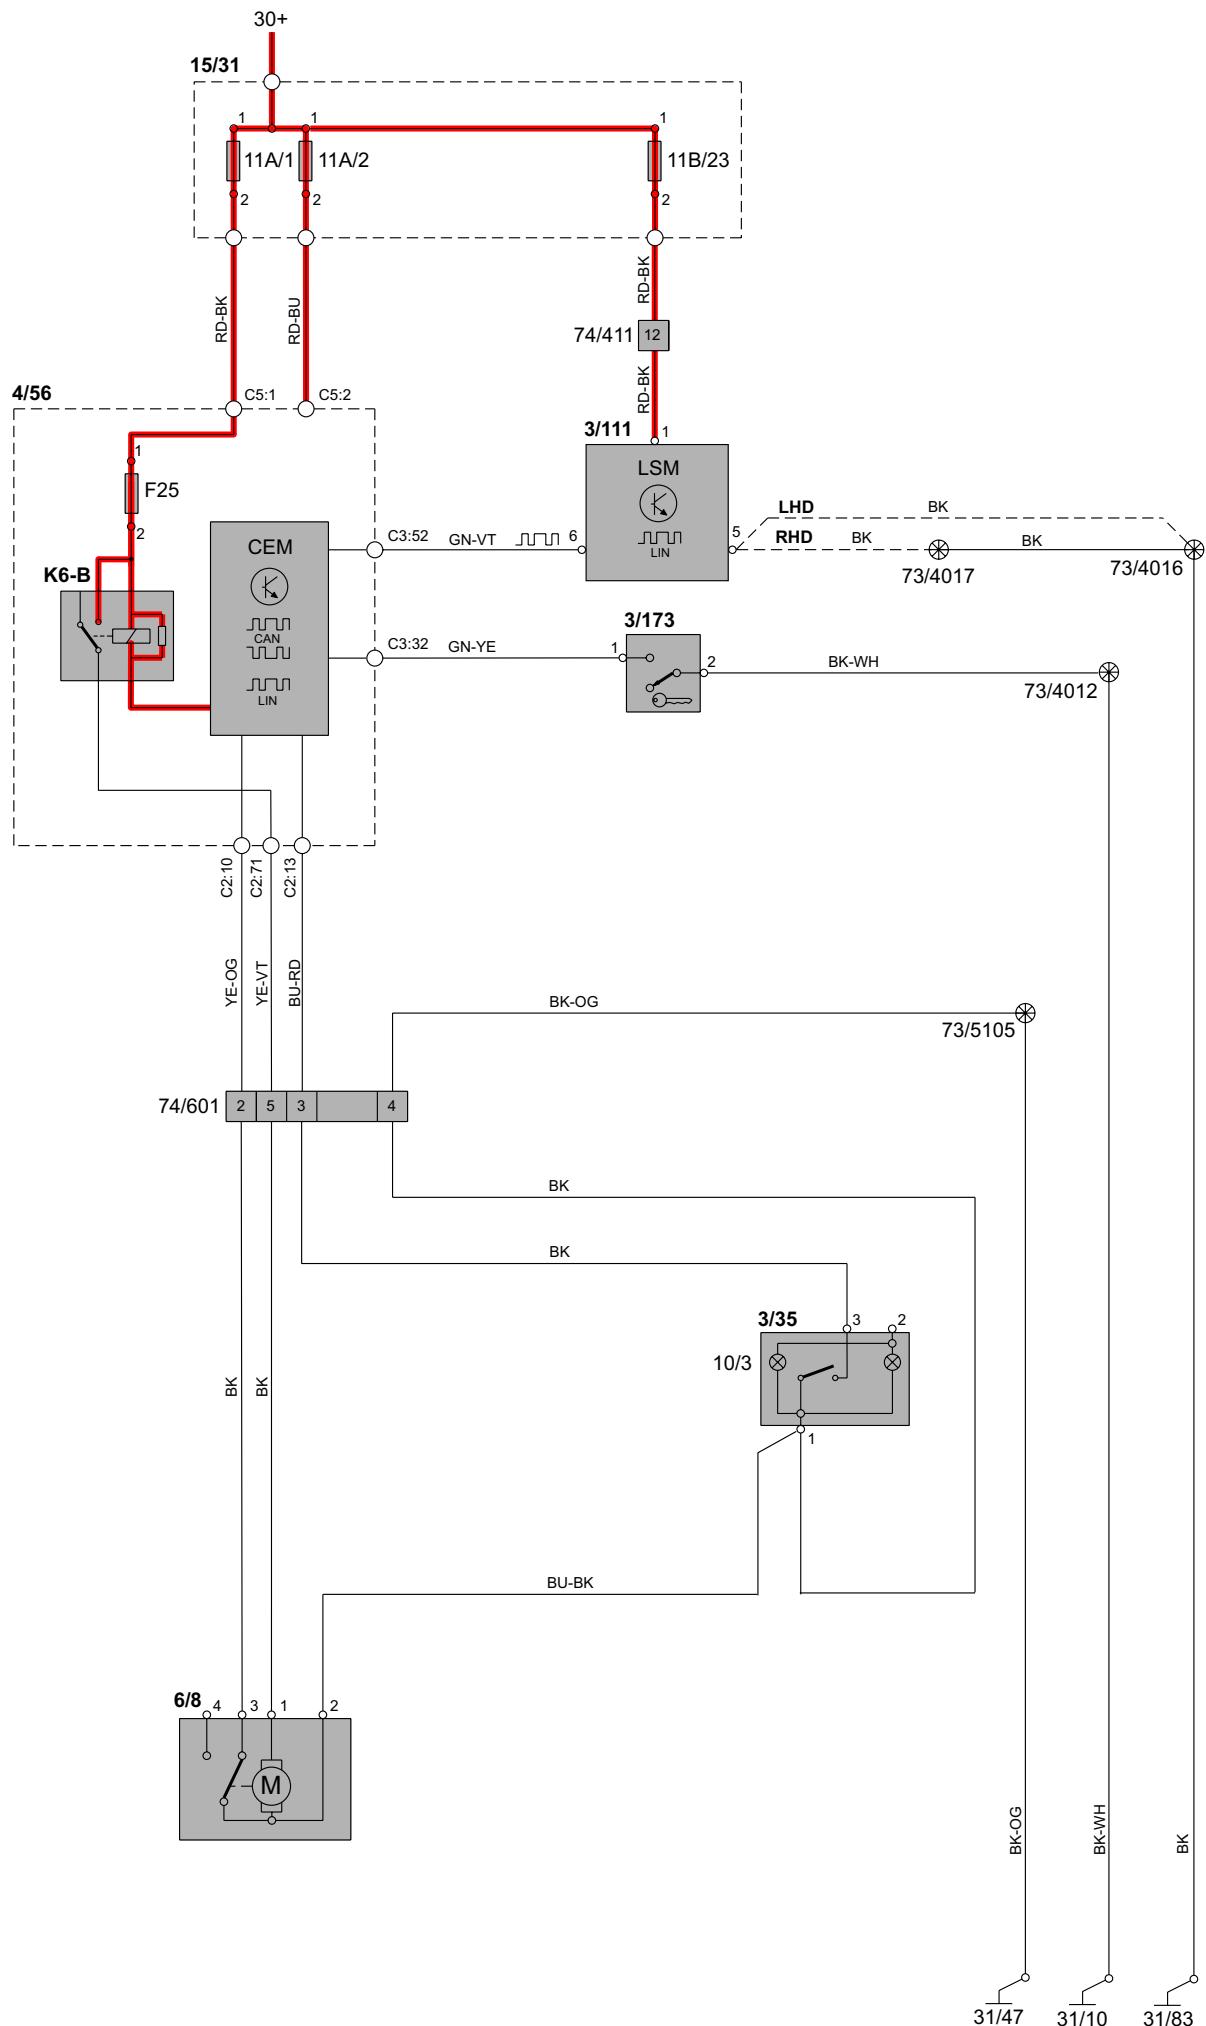


Group 83 Doors and openings

Central locking, fuel filler flap

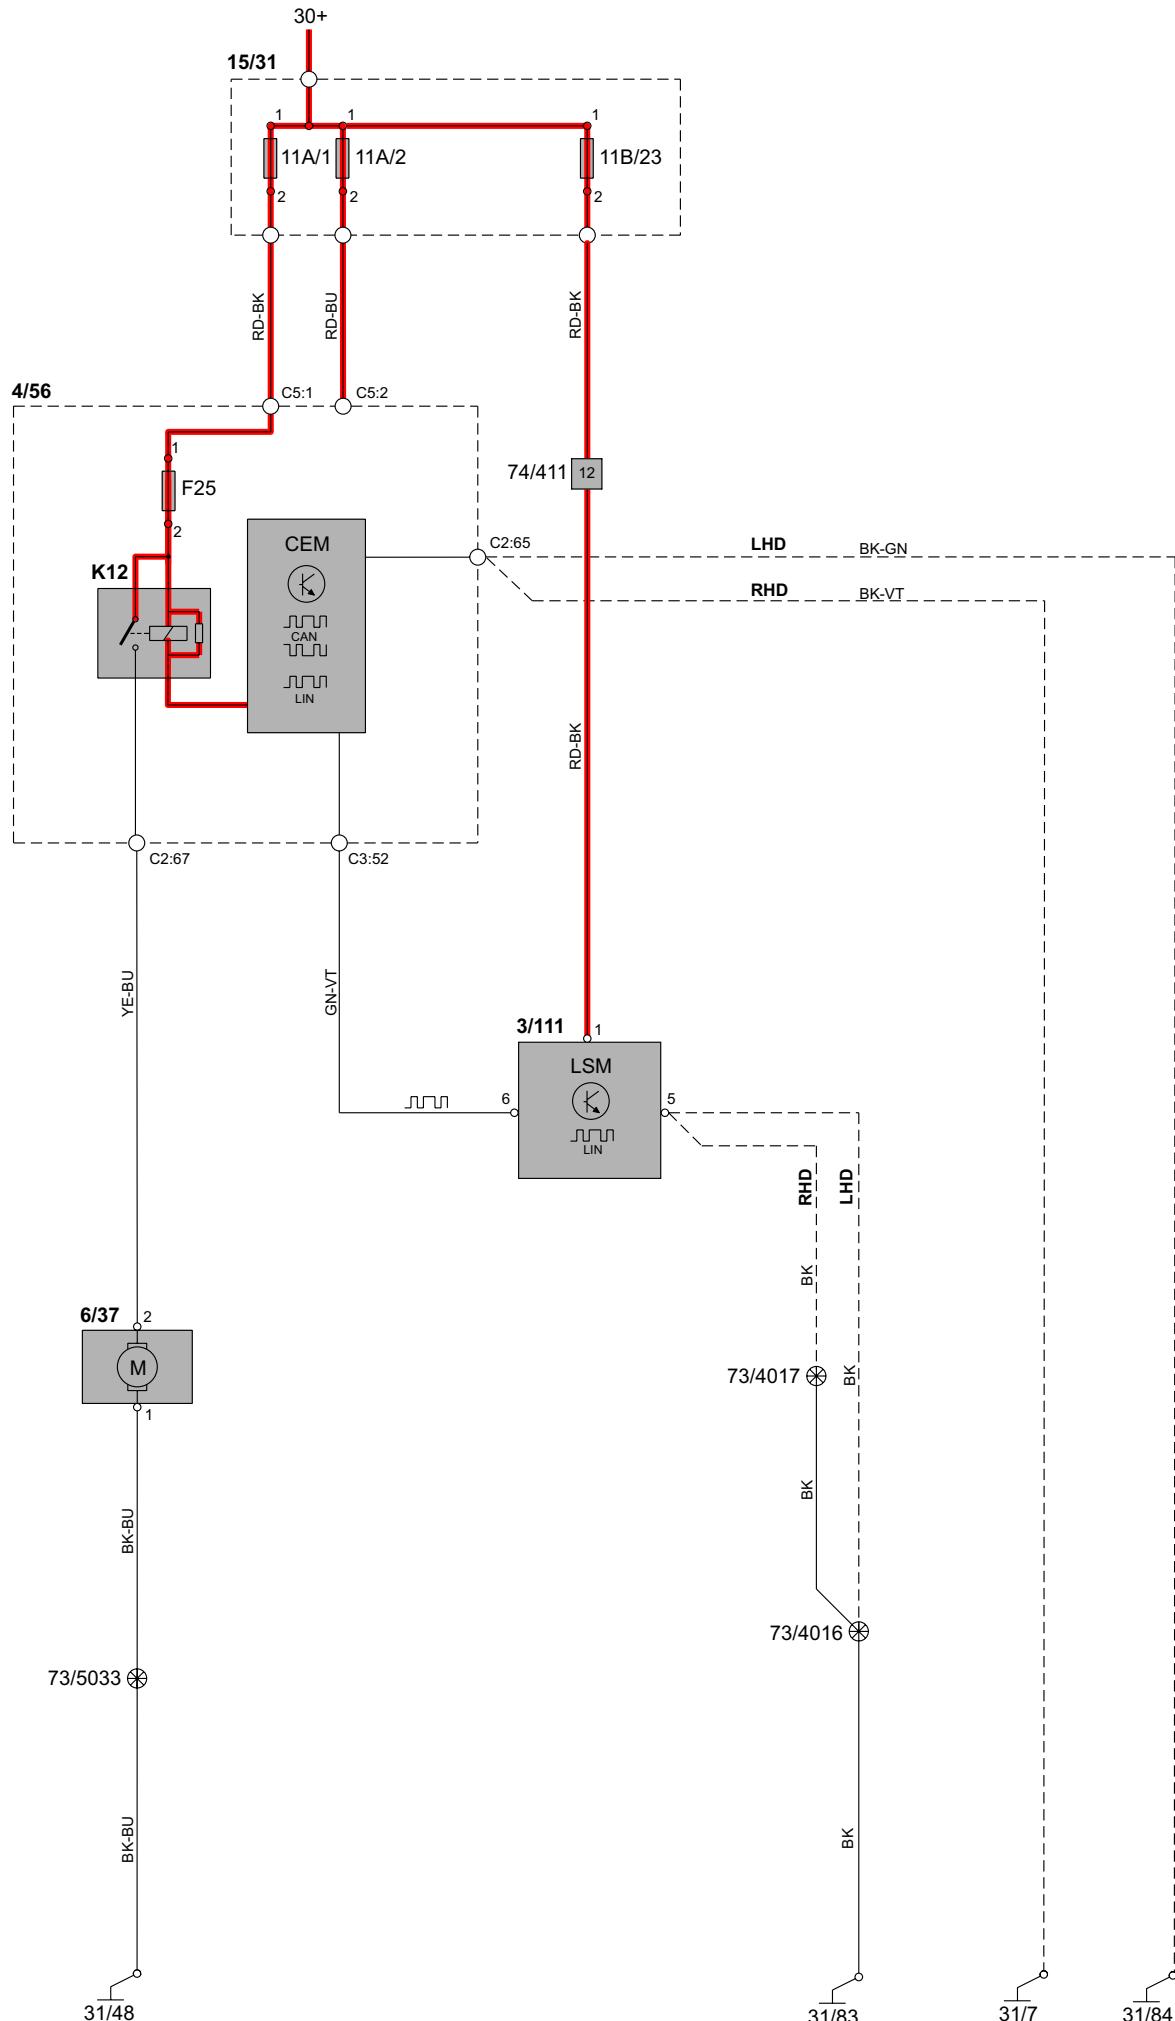


Group 83 Doors and openings

Signal receiver, central locking

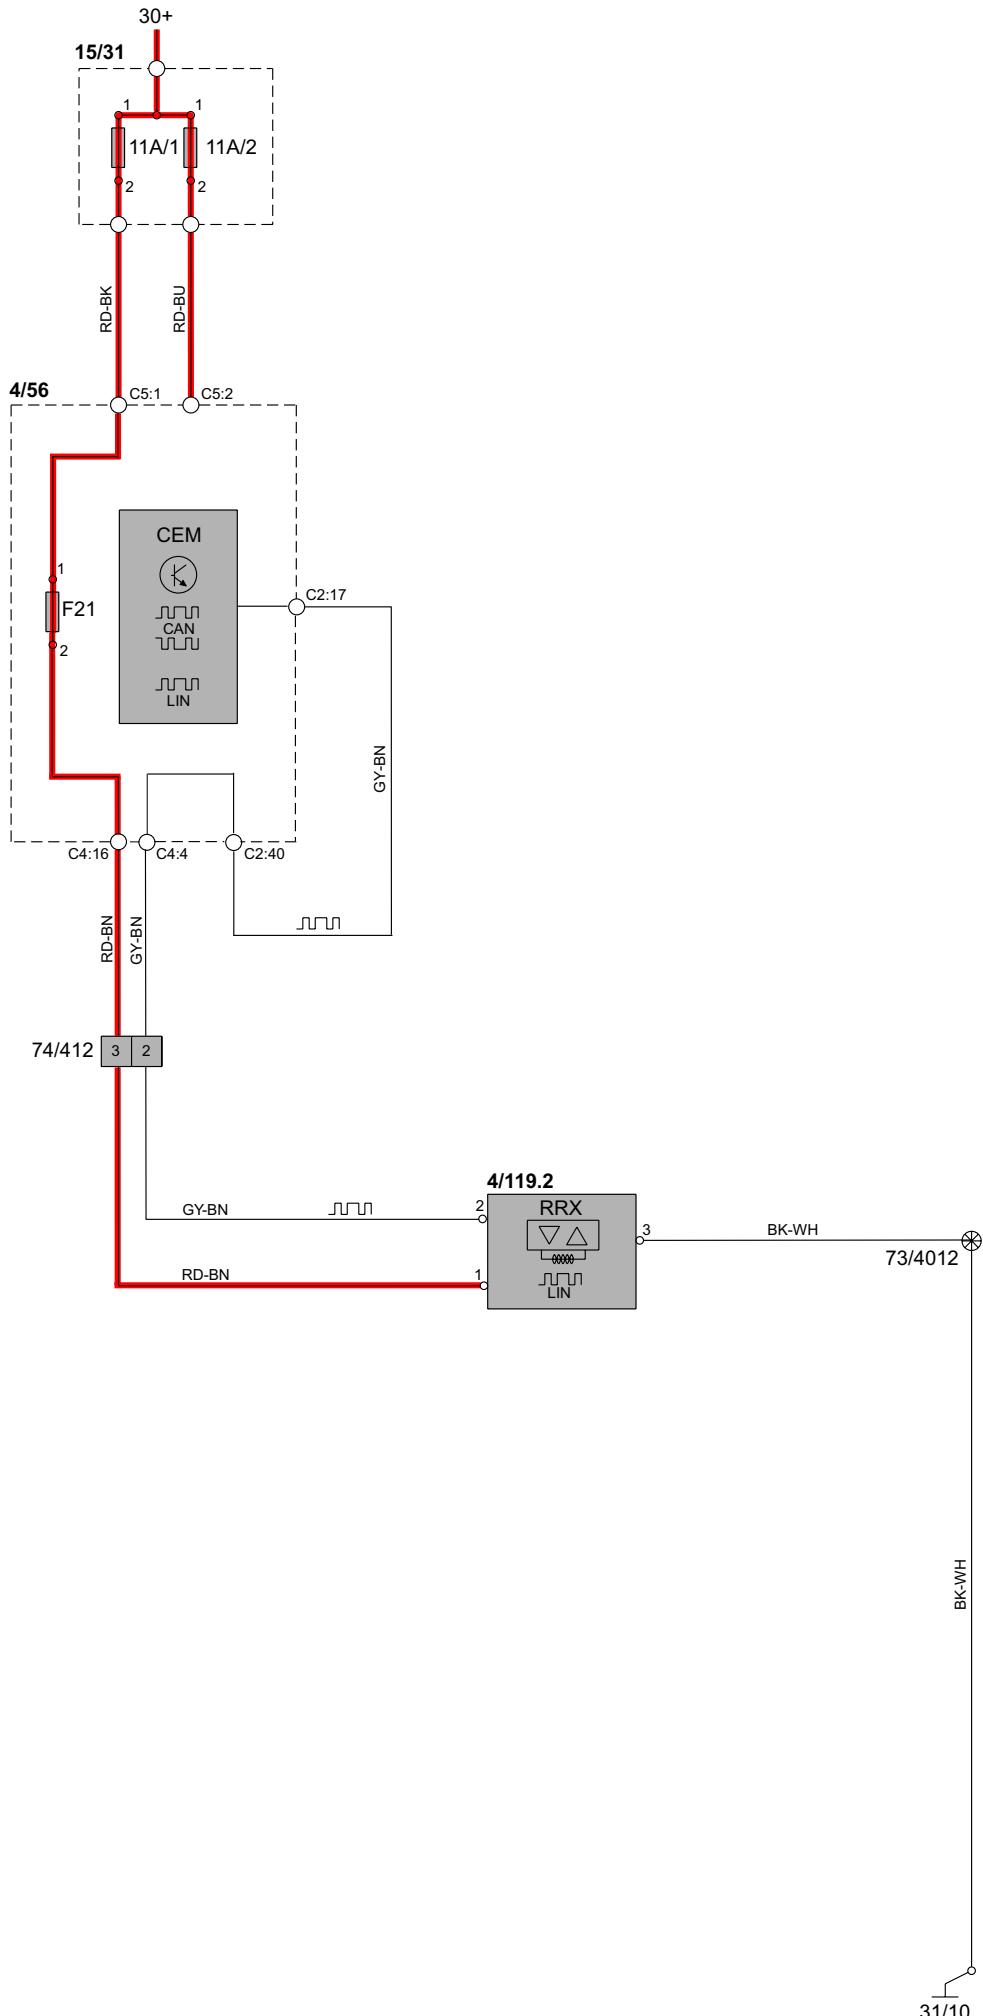


Group 83 Doors and openings

Front door power windows, LHD

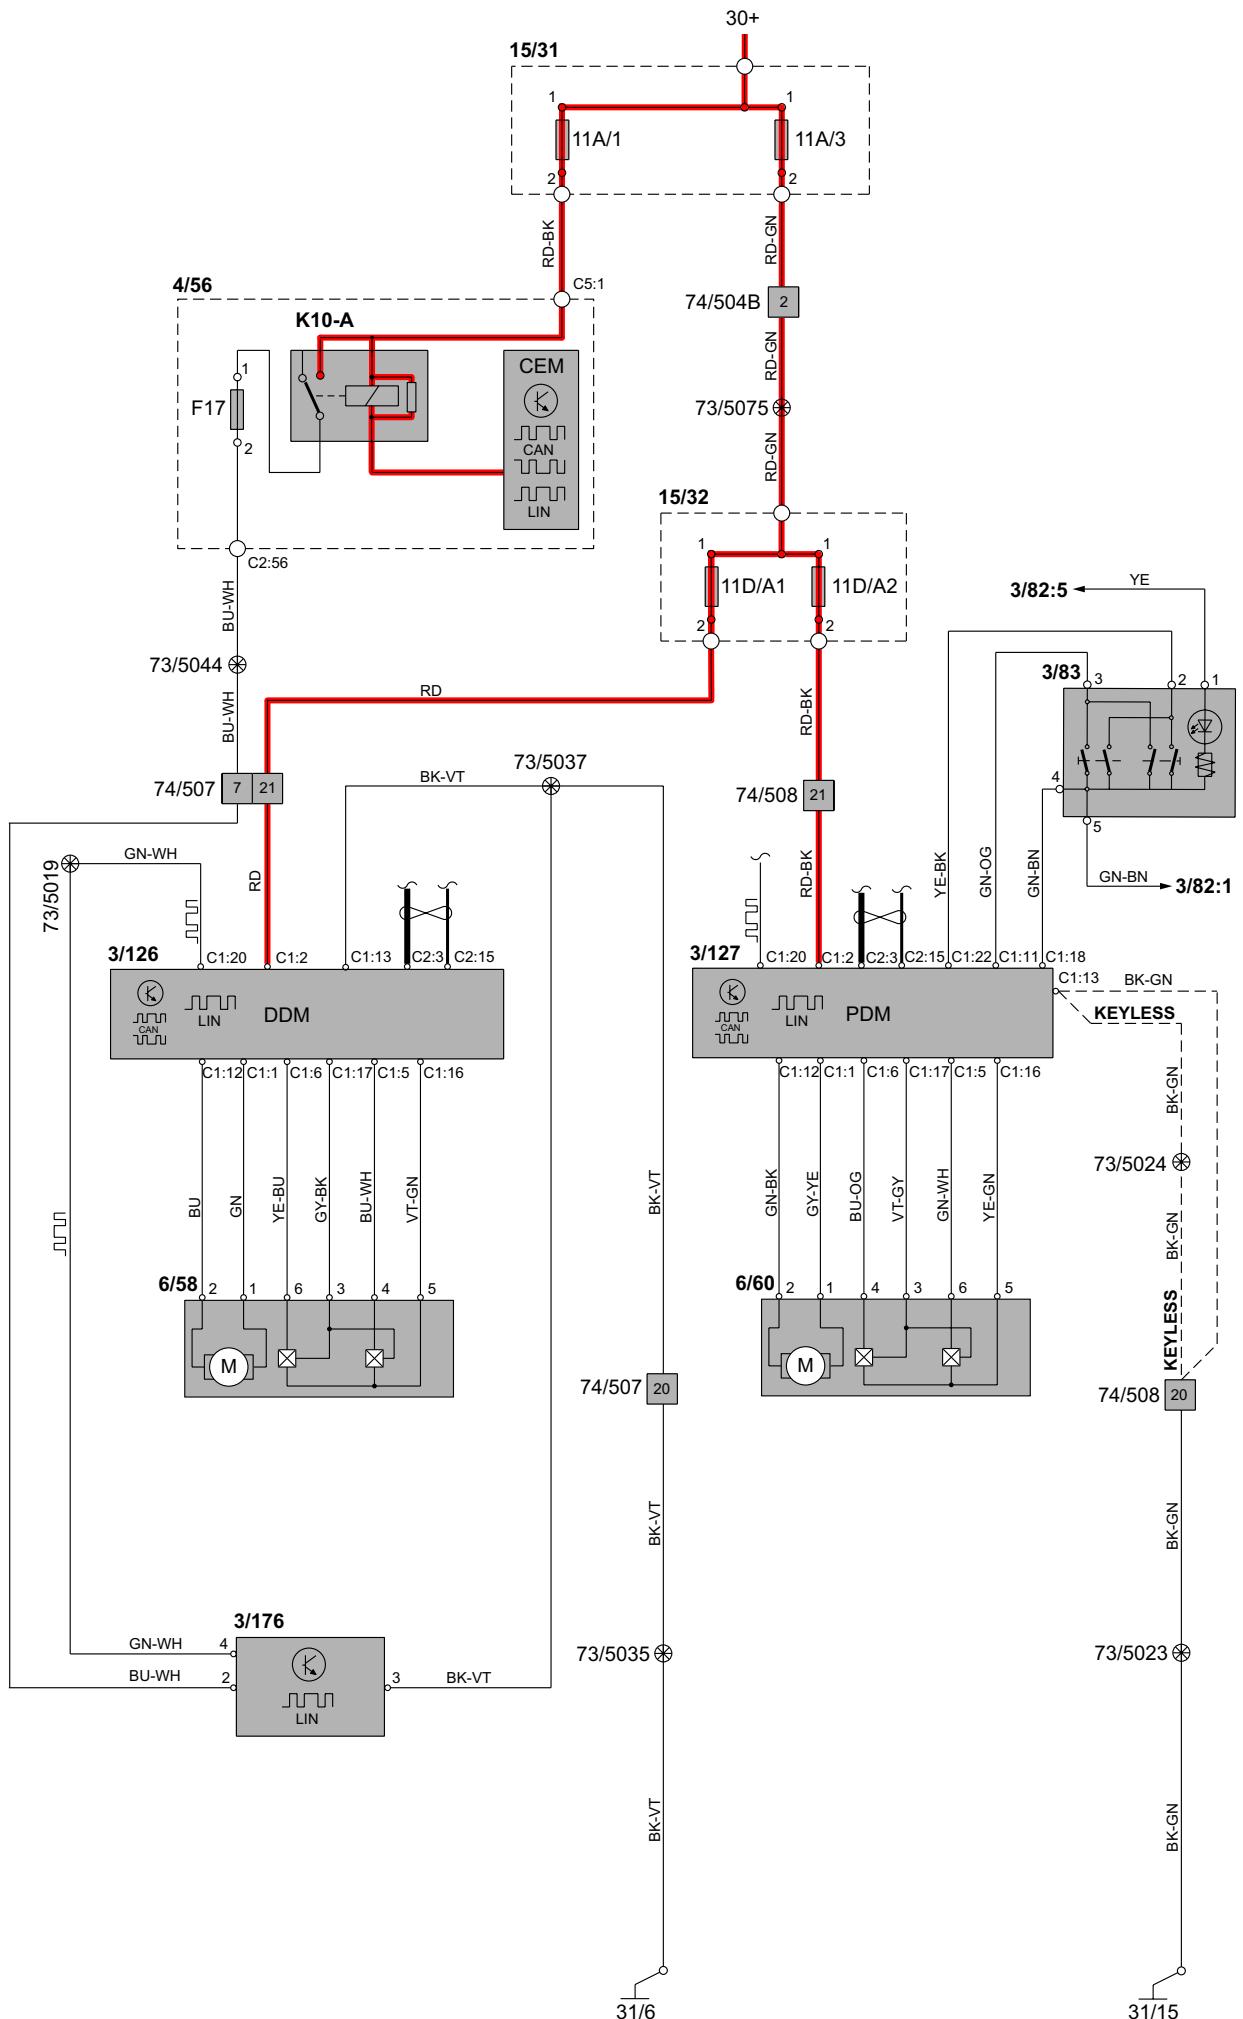


Group 83 Doors and openings

Front door power windows, RHD

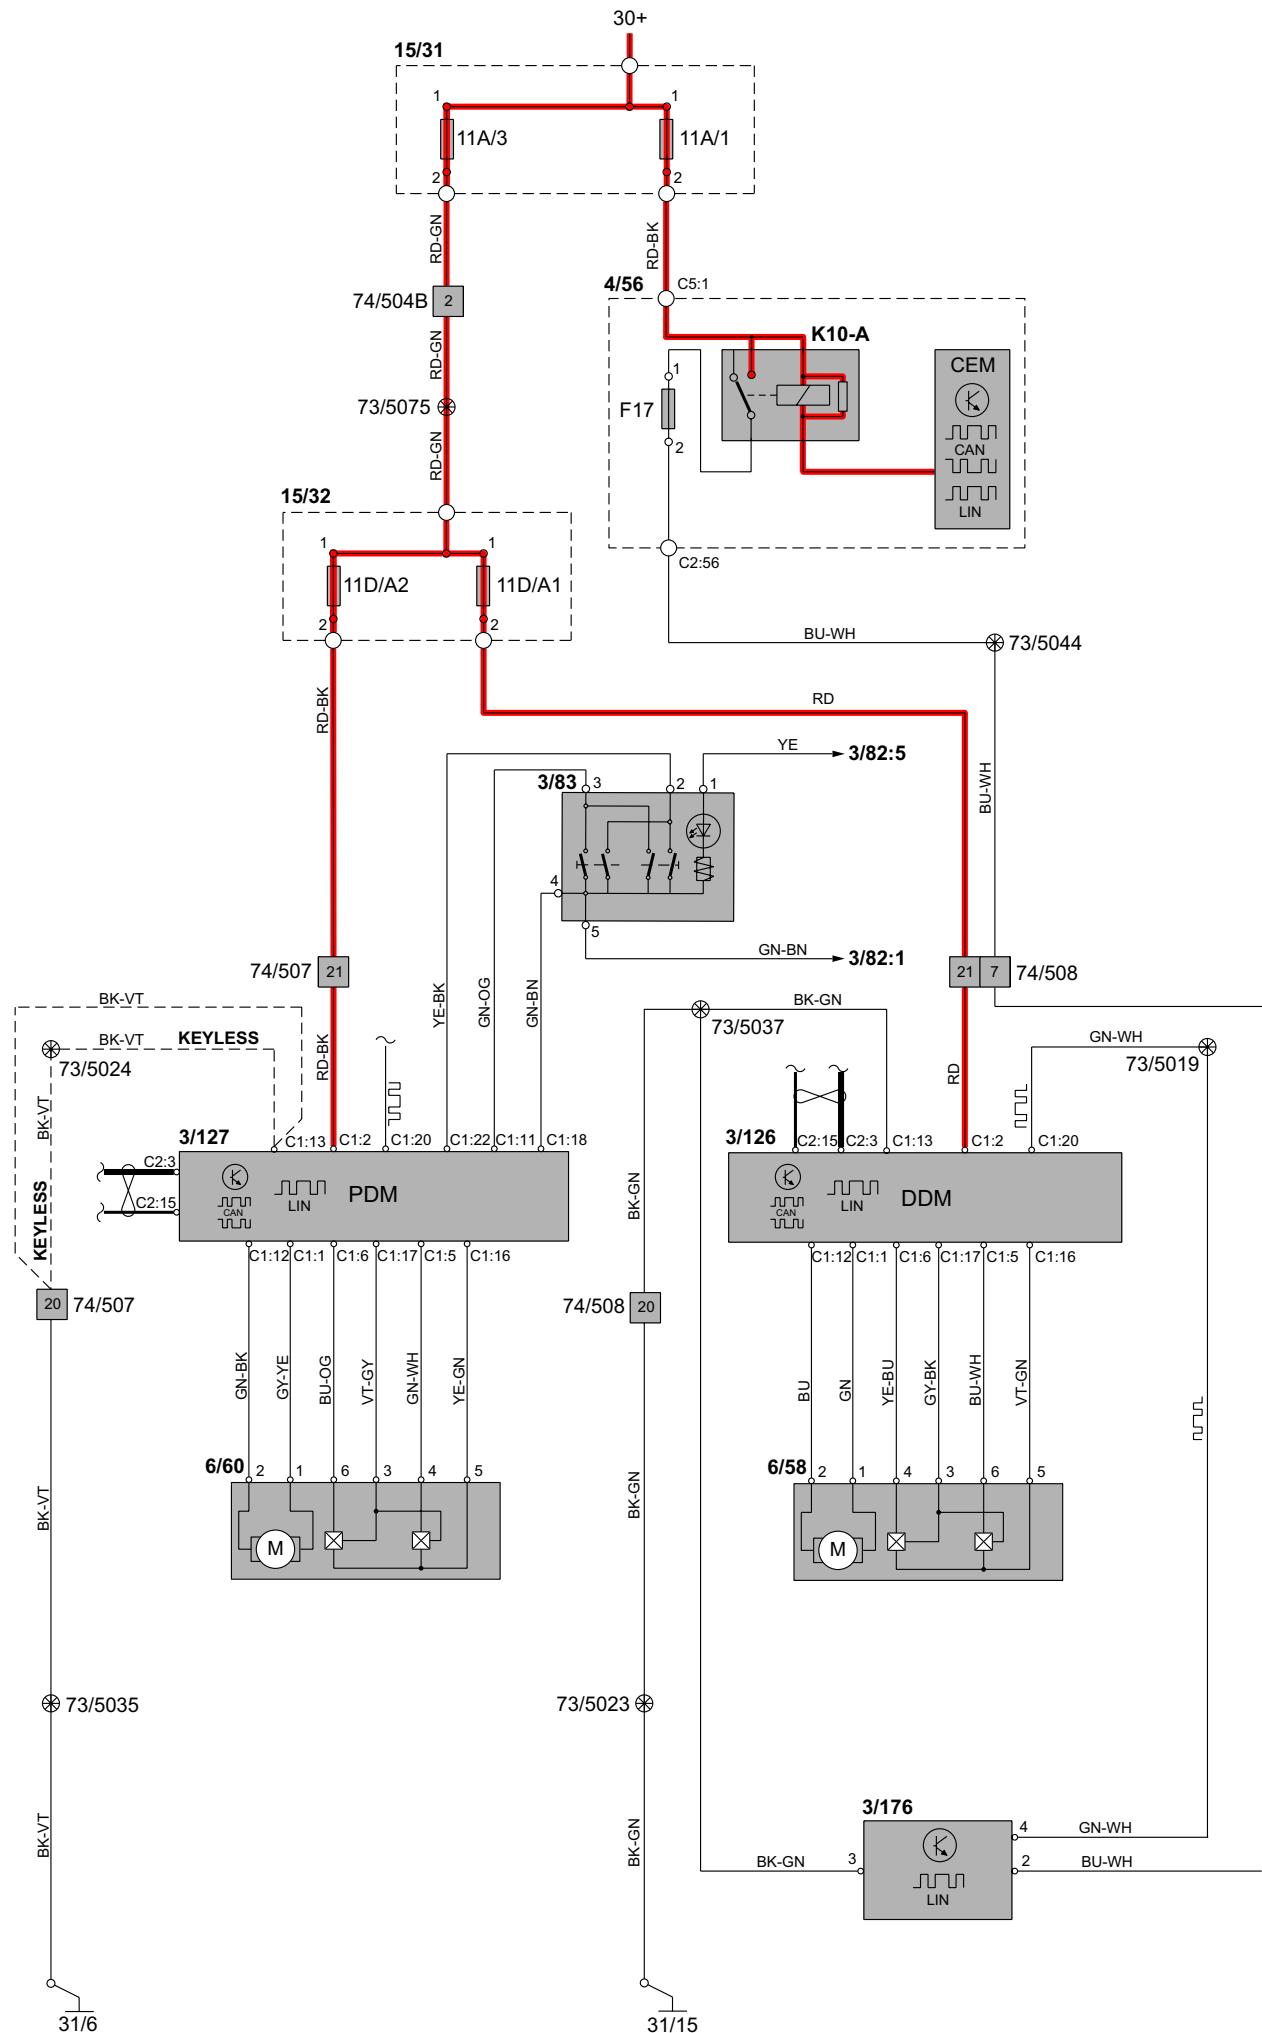


Group 83 Doors and openings

Rear door power windows

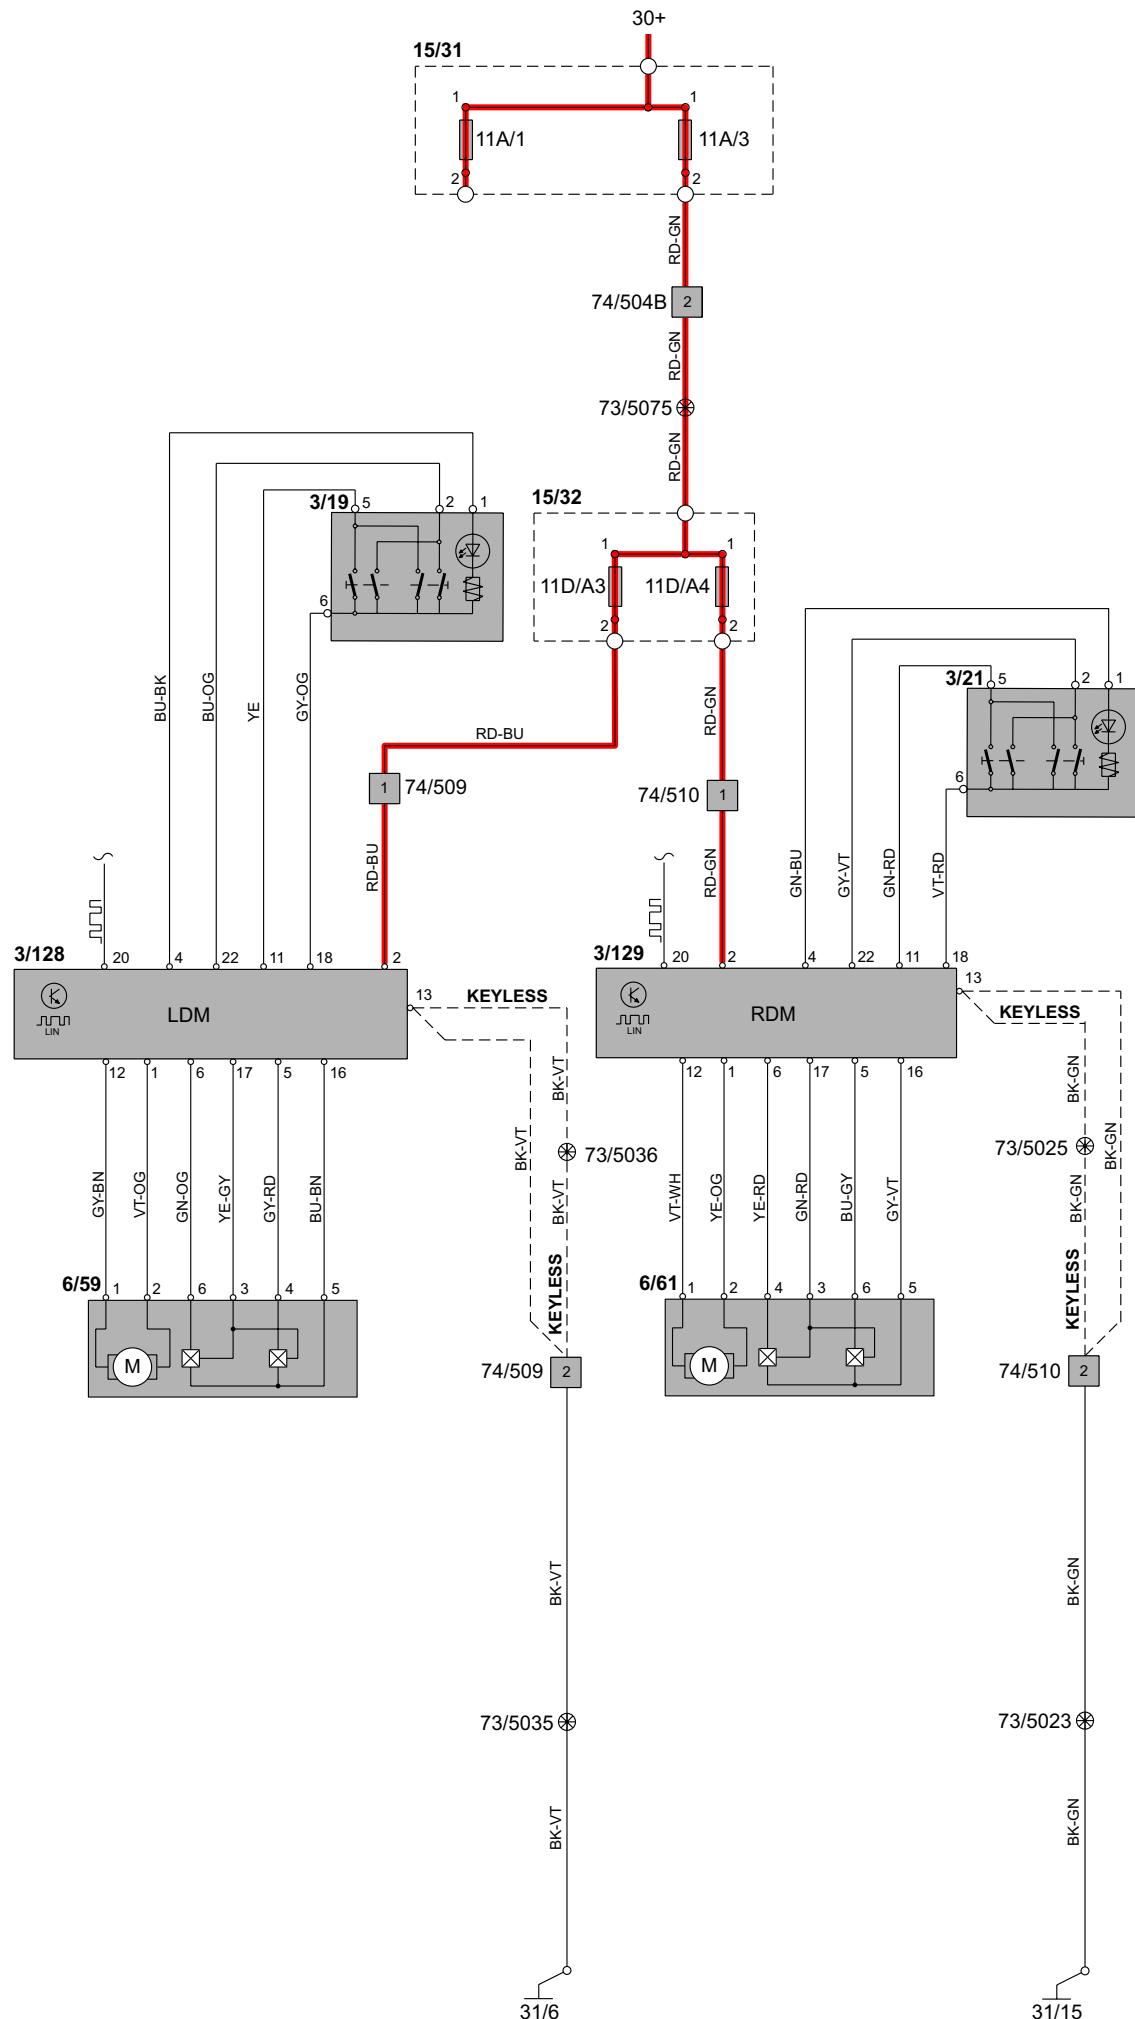


Group 83 Doors and openings

Power sunroof

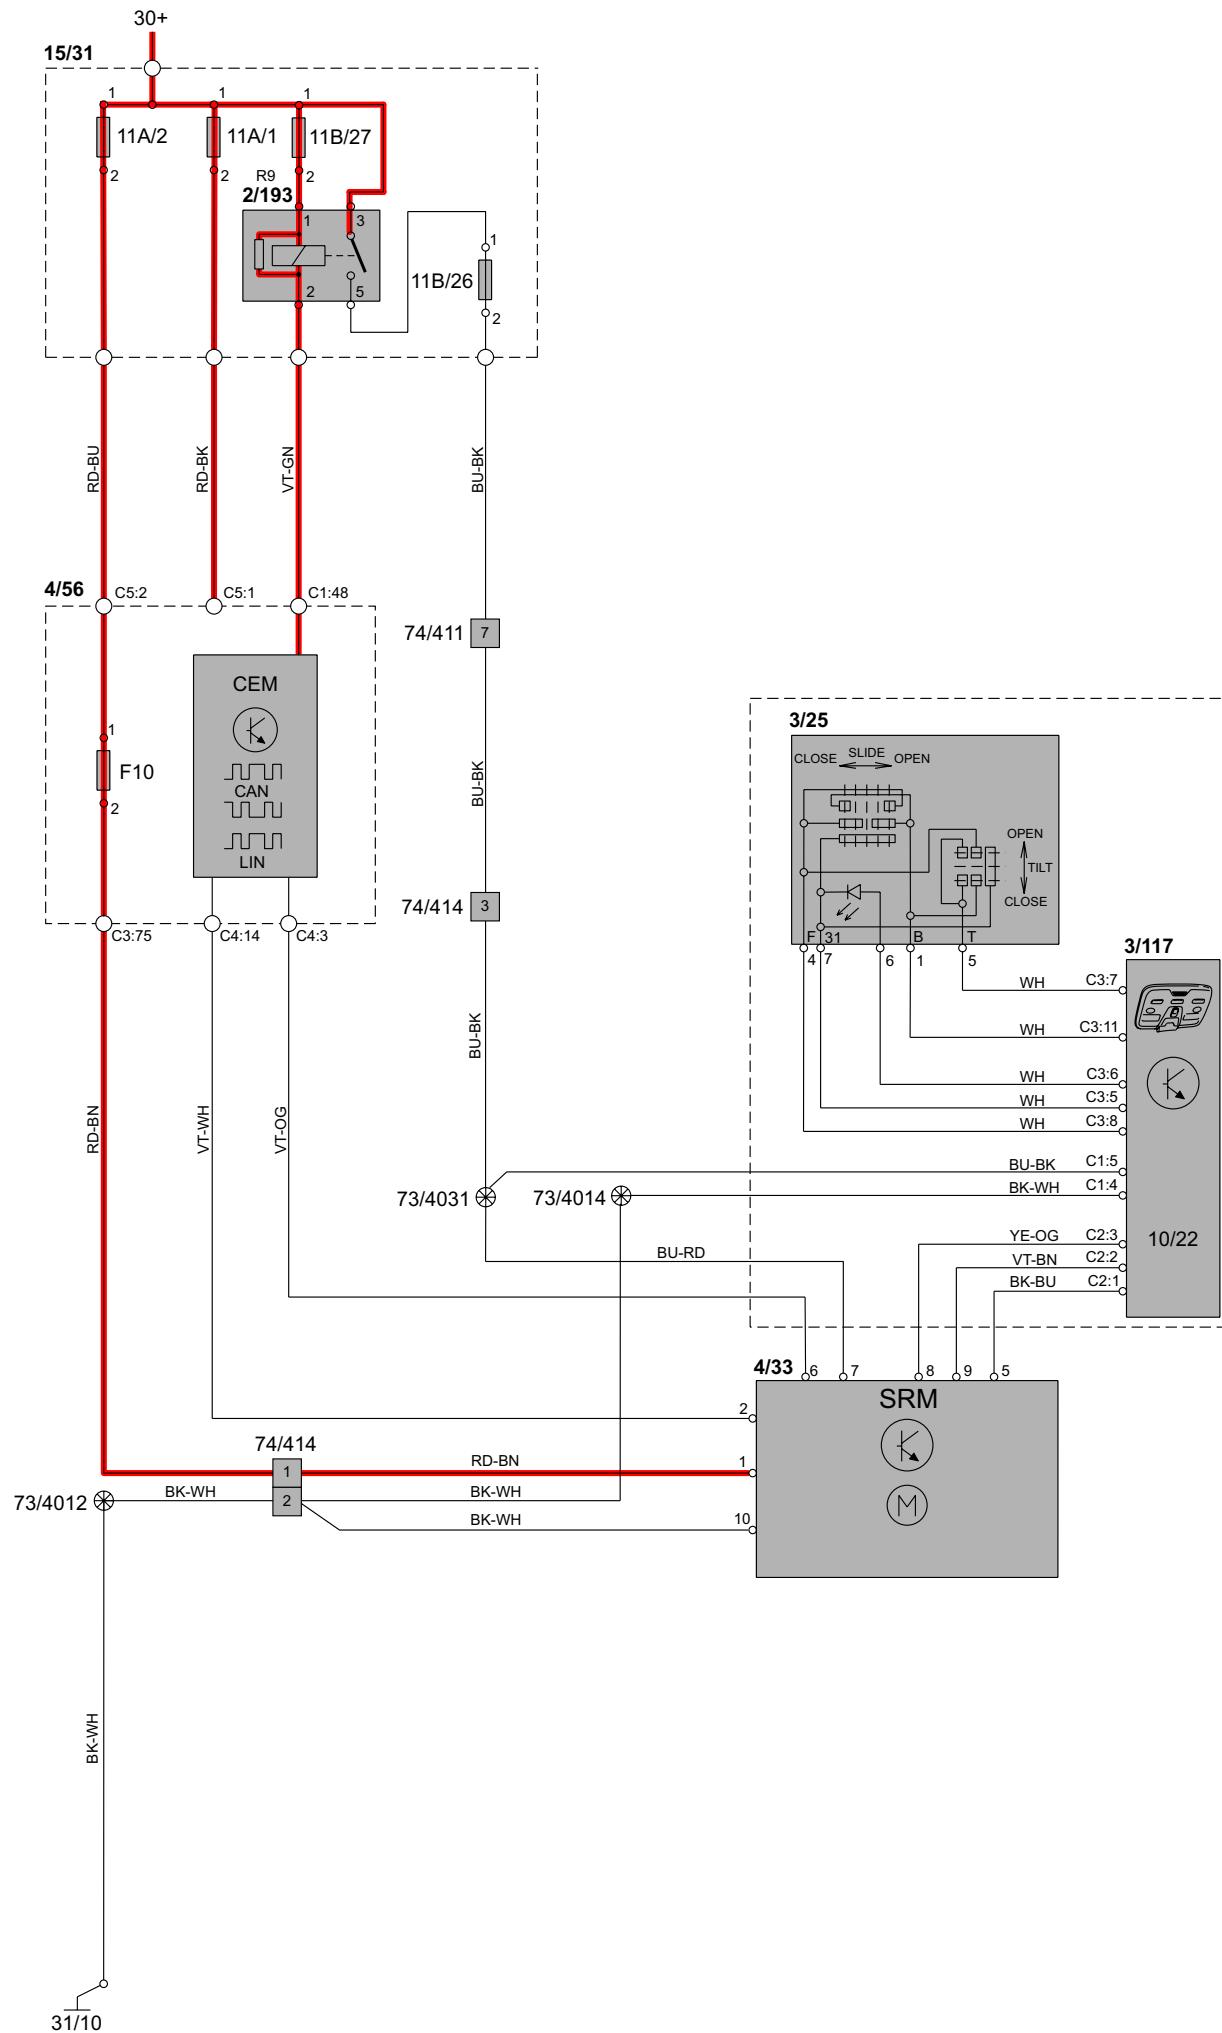


Group 84 Exterior decorative elements etc.

Power door mirrors, LHD

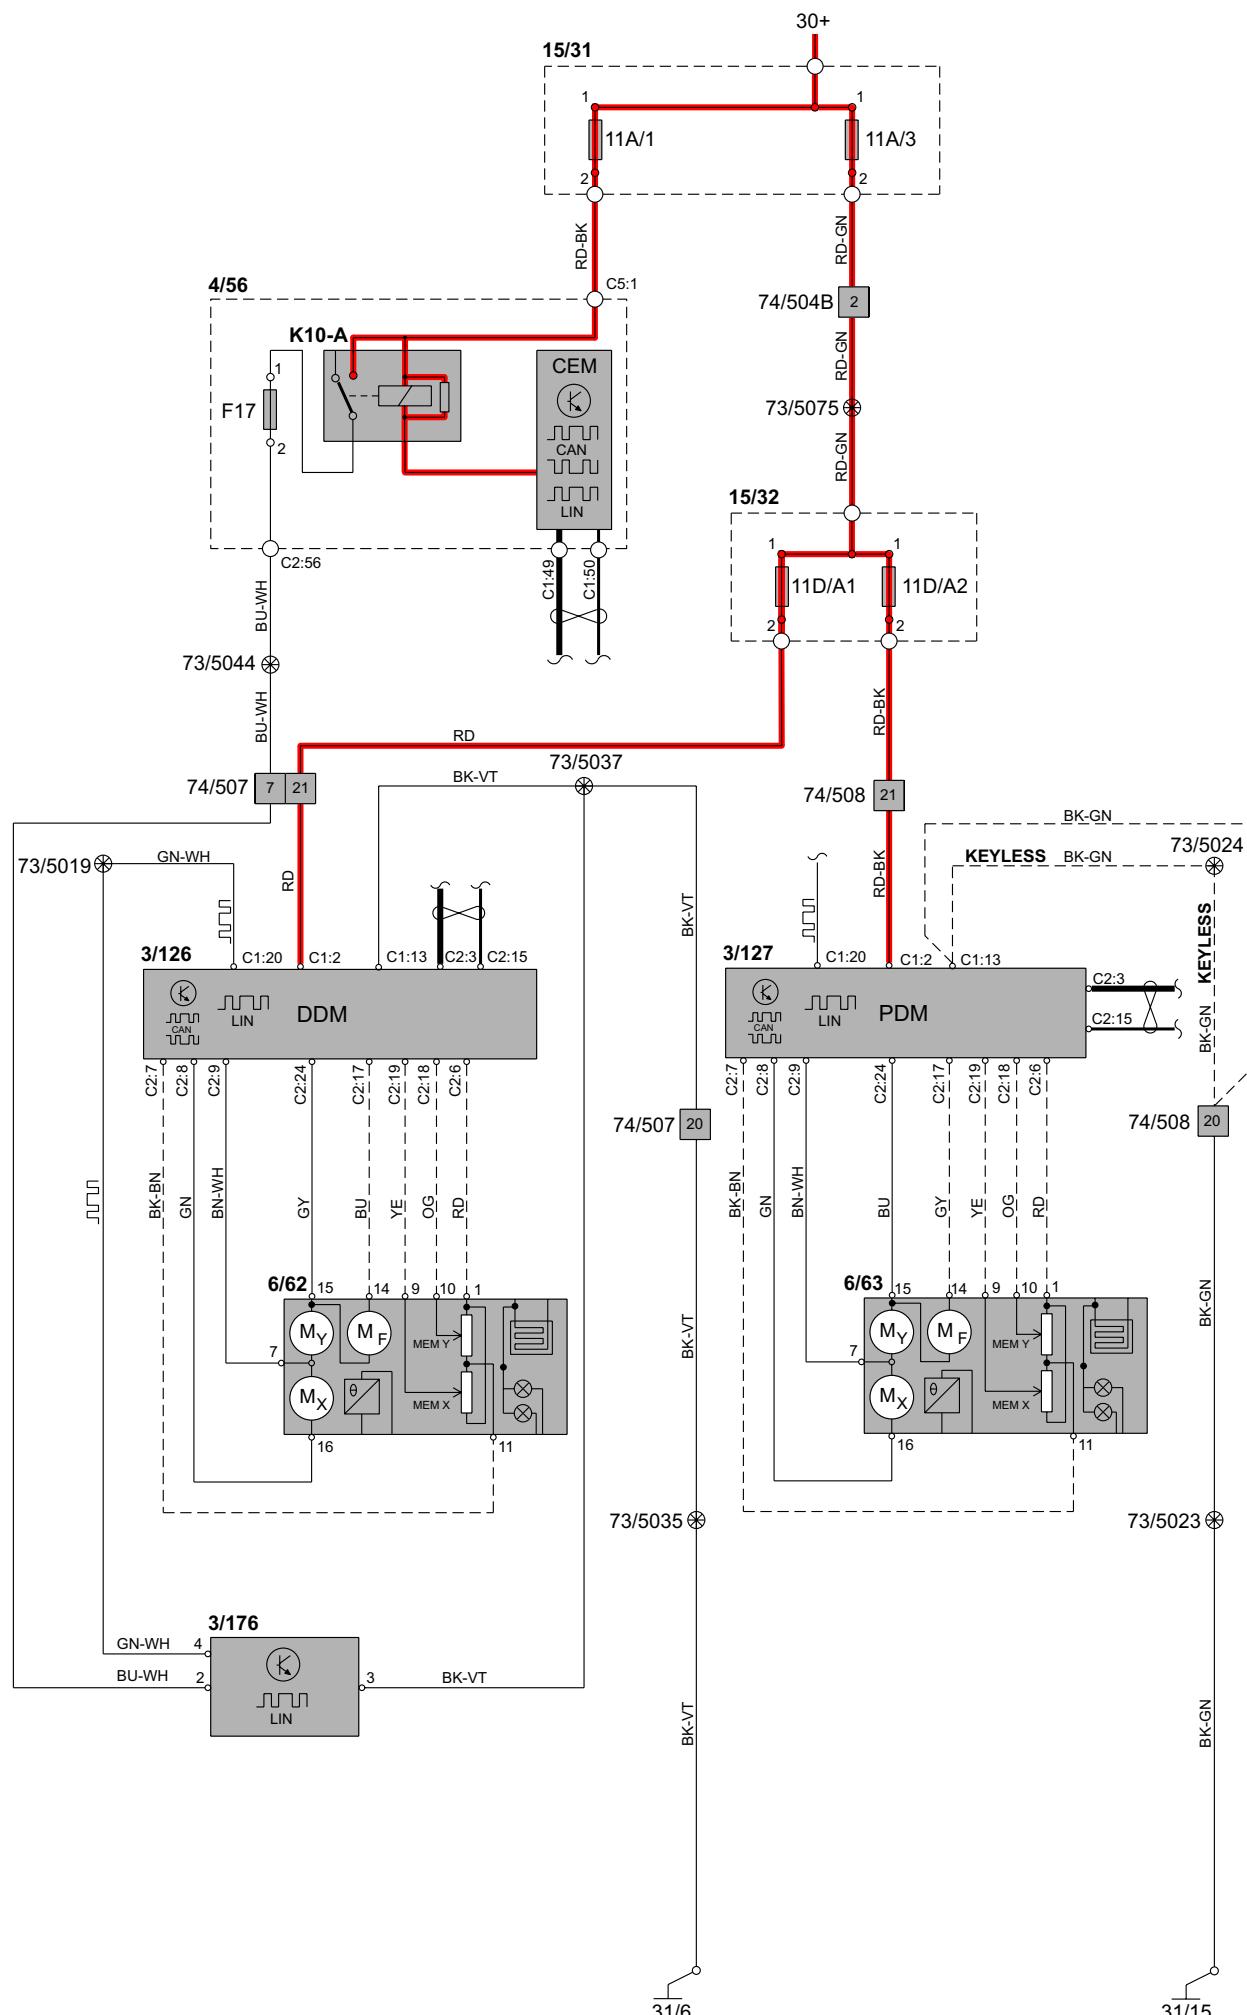


Group 84 Exterior decorative elements etc.

Power door mirrors, RHD

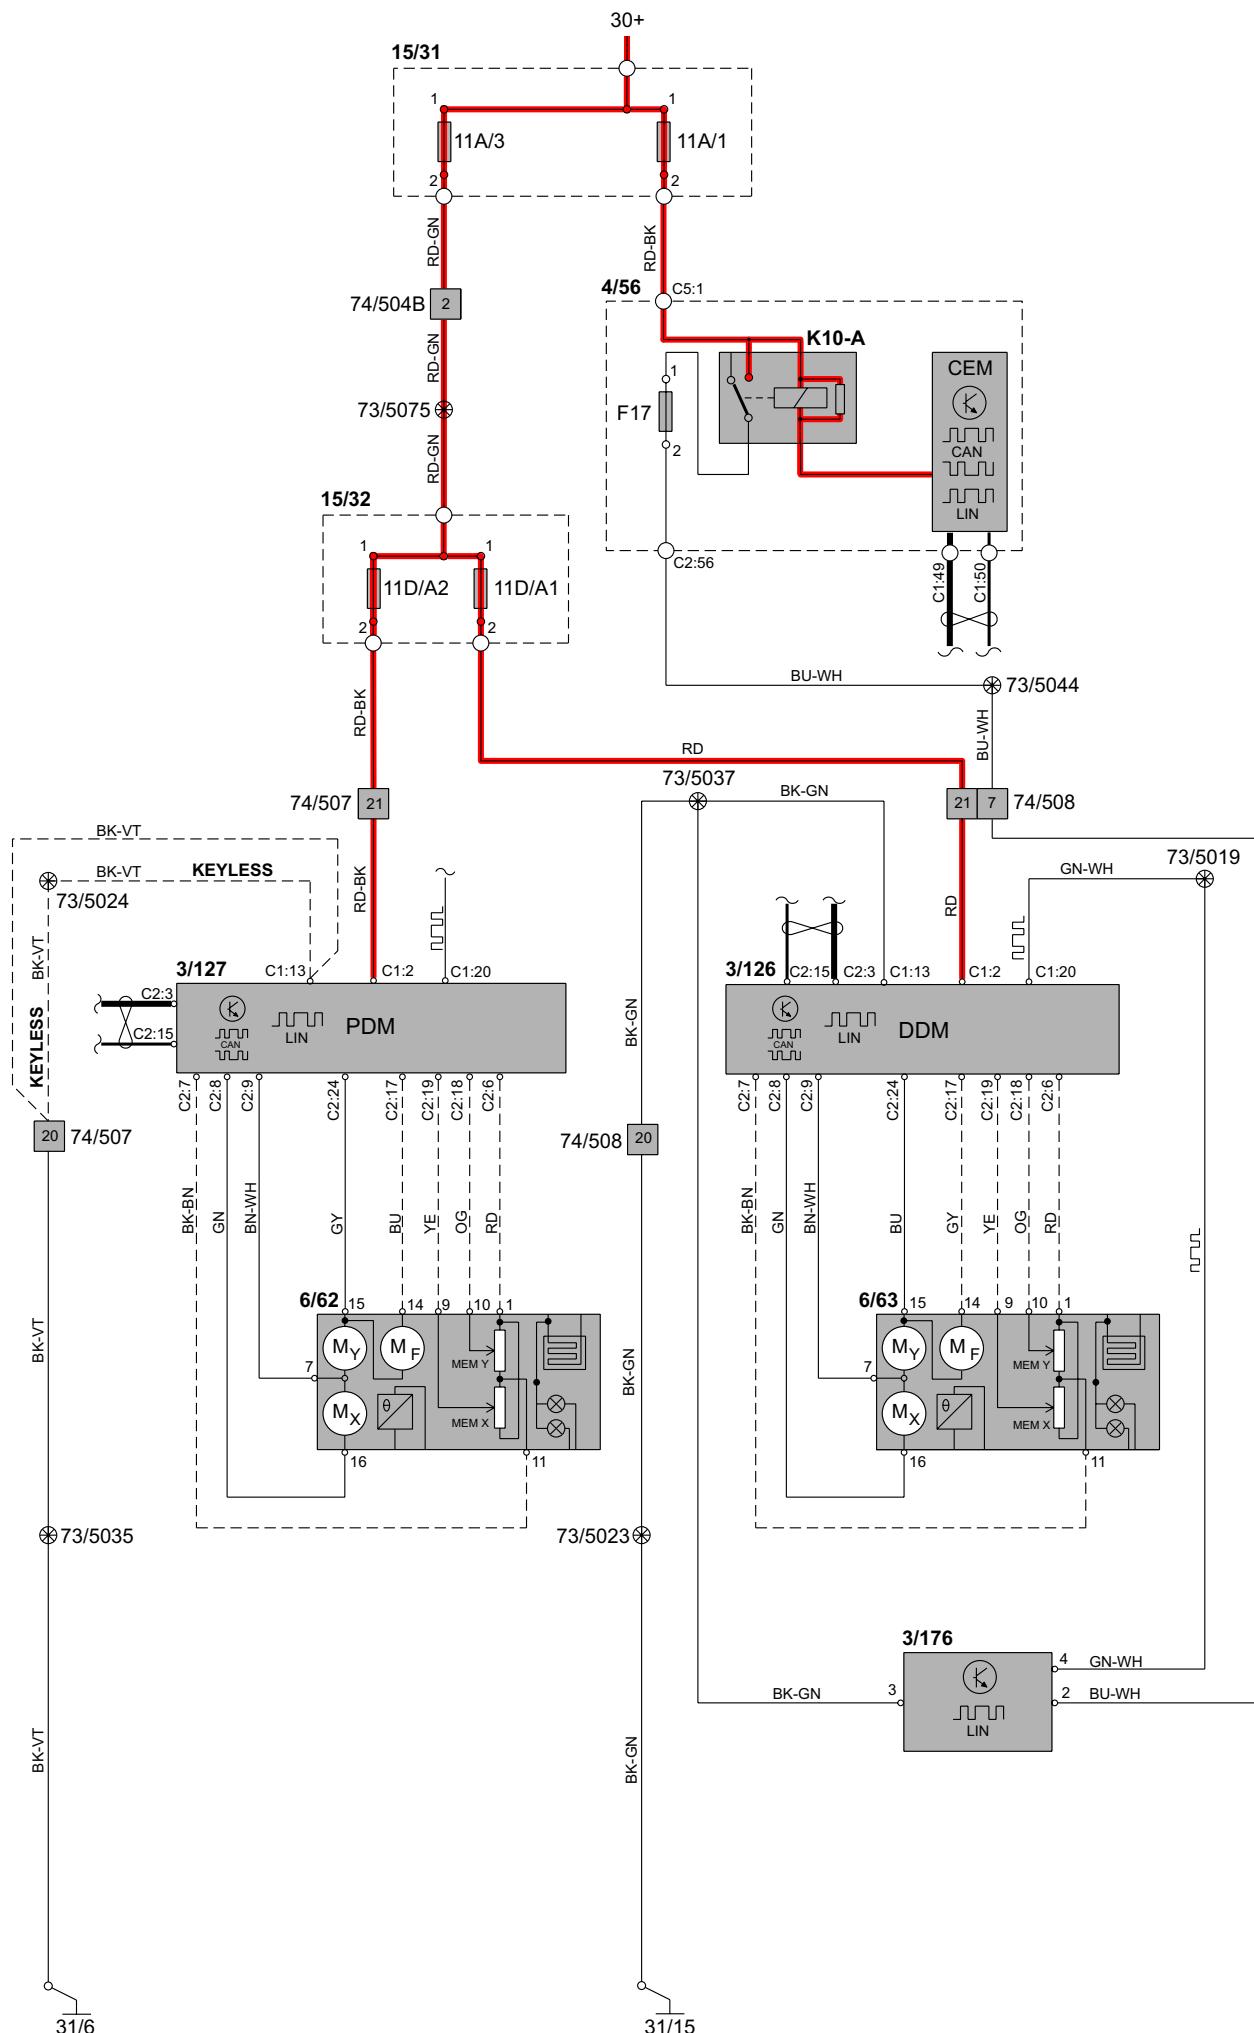


Group 84 Exterior decorative elements etc.

Heated door mirrors, LHD

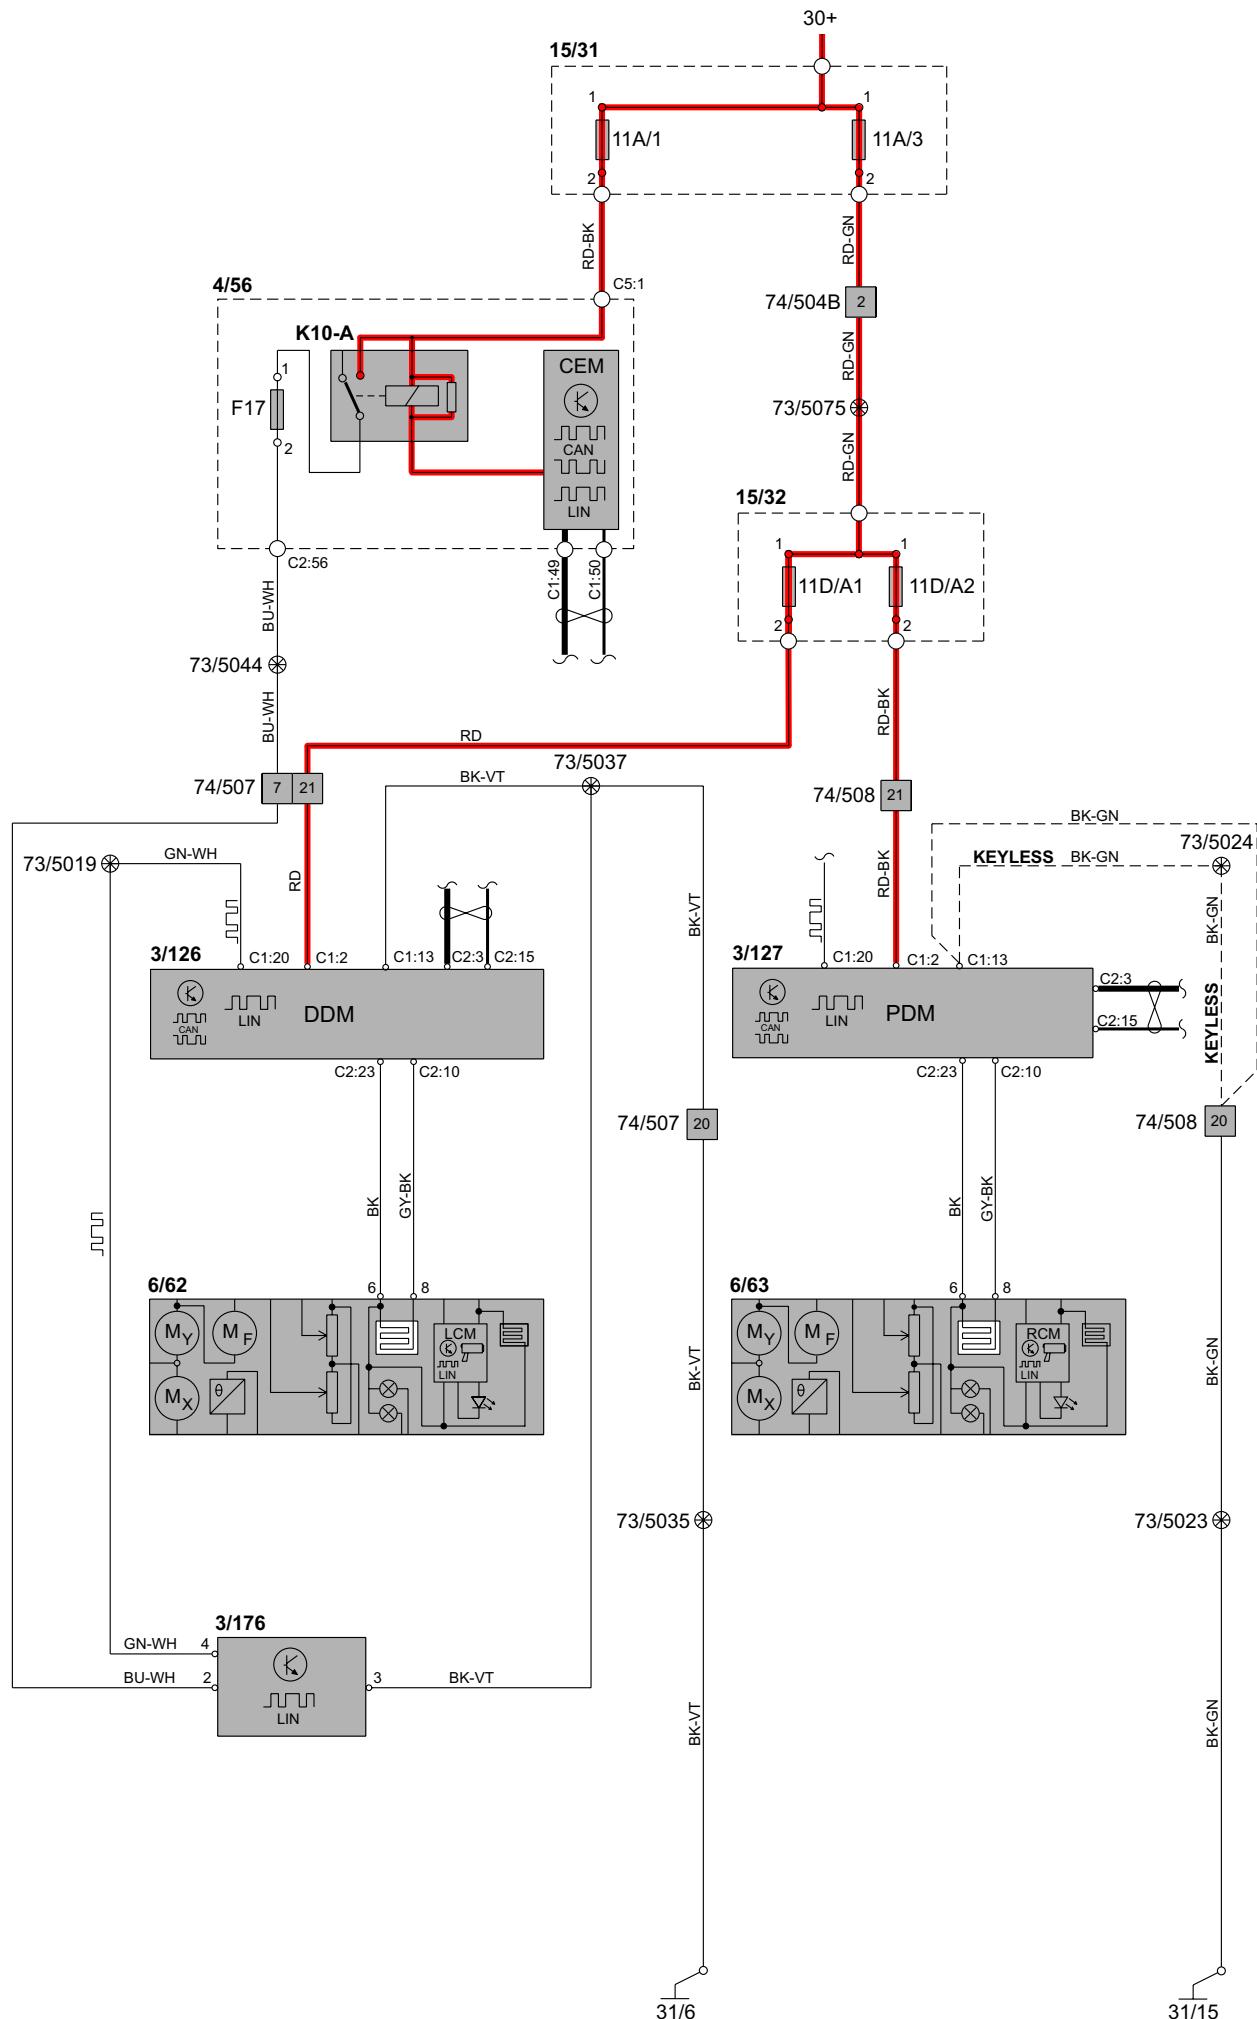


Group 84 Exterior decorative elements etc.

Heated door mirrors, RHD

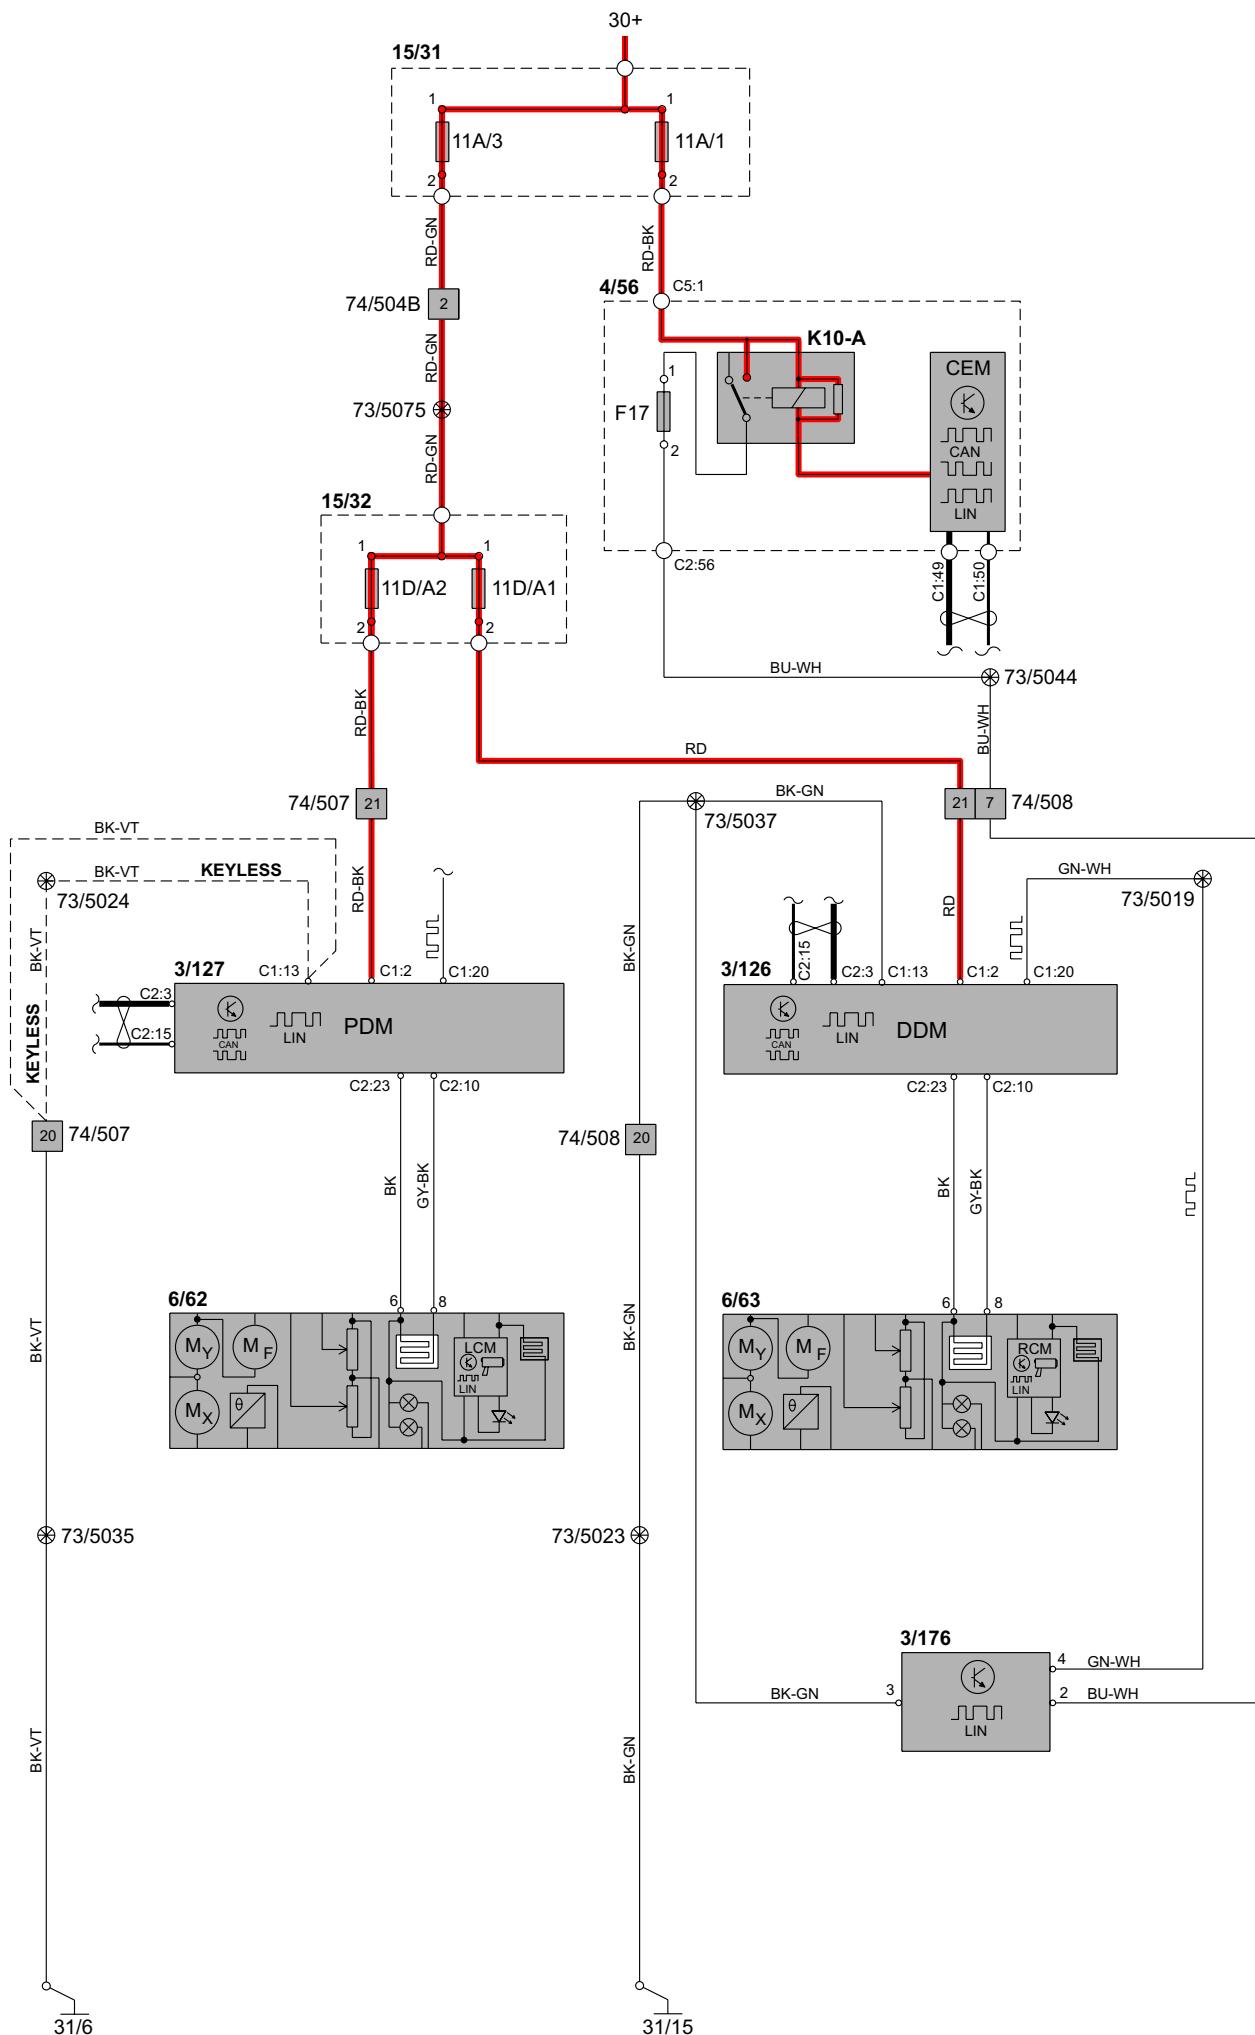


Group 84 Exterior decorative elements etc.

Blind spot information system LHD

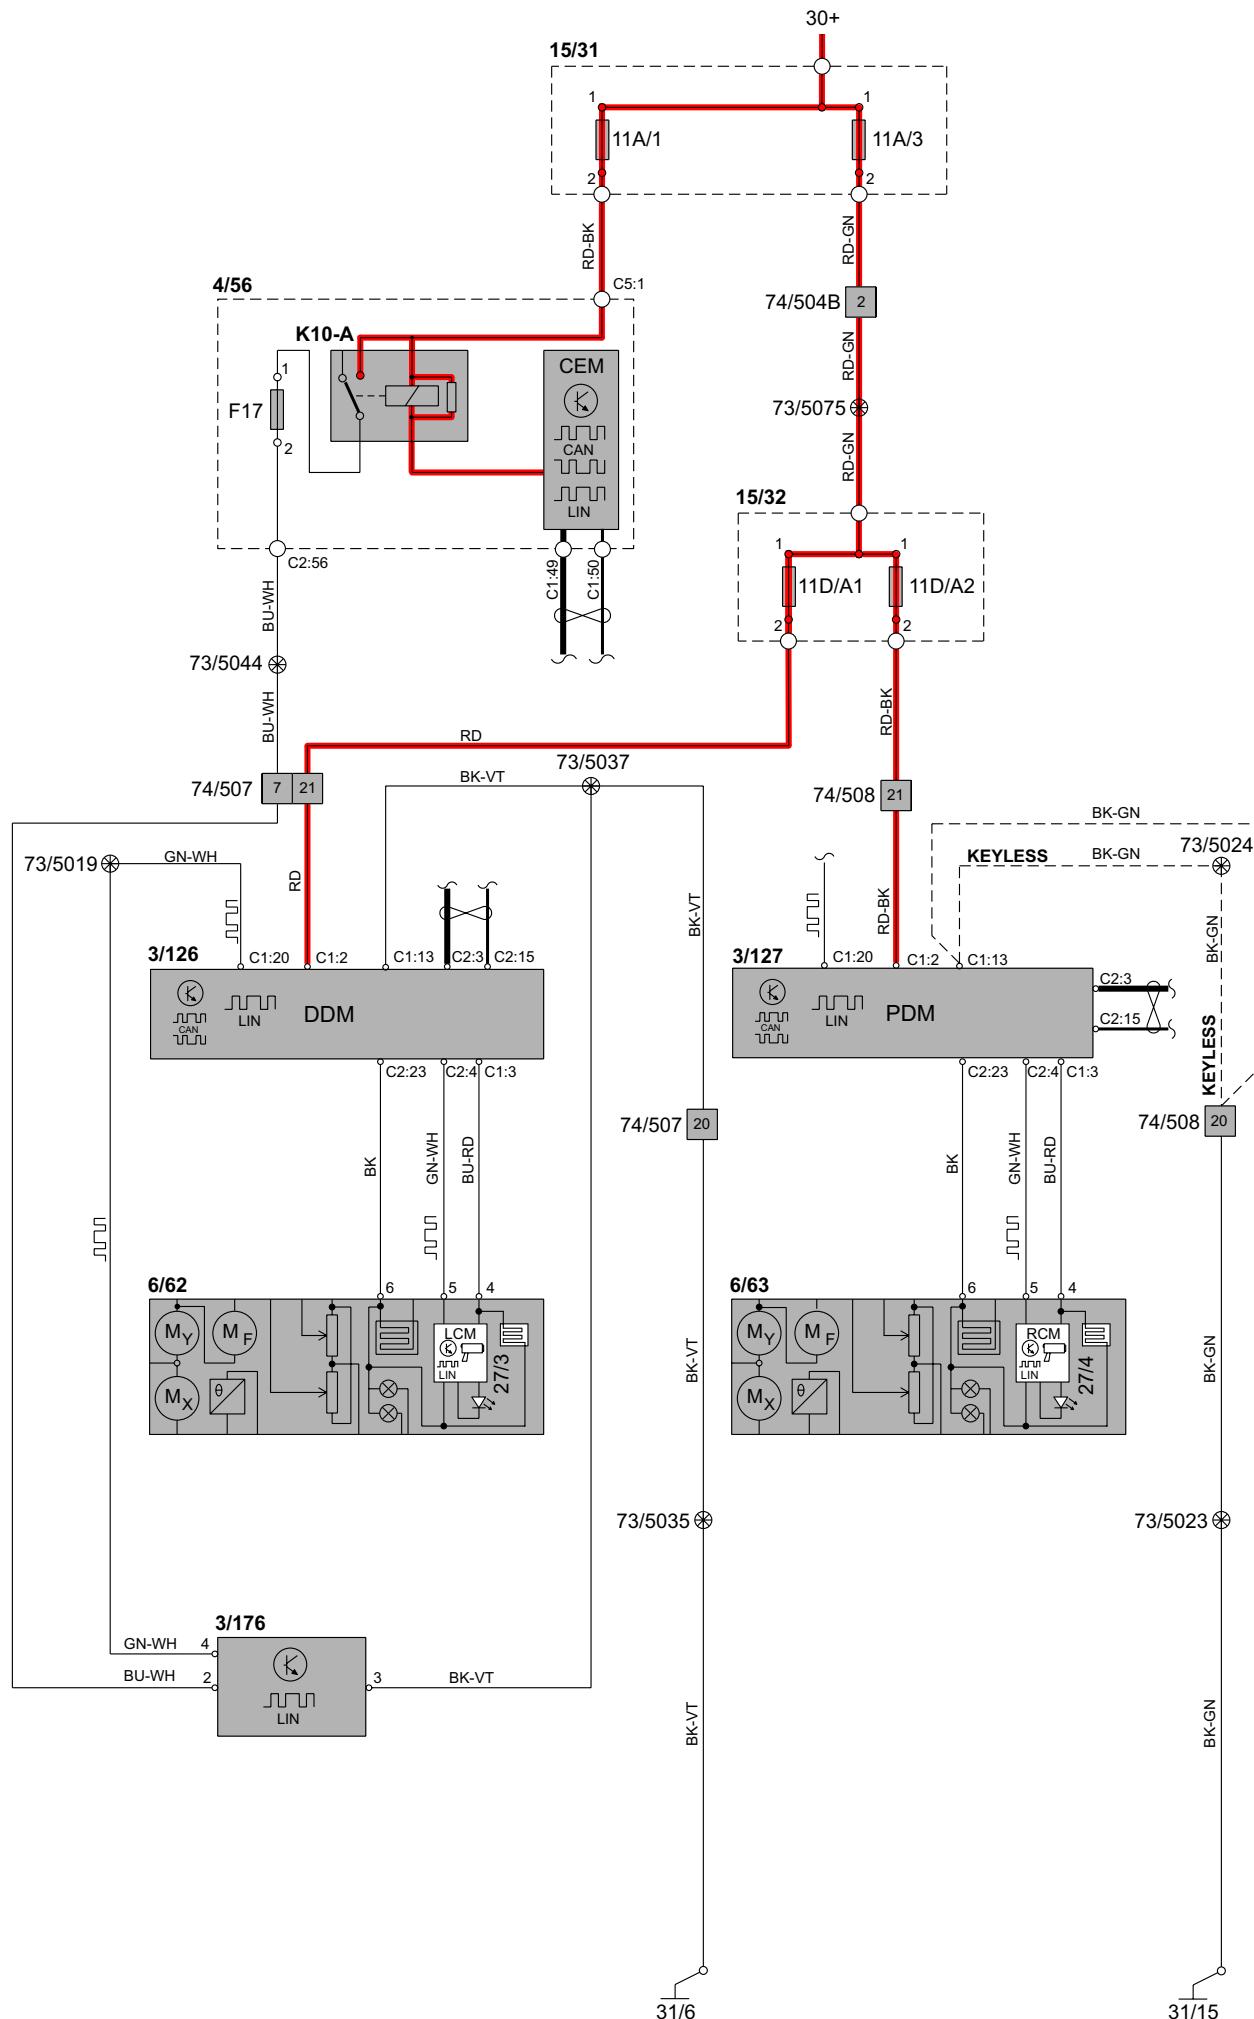


Group 84 Exterior decorative elements etc.

Blind spot information system RHD

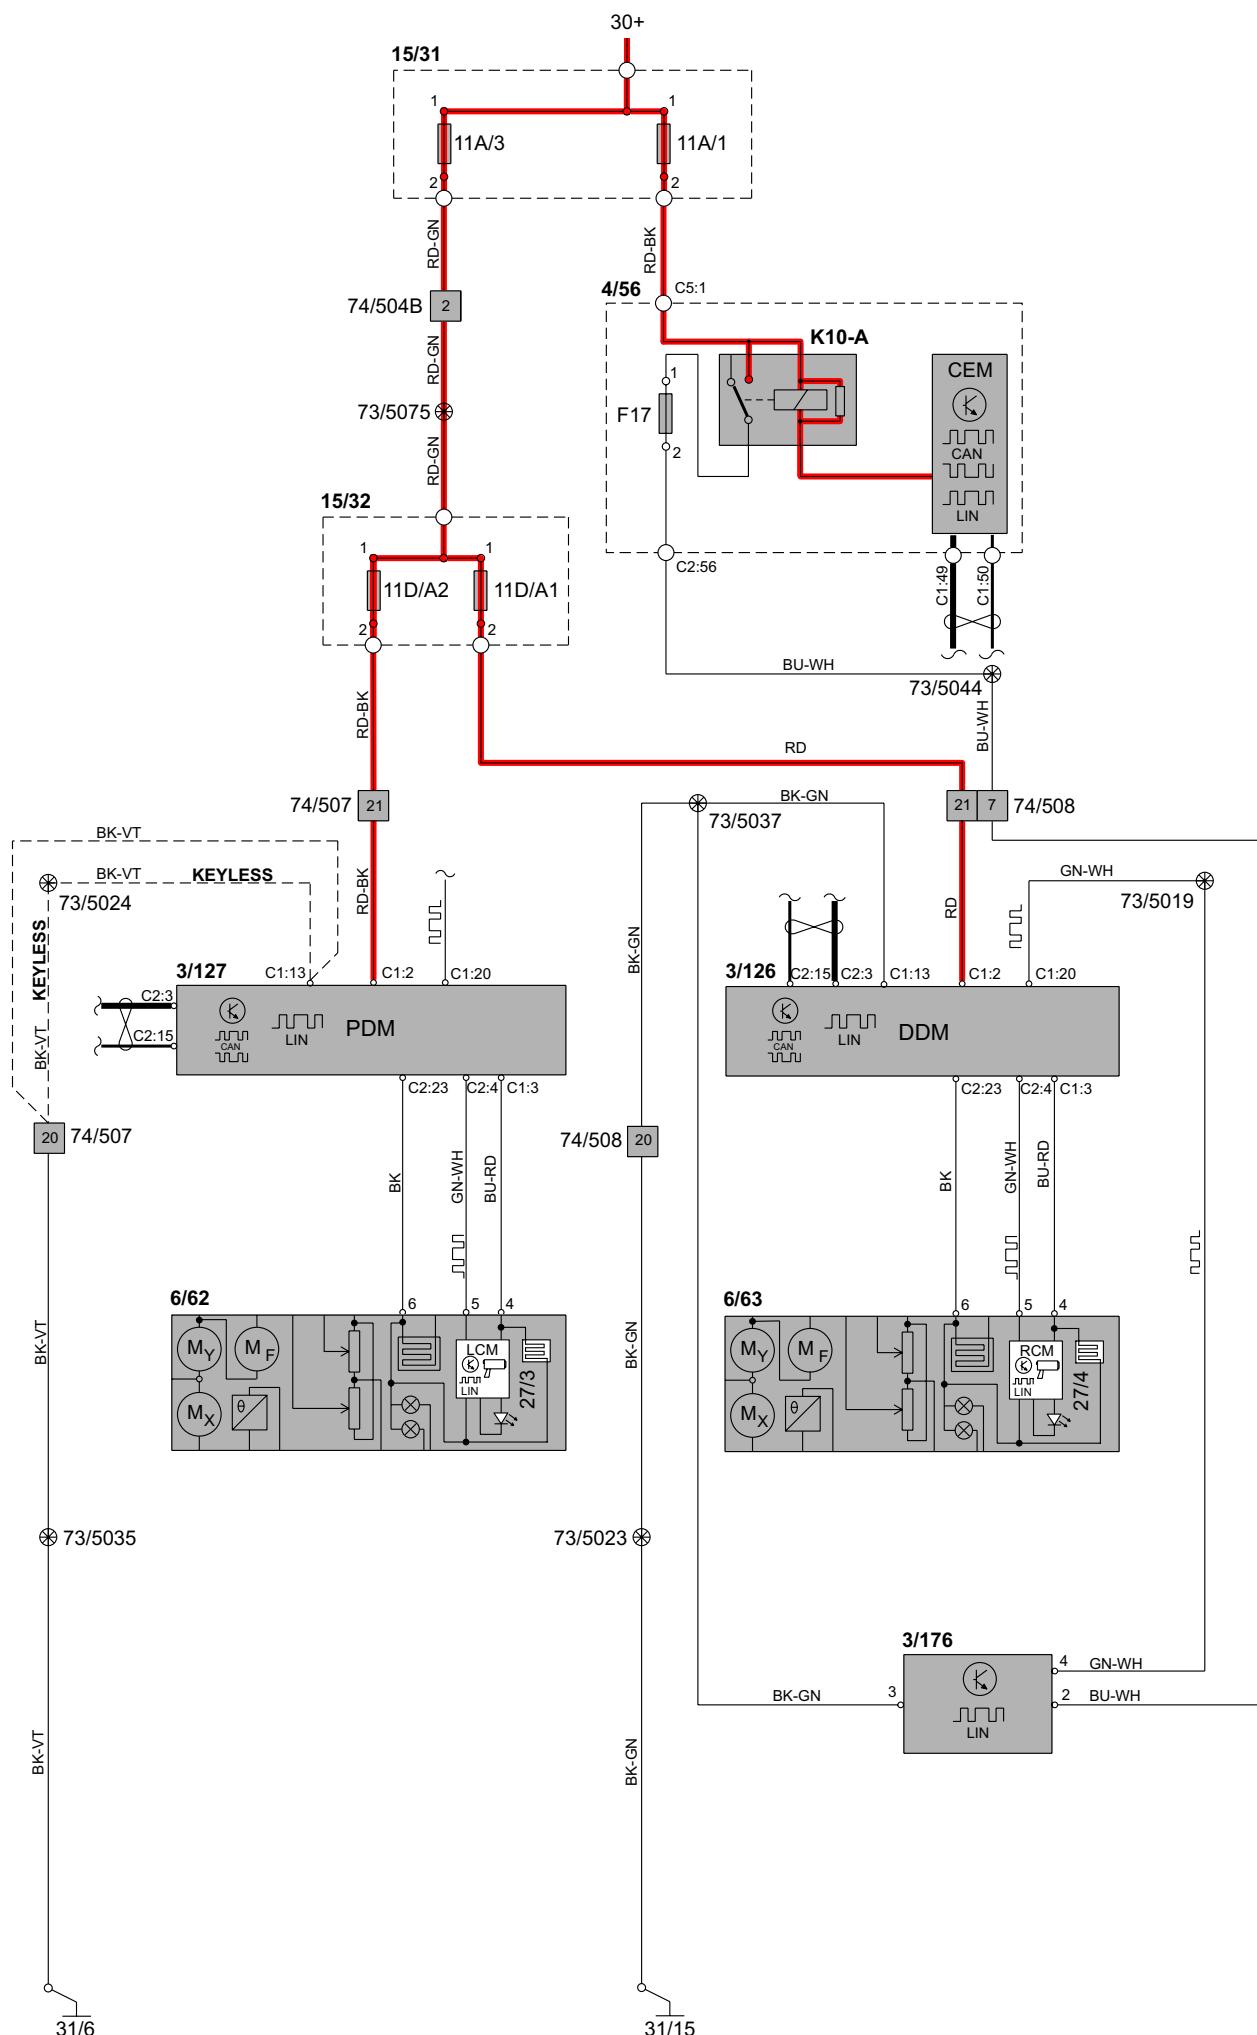


Group 84 Exterior decorative elements etc.

Rear window defroster

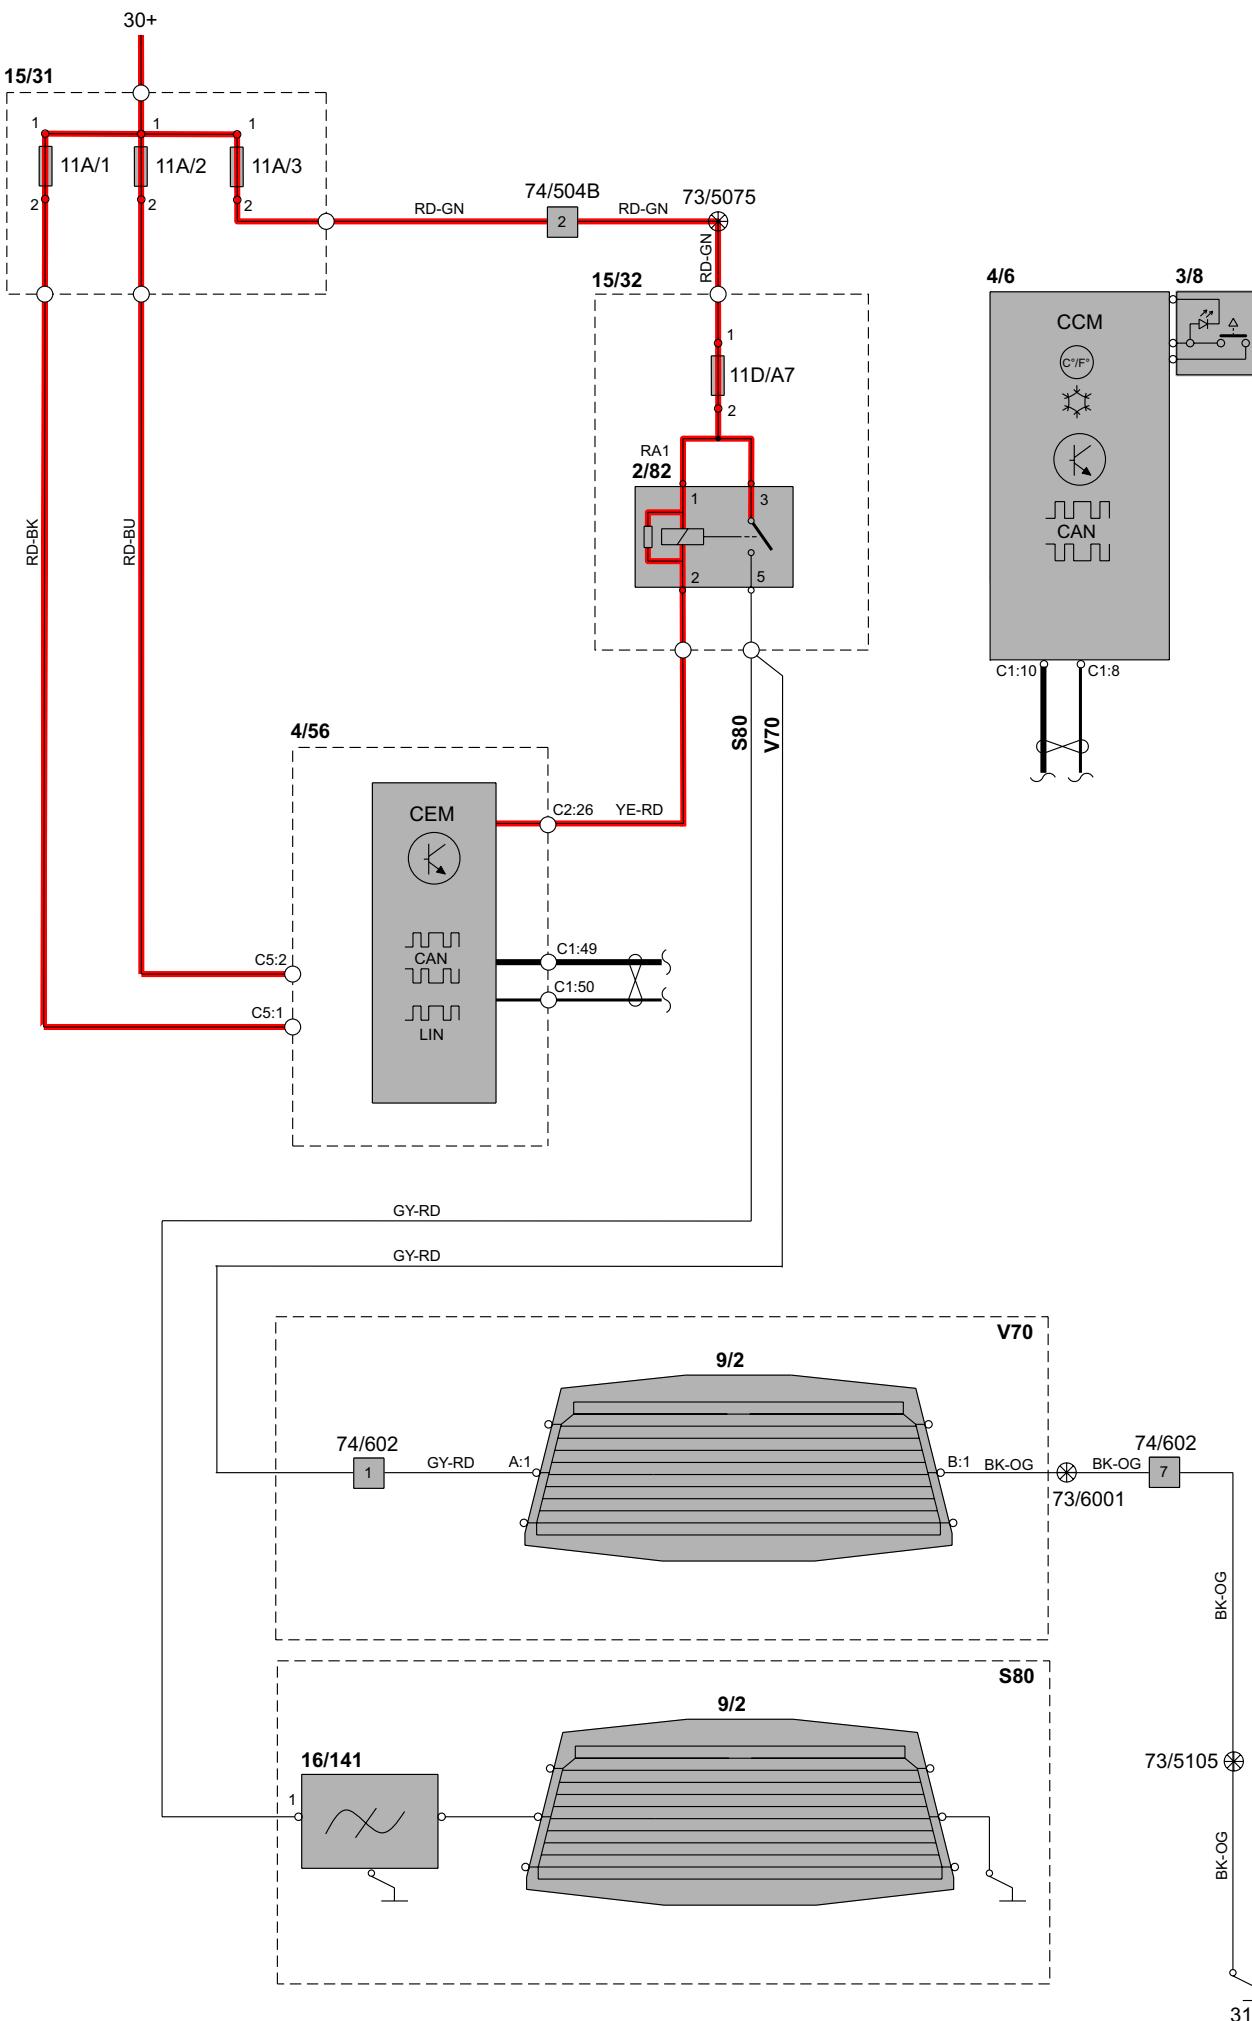


Group 85 Interior equipment

Power driver's seat with memory function, LHD

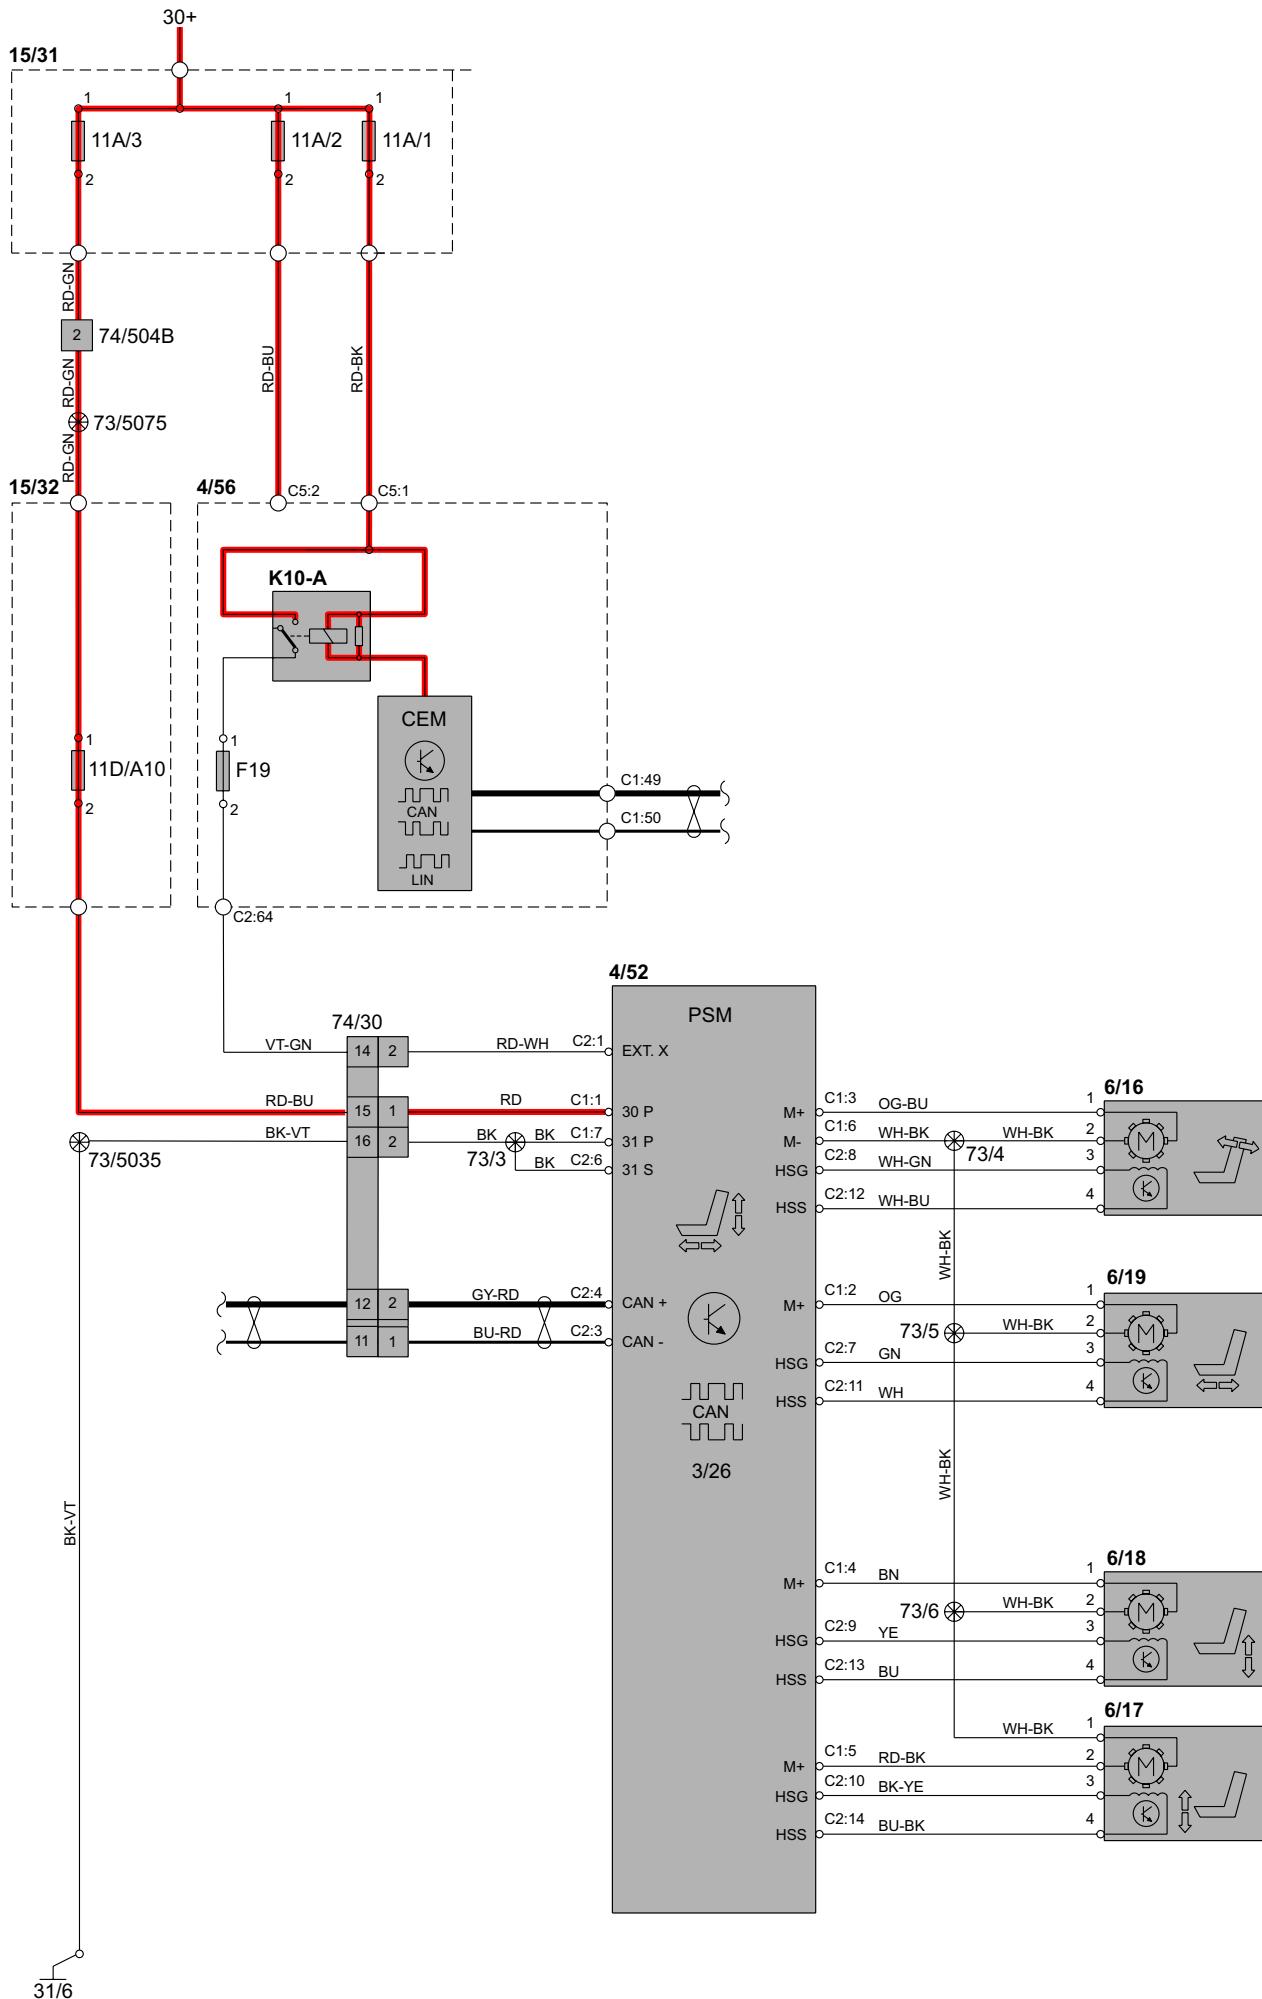


Group 85 Interior equipment

Power driver's seat with memory function, RHD


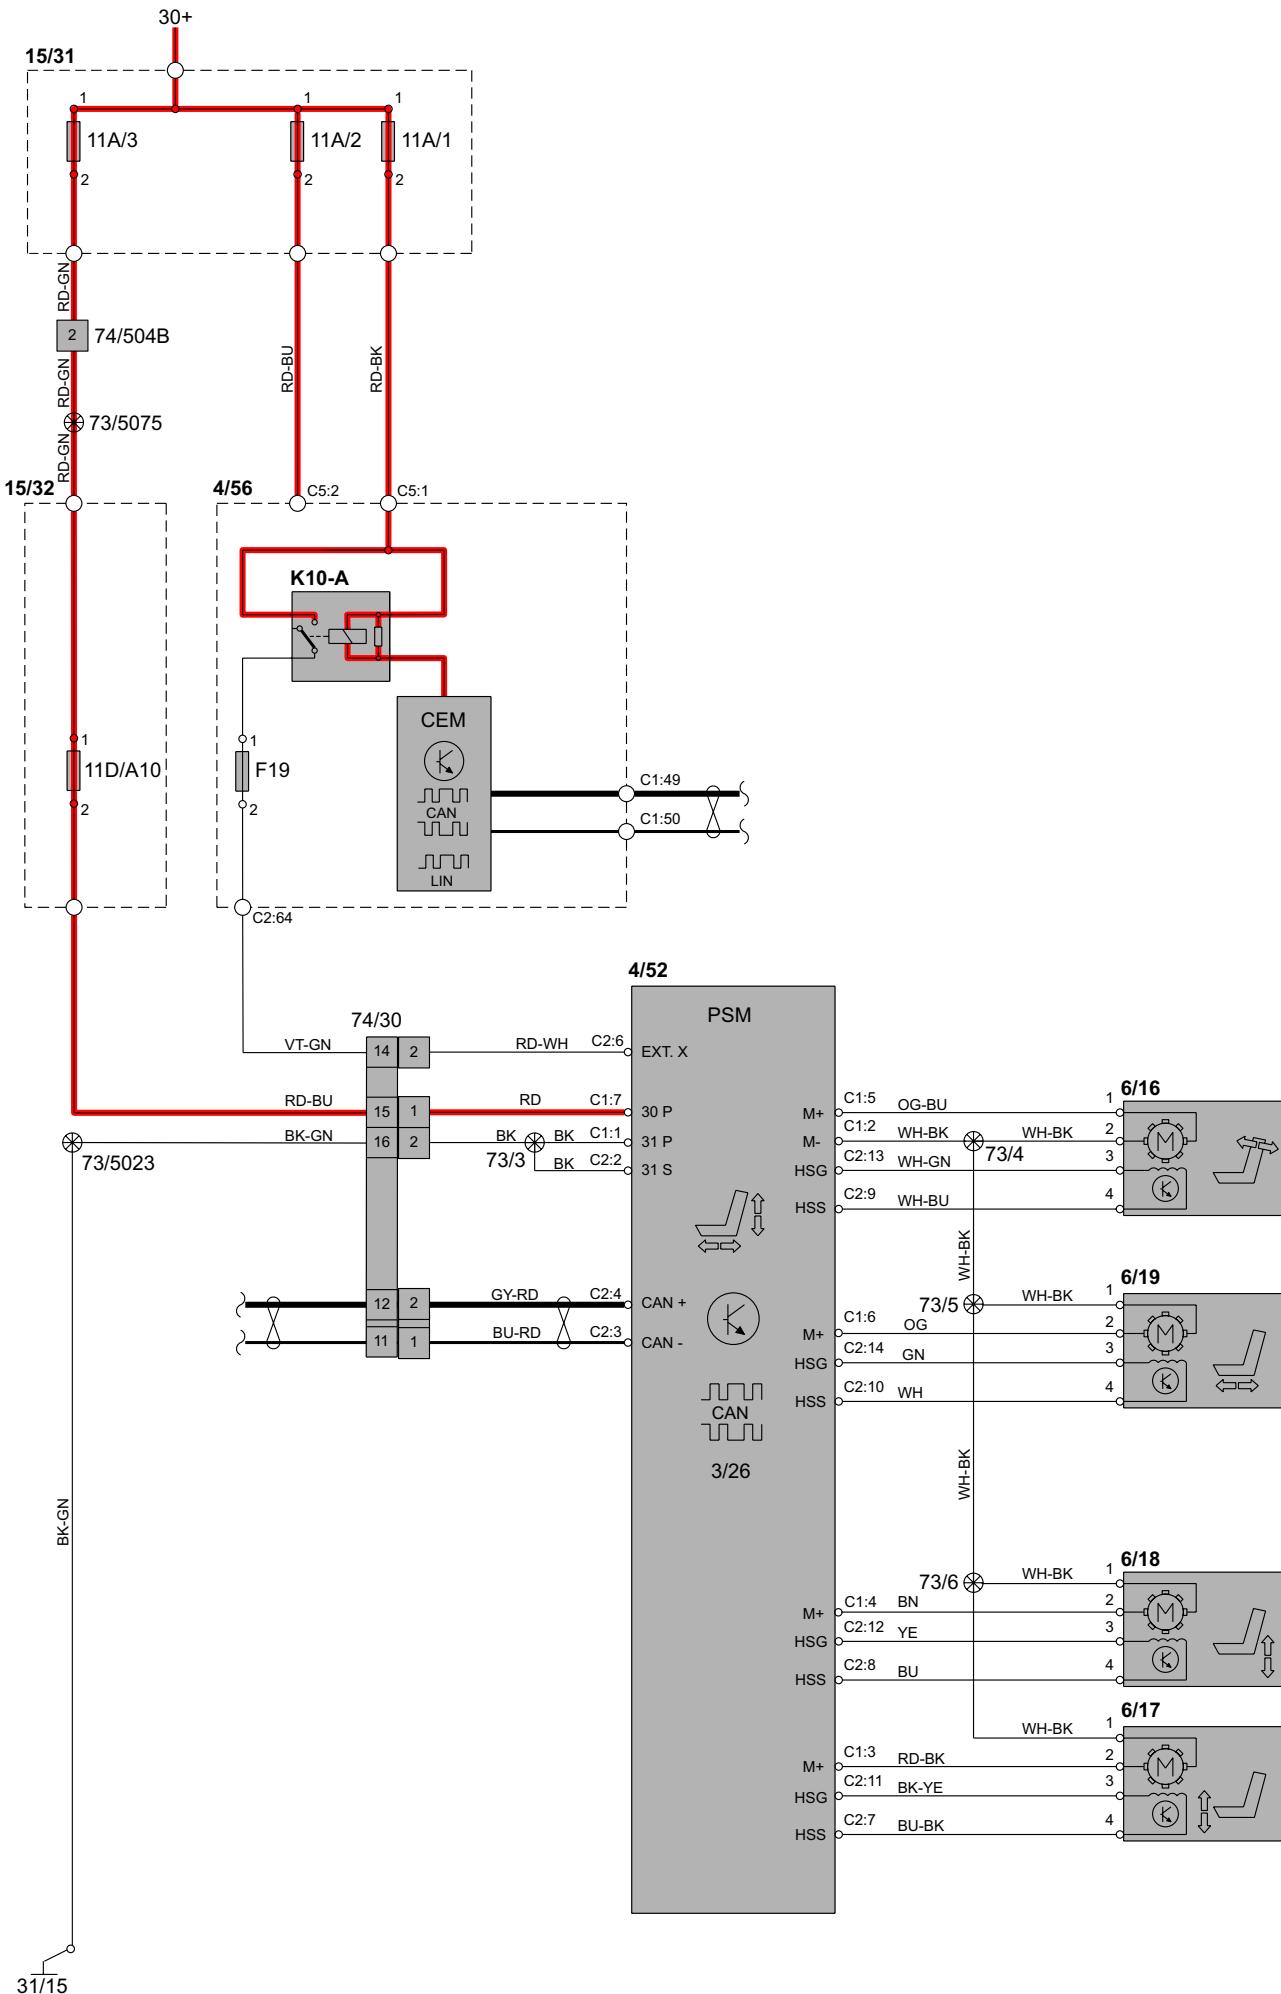


**Group 85 Interior equipment
Power passenger seat, LHD**

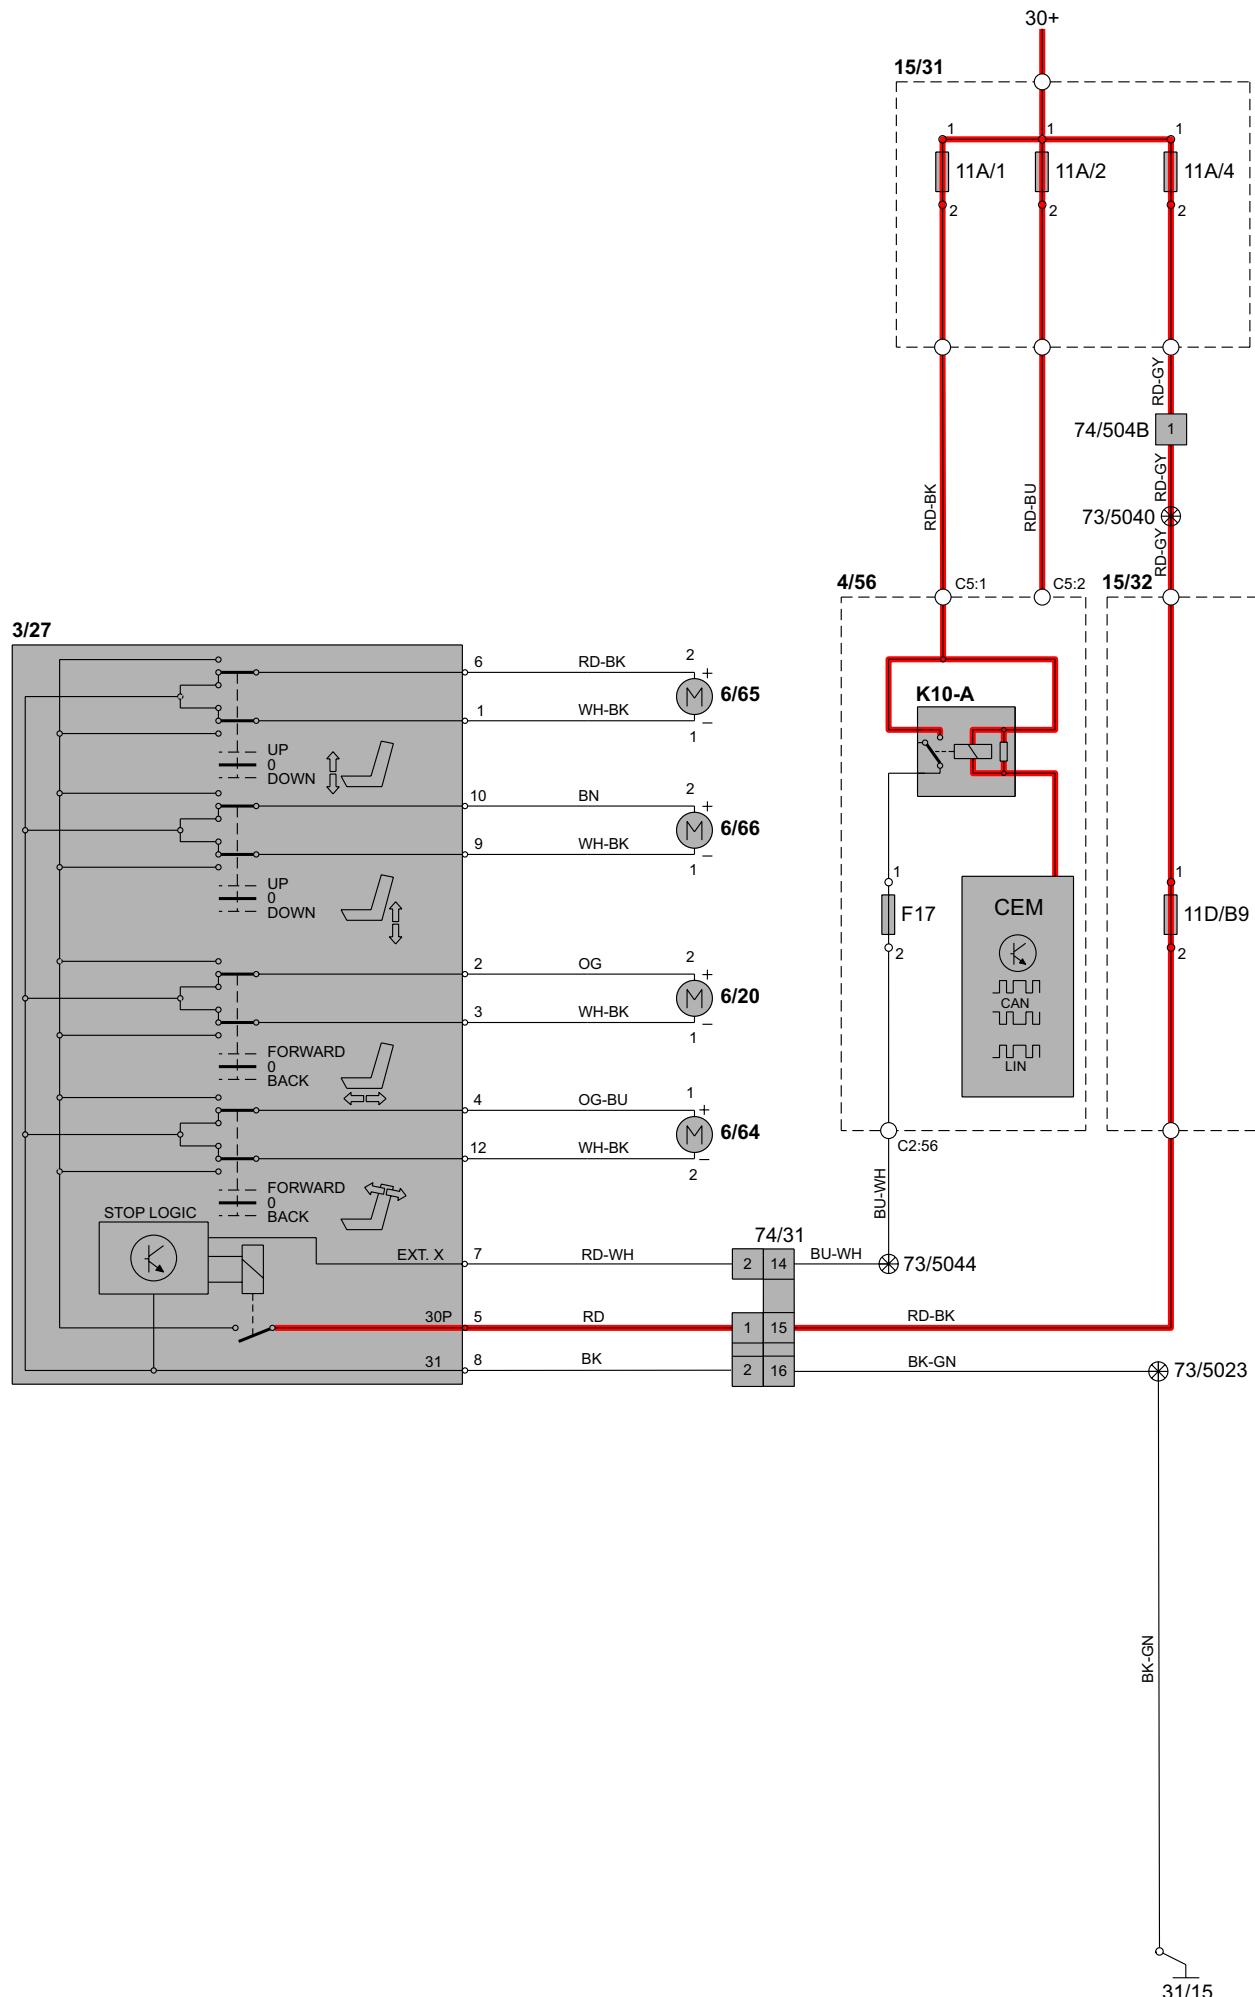


Group 85 Interior equipment
Power passenger seat, RHD

3/27

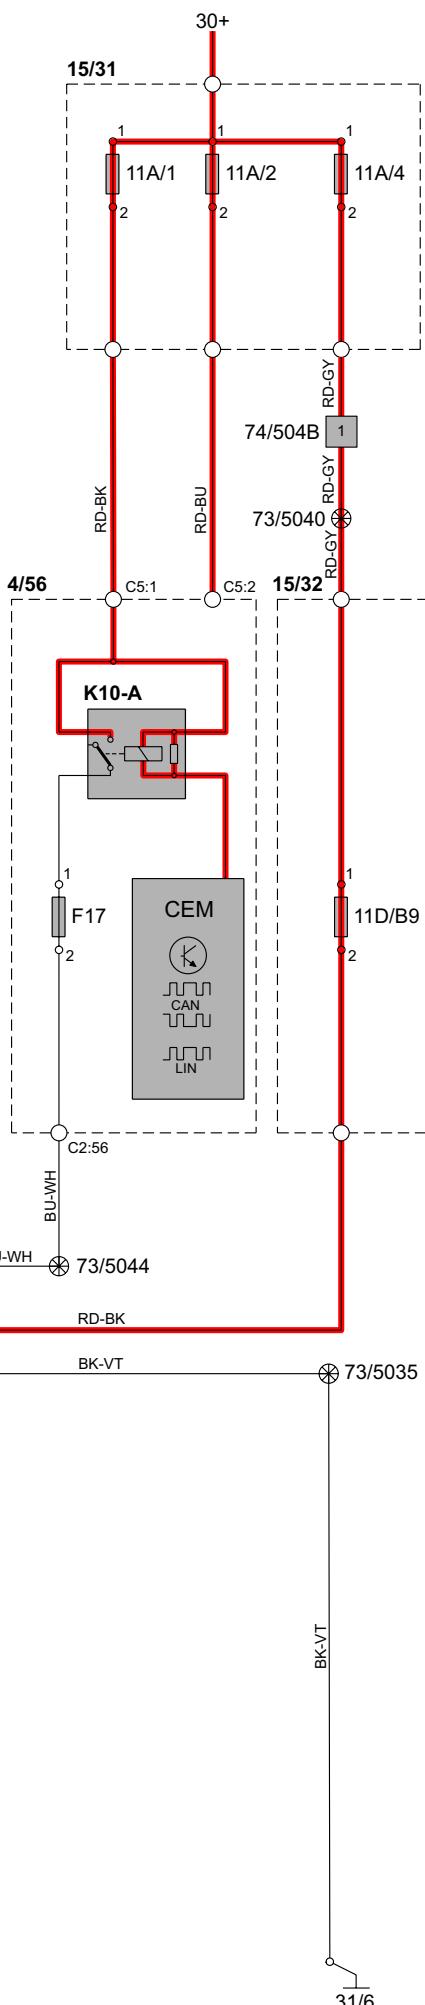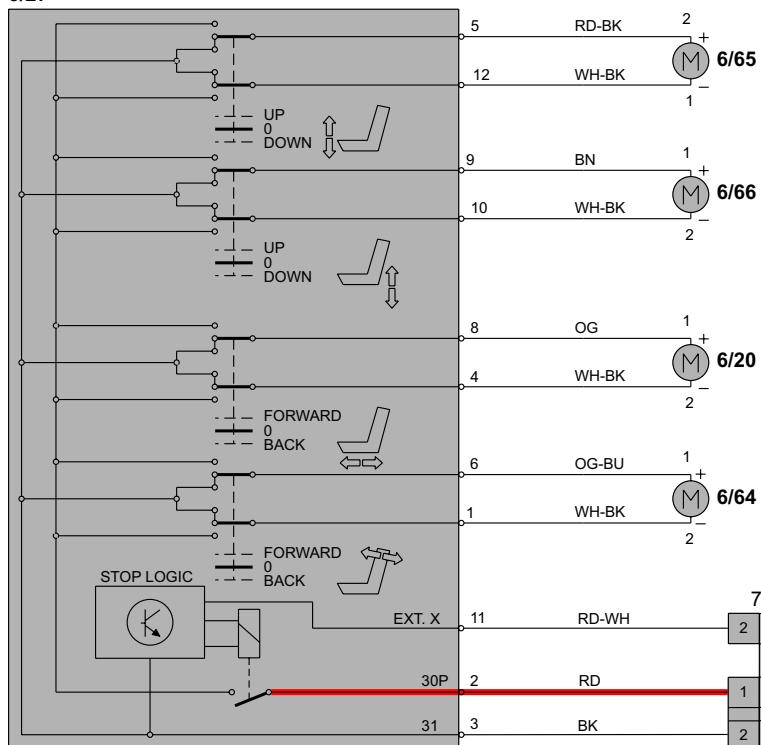


Group 85 Interior equipment

Heated power front seats with fans

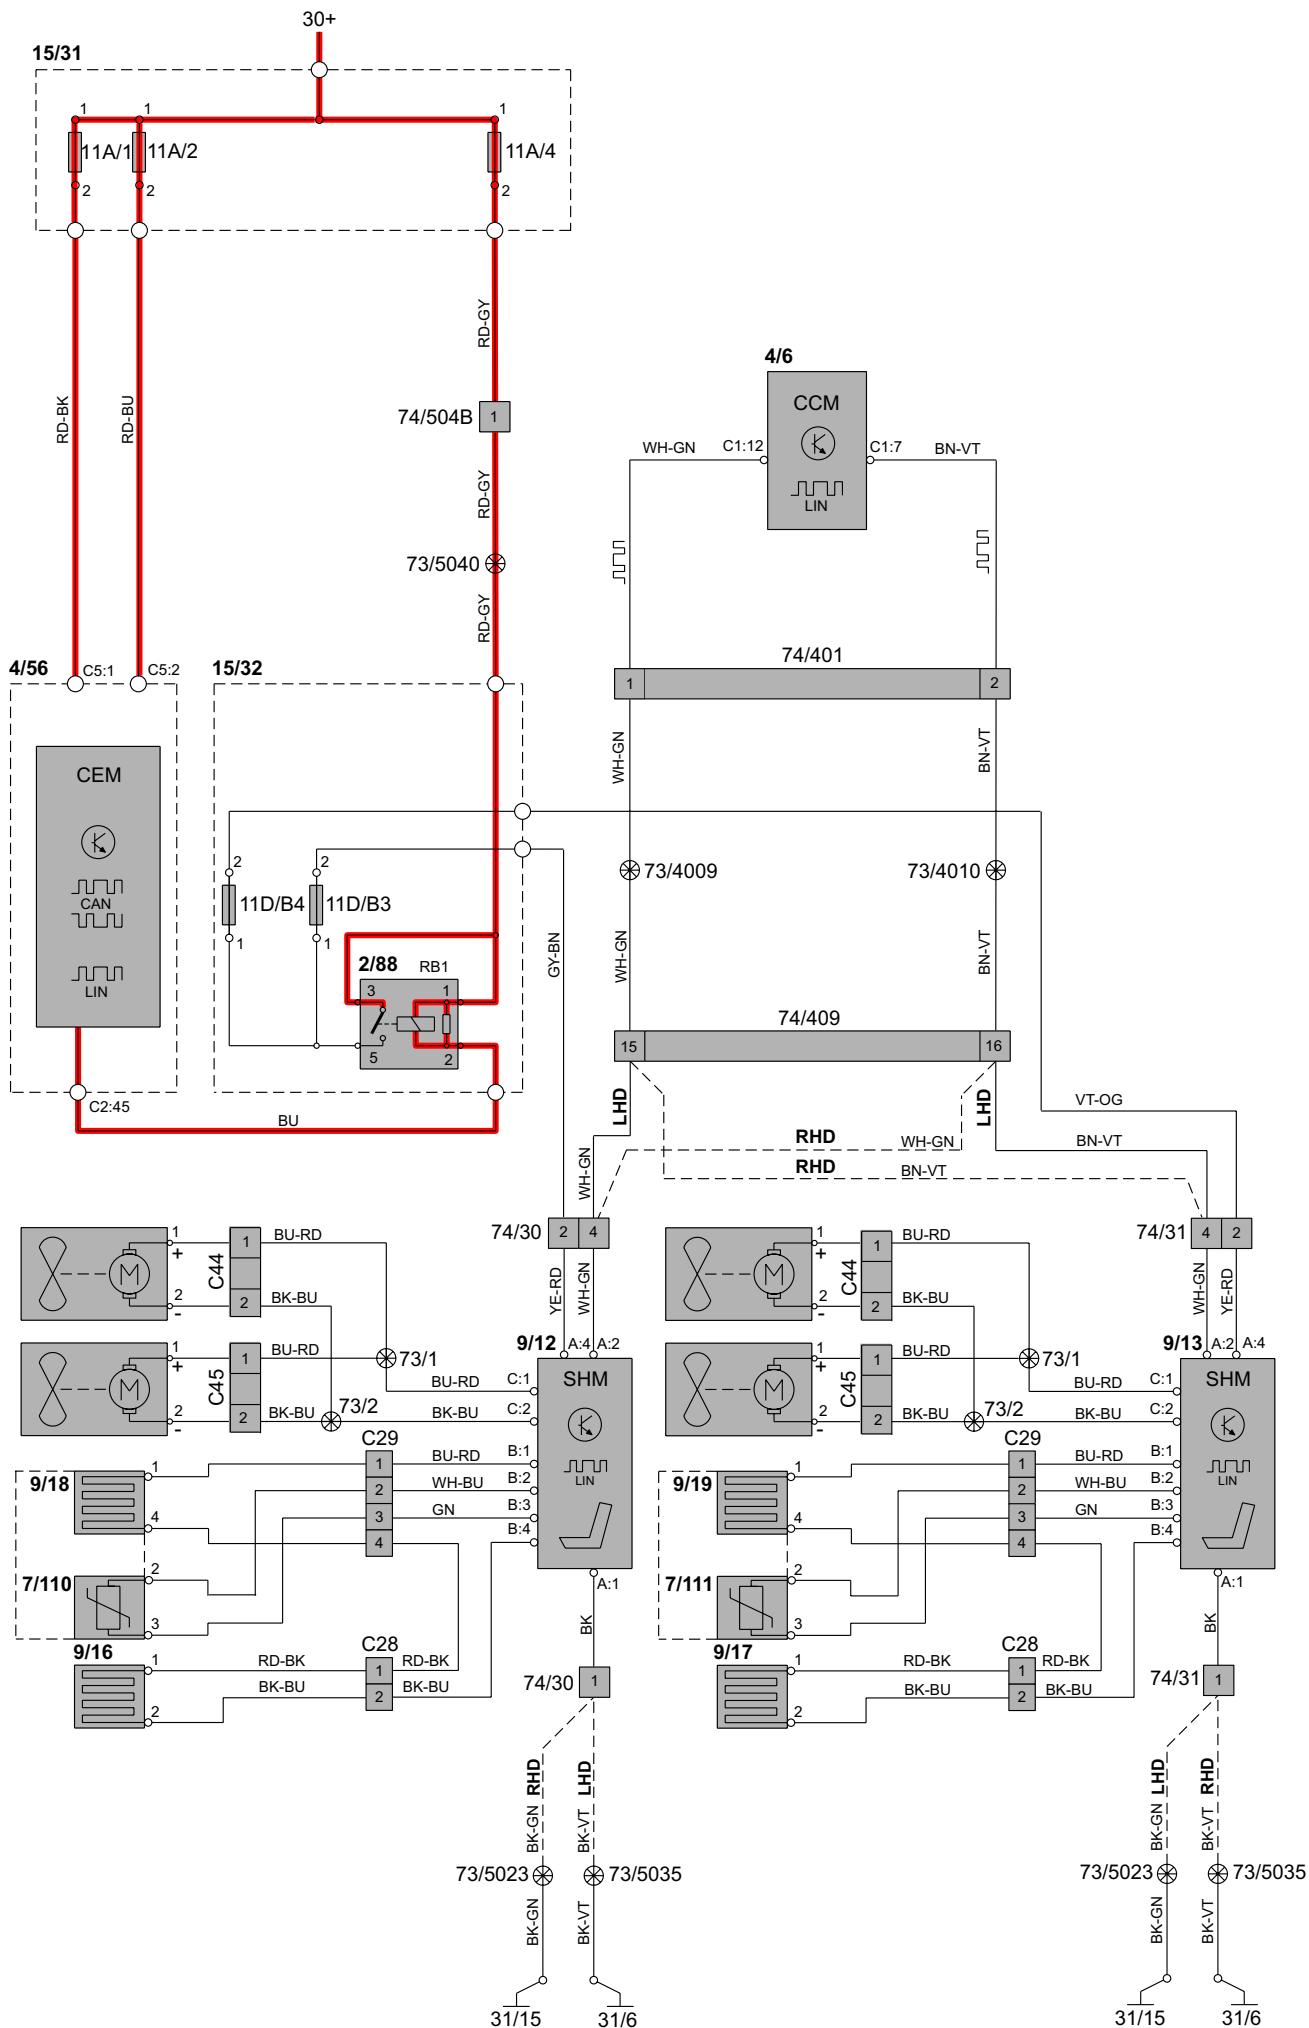


Group 85 Interior equipment

Heated power front seats without fans

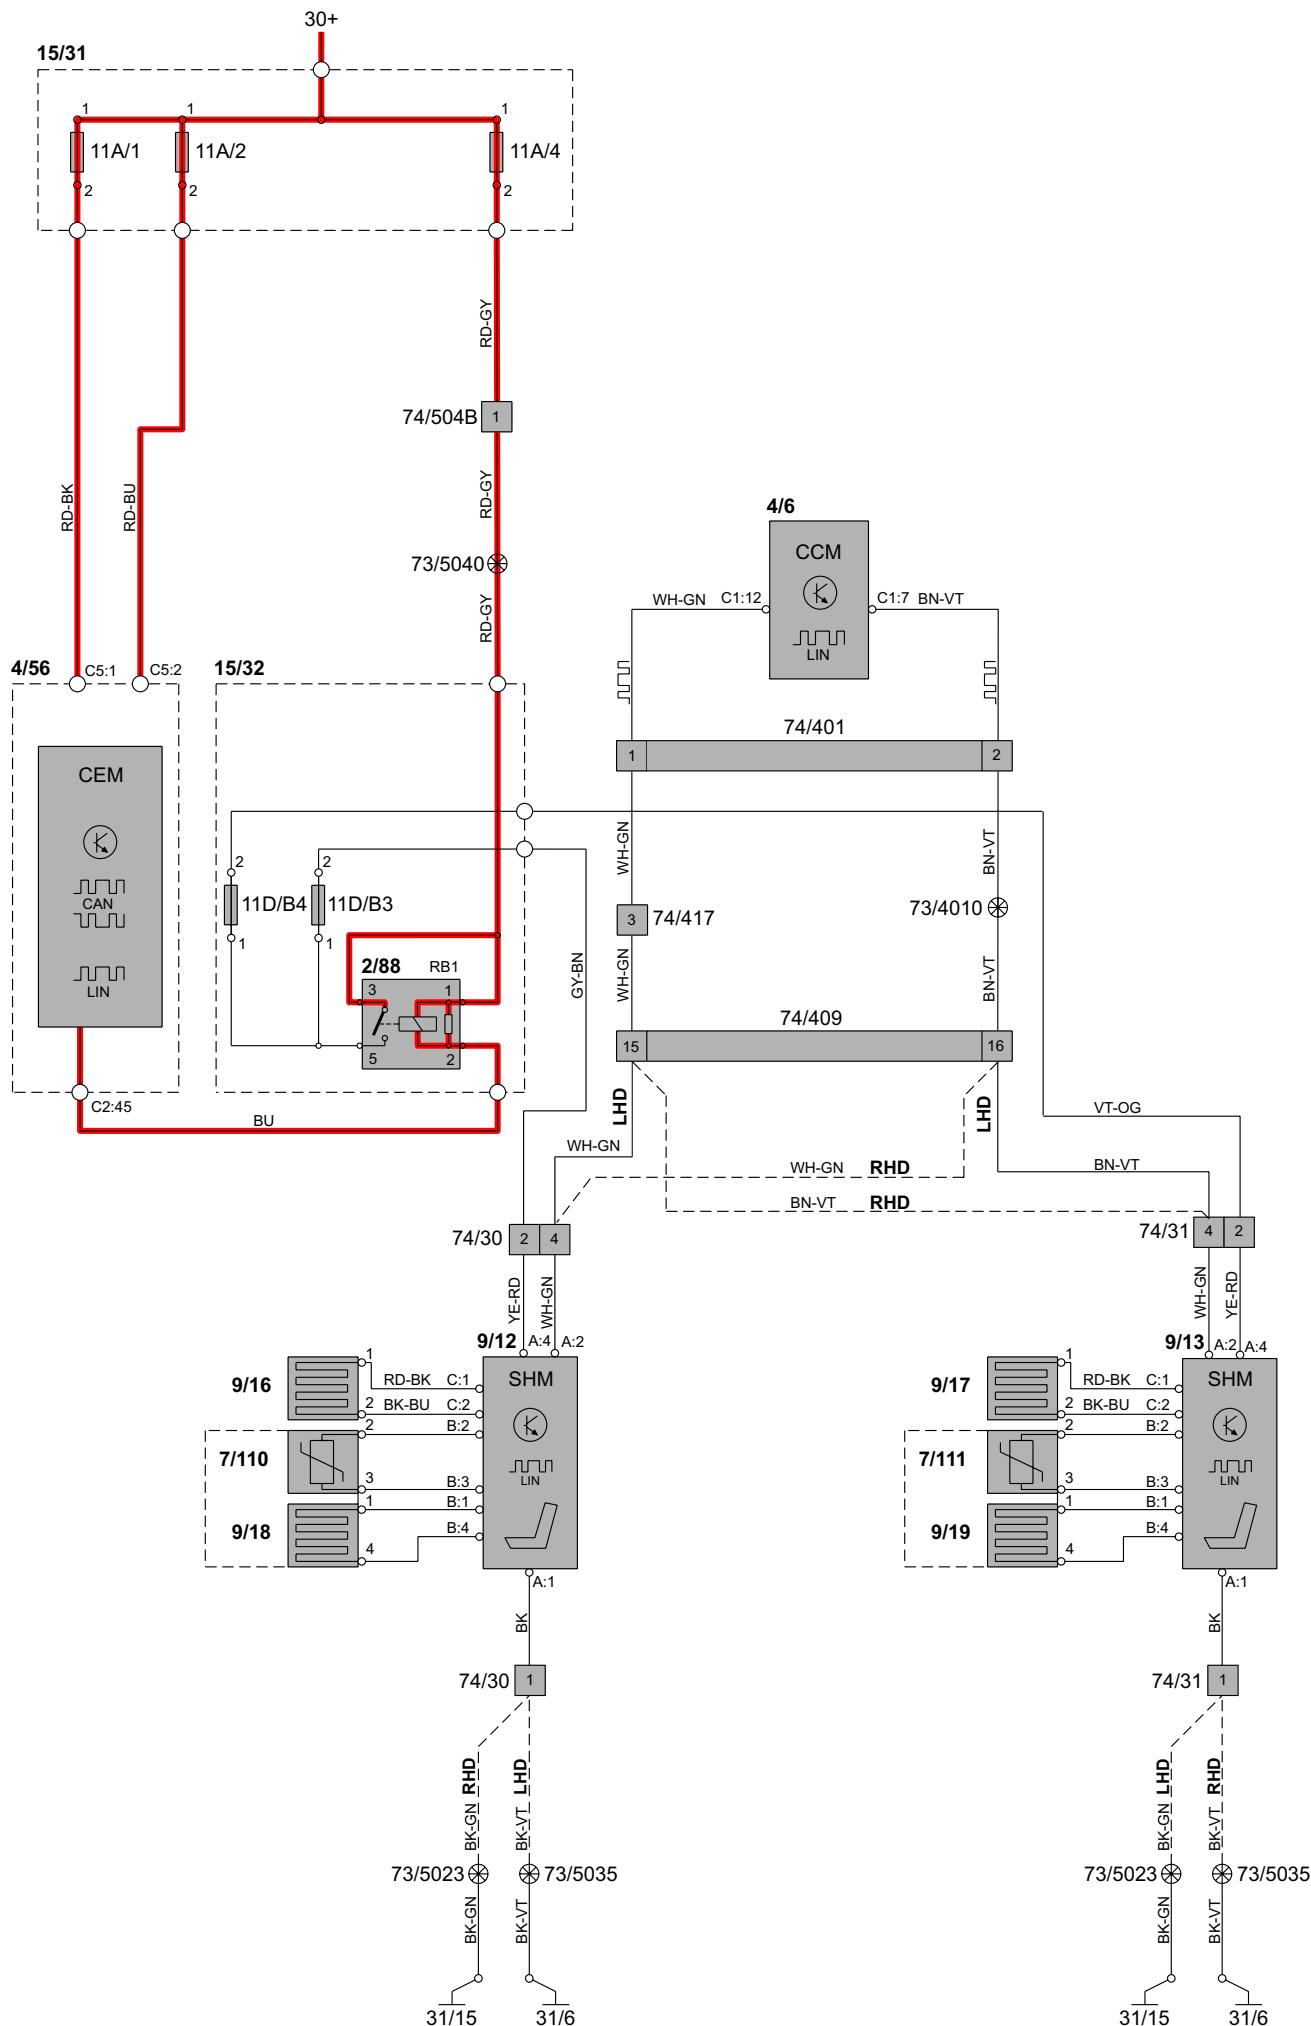


Group 85 Interior equipment

Electrically heated rear seat

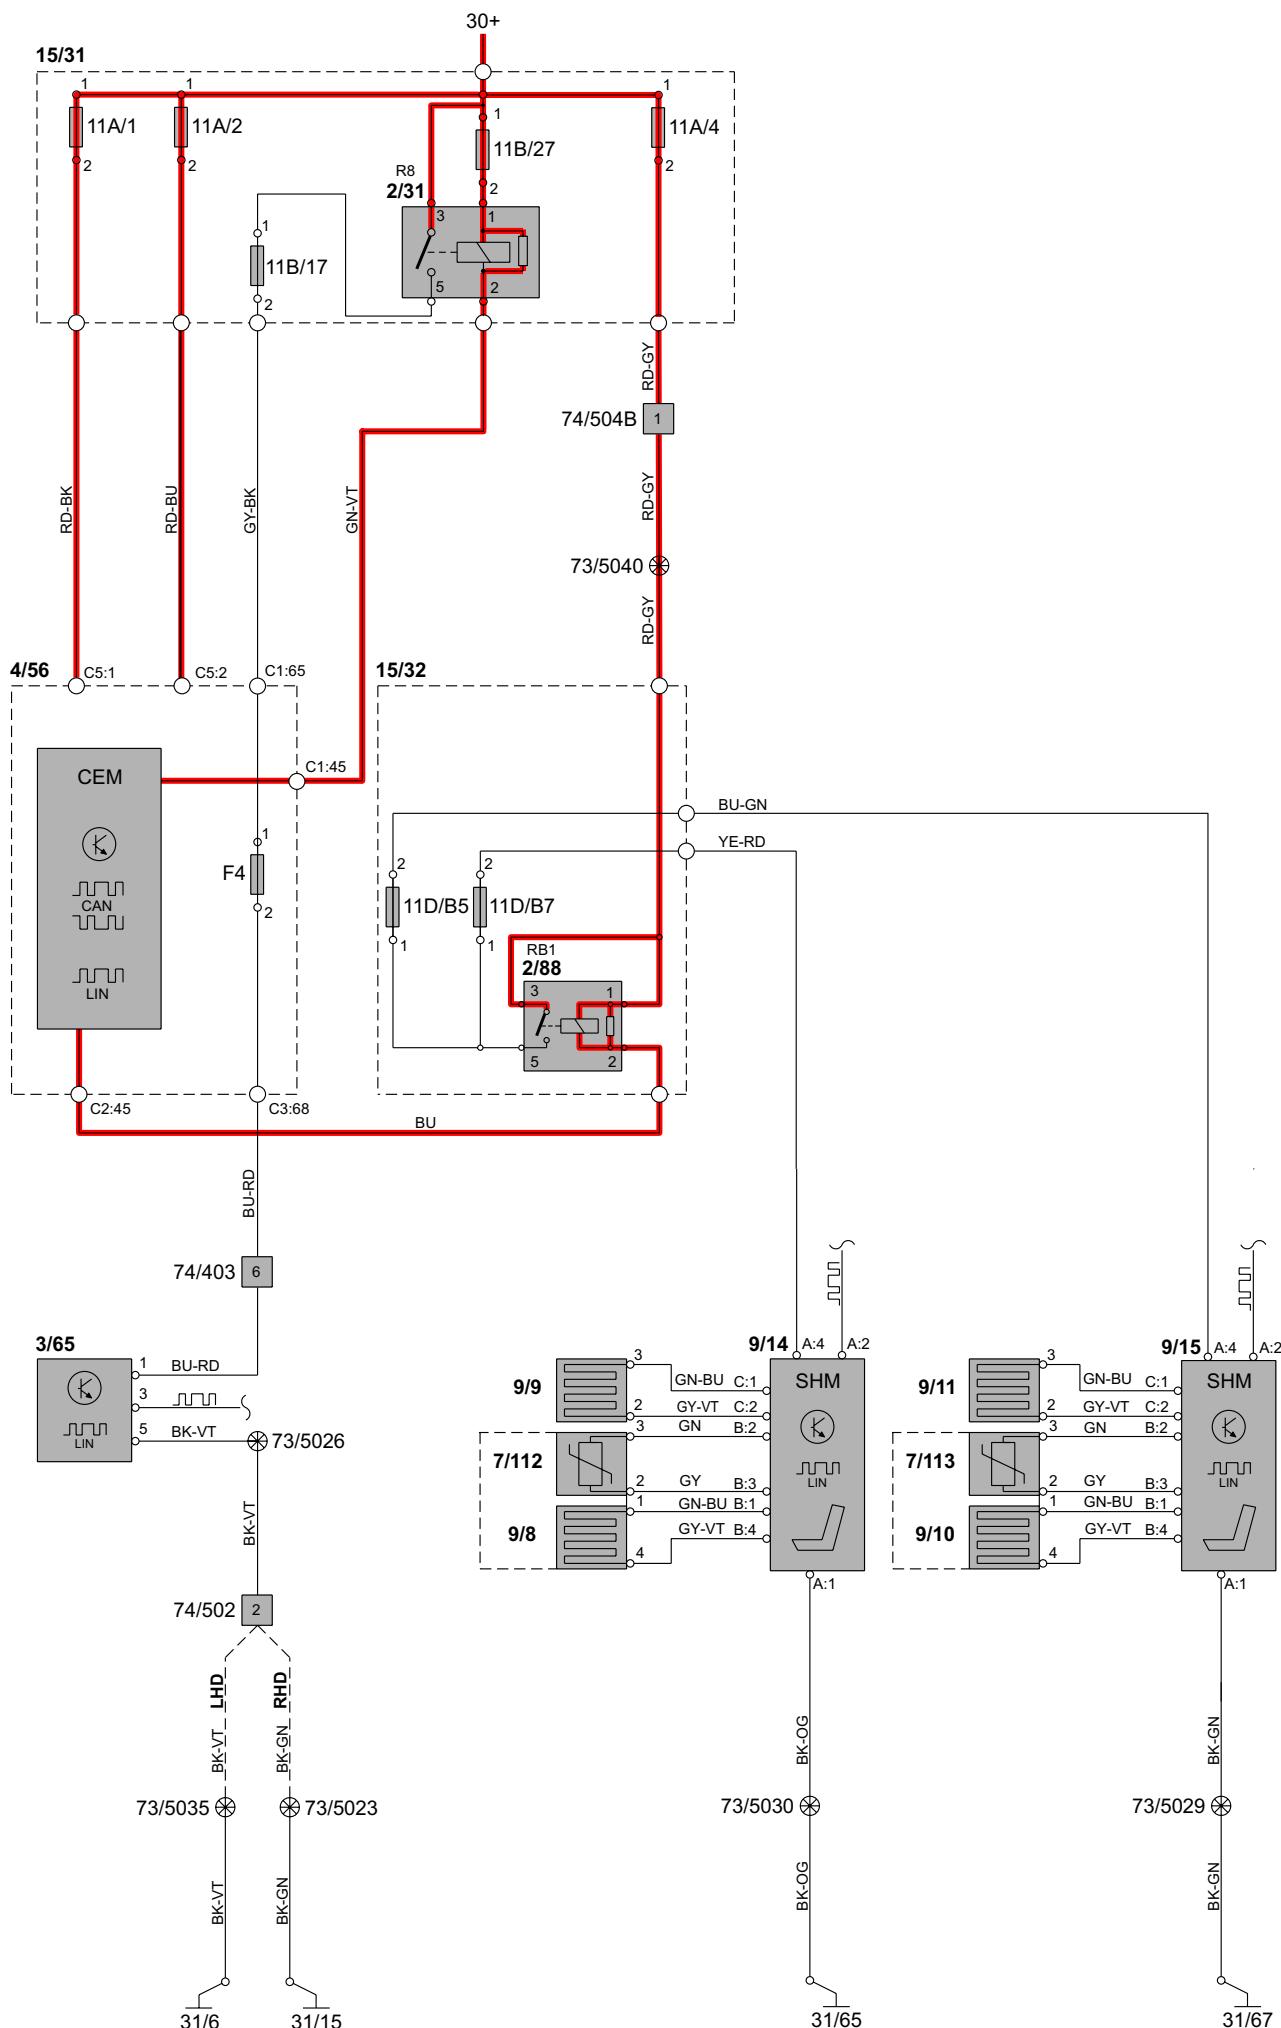


Group 87 Climate control system

Climate control system PTC elements

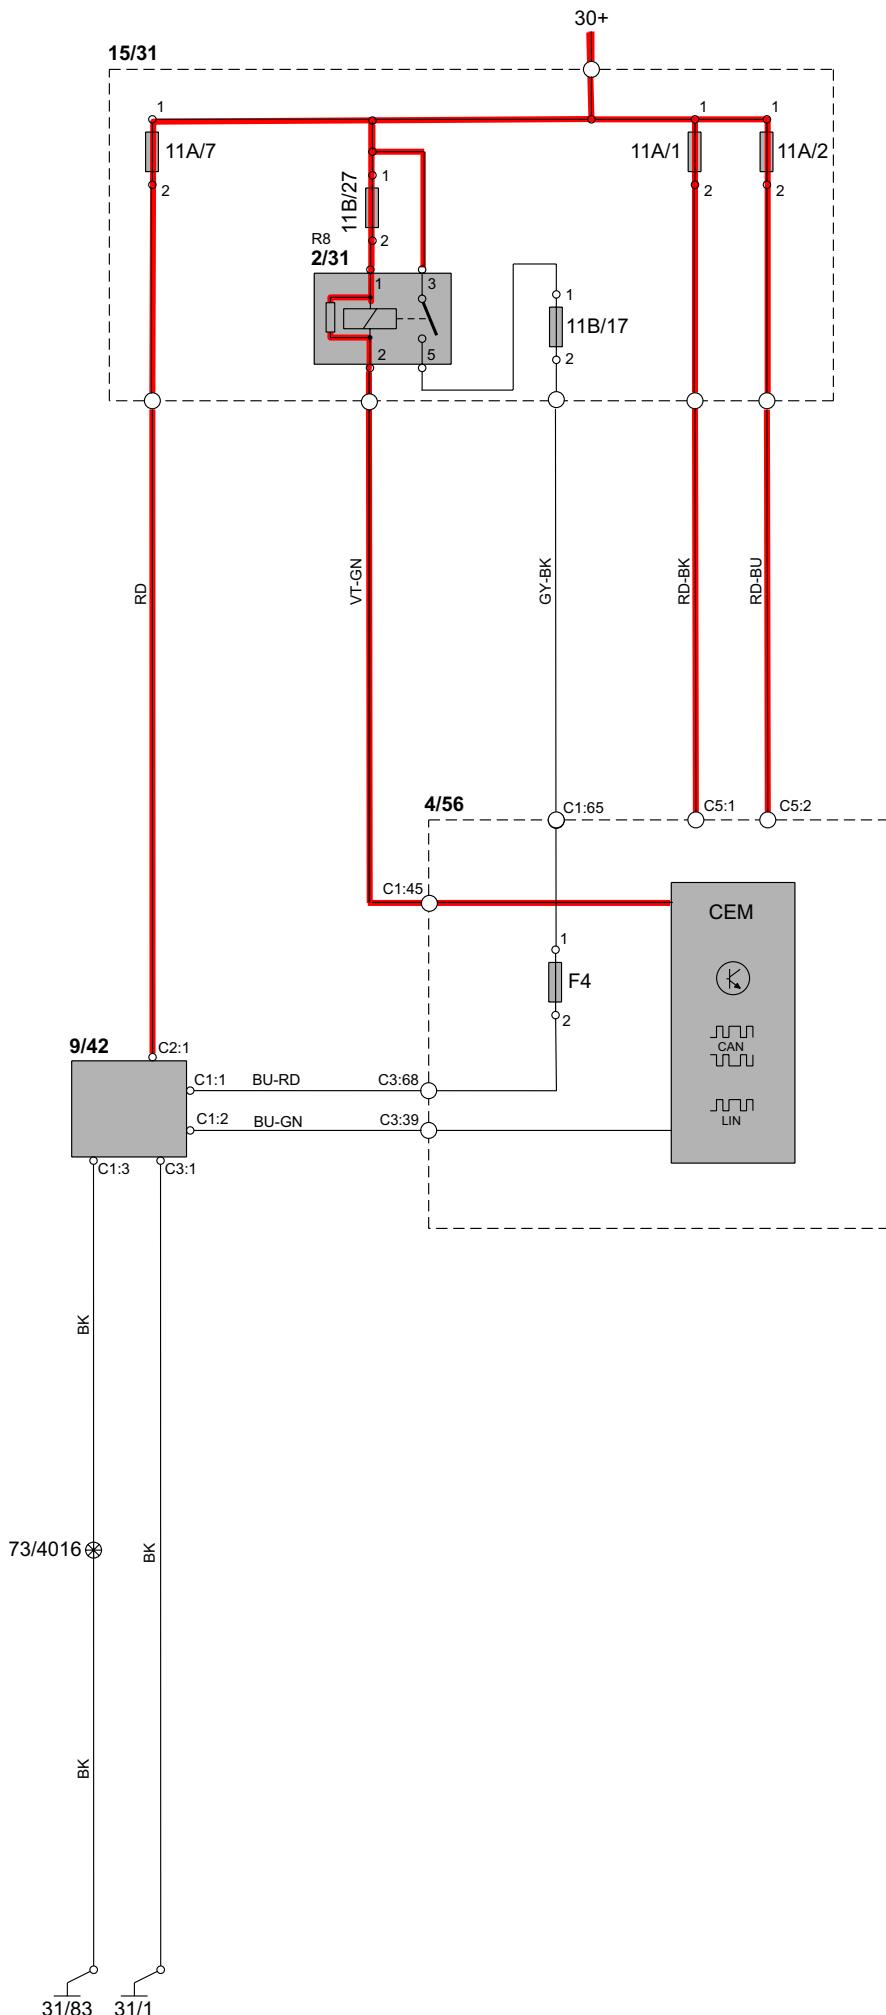


Group 87 Climate control system

Climate control system 5, 6 & 8 cyl. 1:2

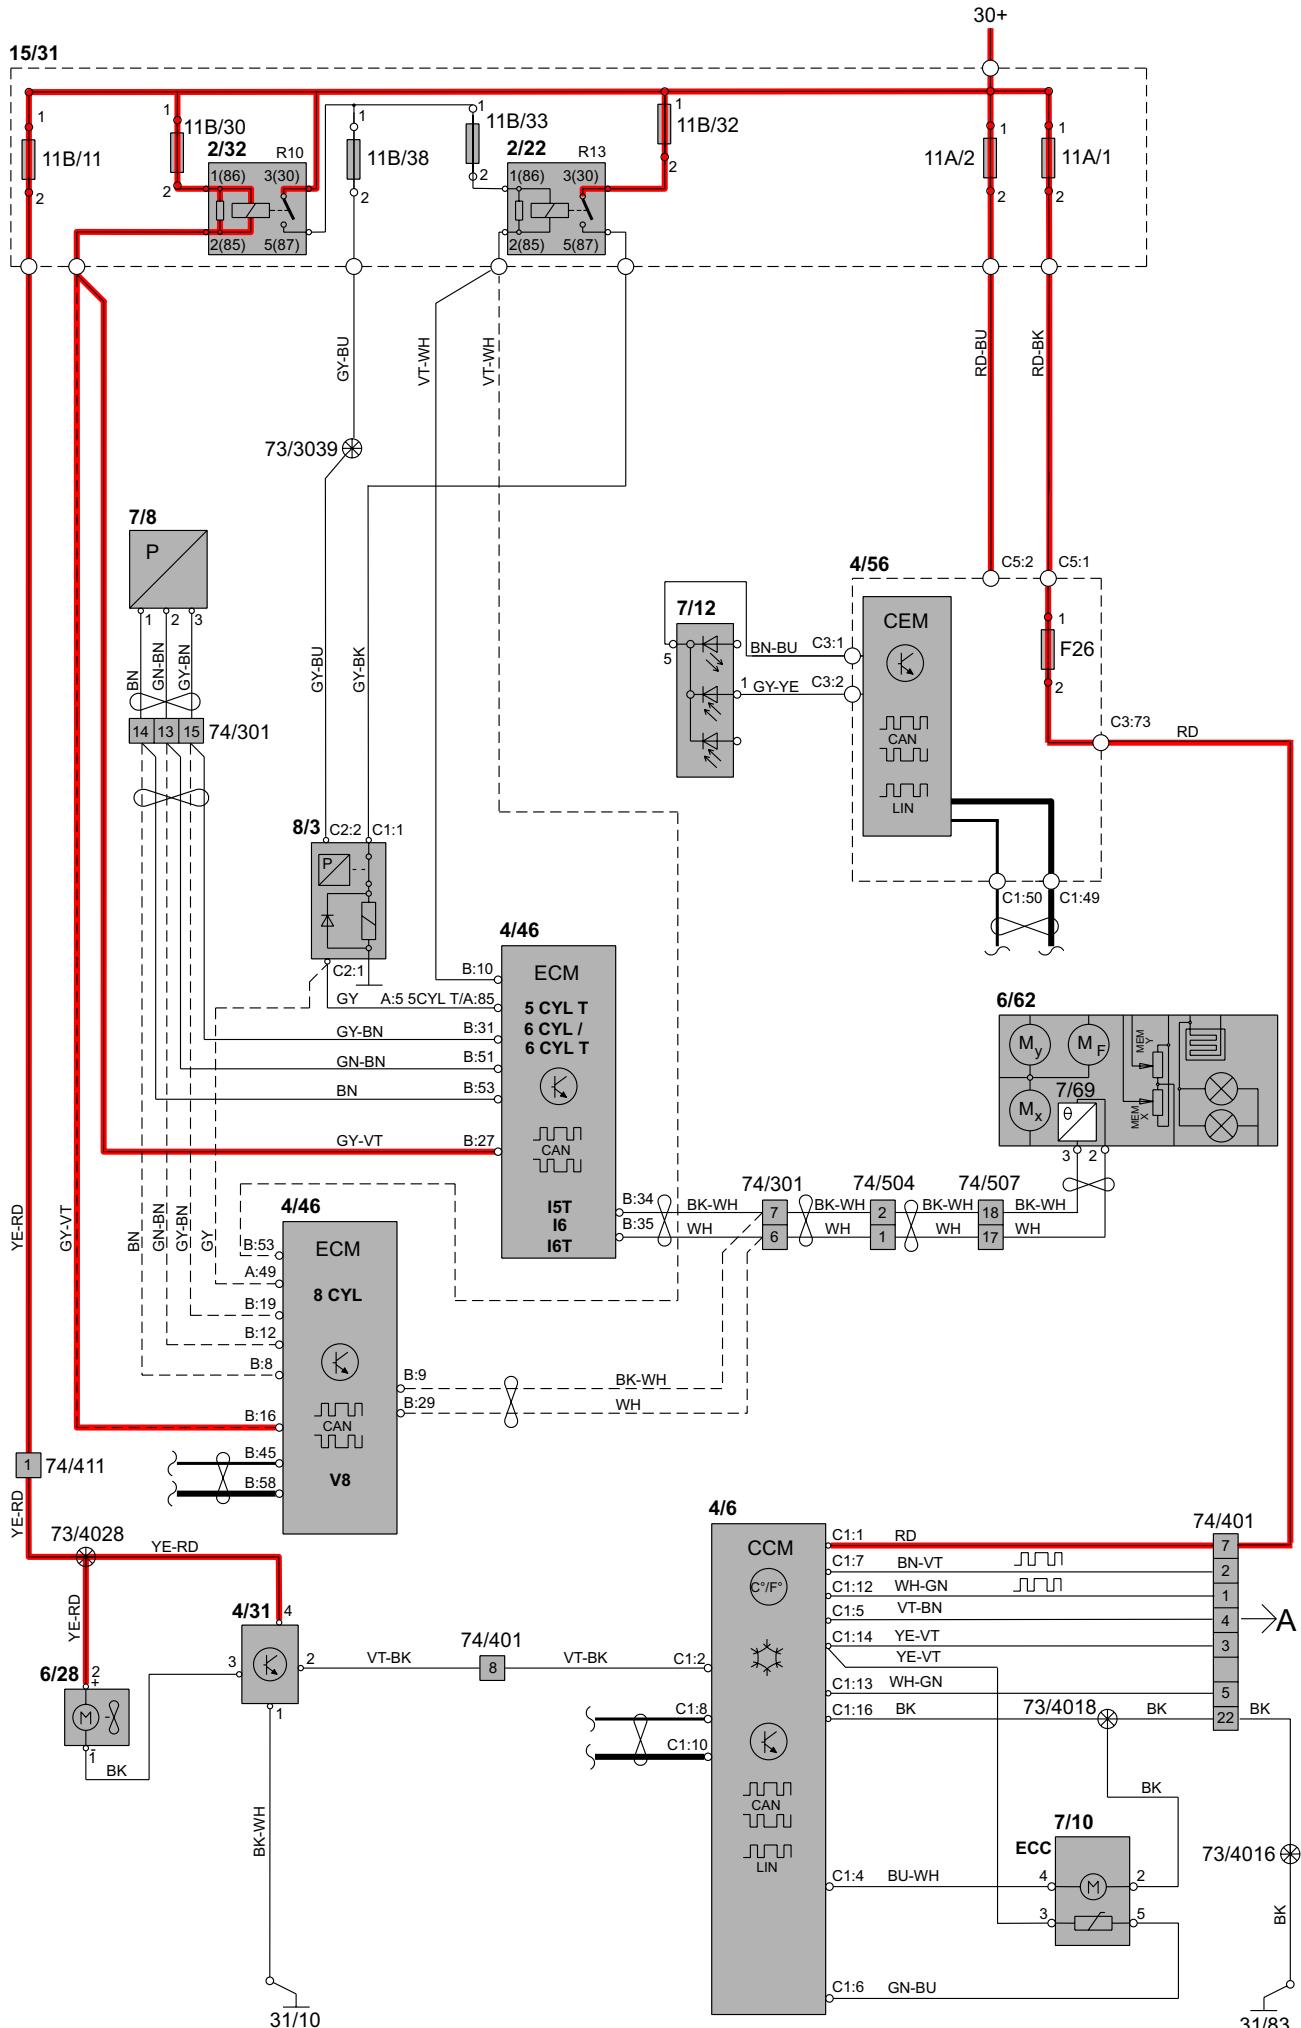


Group 87 Climate control system

Climate control system, 5, 6 & 8 cyl. 2:2

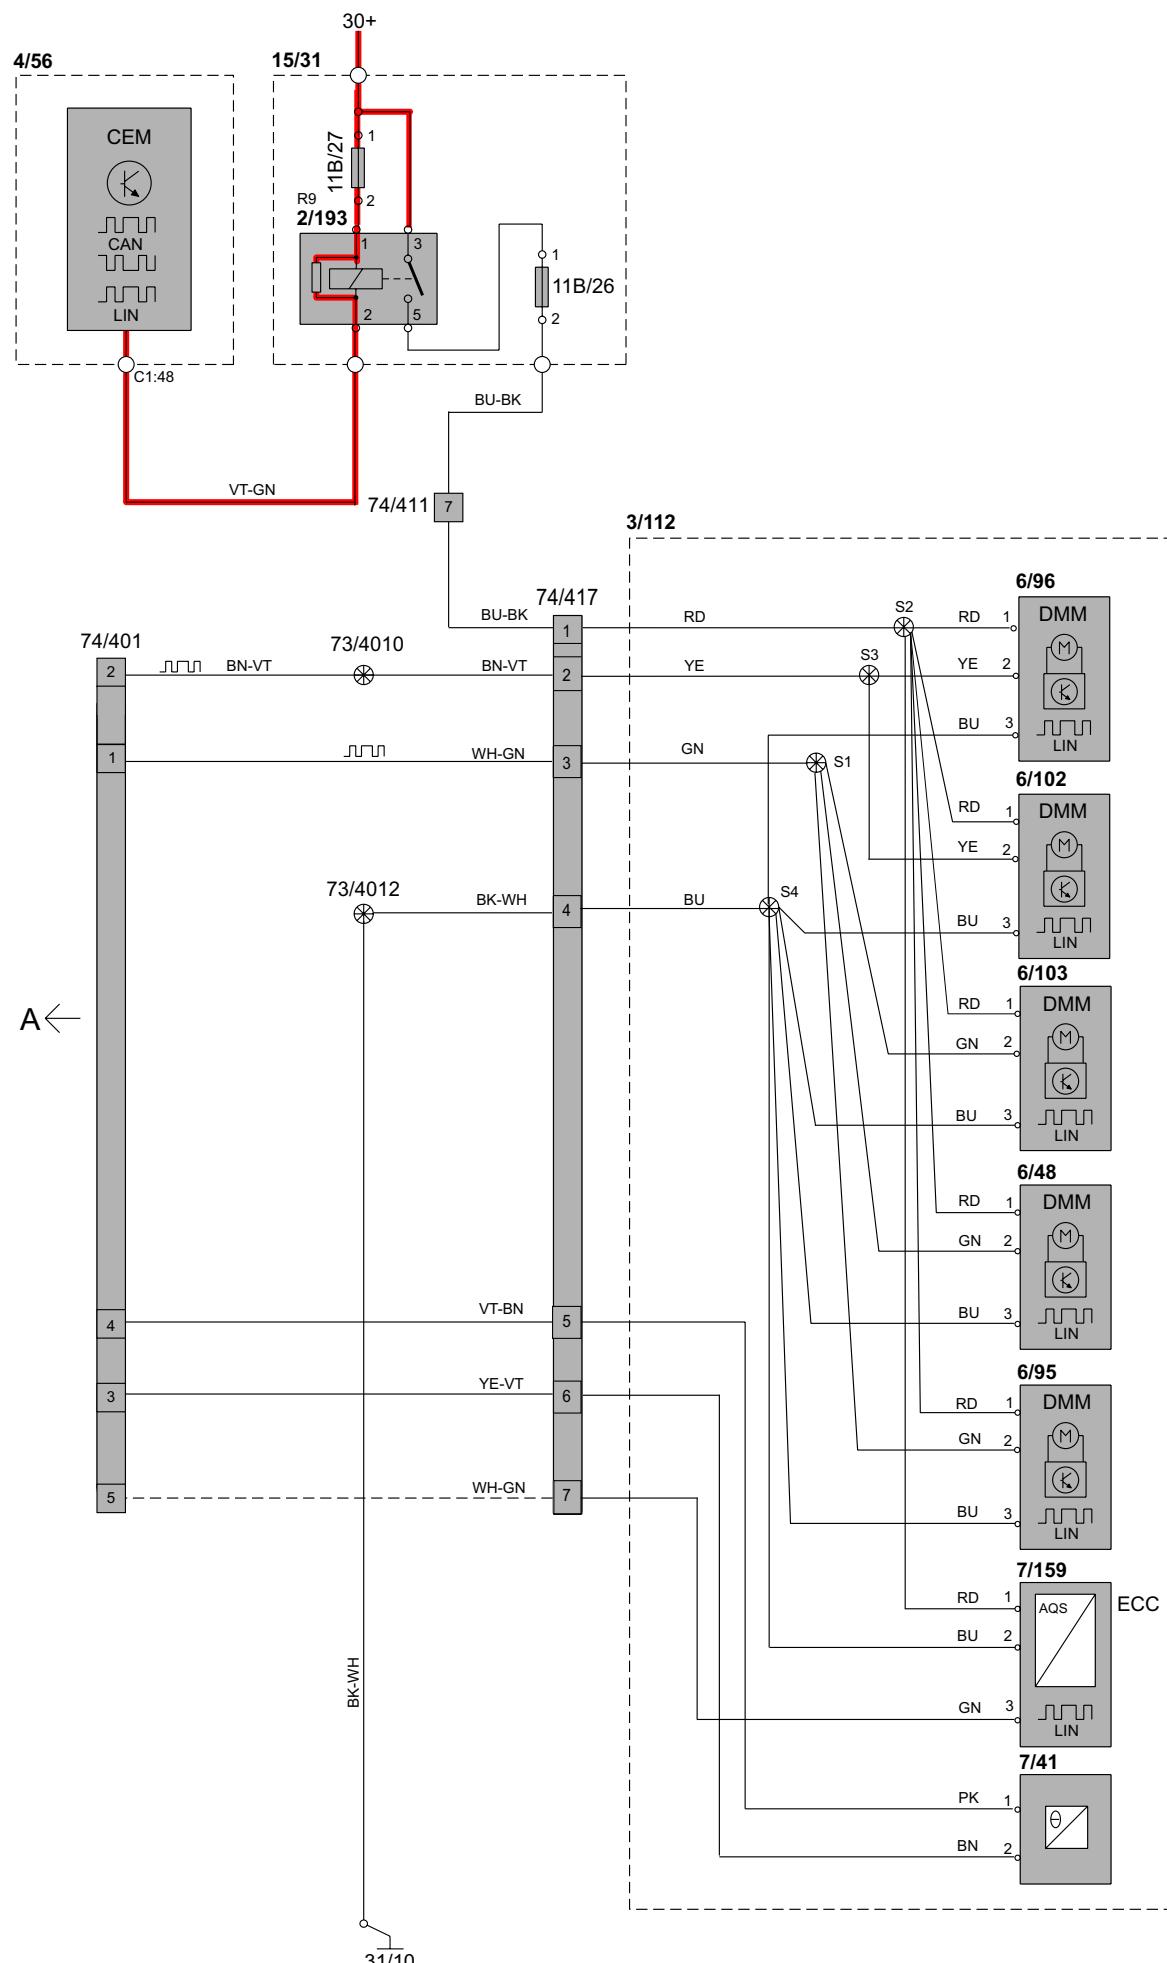


Group 87 Climate control system

Climate control system 5 Cyl. Diesel 1:2

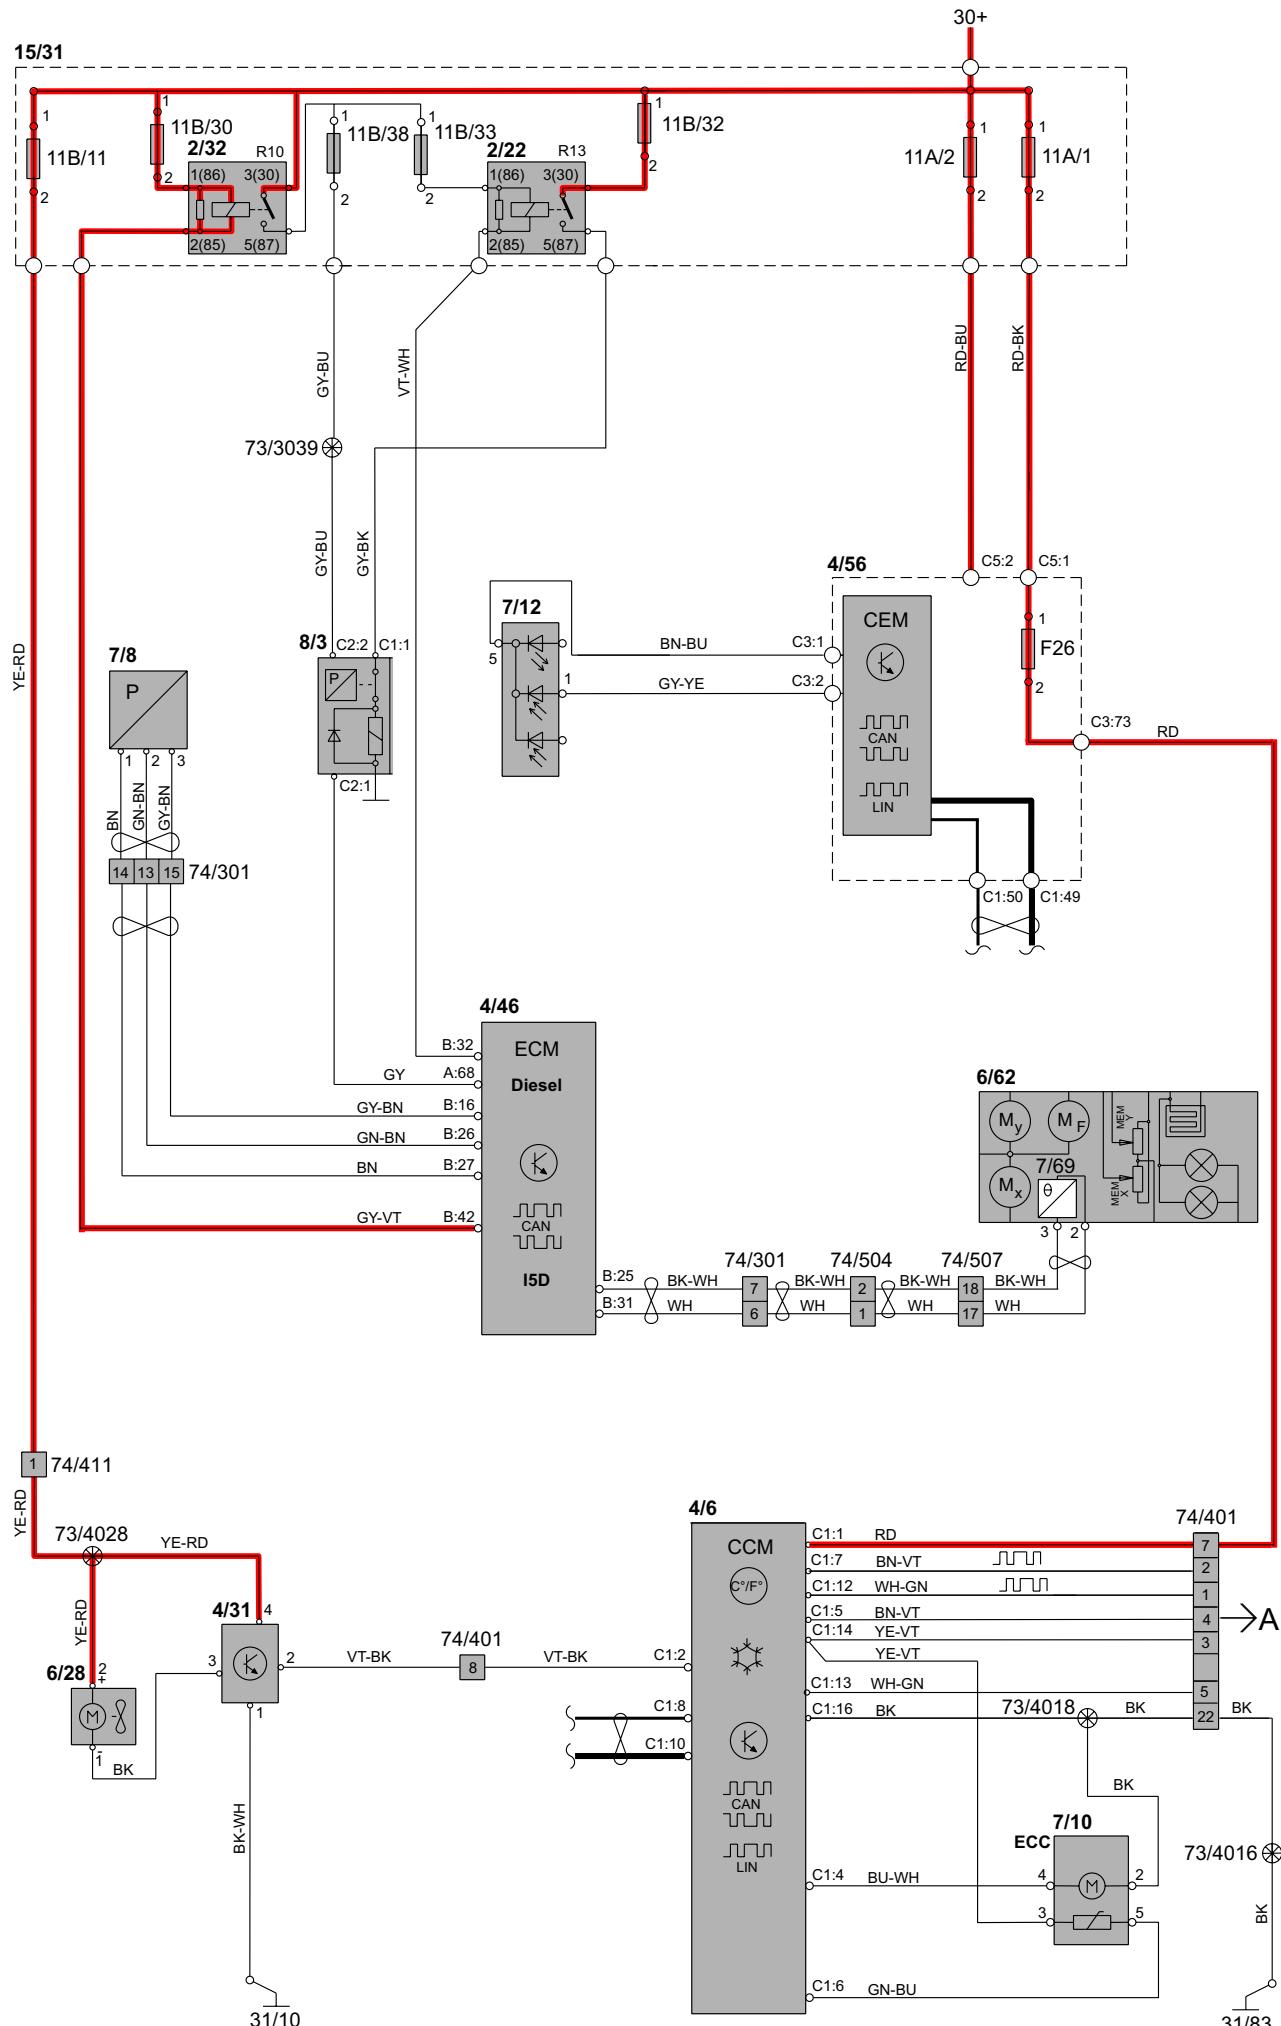


Group 87 Climate control system

Climate control system 5 Cyl. Diesel 2:2

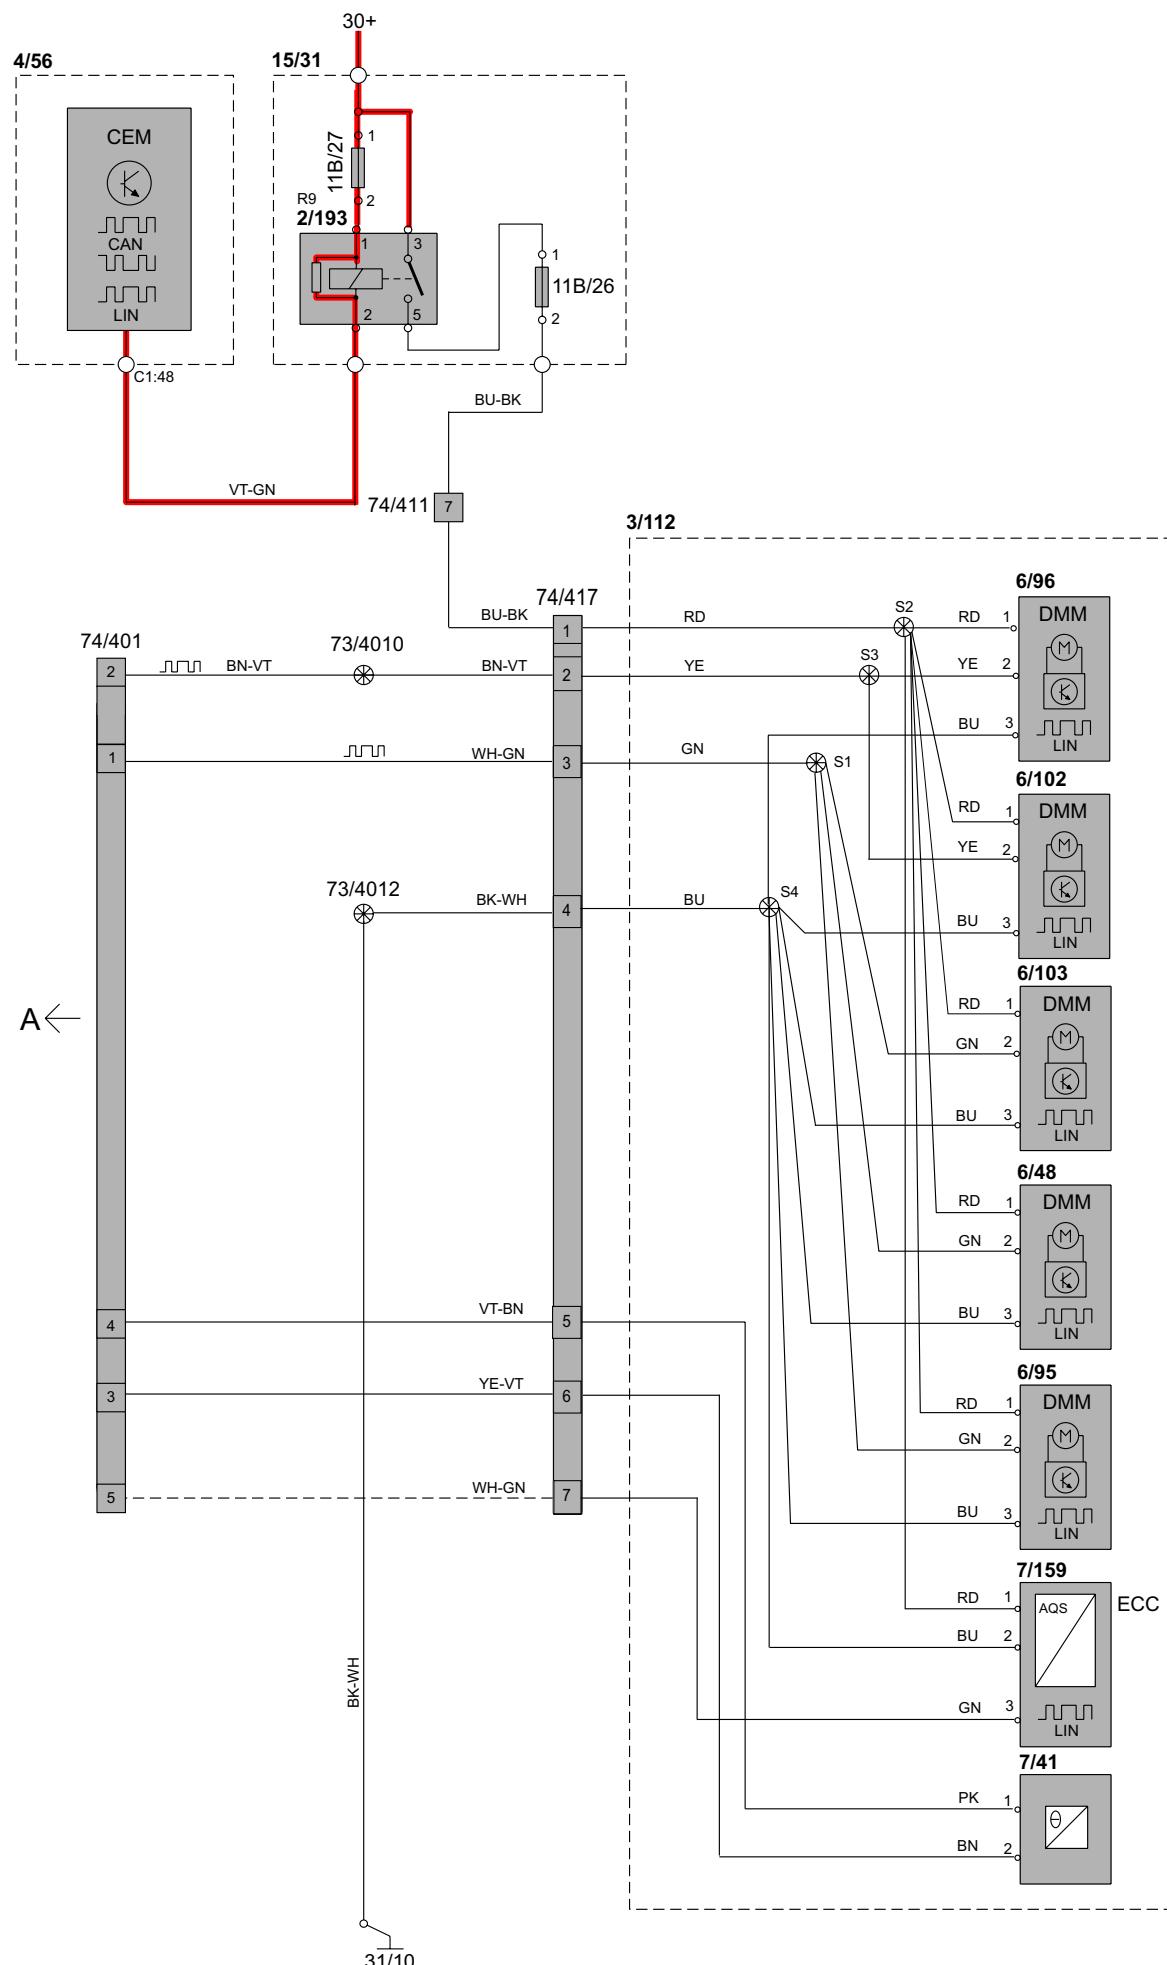


Group 87 Climate control system

Parking heater, auxiliary heater

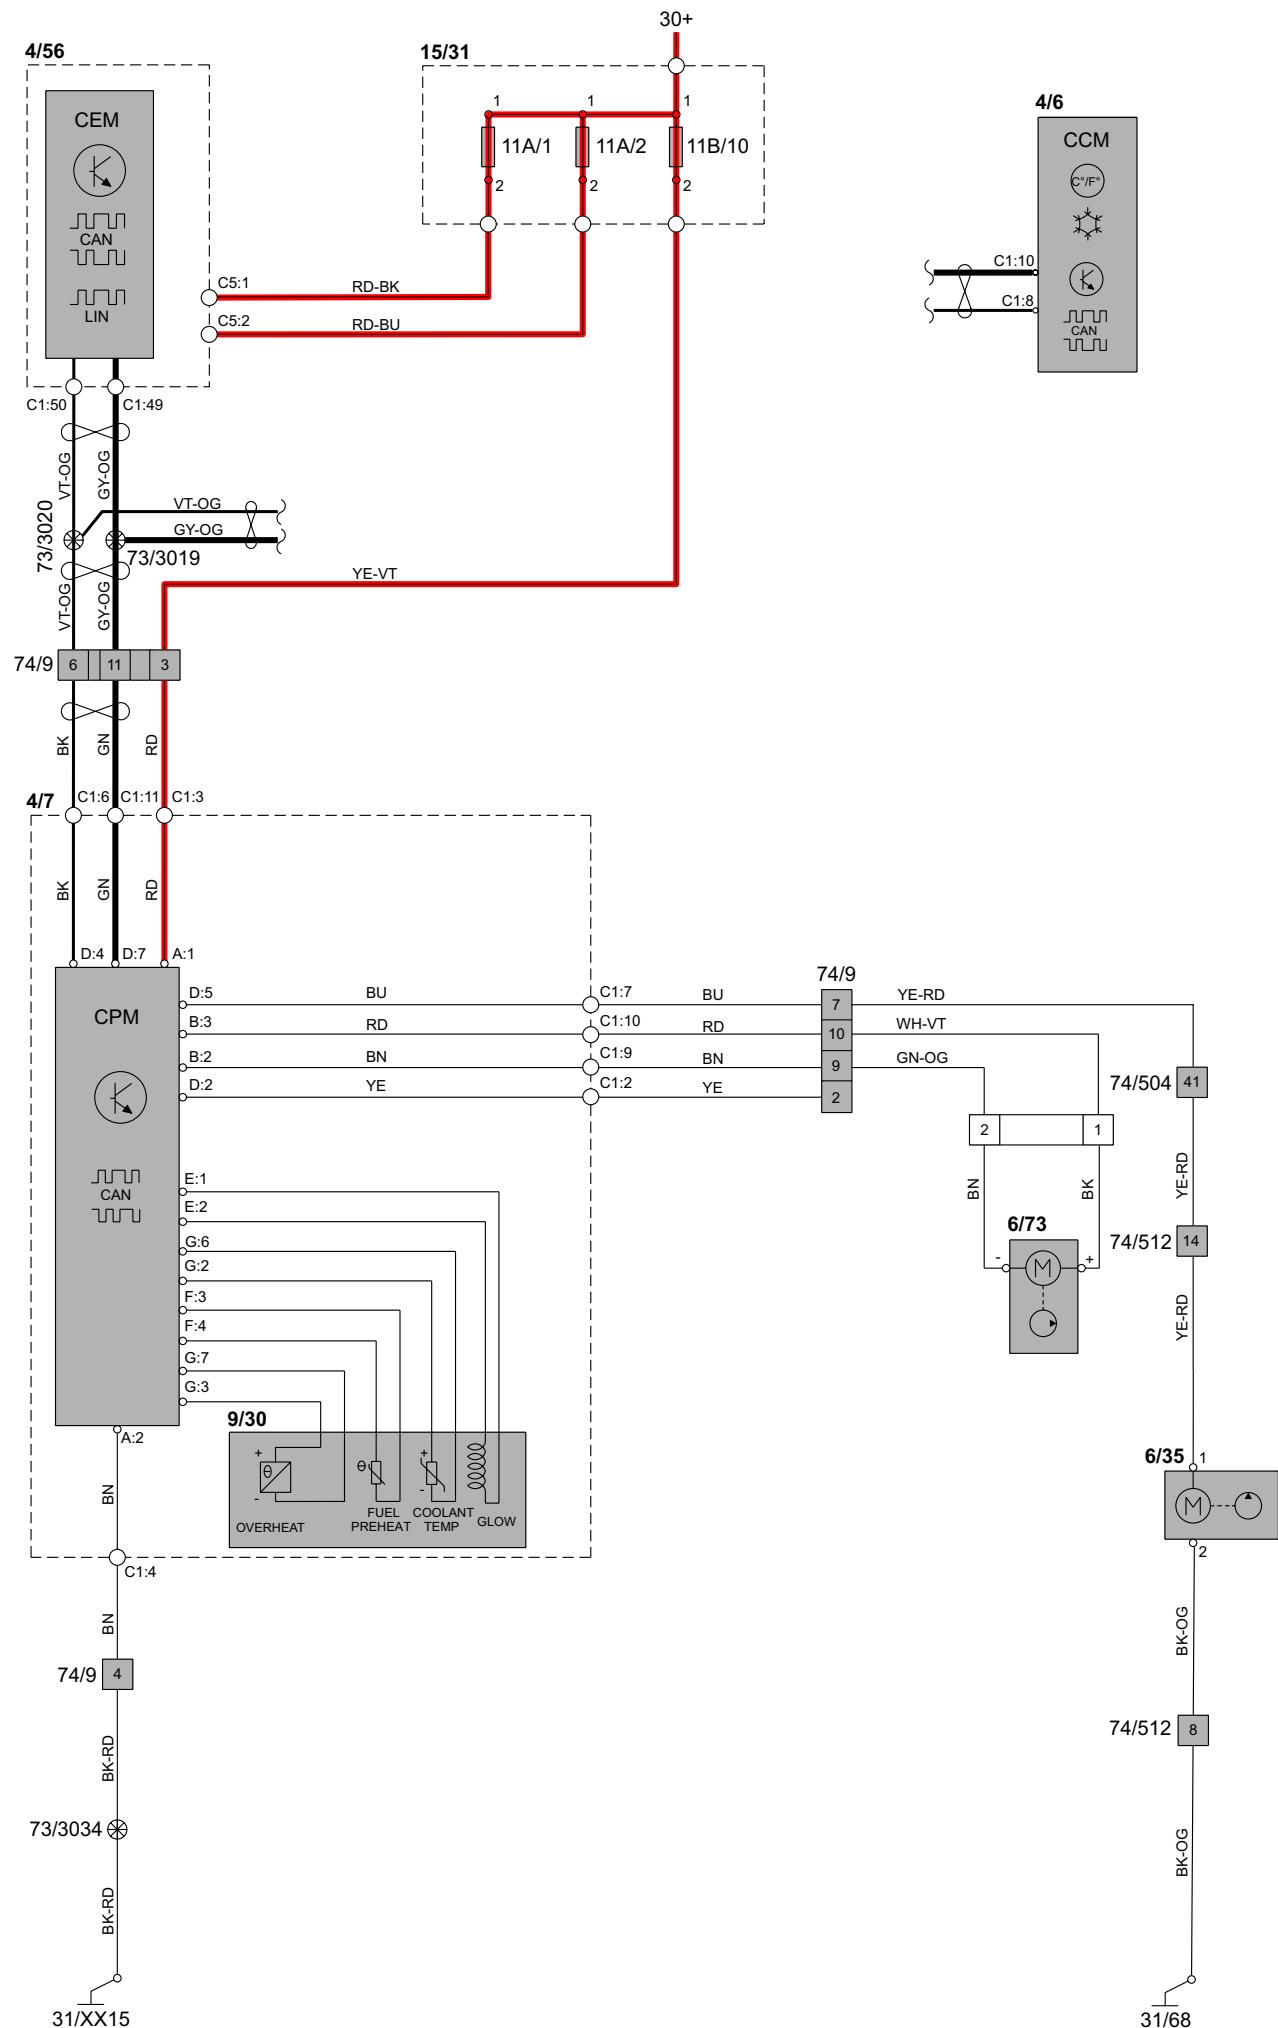


Group 87 Climate control system, Accessories

Parking heater, remote start

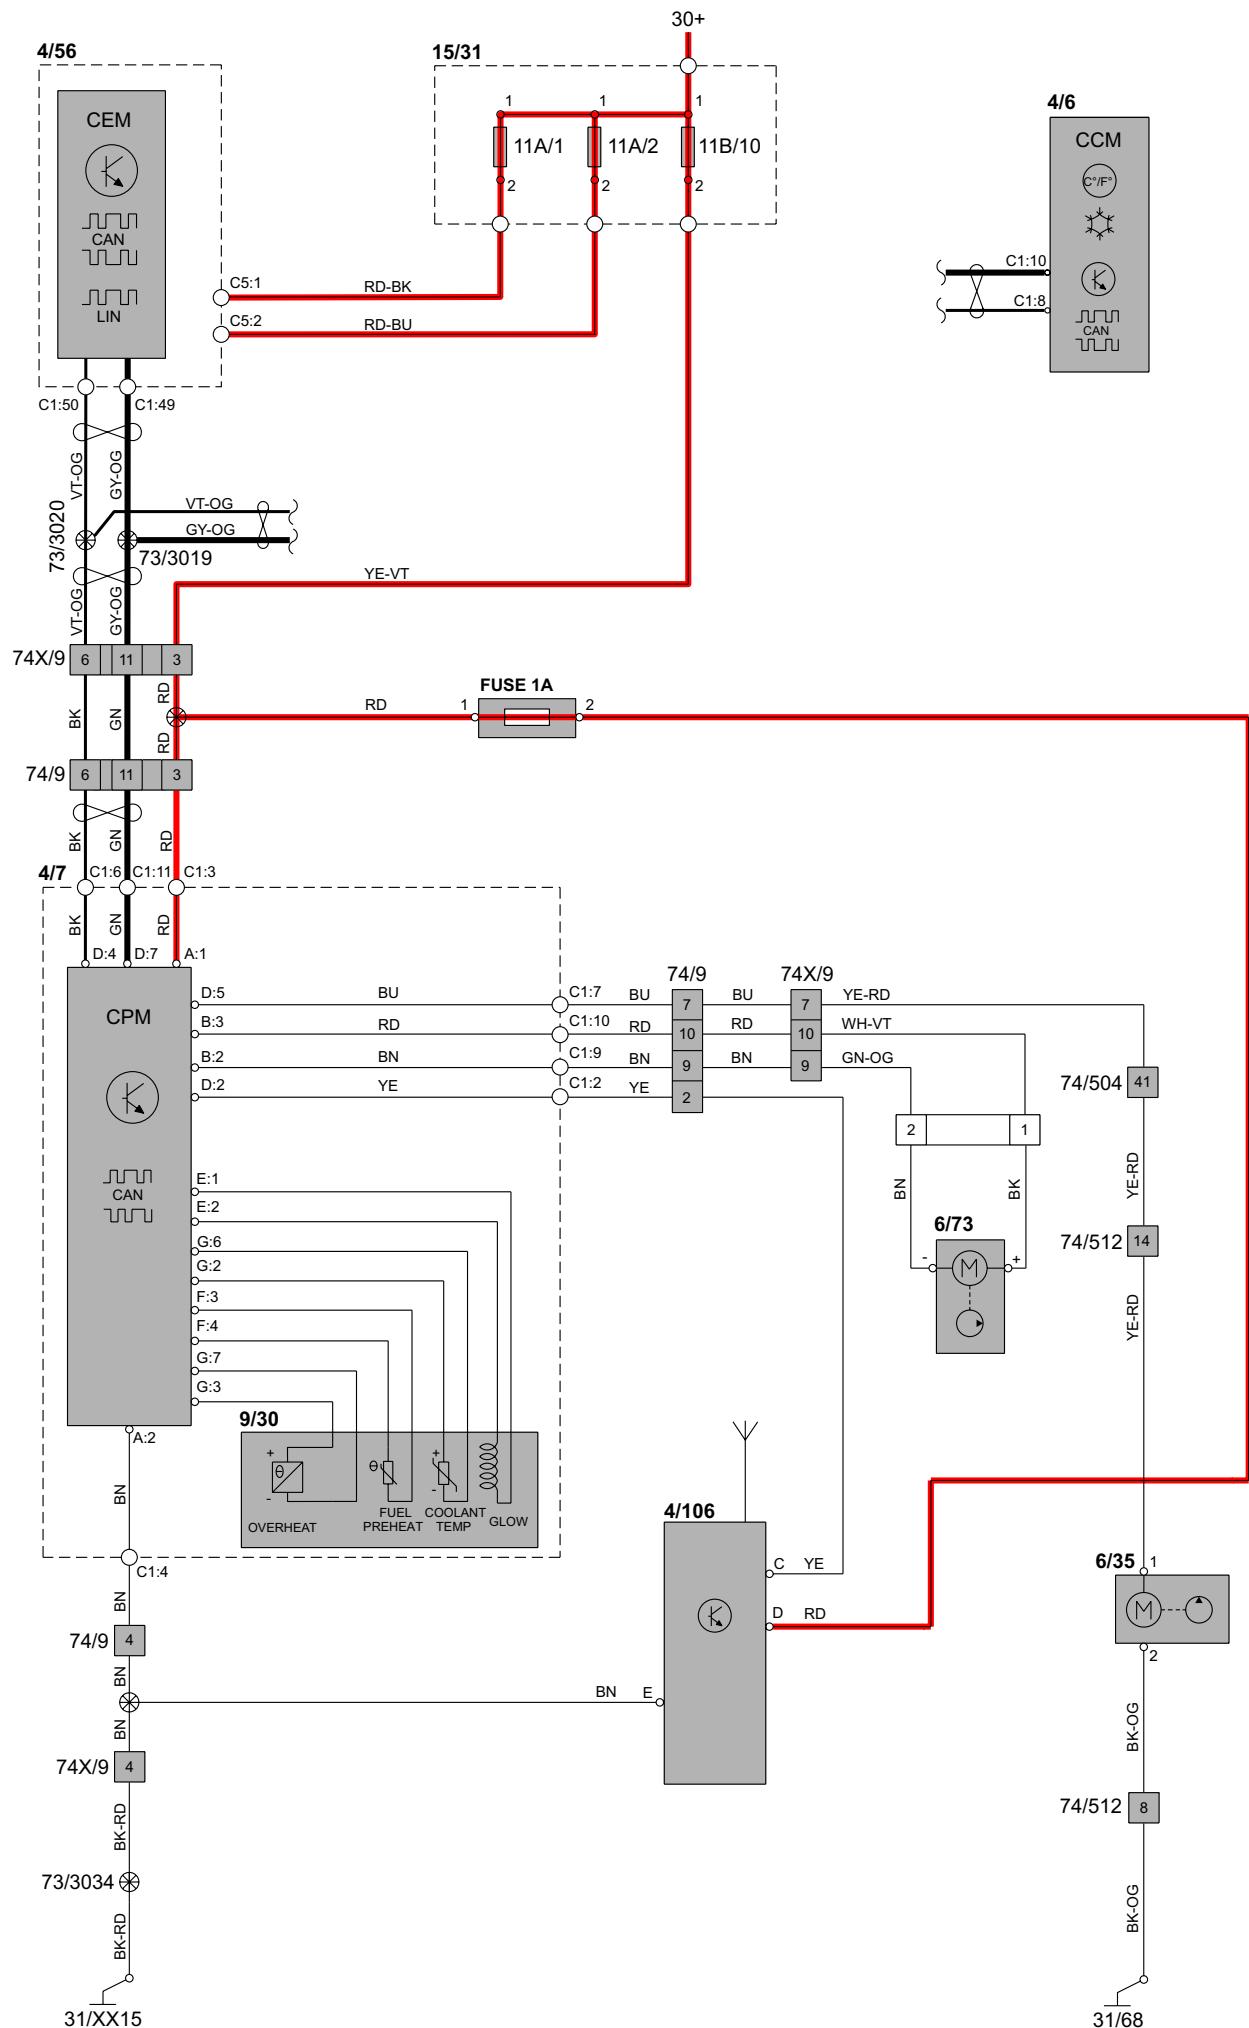


Group 87 Climate control system

Refrigeration box rear seat

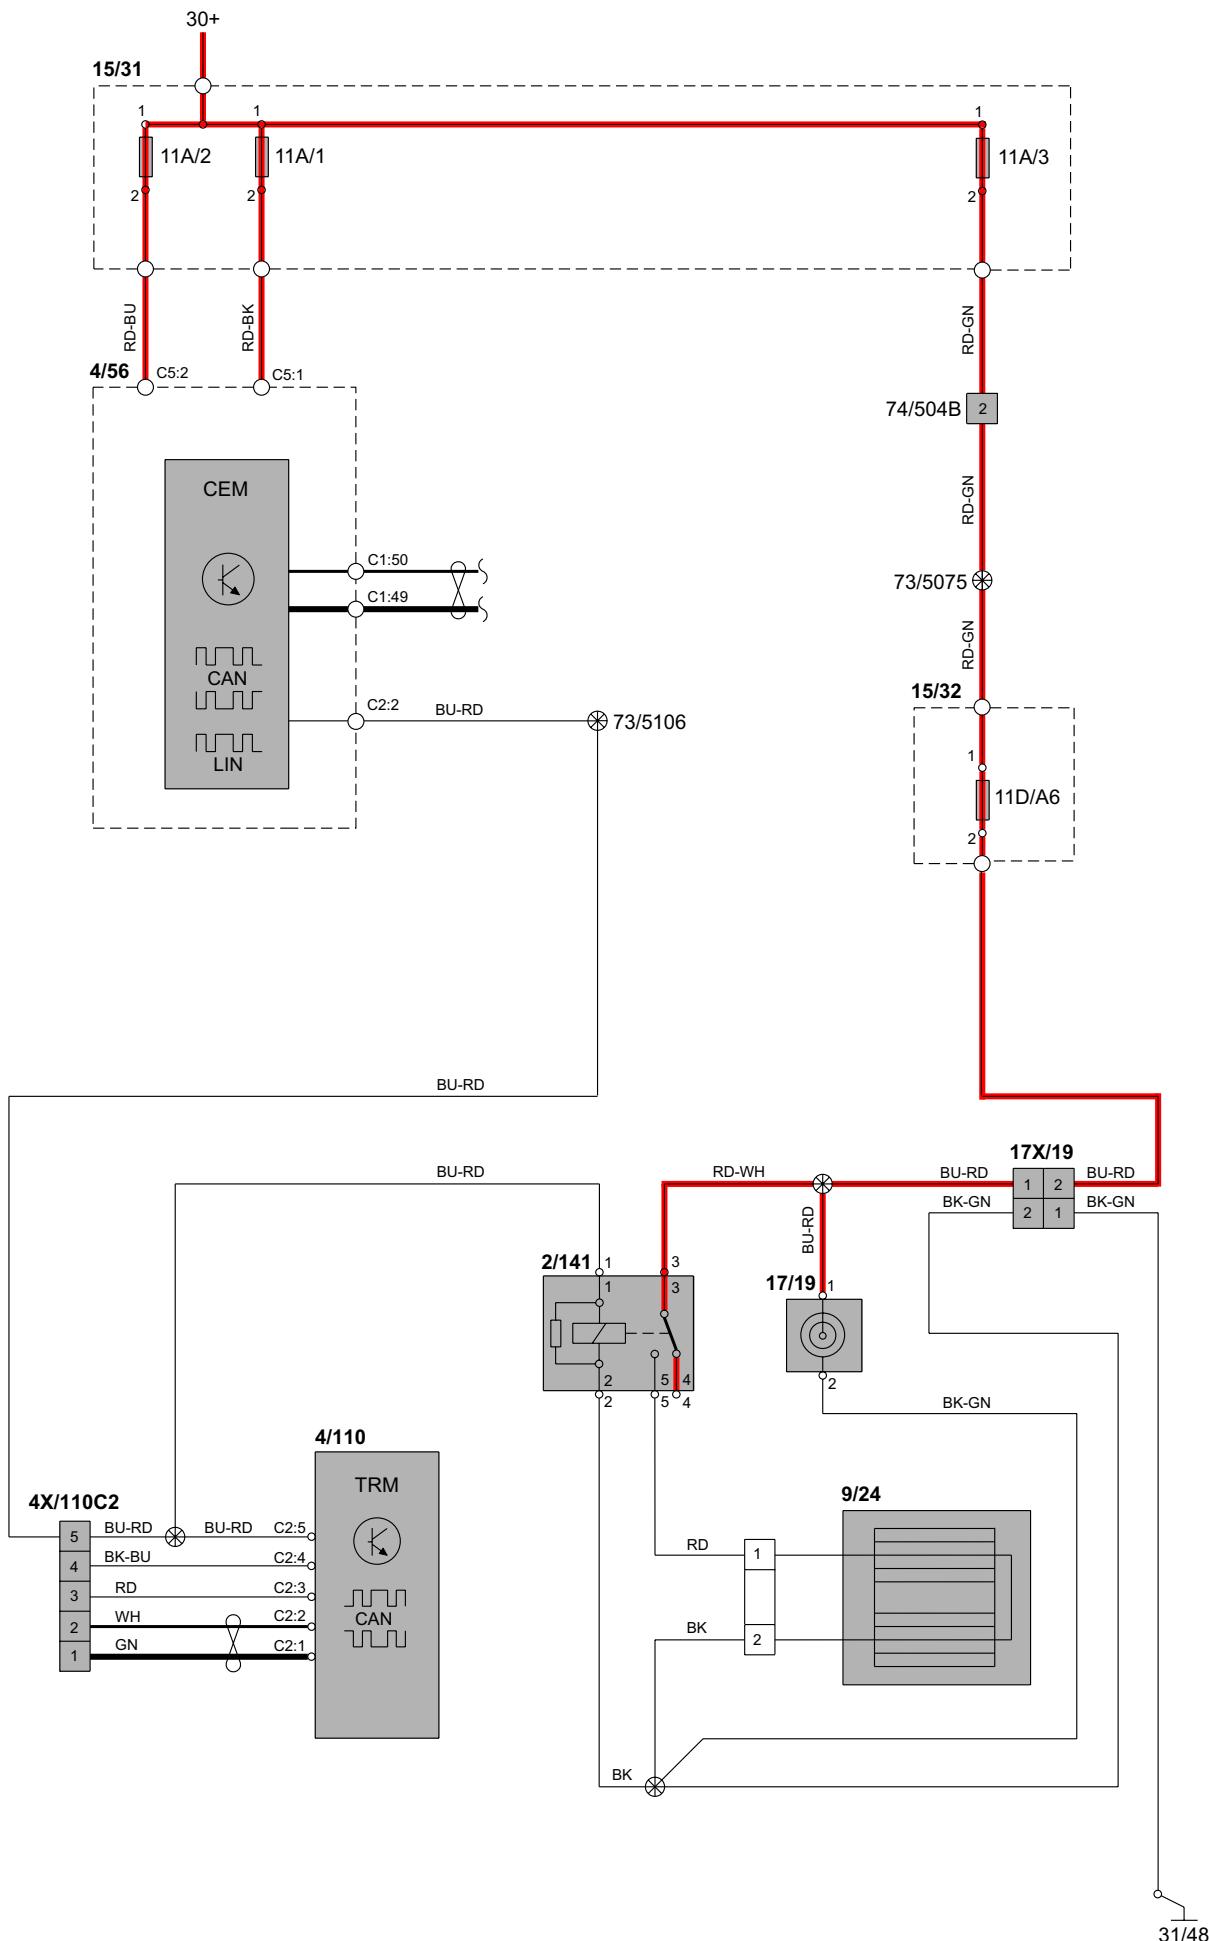


Group 88 Internal equipment

Automatic anti-dazzle rearview mirror

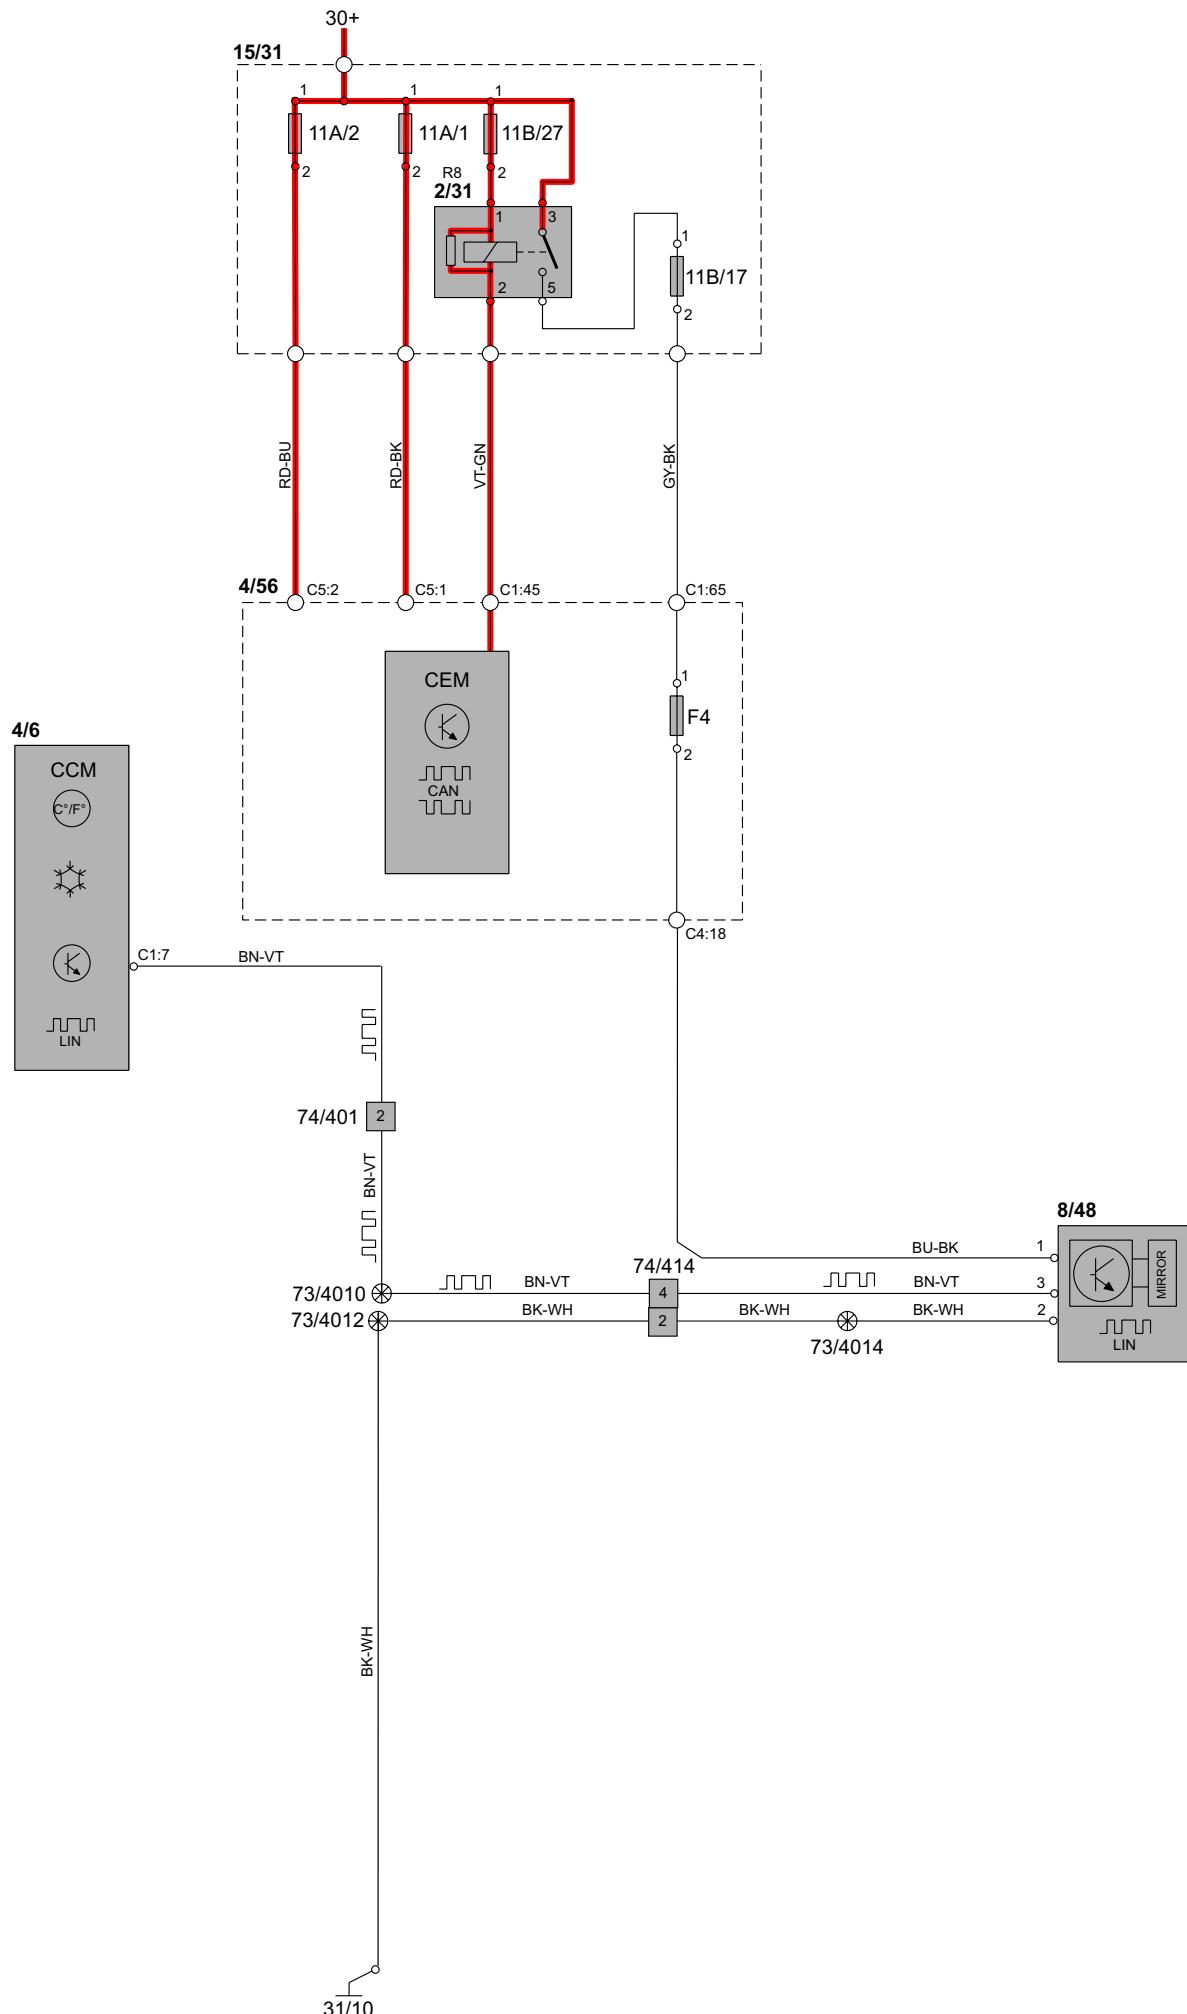


Group 88 Internal equipment

Supplemental Restraint System (SRS) 1:2

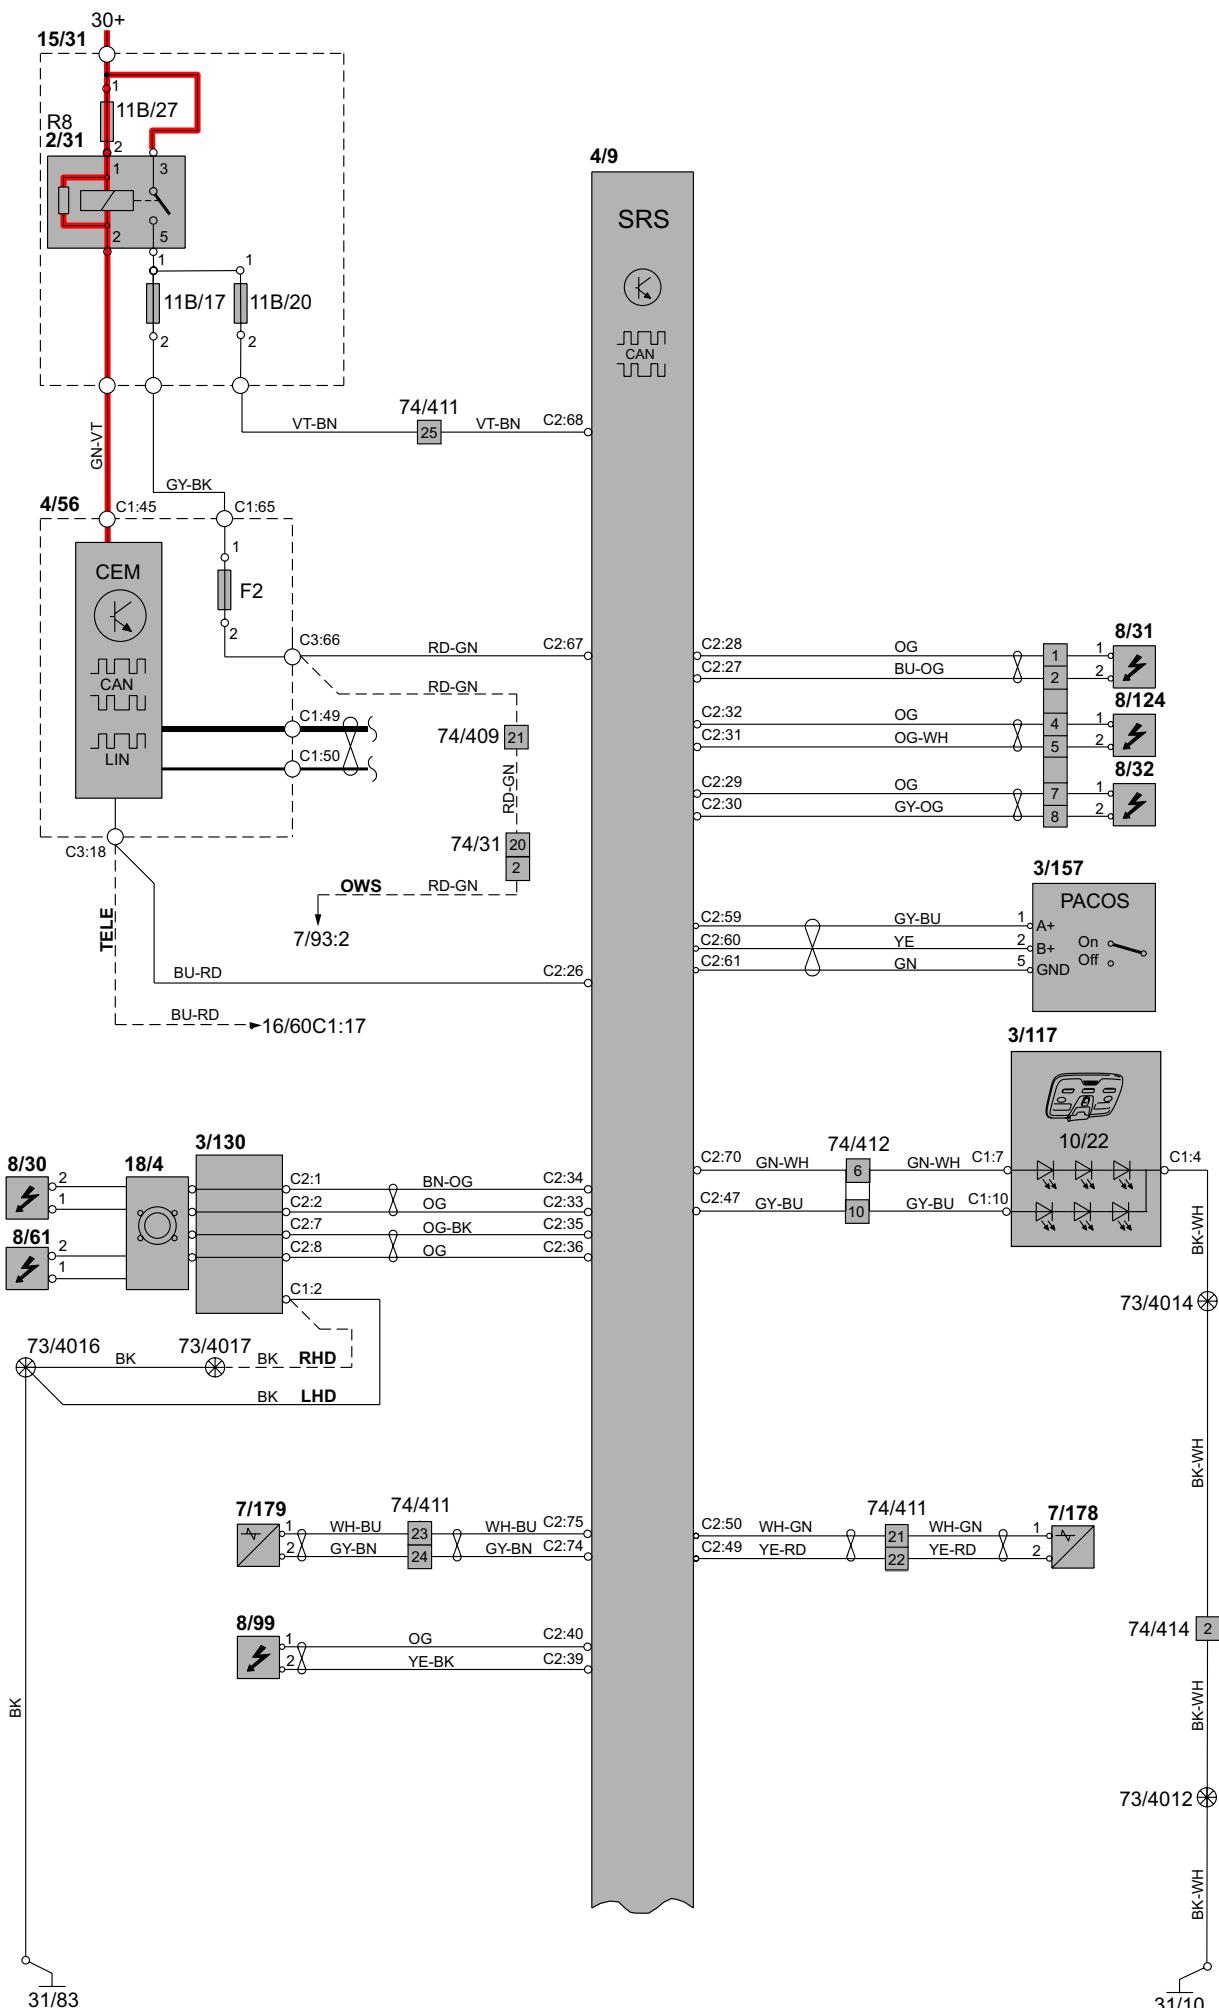


Group 88 Internal equipment

Supplemental Restraint System (SRS) 2:2

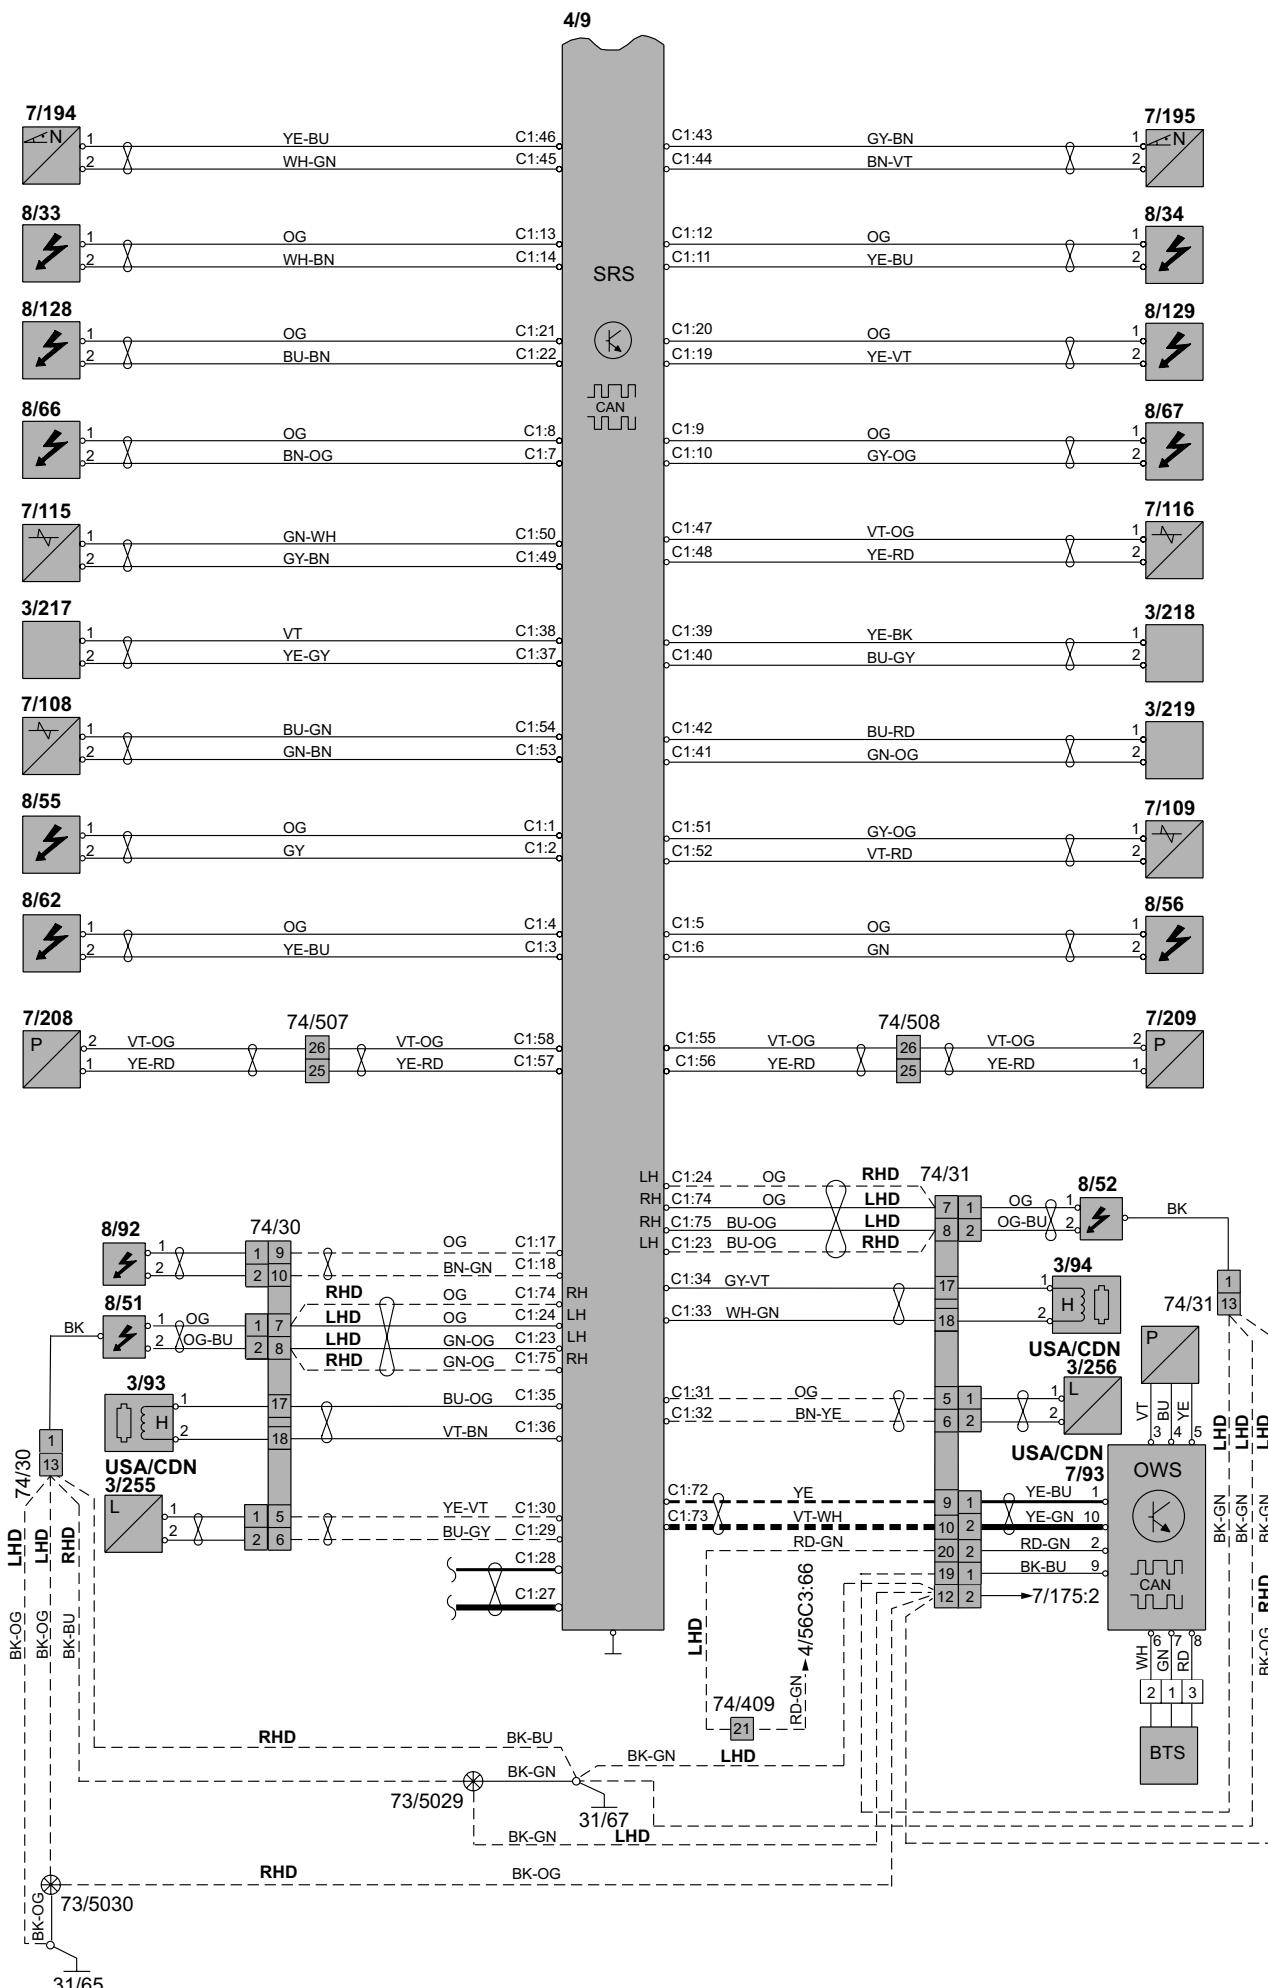


Group 88 Internal equipment

Electrically adjustable head restraint

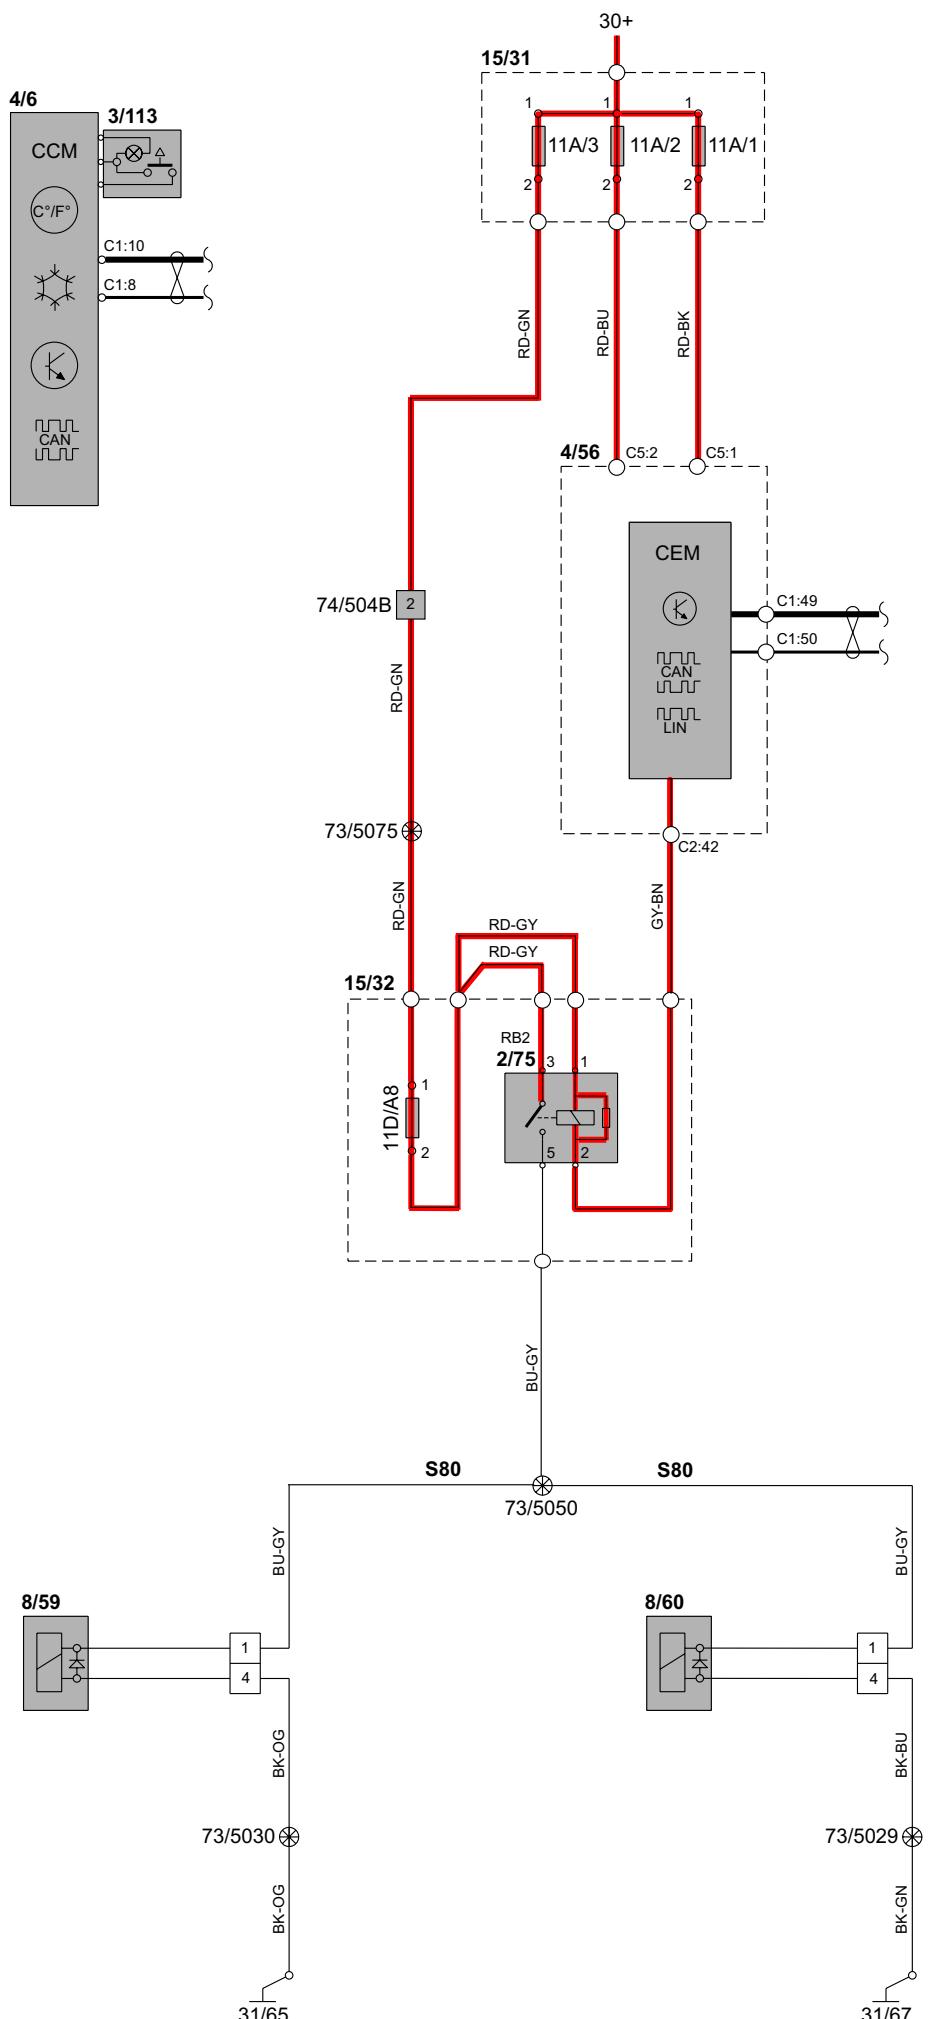

Group 88 Internal equipment

Remote garage door opener

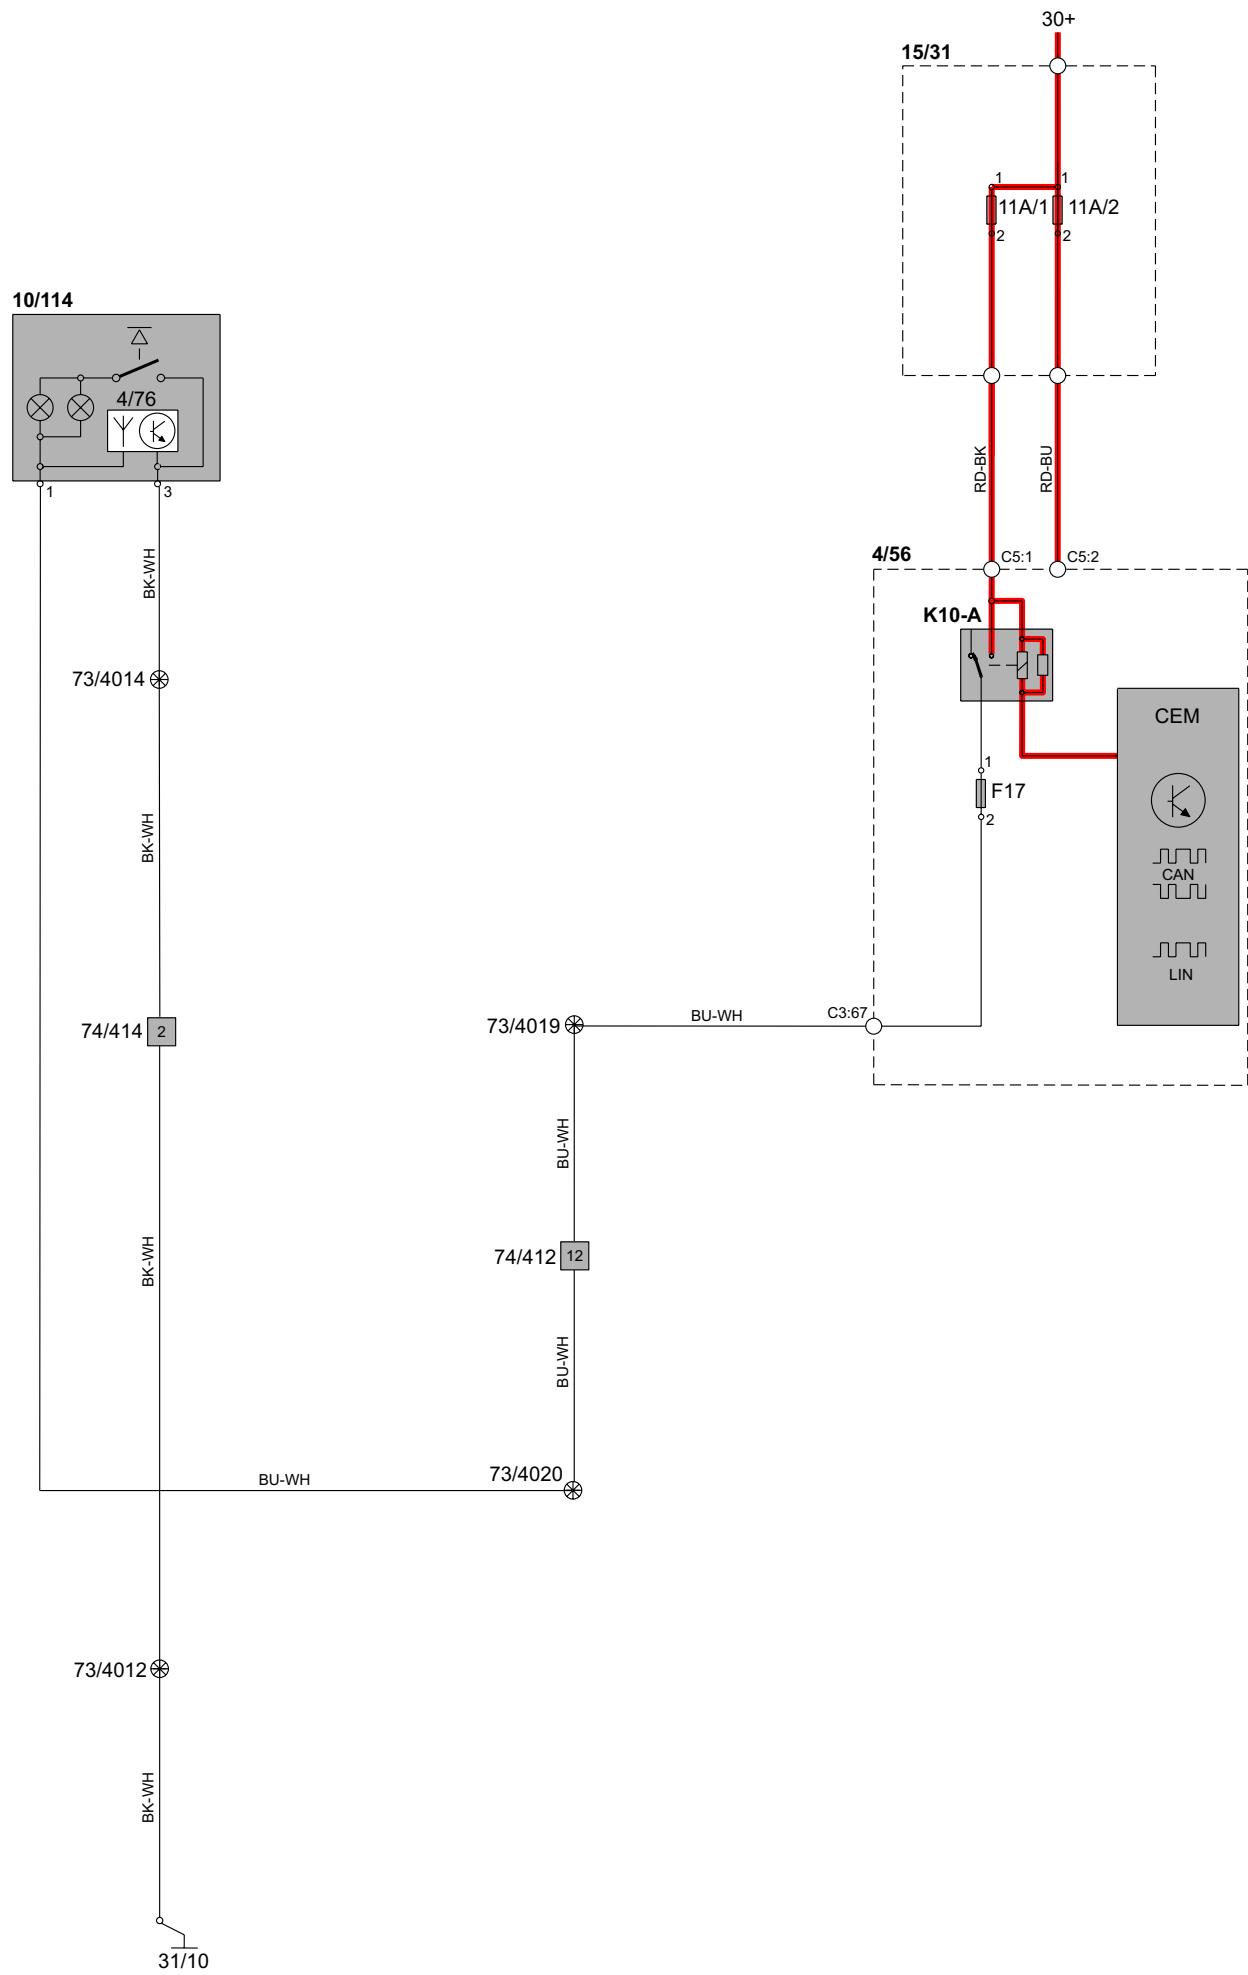

Connectors

74/30

20-pin black

74/30

No.	Floor harness			Driver's seat harness		
1	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT BK-GN	9/12A:1	Seat Heating Module (SHM), driver's side	BK
2	11D/B3:2	Fuse, rear electrical center	GY-BN	9/12A:4	Seat Heating Module (SHM), driver's side	YE-RD
3	-	-	-	-	-	-
4	74/409:15 74/409:16	Connector, LHD Connector, RHD	WH-GN	9/12A:2	Seat Heating Module (SHM), driver's side	WH-GN
5	4/9C1:30	Supplemental restraint system module (SRS)	YE-VT	3/255:1	Driver's seat position sensor USA/CDN	-
6	4/9C1:29	Supplemental restraint system module (SRS)	BU-GY	3/255:2	Driver's seat position sensor USA/CDN	-
7	4/9C1:24 4/9C1:74	Supplemental Restraint System Module (SRS), LHD Supplemental Restraint System Module (SRS), RHD	OG	8/51:1	Front left side airbag igniter	OG
8	4/9C1:23 4/9C1:75	Supplemental Restraint System Module (SRS), LHD Supplemental Restraint System Module (SRS), RHD	GN-OG	8/51:2	Front left side airbag igniter	OG-BU
9	4/9C1:17	Supplemental restraint system module (SRS)	OG	8/92:1	Lap belt tensioner, driver	-
10	4/9C1:18	Supplemental restraint system module (SRS)	BN-GN	8/92:2	Lap belt tensioner, driver	-
11	73/5004	Branching point	VT-OG	4/52C2:3	Power Seat Module (PSM)	BU-RD
12	73/5003	Branching point	GY-OG	4/52C2:4	Power Seat Module (PSM)	GY-RD
13	31/65 73/5030 31/67 73/5029	Ground connection, LHD Branching point, LHD Ground connection, RHD Branching point, RHD	BK-OG BK-BU	8/51	Front left side airbag igniter	BK
14	4/56C2:64	Central Electronic Module (CEM)	VT-GN	4/52C2:1 4/52C2:6	Power Seat Module (PSM), LHD Power Seat Module (PSM), RHD	RD-WH
15	11D/A10:2	Fuse, rear electrical center	RD-BU	4/52C1:1 4/52C1:7	Power Seat Module (PSM), LHD Power Seat Module (PSM), RHD	RD
16	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT BK-GN	73/3	Branching point	BK
17	4/9C1:35	Supplemental restraint system module (SRS)	BU-OG	3/93:1	Contact, driver's seat belt buckle	-
18	4/9C1:36	Supplemental restraint system module (SRS)	VT-BN	3/93:2	Contact, driver's seat belt buckle	-
19	-	-	-	-	-	-
20	-	-	-	-	-	-

Connectors

74/31:1-15

74/31

20-pin black

No.	Floor harness			Passenger seat harness		
1	73/5023 73/5035	Branching point, LHD Branching point, RHD	BK-GN BK-VT	9/13A:1	Seat Heating Module (SHM), passenger side	BK
2	11D/B4:2	Fuse, rear electrical center	VT-OG	9/13A:4	Seat Heating Module (SHM), passenger side	YE-RD
3	-	-	-	-	-	-
4	74/409:16 74/409:15	Connector, LHD Connector, RHD	BN-VT	9/13A:2	Seat Heating Module (SHM), passenger side	WH-GN
5	4/9C1:31	Supplemental restraint system module (SRS)	OG	3/256:1	Passenger seat position sensor USA/CDN	-
6	4/9C1:32	Supplemental restraint system module (SRS)	BN-YE	3/256:2	Passenger seat position sensor USA/CDN	-
7	4/9C1:74 4/9C1:24	Supplemental Restraint System Module (SRS), LHD Supplemental Restraint System Module (SRS), RHD	OG	8/52:1	Front right side airbag igniter	OG
8	4/9C1:75 4/9C1:23	Supplemental Restraint System Module (SRS), LHD Supplemental Restraint System Module (SRS), RHD	BU-OG	8/52:2	Front right side airbag igniter	OG-BU
9	4/9C1:72	Supplemental restraint system module (SRS)	YE	7/93:1	Occupant Weight Sensor (OWS) USA/CDN	YE-BU
10	4/9C1:73	Supplemental restraint system module (SRS)	VT-WH	7/93:10	Occupant Weight Sensor (OWS) USA/CDN	YE-GN
11	4/56C2:23	Central Electronic Module (CEM)	BN-VT	7/175:1	Occupant weight sensor, seat belt reminder	-
12	31/67 73/5029 73/5030 74/31:13	Ground connection, LHD Branching point, LHD Branching point, RHD Connector, RHD	BK-GN BK-OG	7/175:2	Occupant weight sensor, seat belt reminder	-
13	31/67 74/31:12 74/31:19 74/31:12	Ground connection, LHD Connector, LHD Connector, LHD Connector, RHD	BK-GN BK-OG	8/52	Front right side airbag igniter	BK
14	73/5044	Branching point	BU-WH	3/27:7 3/27:11	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD	RD-WH
15	11D/B9:2	Fuse, rear electrical center	RD-BK	3/27:5 3:27:2	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD	RD

continues

Connectors

74/31:16-20 - 74/99

74/31

20-pin black

No.	Floor harness			Passenger seat harness		
16	73/5023	Branching point, LHD	BK-GN BK-VT	3/27:8	Switch unit, power passenger seat	BK
	73/5035	Branching point, RHD		3/27:3	Switch unit, power passenger seat	
17	4/9C1:34	Supplemental restraint system module (SRS)	GY-VT	3/94:1	Contact, passenger seat belt buckle	-
18	4/9C1:33	Supplemental restraint system module (SRS)	WH-GN	3/94:2	Contact, passenger seat belt buckle	-
19	74/31:13	Connector, LHD	BK-GN	7/93:9	Occupant Weight Sensor (OWS) USA/CDN	BK-BU
20	74/409:21	Connector, LHD	RD-GN	7/93:2	Occupant Weight Sensor (OWS) USA/CDN	RD-GN

74/53, 8 cyl.

4-pin black

No.	Engine harness			Engine harness		
1	4/46A:19	Engine Control Module (ECM)	GY-BK	7/24:1	Front knock sensor	GY-BK
2	4/46A:42	Engine Control Module (ECM)	VT-OG	7/24:2	Front knock sensor	VT-OG
3	4/46A:20	Engine Control Module (ECM)	GN-RD	7/23:1	Rear knock sensor	GN-RD
4	4/46A:43	Engine Control Module (ECM)	YE-RD	7/23:2	Rear knock sensor	YE-RD

74/99, 8 cyl.

12-pin black

No.	Engine harness			Engine harness		
1	4/46A:69	Engine Control Module (ECM)	BU-GN	7/81:1	Pressure sensor, intake manifold, 8 cyl.	BU-GN
2	4/46A:15	Engine Control Module (ECM)	WH-BN	7/81:2	Pressure sensor, intake manifold, 8 cyl.	WH-BN
3	4/46A:48	Engine Control Module (ECM)	BU	7/81:3	Pressure sensor, intake manifold, 8 cyl.	BU
4	4/46A:78	Engine Control Module (ECM)	GN-BU	8/6:1	Injector	GN-BU
5	4/46A:79	Engine Control Module (ECM)	GY-YE	8/7:1	Injector	GY-YE
6	4/46A:80	Engine Control Module (ECM)	VT-GY	8/8:1	Injector	VT-GY
7	4/46A:81	Engine Control Module (ECM)	YE-OG	8/9:1	Injector	YE-OG
8	4/46A:83	Engine Control Module (ECM)	GN-WH	8/11:1	Injector	GN-WH
9	4/46A:84	Engine Control Module (ECM)	GY-BN	8/115:1	Injector	GY-BN
10	4/46A:85	Engine Control Module (ECM)	VT-OG	8/116:1	Injector	VT-OG
11	73/5053	Branching point	WH	73/3074	Branching point	WH
12	4/46A:82	Engine Control Module (ECM)	BU-RD	8/10:1	Injector, 8 cyl.	BU-RD

Connectors

74/133 - 74/277

**74/133, 8 cyl.
3-pin black**

No.	Engine harness			Engine harness		
1	4/46A:63	Engine Control Module (ECM)	BU-OG	7/35:1	Oil level sensor	BU-OG
2	4/46A:17	Engine Control Module (ECM)	GY-YE	7/35:2	Oil level sensor	GY-YE
3	73/3060	Branching point	GY	7/35:3	Oil level sensor	GY

**74/276
12-pin gray**

No.	Tunnel harness			Harness RSE backrest left		
1	74/701:1	Connector	BK	16/81A:6	Screen, LH head restraint	BL
2	74/701:2	Connector	RD	16/81A:7	Screen, LH head restraint	VO
3	74/701:3	Connector	RD-WH	16/81A:8	Screen, LH head restraint	P
4	74/701:4	Connector	BN	16/81A:9	Screen, LH head restraint	BN
5	74/701:5	Connector	BU	16/81A:10	Screen, LH head restraint	OR
6	74/701:6	Connector	-	-	-	-
7	74/701:7	Connector	PK	16/81A:1	Screen, LH head restraint	SB
8	74/701:8	Connector	GY	16/81A:2	Screen, LH head restraint	R
9	74/701:9	Connector	YE	16/81A:4	Screen, LH head restraint	GN
10	74/701:10	Connector	GN	16/81A:3	Screen, LH head restraint	YE
11	74/701:11	Connector	BN	16/81A:5	Screen, LH head restraint	W
12	74/701:12	Connector	WH	16/81A:11	Screen, LH head restraint	GR

**74/277
12-pin gray**

No.	Tunnel harness			Harness RSE backrest right		
1	74/702:1	Connector	BK	16/81B:6	Screen, RH head restraint	BL
2	74/702:2	Connector	RD	16/81B:7	Screen, RH head restraint	VO
3	74/702:3	Connector	RD-WH	16/81B:8	Screen, RH head restraint	P
4	74/702:4	Connector	BN	16/81B:9	Screen, RH head restraint	BN
5	74/702:5	Connector	BU	16/81B:10	Screen, RH head restraint	OR
6	74/702:6	Connector	-	-	-	-
7	74/702:7	Connector	PK	16/81B:1	Screen, RH head restraint	SB
8	74/702:8	Connector	GY	16/81B:2	Screen, RH head restraint	R
9	74/702:9	Connector	YE	16/81B:4	Screen, RH head restraint	GN
10	74/702:10	Connector	GN	16/81B:3	Screen, RH head restraint	YE
11	74/702:11	Connector	BN	16/81B:5	Screen, RH head restraint	W
12	74/702:12	Connector	WH	16/81B:11	Screen, RH head restraint	GR

Connectors

74/301:1-13

74/301 34-pin black

No.	Engine harness			Engine compartment harness	
1	4/46B:54 4/46B:22 73/3014	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), diesel Branching point	BU-BK	73/3021 Branching point	BU-BK
2	4/46B:41 4/46B:23 73/3015	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), diesel Branching point	GN-BK	73/3022 Branching point	GN-BK
4	-	-	-	-	-
5	-	-	-	-	-
6	4/46B:35 4/46B:29 4/46B:31	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl. Engine Control Module (ECM), diesel	WH	74/504:1 Connector	WH
7	4/46B:34 4/46B:9 4/46B:25	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl. Engine Control Module (ECM), diesel	BK-WH	74/504:2 Connector	BK-WH
8	-	-	-	-	-
9	4/46B:14 4/46B:27 4/46B:38	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl. Engine Control Module (ECM), diesel	VT-OG	4/56C1:44 Central Electronic Module (CEM)	VT-OG
10	4/28A:13	Transmission Control Module (TCM)	GN-OG	74/411:9 Connector	GN-OG
11	4/28A:7	Transmission Control Module (TCM)	BN-VT	74/411:10 Connector	BN-VT
12	4/46B:26 4/46B:28 4/46B:47	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl. Engine Control Module (ECM), diesel	BU-WH	74/504:17 Connector	BU-WH
13	4/46B:51 4/46B:12 4/46B:26	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl. Engine Control Module (ECM), diesel	GN-BN	7/8:2 Pressure sensor, climate control system	GN-BN

continues

Connectors

74/301:14-30

74/301 34-pin black

No.	Engine harness			Engine compartment harness		
14	4/46B:53 4/46B:8 4/46B:27	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl. Engine Control Module (ECM), diesel	BN	7/8:1	Pressure sensor, climate control system	BN
15	4/46B:31 4/46B:19 4/46B:16	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl. Engine Control Module (ECM), diesel	GY-BN	7/8:3	Pressure sensor, climate control system	GY-BN
16	8/84:1	Switch, vacuum pump	BU-OG	11B/22:2	Fuse, engine compartment electrical center	BU-OG
17	11B/41:2 73/3092	Fuse, engine compartment electrical center, gasoline Branching point, diesel	BU	74/504:21	Connector	BU
18	4/46B:30 4/46B:41 4/46B:48	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl. Engine Control Module (ECM), diesel	VT-BN	4/56C1:37	Central Electronic Module (CEM)	VT-BN
19	3/10:1	Reversing light contact, Man	BU	4/56C1:26	Central Electronic Module (CEM)	BU
20	4/46B:13 4/46B:34	Engine Control Module (ECM), 5 cyl. Engine Control Module (ECM), diesel	GY-BN	74/504:42	Connector	GY-BN
21	4/28A:16	Transmission Control Module (TCM)	BU-GY	74/411	Connector	BU-GY
22	-		-	-		-
23	4/46B:17 4/46B:33	Engine Control Module (ECM), Gasoline Engine Control Module (ECM), diesel	BU-WH	74/411:2	Connector	BU-WH
24	4/46B:15 4/46B:30 4/46B:41 73/3064	Engine Control Module (ECM), 5 & 6 cyl. Man Engine Control Module (ECM), 8 cyl. Man Engine Control Module (ECM), diesel, Man Branching point, Auto	VT-BN	11B/20:2	Fuse, engine compartment electrical center	VT-BN
25	-		-	-		-
26	-		-	-		-
27	-		-	-		-
28	-		-	-		-
29	4/46B:21 4/46B:20	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl.	YE-OG	74/504:18	Connector	YE-OG
30	-		-	-		-

continues

Connectors

74/301:31-34 - 74/308

74/301

34-pin black

No.	Engine harness			Engine compartment harness	
31	4/46B:46 4/46B:48	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl.	BU-GY	74/504:39 Connector	BU-GY
32	4/46B:45 4/46B:23	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl.	GN-OG	74/504:38 Connector	GN-OG
33	4/46B:23 4/46B:33	Engine Control Module (ECM), 5 & 6 cyl. Engine Control Module (ECM), 8 cyl.	VT-OG	74/504:37 Connector	VT-OG
34	-	-	-	-	-

74/303

6-pin gray

No.	Front parking assistance harness		Engine compartment harness		
1	73/3046	Branching point	VT-GY	74/519:12 Connector	VT-GY
2	7/204:2	Front parking assistance sensor	BU-GN	74/519:13 Connector	BU-GN
3	73/3047	Branching point	YE-OG	74/519:14 Connector	YE-OG
4	7/205:2	Front parking assistance sensor	BU-BK	74/519:15 Connector	BU-BK
5	7/206:2	Front parking assistance sensor	BU-GY	74/519:16 Connector	BU-GY
6	7/207:2	Front parking assistance sensor	BU-OG	74/519:17 Connector	BU-OG

74/304

2-pin black

No.	Engine compartment harness		Washer jet harness		
1	11B/21:2	Fuse, engine compartment electrical center	BU-GY	73/3040 Branching point	BU-GY
2	73/3033	Branching point	BK-GN	73/3037 Branching point	BK-GN

74/308

4-pin gray

No.	Engine compartment harness		Headlight washer pump harness		
1	11B/24:2	Fuse, engine compartment electrical center	YE-GN	6/104:8 High pressure headlight washer motor	YE-GN
2	4/56C1:47	Central Electronic Module (CEM)	BU-BK	6/104:3 High pressure headlight washer motor	BU-BK
3	-	-	-	-	-
4	73/3033	Branching point	BK-RD	6/104:4 High pressure headlight washer motor	BK-RD

Connectors

74/401 - 74/402

74/401 22-pin gray

No.	Center console harness			Dashboard harness		
1	4/6C1:12	Climate Control Module (CCM)	WH-GN	73/4009 74/417:3	Branching point Connector	WH-GN
2	4/6C1:7	Climate Control Module (CCM)	BN-VT	73/4010	Branching point	BN-VT
3	4/6C1:14	Climate Control Module (CCM)	YE-VT	74/417:6	Connector	YE-VT
4	4/6C1:5	Climate Control Module (CCM)	VT-BN	74/417:5	Connector	VT-BN
5	4/6C1:13	Climate Control Module (CCM)	WH-GN	74/417:7	Connector	WH-GN
6	3/281C1:6	Infotainment Control Module (ICM)	GN-OG	3/130C1:6	Steering Wheel Module (SWM)	GN-OG
7	4/6C1:1	Climate Control Module (CCM)	RD	4/56C3:73	Central Electronic Module (CEM)	RD
8	4/6C1:2	Climate Control Module (CCM)	VT-BK	4/31:2	Fan control module	VT-BK
9	3/281C1:2 4/6C1:10	Infotainment Control Module (ICM) Climate Control Module (CCM)	GY-OG	73/4001 73/4034 74/409:19	Branching point Branching point Connector	GY-OG
10	3/281C1:3 4/6C1:8	Infotainment Control Module (ICM) Climate Control Module (CCM)	VT-OG	73/4002 73/4035 74/409:20	Branching point Branching point Connector	VT-OG
11-20	-	-	-	-	-	-
21	3/281C1:11	Infotainment Control Module (ICM)	GY-BK	73/5045	Branching point	GY-YE
22	73/4018	Branching point	BK	73/4016	Branching point	BK

74/402 2-pin black

No.	Center console harness			Dashboard harness		
1	3/281C2:1	Infotainment Control Module (ICM)	OG	16/1C4:2 16/147C2:2 74/404:1	Integrated Audio Module (IAM) Bluetooth Phone Module (BPM) Connector	OG
2	3/281C:2	Infotainment Control Module (ICM)	OG	4/124C2:2 16/1C4:1	Accessory USB unit (AUU) Integrated Audio Module (IAM)	OG

Connectors

74/403 - 74/404

74/403

22-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/1C2:10	Integrated Audio Module (IAM)	BN	16/123:4 16/123.2:5	Auxiliary equipment input (AUX) Auxiliary equipment input (AUX)	BN
2	16/1C2:11	Integrated Audio Module (IAM)	WH-BN	16/123:2 16/123.2:7	Auxiliary equipment input (AUX) Auxiliary equipment input (AUX)	WH-BN
3	16/1C2:12	Integrated Audio Module (IAM)	WH	16/123:1 16/123.2:6	Auxiliary equipment input (AUX) Auxiliary equipment input (AUX)	WH
4-5	-		-	-	-	-
6	4/56C3:68	Central Electronic Module (CEM)	BU-RD	3/65:1	Switch, heated rear seat	BU-RD
7	4/56C3:22	Central Electronic Module (CEM)	BU-RD	16/111:13 10/72:1	Rear headphone sockets Front ashtray lighting	BU-RD
8	74/411:9	Connector	GN-RD	3/156A:3	Gear Selector Module (GSM)	GN-OG
9	74/411:11	Connector	BU-GY	3/156A:1	Gear Selector Module (GSM)	BU-GY
10	16/46C2:5	High Level Display Front module (HLDF)	BK	74/503:12	Connector	BK
11	-		-	-	-	-
12	16/60C1:18	Phone Module (PHM)	-	16/62:3	Hand unit, mobile phone	-
13	16/60C1:17	Phone Module (PHM)	GN-WH	16/62:5	Hand unit, mobile phone	GN-WH
14	16/60C1:8	Phone Module (PHM)	WH-BU	16/62:4	Hand unit, mobile phone	WH-BU
15	16/60C1:19	Phone Module (PHM)	WH-BN	16/62:1	Hand unit, mobile phone	WH-BN
16	16/60C1:20	Phone Module (PHM)	WH	16/62:2	Hand unit, mobile phone	WH
17	16/46C2:1	High Level Display Front module (HLDF)	RD-BN	74/503:14	Connector	RD-BN
18	16/60C1:5 16/147C1:32	Phone Module (PHM) Bluetooth Phone Module (BPM)	YE	74/503:13	Connector	YE
19	73/5045	Branching point	GY-YE	74/503:22	Connector	GY-YE
20	4/56C3:43	Central Electronic Module (CEM)	WH-BN	8/134:1	Solenoid, reverse interlock, manual	WH-BN
21	4/56C3:64	Central Electronic Module (CEM)	GY-YE	16/109A:4	DVD player/control module	GY-YE
22	74/411:10	Connector	BN-VT	3/156A:2	Gear Selector Module (GSM)	BN-VT

74/404

2-pin black

No.	Dashboard harness			Infotainment harness	
1	74/402:1	Connector	OG	16/105C4:2 16/108C3:2 74/529:2	Audio module (AUD) Multimedia Module (MMM) Connector
2	16/1C4:2 16/60C4:2 16/147C2:2	Integrated Audio Module (IAM) Phone Module (PHM) Bluetooth Phone Module (BPM)	OG	16/105C4:1 16/108C3:1 74/529:1	Audio module (AUD) Multimedia Module (MMM) Connector

Connectors

74/405 - 74/407 Alt. 1

74/405

2-pin black

No.	Dashboard harness			Floor harness	
1	16/1C3:1	Integrated Audio Module (IAM)	WH	16/16C2:2 Window antenna amplifier 16/16C2B:2 Window antenna amplifier	WH
1S	16/1C3:1S	Integrated Audio Module (IAM)	-	16/16C2:2S Window antenna amplifier 16/16C2B:2S Window antenna amplifier	-

74/406

2-pin violet

No.	Dashboard harness			Infotainment harness	
1	16/60C2:1	Phone Module (PHM)	WH	16/47C3:1 Antenna GSM/GPS/RDAR	WH
1S	16/60C2:1S	Phone Module (PHM)	-	16/47C3:1S Antenna GSM/GPS/RDAR	-

74/407 Alternative 1

16-pin green

No.	Dashboard harness			Floor harness	
1	16/1C1:12	Integrated Audio Module (IAM)	GY-BK	74/507:23 Connector	GY-BK
2	-		-	-	-
3	16/1C1:7	Integrated Audio Module (IAM)	YE-BK	74/508:23 Connector	YE-BK
4	16/1C1:9	Integrated Audio Module (IAM)	GY-RD	74/509:4 Connector	GY-RD
5	16/1C1:10	Integrated Audio Module (IAM)	YE-RD	74/510:4 Connector	YE-RD
6	-		-	-	-
7	-		-	-	-
8	-		-	-	-
9	16/1C1:6	Integrated Audio Module (IAM)	GN-BK	74/507:22 Connector	GN-BK
10	-		-	-	-
11	16/1C1:1	Integrated Audio Module (IAM)	VT-BK	74/508:22 Connector	VT-BK
12	16/1C1:3	Integrated Audio Module (IAM)	GN-RD	74/509:3 Connector	GN-RD
13	16/1C1:4	Integrated Audio Module (IAM)	VT-RD	74/510:3 Connector	VT-RD
14	-		-	-	-
15	-		-	-	-
16	-		-	-	-

Connectors

74/407 Alt. 2 - 74/407B

74/407 Alternative 2

16-pin green

No.	Infotainment harness		Floor harness	
1	74/407B:1	Connector	GY-BK	74/507:23 Connector
2	74/407B:2	Connector	GY	74/409:10 Connector
3	74/407B:3	Connector	YE-BK	74/508:23 Connector
4	74/407B:4	Connector	GY-RD	74/509:4 Connector
5	74/407B:5	Connector	YE-RD	74/510:4 Connector
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	74/407B:9	Connector	GN-BK	74/507:22 Connector
10	74/407B:10	Connector	GN	74/409:9 Connector
11	74/407B:11	Connector	VT-BK	74/508:22 Connector
12	74/407B:12	Connector	GN-RD	74/509:3 Connector
13	74/407B:13	Connector	VT-RD	74/510:3 Connector
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-

74/407B

16-pin green

No.	Infotainment harness		Dashboard harness	
1	16/105C1:1	Audio module (AUD)	GY-BK	74/407:1 Connector
2	16/105C1:2	Audio module (AUD)	GY	74/407:2 Connector
3	16/105C1:3	Audio module (AUD)	YE-BK	74/407:3 Connector
4	16/105C1:4	Audio module (AUD)	GY-RD	74/407:4 Connector
5	16/105C1:5	Audio module (AUD)	YE-RD	74/407:5 Connector
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	16/105C1:9	Audio module (AUD)	GN-BK	74/407:9 Connector
10	16/105C1:10	Audio module (AUD)	GN	74/407:10 Connector
11	16/105C1:11	Audio module (AUD)	VT-BK	74/407:11 Connector
12	16/105C1:12	Audio module (AUD)	GN-RD	74/407:12 Connector
13	16/105C1:13	Audio module (AUD)	VT-RD	74/407:13 Connector
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-

Connectors

74/408 - 74/409:1-12

74/408

6-pin gray

No.	Dashboard harness		Infotainment harness	
S	16/46C1:S	High Level Display Front module (HLDF)	-	16/108C2:S Multimedia Module (MMM)
2	16/46C1:2	High Level Display Front module (HLDF)	BN	16/108C2:2 Multimedia Module (MMM)
3	16/46C1:3	High Level Display Front module (HLDF)	GN	16/108C2:3 Multimedia Module (MMM)
4	16/46C1:4	High Level Display Front module (HLDF)	GY	16/108C2:4 Multimedia Module (MMM)
5	16/46C1:5	High Level Display Front module (HLDF)	YE	16/108C2:5 Multimedia Module (MMM)
6	16/46C1:6	High Level Display Front module (HLDF)	PK	16/108C2:6 Multimedia Module (MMM)

74/409

26-pin green

No.	Dashboard harness		Floor harness	
1	-	-	-	-
2	3/272:3	Switch, parking brake	BU-WH	4/115C1:20 Parking Brake Module (PBM)
3	3/272:8	Switch, parking brake	GN-VT	4/115C1:11 Parking Brake Module (PBM)
4	3/272:7	Switch, parking brake	WH-BN	4/115C1:18 Parking Brake Module (PBM)
5	3/272:4	Switch, parking brake	VT-GN	4/115C1:9 Parking Brake Module (PBM)
6	3/272:6	Switch, parking brake	WH-OG	4/115C1:19 Parking Brake Module (PBM)
7	3/272:5	Switch, parking brake	BN	4/115C1:10 Parking Brake Module (PBM)
8	-	-	-	-
9	74/407:10	Connector	GN	16/26:1 Center dashboard speaker
10	74/407:2	Connector	GY	16/26:2 Center dashboard speaker
11	-	-	-	-
12	-	-	-	-

continues

Connectors
74/409:13-26

74/409
26-pin green

No.	Dashboard harness			Floor harness		
13	16/1C2:2	Integrated Audio Module (IAM)	GN-VT	16/16C1:1 Window antenna amplifier		
14	4/56C3:11	Central Electronic Module (CEM)	GY-BU	4/115C1:8	Parking Brake Module (PBM)	GY-BU
15	73/4009 74/417	Branching point Connector	WH-GN	9/12A:4 9/13A:4 73/5021	Seat Heating Module (SHM), driver's side, LHD Seat Heating Module (SHM), passenger side, RHD Branching point	WH-GN BN-VT
16	73/4010	Branching point	BN-VT	9/13A:4 9/15A:2 9/12A:4	Seat Heating Module (SHM), passenger side, LHD Control module, RH rear seat heater Seat Heating Module (SHM), driver's side, RHD	BN-VT WH-GN
17	-		-	-	-	-
18	-		-	-	-	-
19	73/4034 74/401:9	Branching point Connector	GY-OG	73/5005 73/5009	Branching point Branching point	GY-OG
20	73/4035 74/401:10	Branching point Connector	VT-OG	73/5006 73/5010	Branching point Branching point	VT-OG
21	4/56C3:66	Central Electronic Module (CEM)	RD-GN	74/31:20	Connector	RD-GN
22	73/4038	Branching point	GN-BK	74/518:2 73/5016 74/504:45	Connector Branching point Connector	GN-BK
23	73/4037	Branching point	BU-BK	74/518:1 73/5015 74/504:44	Connector Branching point Connector	BU-BK
24	-		-	-	-	-
25	73/4027	Branching point	BU-WH	4/93C4:15	Keyless Vehicle Module (KVM)	BU-WH
26	-		-	-	-	-

Connectors

74/411

74/411

26-pin gray

No.	Engine compartment harness			Dashboard harness		
1	11B/11:2	Fuse, engine compartment electrical center	YE-RD	73/4028	Branching point	YE-RD
2	73/4027	Branching point	BU	74/301:23	Connector	BU-WH
3	73/3052	Branching point	GY-OG	4/80C1:14	Forward Sensing Module (FSM)	GY-OG
4	7/203:4	Forward-aimed radar (FLR)	YE-RD	4/80C1:3	Forward Sensing Module (FSM)	YE-RD
5	7/203:3	Forward-aimed radar (FLR)	GY-BU	4/80C1:2	Forward Sensing Module (FSM)	GY-BU
6	10/1:8 10/2:8	Left-hand front lamp housing Right-hand front lamp housing	BK	73/4017 73/4016	Branching point, LHD Branching point, RHD	BK
7	11B/26:2	Fuse, engine compartment electrical center	BU-BK	74/414:3 74/417:1	Connector Connector	BU-BK
8	-	-	-	-	-	-
9	74/301:10	Connector	GN-OG	74/403:8	Connector	GN-RD
10	74/301:11	Connector	BN-VT	74/403:22	Connector	BN-VT
11	74/301:21	Connector	BU-GY	74/403:9	Connector	BU-GY
12	11B/23:2	Fuse, engine compartment electrical center	RD-BK	3/111:1	Light Switch Module (LSM)	RD-BK
13	10/1:12 10/2:12	Left-hand front lamp housing Right-hand front lamp housing	VT-GN	3/111:4	Light Switch Module (LSM)	VT-GN
14	-	-	-	-	-	-
15	-	-	-	-	-	-
16	-	-	-	-	-	-
17	-	-	-	-	-	-
18	-	-	-	-	-	-
19	-	-	-	-	-	-
20	-	-	-	-	-	-
21	7/178:1	Front impact sensor, right	WH-GN	4/9C2:50	Supplemental restraint system module (SRS)	WH-GN
22	7/178:2	Front impact sensor, right	YE-RD	4/9C2:49	Supplemental restraint system module (SRS)	YE-RD
23	7/179:1	Front impact sensor, left	WH-BU	4/9C2:75	Supplemental restraint system module (SRS)	WH-BU
24	7/179:2	Front impact sensor, left	GY-BN	4/9C2:74	Supplemental restraint system module (SRS)	GY-BN
25	11B/20:2	Fuse, engine compartment electrical center	VT-BN	4/9C2:68	Supplemental restraint system module (SRS)	VT-BN
26	-	-	-	-	-	-

Connectors

74/412 - 74/413

74/412 16-pin green

No.	Floor harness			Roof harness		
1	16/1C2:4	Integrated Audio Module (IAM)	WH	16/98:1	Microphone	WH
2	4/56C4:4	Central Electronic Module (CEM)	GY-BN	4/119.2:2	Remote Receiver Module (RRX)	GY-BN
3	4/56C4:16	Central Electronic Module (CEM)	RD-BN	4/119.2:1	Remote Receiver Module (RRX)	RD-BN
4	16/60C1:14	Phone Module (PHM)	-	3/267:2	Switch unit, telematics	-
5	16/60C1:3	Phone Module (PHM)	BU-GY	3/267:3	Switch unit, telematics	BU-GY
6	4/9C2:70	Supplemental restraint system module (SRS)	GN-WH	3/117C1:7	Switch unit, dome light	GN-WH
7	-		-	-	-	-
8	16/1C2:5	Integrated Audio Module (IAM)	-	16/98:2	Microphone	-
9	-		-	-	-	-
10	4/9C2:47	Supplemental restraint system module (SRS)	GY-BU	3/117C1:7	Switch unit, dome light	GY-BU
11	16/60C1:15	Phone Module (PHM)	WH	3/267:1	Switch unit, telematics	WH
12	73/4019	Branching point	BU-WH	73/4020	Branching point	BU-WH
13	16/60C1:2	Phone Module (PHM)	GY-VT	3/267:6	Switch unit, telematics	GY-VT
14	16/60C1:1	Phone Module (PHM)	BN-GN	3/267:5	Switch unit, telematics	BN-GN
15	16/60C1:4	Phone Module (PHM)	YE-VT	3/267:4	Switch unit, telematics	YE-VT
16	16/60C1:13	Phone Module (PHM)	VT	3/267:7	Switch unit, telematics	VT

74/413 6-pin green

No.	Dashboard harness			Start Control Unit (SCU) harness		
1	4/56C3:74	Central Electronic Module (CEM)	RD-VT	3/132:1	Start Control Unit (SCU)	RD-VT
2	73/4016	Branching point	BK	3/132:2	Start Control Unit (SCU)	BK
3	4/56C3:50	Central Electronic Module (CEM)	GY	3/132:3	Start Control Unit (SCU)	GY
4	-		-	-	-	-
5	73/4027	Branching point	BU	3/132:5	Start Control Unit (SCU)	BU-WH
6	-		-	-	-	-

Connectors

74/414 - 74/501

74/414 4-pin gray

No.	Dashboard harness			Roof harness		
1	4/56C3:75	Central Electronic Module (CEM)	RD-BN	4/33:1	Sunroof module	RD-BN
2	73/4012	Branching point	BK-WH	4/33:10 73/4014	Sunroof Module (SRM) Branching point	BK-WH
3	74/411:7	Connector	BU-BK	73/4031	Branching point	BU-BK
4	73/4010	Branching point	BK-VT	8/48:3	Automatic anti-dazzle rearview mirror	BK-VT

74/417 7-pin green

No.	Dashboard harness			Climate control system		
1	74/411:7	Connector	BU-BK	3/112C1:1	Climate control system	RD
2	73/4010	Branching point	BN-VT	3/112C1:2	Climate control system	YE
3	74/401:1	Connector	WH-GN	3/112C1:3	Climate control system	GN
4	73/4012	Branching point	BK-WH	3/112C1:4	Climate control system	BU
5	74/401:4	Connector	VT-BN	3/112C1:5	Climate control system	PK
6	74/401:3	Connector	YE-VT	3/112C1:6	Climate control system	BN
7	74/401:5	Connector	WH-GN	3/112C1:7	Climate control system	GN

74/501 6-pin green

No.	Floor harness			Tunnel harness		
1	73/5021	Branching point	BN-VT	3/65:3	Switch, heated rear seat	BN-VT
2	-	-	-	-	-	-
3	4/93C2:14	Keyless Vehicle Module (KVM)	GY-VT	16/134:1	Antenna, door lock, passenger compartment 2	GY-VT
4	4/93C2:17	Keyless Vehicle Module (KVM)	BU-WH	16/134:2	Antenna, door lock, passenger compartment 2	BU-WH
5	4/93C1:16	Keyless Vehicle Module (KVM)	GN-RD	16/135:2	Antenna, door lock, passenger compartment 3	GN-RD
6	4/93C1:4	Keyless Vehicle Module (KVM)	YE-OG	16/135:1	Antenna, door lock, passenger compartment 3	YE-OG

Connector

74/502 - 74/503

74/502

2-pin gray

No.	Floor harness		Tunnel harness		
1	74/504:16	Connector	RD-VT	9/1:1 73/5017	Front 12V outlet Branching point
2	73/5035	Branching point, LHD	BK-VT	73/5026	Branching point
	73/5023	Branching point, RHD	BK-GN		

74/503

22-pin gray

No.	Infotainment harness		Tunnel harness		
1	16/105C2:16	Audio module (AUD)	WH-OG	16/111:1	Rear headphone sockets
2	16/105C2:15	Audio module (AUD)	WH	16/111:2	Rear headphone sockets
3	16/105C2:17	Audio module (AUD)	GN-VT	16/111:3	Rear headphone sockets
4	-	-	-	-	-
5	16/105C2:1	Audio module (AUD)	BU-OG	16/111:5	Rear headphone sockets
6	16/105C2:13	Audio module (AUD)	GY-BN	16/111:6	Rear headphone sockets
7	16/105C2:2	Audio module (AUD)	YE-GN	16/111:7	Rear headphone sockets
8	16/105C2:3	Audio module (AUD)	BU	16/111:9	Rear headphone sockets
9	16/105C2:14	Audio module (AUD)	YE-VT	16/111:10	Rear headphone sockets
10	16/105C2:4	Audio module (AUD)	YE	16/111:11	Rear headphone sockets
11	-	-	-	-	-
12	73/5086	Branching point	BK	74/403:10	Connector
13	11D/D7:2	Fuse, rear electrical center	YE	74/403:18	Connector
14	73/5051	Branching point	RD-BN	74/403:17	Connector
15	4/84C1:3	Suspension Module (SUM)	YE-BK	3/225:5	Switch unit, Continuously Controlled Damping (CCD)
16	4/84C1:21	Suspension Module (SUM)	VT-OG	3225:6	Switch unit, Continuously Controlled Damping (CCD)
17	4/84C1:24	Suspension Module (SUM)	YE-RD	3/225:1	Switch unit, Continuously Controlled Damping (CCD)
18	4/84C1:26	Suspension Module (SUM)	BU	3/225:2	Switch unit, Continuously Controlled Damping (CCD)
19	4/84C1:11	Suspension Module (SUM)	GN-BK	3/225:3	Switch unit, Continuously Controlled Damping (CCD)
20	4/84C1:29	Suspension Module (SUM)	GY-OG	3/225:4	Switch unit, Continuously Controlled Damping (CCD)
21	-	-	-	-	-
22	11D/D6:2	Fuse, rear electrical center	GY-YE	74/403:19	Connector
					GY-YE

**Connector
74/504:1-44**

**74/504
57-pin natural**

No.	Engine compartment harness		Floor harness		
1	74/301:6	Connector	WH	74/507:17	Connector
2	74/301:7	Connector	BK-WH	74/507:18	Connector
3	-		-	-	-
4	-		-	-	-
5	4/16C1:43	Brake Control Module (BCM)	YE-BK	74/512:5	Connector
6	4/16C1:42	Brake Control Module (BCM)	BU-RD	74/512:6	Connector
7	4/16C1:19	Brake Control Module (BCM)	GN-OG	7/164:1	Body Sensor Cluster Stability Sensor (BSC)
8	4/16C1:18	Brake Control Module (BCM)	BU-WH	7/164:2	Body Sensor Cluster Stability Sensor (BSC)
9	-		-	-	-
10	-		-	-	-
11	4/16C1:36	Brake Control Module (BCM)	BU-OG	74/511:7	Connector
12	4/16C1:37	Brake Control Module (BCM)	GN-RD	74/511:6	Connector
13	-		-	-	-
14	-		-	-	-
15	-		-	-	-
16	11B/25:2	Fuse, engine compartment electrical center	RD-VT	74/502:1	Connector
17	74/301:12	Connector	BU-WH	7/51:5	Accelerator pedal sensor
18	74/301:29	Connector, Gasoline	YE-OG	74/511:17	Connector
19	-		-	-	-
20	-		-	-	-
21	74/301:17	Connector	BU	74/512:7	Connector
22	-		-	-	-
23	4/118C1:18	Headlamp Control Module (HCM)	GN-VT	74/512:11	Connector
24-36	-		-	-	-
37	74/301:33	Connector	VT-OG	74/512:2	Connector
38	74/301:32	Connector	GN-OG	74/512:3	Connector
39	74/301:31	Connector	BU-GY	74/512:4	Connector
40	-		-	-	-
41	4/7C1:7	Combustion Preheater Module (CPM)	YE-RD	74/512:14	Connector
42	74/301:20	Connector, Man	GY-BN	3/271:1 73/5055	Contact, immobilizer, clutch pedal, Man Branching point
43	4/118C1:17	Headlamp Control Module (HCM)	YE-GN	74/512:9	Connector
44	73/3021	Branching point	BU-BK	74/409:23 74/511:3 74/518:1	Connector

continues

Connector

74/504:45-57 - 74/505

74/504

57-pin natural

No.	Engine compartment harness		Floor harness		
45	73/3022	Branching point	GN-BK	74/409:22 74/511:4 74/518:2	Connector Connector Connector
46	-		-	-	-
47	-		-	-	-
48	-		-	-	-
49	4/118C1:8	Headlamp Control Module (HCM)	GN-BN	74/512:10	Connector
50	4/16C1:22	Brake Control Module (BCM)	VT-BN	7/164:3	Body Sensor Cluster Stability Sensor (BSC)
51	4/16C1:29	Brake Control Module (BCM)	GN-VT	7/164:5	Body Sensor Cluster Stability Sensor (BSC)
52-55	-		-	-	-
56	73/3019 4/56C1:49	Branching point Central Electronic Module (CEM)	GY-OG	73/5005 73/5009	Branching point Branching point
57	73/3020 4/56C1:50	Branching point Central Electronic Module (CEM)	VT-OG	73/5006 73/5010	Branching point Branching point

74/504B

2-pin red

No.	Engine compartment harness		Floor harness		
1	11A/4:2	Fuse, engine compartment electrical center	RD-GY	73/5040	Branching point
2	11A/3:2	Fuse, engine compartment electrical center	RD-GN	73/5075	Branching point

74/505

2-pin black

No.	Engine compartment harness		Infotainment harness		
1	11A/5:2	Fuse, engine compartment electrical center	BU-RD	RD1:5	Mounting in distribution box cargo compartment
2	-		-	-	-

Connector

74/507

74/507

26-pin black

No.	Driver's door harness (left)			Floor harness	
1	3/126C2:3 Driver's Door Module (DDM) 3/127C2:3 Passenger Door Module (PDM)	GY-OG	73/5005 Branching point		GY-OG
2	3/126C2:15 Driver's Door Module (DDM) 3/127C2:15 Passenger Door Module (PDM)	VT-OG	73/5006 Branching point		VT-OG
3	6/36:4 Lock motor, central locking, LH front door	GN-VT	4/56C2:7 Central Electronic Module (CEM)		GN-VT
4	73/5019 Branching point, LHD 3/127C1:20 Passenger Door Module (PDM), RHD	GN-WH	74/509:7 Connector		GN-WH
5	-	-	-		-
6	-	-	-		-
7	3/176:2 Switch, front door power window	BU-WH	73/5044 Branching point		BU-WH
8	-	-	-		-
9	-	-	-		-
10	-	-	-		-
11	3/273:1 Lock contact, LH front door	BU-GN	4/93C5:19 Keyless Vehicle Module (KVM)		BU-GN
12	3/273:3 Lock contact, LH front door	YE-VT	4/93C5:21 Keyless Vehicle Module (KVM)		YE-VT
13	6/36:4 Lock motor, central locking, LH front door	GN-WH	4/93C4:9 Keyless Vehicle Module (KVM)		GN-WH
14	6/36:1 Lock motor, central locking, LH front door	GY	4/93C2:4 Keyless Vehicle Module (KVM)		GY
15	6/36:2 Lock motor, central locking, LH front door	VT-BK	4/93C4:1 Keyless Vehicle Module (KVM)		VT-BK
16	-	-	-		-
17	6/62C1:2 Power door mirror, left	WH	74/504:1 Connector		WH
18	6/62C1:3 Power door mirror, left	BK-WH	74/504:2 Connector		BK-WH
19	-	-	-		-
20	3/127C1:13 Passenger Door Module (PDM) 73/5037 Branching point, LHD 73/5024 Branching point, RHD	BK-VT	73/5035 Branching point		BK-VT
21	3/126C1:2 Driver's Door Module (DDM)	RD	11D/A1:2 Fuse, rear electrical center		RD
22	16/4.2:1 Left-hand front door speaker 73/5078 Branching point	GN-BK	74/407:9 Connector		GN-BK
23	16/4.2:2 Left-hand front door speaker 73/5079 Branching point	GY-BK	74/407:1 Connector		GY-BK
24	-	-	-		-
25	7/208:1 Pressure sensor, front left door	YE-RD	4/9C1:57 Supplemental restraint system module (SRS)		YE-RD
26	7/208:2 Pressure sensor, front left door	VT-OG	4/9C1:58 Supplemental restraint system module (SRS)		VT-OG

Connector

74/508

26-pin black

No.	Passenger door harness (right)			Floor harness		
1	3/126C2:3 Driver's Door Module (DDM) 3/127C2:3 Passenger Door Module (PDM)	GY-OG	73/5009 Branching point			GY-OG
2	3/126C2:15 Driver's Door Module (DDM) 3/127C2:15 Passenger Door Module (PDM)	VT-OG	73/5010 Branching point			VT-OG
3	6/55:4 Lock motor, central locking, RH front door	BK-GN	4/56C2:6 Central Electronic Module (CEM)			BK-GN
4	3/127C1:20 Passenger Door Module (PDM), LHD 73/5019 Branching point, RHD	GN-WH	74/510:7 Connector			GN-WH
5-6	-	-	-			-
7	3/176:2 Switch, front door power window	BU-WH	73/5044 Branching point			BU-WH
8-10	-	-	-			-
11	3/274:1 Lock contact, RH front door	GN-RD	4/93C5:2 Keyless Vehicle Module (KVM)			GN-RD
12	3/274:3 Lock contact, RH front door	BU-GY	4/93C5:22 Keyless Vehicle Module (KVM)			BU-GY
13	6/55:2 Lock motor, central locking, RH front door	GY-BN	4/93C4:22 Keyless Vehicle Module (KVM)			GY-BN
14	6/55:4 Lock motor, central locking, RH front door	BU-RD	4/93C2:5 Keyless Vehicle Module (KVM)			BU-RD
15	6/55:3 Lock motor, central locking, RH front door	GN-VT	4/93C4:2 Keyless Vehicle Module (KVM)			GN-VT
16-19	-	-	-			-
20	3/127C1:13 Passenger Door Module (PDM) 73/5024 Branching point, Keyless LHD 73/5037 Branching point, Keyless RHD	BK-GN	73/5023 Branching point			BK-GN
21	3/127C1:2 Passenger Door Module (PDM)	RD-BK	11D/A2:2 Fuse, rear electrical center			RD-BK
22	16/3.2:1 Right-hand front door speaker 73/5076 Branching point	VT-BK	74/407:11 Connector			VT-BK
23	16/3.2:2 Right-hand front door speaker 73/5077 Branching point	YE-BK	74/407:3 Connector			YE-BK
24	-	-	-			-
25	7/209:1 Pressure sensor, front right door	YE-RD	4/9C1:56 Supplemental restraint system module (SRS)			YE-RD
26	7/209:2 Pressure sensor, front right door	VT-OG	4/9C1:55 Supplemental restraint system module (SRS)			VT-OG

Connector

74/509 - 74/510:1-6

74/509

16-pin black

No.	Left rear door harness			Floor harness		
1	3/128:3	Left rear Door Module (LDM)	RD-BU	11D/A3:2	Fuse, rear electrical center	RD-BU
2	3/128:13 73/5036	Left rear Door Module (LDM) Branching point	BK-VT	73/5035	Branching point	BK-VT
3	16/6:1	Left-hand rear door speaker	GN-RD	74/407:12	Connector	GN-RD
4	16/6:2	Left-hand rear door speaker	GY-RD	74/407:4	Connector	GY-RD
5	6/57:4	Lock motor, central locking, LH rear door	GN	4/56C2:9	Central Electronic Module (CEM)	GN
6	-		-	-	-	-
7	3/128:20	Left rear Door Module (LDM)	GN-WH	74/507:4	Connector	GN-WH
8	3/275:5	Lock contact, LH rear door	YE	4/93C1:15	Keyless Vehicle Module (KVM)	YE
9	3/275:4	Lock contact, LH rear door	GN-BN	4/93C1:3	Keyless Vehicle Module (KVM)	GN-BN
10	6/57:2	Lock motor, central locking, LH rear door	BU-BN	4/93C3:2	Keyless Vehicle Module (KVM)	BU-BN
11	6/57:1	Lock motor, central locking, LH rear door	YE-BU	4/93C2:2	Keyless Vehicle Module (KVM)	YE-BU
12	6/57:4	Lock motor, central locking, LH rear door	VT-OG	4/93C5:15	Keyless Vehicle Module (KVM)	VT-OG
13	3/275:1	Lock contact, LH rear door	GY-OG	4/93C5:17	Keyless Vehicle Module (KVM)	GY-OG
14	3/275:3	Lock contact, LH rear door	GN-OG	4/93C5:4	Keyless Vehicle Module (KVM)	GN-OG
15	-		-	-	-	-
16	-		-	-	-	-

74/510

16-pin black

No.	Right rear door harness			Floor harness		
1	3/129:2	Right rear Door Module (RDM)	RD-GN	11D/A4:2	Fuse, rear electrical center	RD-GN
2	3/129:13 73/5025	Right rear Door Module (RDM) Branching point	BK-GN	73/5023	Branching point	BK-GN
3	16/5:1	Right-hand rear door speaker	VT-RD	74/407:13	Connector	VT-RD
4	16/5:2	Right-hand rear door speaker	YE-RD	74/407:5	Connector	YE-RD
5	6/56:4	Lock motor, central locking, RH rear door	YE	4/56C2:8	Central Electronic Module (CEM)	YE
6	-		-	-	-	-

continues

Connector

74/510:7-16 - 74/511:1-13

74/510

16-pin black

No.	Right rear door harness			Floor harness		
7	3/129:20	Right rear Door Module (RDM)	GN-WH	74/508:4	Connector	GN-WH
8	3/276:5	Lock contact, RH rear door	BU-OG	4/93C1:14	Keyless Vehicle Module (KVM)	BU-OG
9	3/276:4	Lock contact, RH rear door	VT-GY	4/93C1:23	Keyless Vehicle Module (KVM)	VT-GY
10	6/56:3	Lock motor, central locking, RH rear door	GY-BK	4/93C3:1	Keyless Vehicle Module (KVM)	GY-BK
11	6/56:4	Lock motor, central locking, RH rear door	GN	4/93C2:3	Keyless Vehicle Module (KVM)	GN
12	6/56:2	Lock motor, central locking, RH rear door	YE-RD	4/93C4:21	Keyless Vehicle Module (KVM)	YE-RD
13	3/276:1	Lock contact, RH rear door	VT-RD	4/93C5:5	Keyless Vehicle Module (KVM)	VT-RD
14	3/276:3	Lock contact, RH rear door	GY-RD	4/93C5:20	Keyless Vehicle Module (KVM)	GY-RD
15	-		-	-		-
16	-		-	-		-

74/511

22-pin gray

No.	Floor harness			Left rear axle harness		
1	11D/B6:2	Fuse, rear electrical center	GN-RD	74/520:6	Connector	GN-RD
2	31/65	Ground connection	BK-YE	73/5087	Branching point	BK-YE
3	74/504:44	Connector	BU-BK	73/5080 74/511:8	Branching point, AWD Branching point, 2WD	BU-BK
4	74/504:45	Connector	GN-BK	73/5081 74/511:9	Branching point, AWD Connector, 2WD	GN-BK
5	-		-	-		-
6	74/504:12	Connector	GN-RD	7/56:2	Left-hand rear ABS sensor	BN
7	74/504:11	Connector	BU-OG	7/56:1	Left-hand rear ABS sensor	WH
8	73/5015	Branching point	BU-BK	73/5080 74/511:3	Branching point Connector, 2WD	BU-BK
9	73/5016	Branching point	GN-BK	73/5081 74/511:4	Branching point Connector, 2WD	GN-BK
10	-		-	-		-
11	-		-	-		-
12	74/525:4	Connector	GN-BU	8/22:1	Shock absorber, Four-C, rear left	GN-BU
13	74/525:5	Connector	YE-BU	8/22:2	Shock absorber, Four-C, rear left	YE-BU

continues

Connector

54/511:14-22 - 74/512

74/511

22-pin gray

No.	Floor harness		Left rear axle harness		
14	74/525:1	Connector	YE-GN	7/120:5	Height sensor, suspension, rear left
15	74/525:2	Connector	GN-BN	7/120:1	Height sensor, suspension, rear left
16	74/525:3	Connector	VT-WH	7/120:4	Height sensor, suspension, rear left
17	74/504:18	Connector	YE-OG	4/83:5	Fuel pump control module
18	4/56C2:48	Central Electronic Module (CEM)	GN-BU	6/33:1	Fuel pump
19	4/56C2:30	Central Electronic Module (CEM)	YE-VT	6/33:2	Fuel pump
20	4/56C2:43	Central Electronic Module (CEM)	GN-OG	6/33:6	Fuel pump
21	-		-	-	-
22	-		-	-	-

74/512

14-pin gray

No.	Floor harness		Right rear axle harness		
1	-	-	-	-	-
2	74/504:37	Connector	VT-OG	6/67:1	Pump, fuel leakage control
3	74/504:38	Connector	GN-OG	6/67:2	Pump, fuel leakage control
4	74/504:39	Connector	BU-GY	6/67:3	Pump, fuel leakage control
5	74/504:5	Connector	YE-BK	7/57:1	Right-hand rear ABS sensor
6	74/504:6	Connector	BU-RD	7/57:2	Right-hand rear ABS sensor
7	74/504:21	Connector	BU	6/67:4 9/38:1	Pump, fuel leakage control Heated fuel filter
8	31/68	Ground connection	BK-OG	6/35:2 9/38:2	Fuel pump, auxiliary heater Heated fuel filter
9	74/504:43	Connector	YE-GN	7/121:5	Height sensor, suspension, rear right
10	74/504:49	Connector	GN-BN	7/121:1	Height sensor, suspension, rear right
11	74/504:23	Connector	GN-VT	7/121:4	Height sensor, suspension, rear right
12	-		-	-	-
13	-		-	-	-
14	74/504:41	Connector	YE-RD	6/35:1	Fuel pump, auxiliary heater

Connector

74/513 - 74/518

74/513 5-pin green

No.	Infotainment harness			Right rear axle harness		
1	4/84C1:5	Suspension Module (SUM)	VT-GY	8/23:1	Shock absorber, Four-C, rear right	VT-GY
2	4/84C1:4	Suspension Module (SUM)	BU-BN	8/23:2	Shock absorber, Four-C, rear right	BU-BN
3	73/5066	Branching point	YE-GN	7/121:5	Shock absorber, Four-C, rear right	YE-GN
4	73/5053	Branching point	GN-BN	7/121:1	Shock absorber, Four-C, rear right	YE-GN
5	4/84C1:14	Suspension Module (SUM)	GN-VT	7/121:4	Shock absorber, Four-C, rear right	GN-VT

74/514 4-pin gray

No.	Floor harness			Left rear axle harness		
1	4/115C1:29	Parking Brake Module (PBM)	BU-GN	6/146:2	Lock motor, rear left brake disc	BU-GN
2	4/115C1:14	Parking Brake Module (PBM)	VT-BK	6/146:1	Lock motor, rear left brake disc	VT-BK
3	4/56C2:76	Central Electronic Module (CEM)	YE-OG	4/83:4 6/33:4	Fuel pump control module Fuel pump	YE-OG
4	31/65	Ground connection	BK-YE	6/33:3 73/5087	Fuel pump Branching point	BK-YE

74/518 2-pin gray

No.	Infotainment harness			Floor harness		
1	4/84C1:16	Suspension Module (SUM)	BU-BK	73/5015 74/405:44 74/409:23	Branching point Connector Connector	BU-BK
2	4/84C1:15	Suspension Module (SUM)	GN-BK	73/5016 74/409:22 74/504:45	Branching point Connector Connector	GN-BK

**Connector
74/519**

**74/519
22-pin gray**

No.	Infotainment harness			Engine compartment harness	
1	4/84C1:6	Suspension Module (SUM)	BU-BK	8/20:1	Shock absorber, Four-C, front left
2	4/84C1:7	Suspension Module (SUM)	VT-BN	8/20:2	Shock absorber, Four-C, front left
3	4/84C1:9	Suspension Module (SUM)	GY-YE	8/21:1	Shock absorber, Four-C, front right
4	4/84C1:8	Suspension Module (SUM)	BU-OG	8/21:2	Shock absorber, Four-C, front right
5	73/5052	Branching point	YE-GN	7/118:5	Height sensor, suspension, front left
6	4/84C1:12	Suspension Module (SUM)	BU-RD	7/118:4	Height sensor, suspension, front left
7	73/5066	Branching point	YE-GN	73/3077	Branching point
8	4/84C1:27	Suspension Module (SUM)	GY-VT	7/119:4	Height sensor, suspension, front right
9	4/84C1:22	Suspension Module (SUM)	BU-GY	7/88:1	Acceleration sensor, Four-C, front right
10	4/84C1:10	Suspension Module (SUM)	VT-RD	7/87:1	Acceleration sensor, Four-C, front left
11	4/84C1:19	Suspension Module (SUM)	GN-BN	73/3078	Branching point
12	4/86C2:2	Parking Assistance Module (PAM)	VT-GY	74/303:1	Connector
13	4/86C2:5	Parking Assistance Module (PAM)	BU-GN	74/303:2	Connector
14	4/86C2:1	Parking Assistance Module (PAM)	YE-OG	74/303:3	Connector
15	4/86C2:6	Parking Assistance Module (PAM)	BU-BK	74/303:4	Connector
16	4/86C2:7	Parking Assistance Module (PAM)	BU-GY	74/303:5	Connector
17	4/86C2:8	Parking Assistance Module (PAM)	BU-OG	74/303:6	Connector
18-22	-	-	-	-	-

Connectors

74/520 - 74/524

74/520

6-pin gray

No.	Left rear axle harness			All wheel drive harness		
1	73/5080	Branching point	BU-BK	4/82C1:8	Differential Electronic Module (DEM)	BU-BK
2	73/5081	Branching point	GN-BK	4/82C1:7	Differential Electronic Module (DEM)	GN-BK
3	-	-	-	-	-	-
4	73/5087	Branching point	BK	4/82C1:4	Differential Electronic Module (DEM)	BK
5	73/5087	Branching point	BK-YE	4/82C1:2	Differential Electronic Module (DEM)	BK-YE
6	74/511:1	Connector	GN-RD	4/82C1:1	Differential Electronic Module (DEM)	GN-RD

74/523

6-pin gray

No.	Adp. parking assistance harness			Rear bumper harness		
1	4/86C3:11	Parking Assistance Module (PAM)	BU-WH	73/5064	Branching point	BU-WH
2	4/86C3:2	Parking Assistance Module (PAM)	YE-GY	7/133:2	Rear parking assistance sensor	YE-GY
3	4/86C3:3	Parking Assistance Module (PAM)	YE-BK	7/132:2	Rear parking assistance sensor	YE-BK
4	4/86C3:4	Parking Assistance Module (PAM)	YE-OG	7/134:2	Rear parking assistance sensor	YE-OG
5	4/86C3:5	Parking Assistance Module (PAM)	YE-GN	7/131:2	Rear parking assistance sensor	YE-GN
6	4/86C3:8	Parking Assistance Module (PAM)	GN-WH	73/5067	Branching point	GN-WH

74/524

2-pin gray

No.	Right rear axle harness			Floor harness	
1	4/115C1:12	Parking Brake Module (PBM)	YE-GY	6/147:1	Lock motor, rear right brake disc
2	4/115C1:27	Parking Brake Module (PBM)	GN-BN	6/147:2	Lock motor, rear right brake disc

Connectors

74/525 - 74/601

74/525 6-pin green

No.	Infotainment harness			Floor harness		
1	73/5052	Branching point	YE-GN	74/511:14	Connector	YE-GN
2	73/5053	Branching point	GN-BN	74/511:15	Connector	GN-BN
3	4/84C1:28	Suspension Module (SUM)	VT-WH	74/511:16	Connector	VT-WH
4	4/84C1:2	Suspension Module (SUM)	GN-BU	74/511:12	Connector	GN-BU
5	4/84C1:1	Suspension Module (SUM)	YE-BU	74/511:13	Connector	YE-BU
6	-		-	-	-	-

74/529 2-pin black

No.	Infotainment harness			RDAR/SUB		
1	16/105C4:2	Audio module (AUD), LHD	OG	16/145C3:1	Remote digital audio receiver (RDAR)	OG
	16/108C3:2	Multimedia Module (MMM)		16/79C2:1	Subwoofer Module (SUB)	
	74/404:2	Connector				
2	74/404:1	Connector	OG	16/79C2:2	Subwoofer Module (SUB)	OG
				16/145C3:2	Remote digital audio receiver (RDAR)	

74/601 10-pin gray, S80

No.	Trunk lid harness			Floor harness		
1	10/3:2	License plate lighting	BK	4/56C2:52	Central Electronic Module (CEM)	YE-VT
2	6/8:3	Central locking motor, trunk lid	BK	4/56C2:10	Central Electronic Module (CEM)	YE-OG
3	10/3:3	License plate lighting	BK	4/56C2:13	Central Electronic Module (CEM)	BU-RD
				4/93C5:18	Keyless Vehicle Module (KVM)	
4	10/3:1	License plate lighting	BK	73/5105	Branching point	BK-OG
5	6/8:1	Central locking motor, trunk lid	BK	4/56C2:71	Central Electronic Module (CEM)	YE-VT
6	6/8:4	Central locking motor, trunk lid	BK	10/127:4	Lighting, cargo compartment, left-hand side	BK-BU
				10/128:4	Lighting, cargo compartment, right-hand side	
7	-		-	-	-	-
8	-		-	-	-	-
9	-		-	-	-	-
10	-		-	-	-	-

Connectors

74/602 - 74/603:1-7

74/602

14-pin gray, V70

No.	Floor harness			Trunk lid harness		
1	2/82:5	Relay, rear window defroster	GY-RD	9/2A:1	Rear window defroster	GY-RD
2	4/56C2:34 4/110C2:3	Central Electronic Module (CEM)	YE-GY	10/19:2	Auxiliary brake light	BK
3	4/56C2:59	Central Electronic Module (CEM)	GY-BN	73/6002	Branching point	BK
4	4/56C2:73	Central Electronic Module (CEM)	GN-BN	73/6003	Branching point	BK
5	-		-	-	-	-
6	4/56C2:39 10/25:4	Central Electronic Module (CEM) Ceiling light, cargo compartment	BN-GN BU-BK	3/78:3 73/6004	Lock unit, tailgate Branching point	BK
7	73/5105	Branching point	BK-OG	73/6001	Branching point	BK-OG
8	2/16:3	Rear window wiper relay	GY-BU	6/32:1	Rear window wiper motor	BK
9	4/56C2:52	Central Electronic Module (CEM)	YE-VT	10/3:1	License plate lighting	YE-VT
10	4/56C2:72	Central Electronic Module (CEM)	GN-VT	3/78:6	Lock unit, tailgate	BK
11	4/56C2:71	Central Electronic Module (CEM)	GY-BN	3/78:4	Lock unit, tailgate	BK
12	4/56C2:53	Central Electronic Module (CEM)	GN-YE	3/78:2	Lock unit, tailgate	GN-YE
13	4/56C2:10 4/116C2:5	Central Electronic Module (CEM) Power Operated Tailgate Module (POT)	YE-GO	3/78:5	Lock unit, tailgate	YE-OG
14	2/16:2	Rear window wiper relay	VT-GN	6/32:2	Rear window wiper motor	BK

74/603

22-pin gray, V70

No.	Floor harness			Trunk lid harness		
1	4/116C2:7 4/93C2:1	Power Operated Tailgate Module (POT) Keyless Vehicle Module (KVM)	GN-WH	3/78:7	Lock unit, tailgate	GN-WH
2	4/116C2:14 4/93C3:3	Power Operated Tailgate Module (POT) Keyless Vehicle Module (KVM)	GN-OG	3/78:8	Lock unit, tailgate	GN-OG
3	-		-	-	-	-
4	4/116C2:6	Power Operated Tailgate Module (POT)	YE-OG	3/78:9	Lock unit, tailgate	YE-OG
5	4/116C2:1	Power Operated Tailgate Module (POT)	GN-OG	6/149:3	Tailgate closing motor	GN-OG
6	4/116C2:8	Power Operated Tailgate Module (POT)	GN-BU	6/149:4	Tailgate closing motor	GN-BU
7	4/116C2:9	Power Operated Tailgate Module (POT)	GN	6/149:2	Tailgate closing motor	GN

continues

Connectors

74/603:8-22 - 74/701

74/603

22-pin gray, V70

No.	Floor harness			Trunk lid harness	
8	-	-	-	-	-
9	4/116C2:4 Power Operated Tailgate Module (POT)	GY-BN	3/291:1	Tailgate closing switch	GY-BN
10	73/5044 Branching point	BU-WH	3/291:5	Tailgate closing switch	BU-WH
11	4/116C2:2 Power Operated Tailgate Module (POT) 4/93C5:18 Keyless Vehicle Module (KVM)	GY-YE	3/35:3	Trunk handle switch	GY-YE
12	4/116C2:11 Power Operated Tailgate Module (POT)	BN-VT	7/227A:1	Tailgate pinch sensor, right	BN-VT
13	4/116C2:10 Power Operated Tailgate Module (POT)	BN-VT	7/227B:1	Tailgate pinch sensor, left	BN-VT
14	-	-	-	-	-
15	4/93C1:22 Keyless Vehicle Module (KVM)	VT	16/132:2	Antenna door lock trunk lid/tailgate	VT
16	4/93C1:21 Keyless Vehicle Module (KVM)	GN-OG	16/132:1	Antenna door lock trunk lid/tailgate	GN-OG
17	-	-	-	-	-
18	-	-	-	-	-
19	-	-	-	-	-
20	-	-	-	-	-
21	-	-	-	-	-
22	-	-	-	-	-

74/701

12-pin gray

No.	Tunnel harness			Tunnel harness	
1	16/109E:12 DVD player/control module	BK	74/276:1	Connector	BK
2	16/109E:1 DVD player/control module	RD	74/276:2	Connector	RD
3	16/109E:2 DVD player/control module	RD-WH	74/276:3	Connector	RD-WH
4	16/109E:3 DVD player/control module	BN	74/276:4	Connector	BN
5	16/109E:4 DVD player/control module	BU	74/276:5	Connector	BU
6	16/109E:12 DVD player/control module	-	74/276:6	Connector	-
7	16/109E:11 DVD player/control module	PK	74/276:7	Connector	PK
8	16/109E:10 DVD player/control module	GY	74/276:8	Connector	GY
9	16/109E:7 DVD player/control module	YE	74/276:9	Connector	YE
10	16/109E:8 DVD player/control module	GN	74/276:10	Connector	GN
11	16/109E:6 DVD player/control module	BN	74/276:11	Connector	BN
12	16/109E:5 DVD player/control module	WH	74/276:12	Connector	WH

Connectors

74/702

74/702


12-pin gray

No.	Tunnel harness		Tunnel harness	
1	16/109E:24	DVD player/control module	BK	74/277:1 Connector
2	16/109E:13	DVD player/control module	RD	74/277:2 Connector
3	16/109E:14	DVD player/control module	RD-WH	74/277:3 Connector
4	16/109E:15	DVD player/control module	BN	74/277:4 Connector
5	16/109E:16	DVD player/control module	BU	74/277:5 Connector
6	16/109E:24	DVD player/control module	-	74/277:6 Connector
7	16/109E:23	DVD player/control module	PK	74/277:7 Connector
8	16/109E:22	DVD player/control module	GY	74/277:8 Connector
9	16/109E:19	DVD player/control module	YE	74/277:9 Connector
10	16/109E:20	DVD player/control module	GN	74/277:10 Connector
11	16/109E:18	DVD player/control module	BN	74/277:11 Connector
12	16/109E:17	DVD player/control module	WH	74/277:12 Connector


Branching points

73/3003 - 73/3020


73/3003

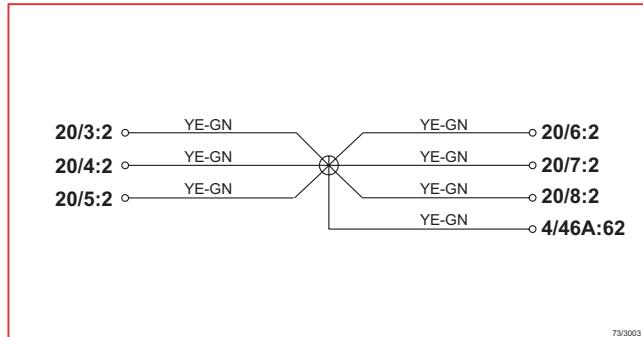


73/3012

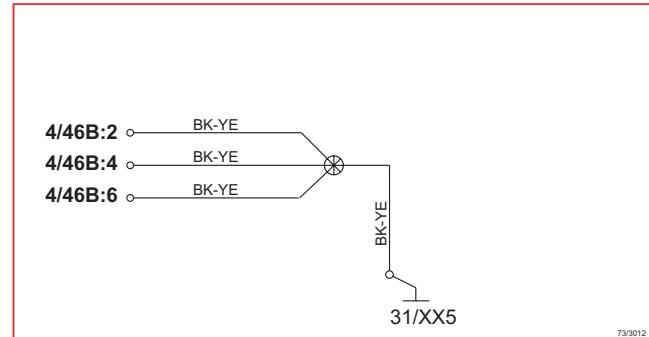


73/3004

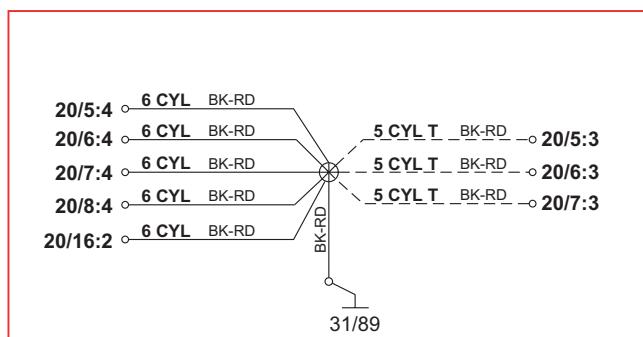


73/3014

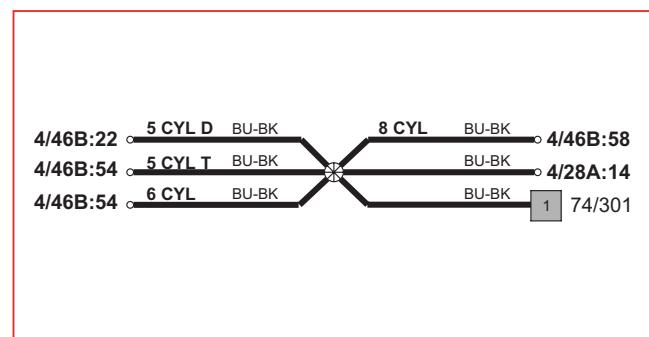


73/3006

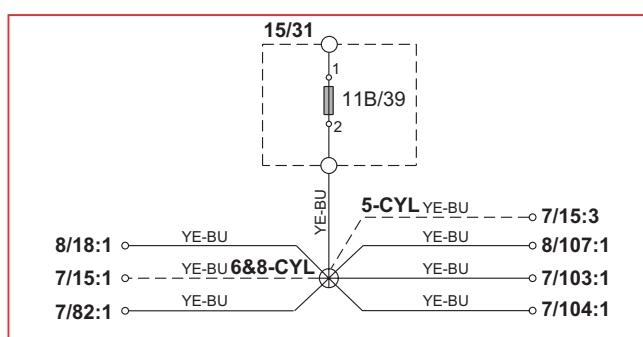


73/3015

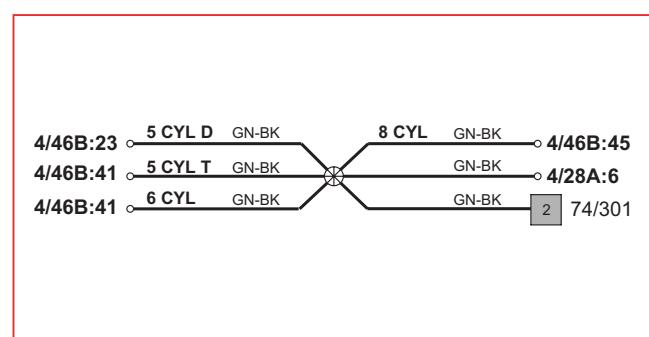


73/3009

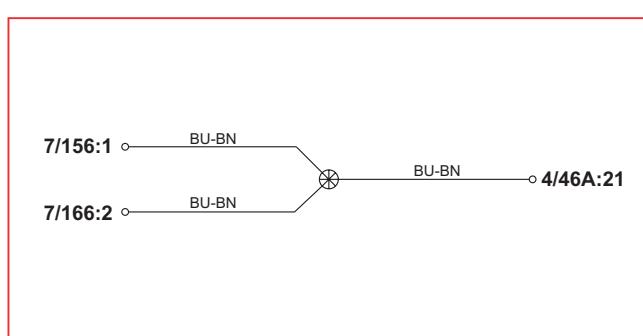


73/3019

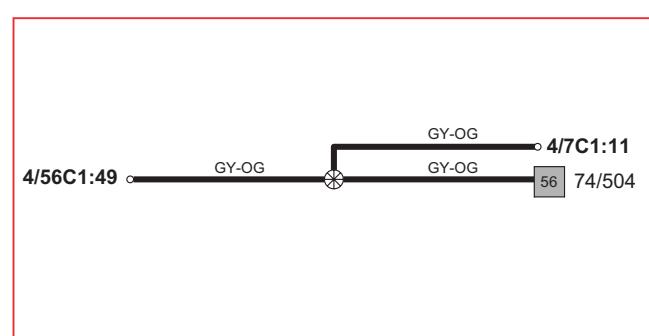

73/3010

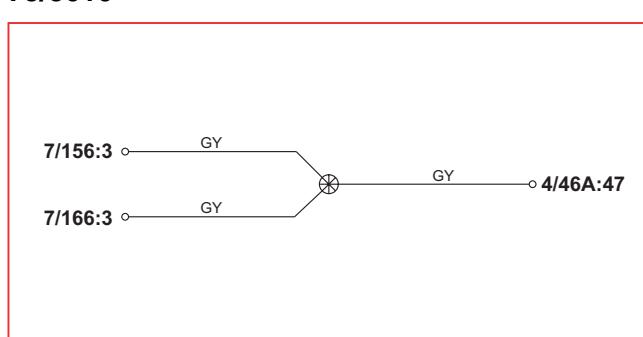


73/3020

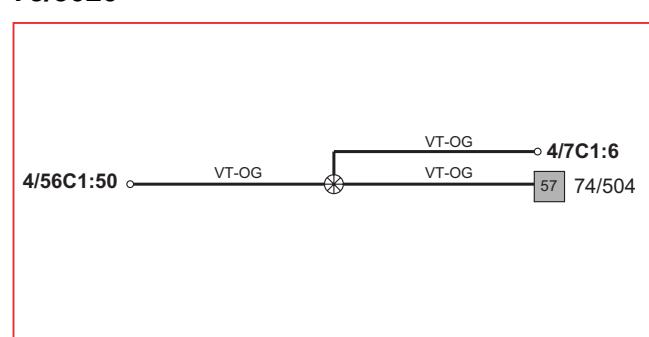


Branching points

73/3021 - 73/3039 5 Cyl. Diesel


73/3021

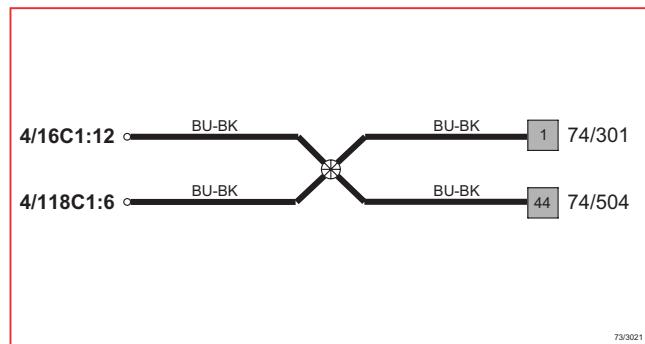


73/3034

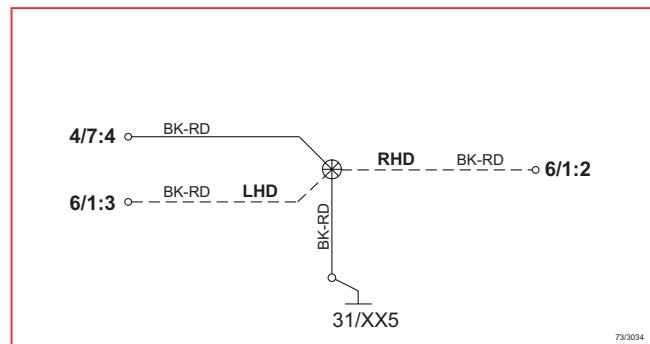


73/3022

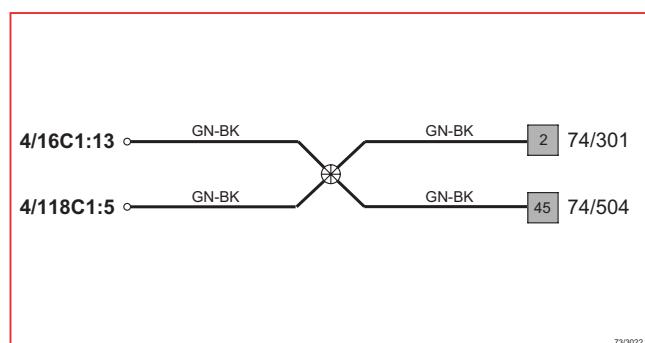


73/3035

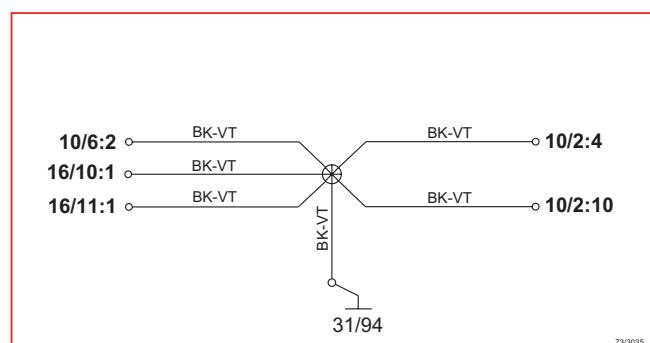


73/3030

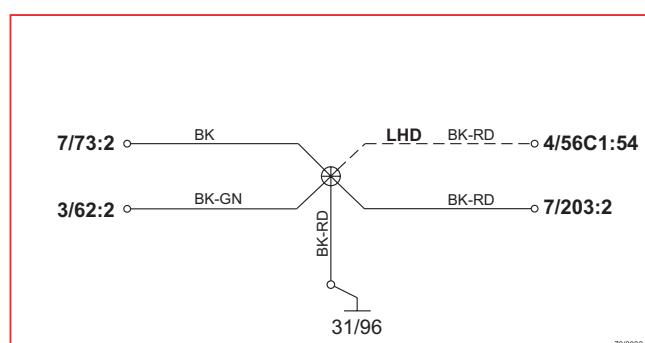


73/3036

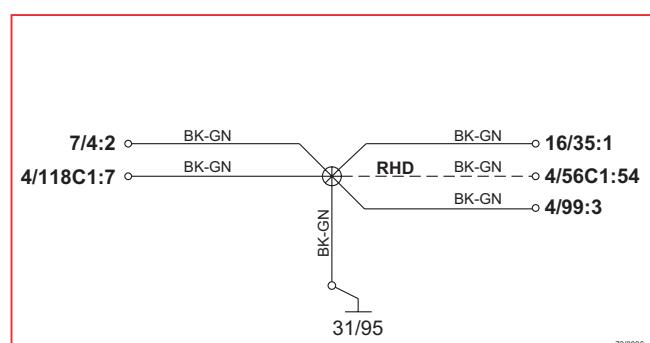


73/3031

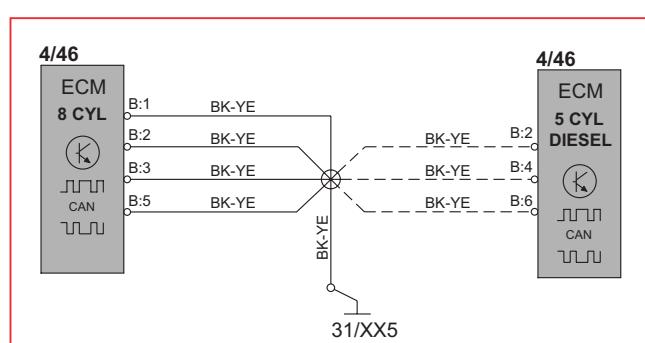


73/3037

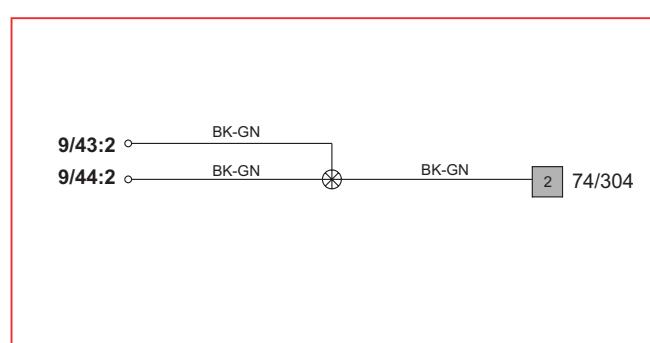

73/3033

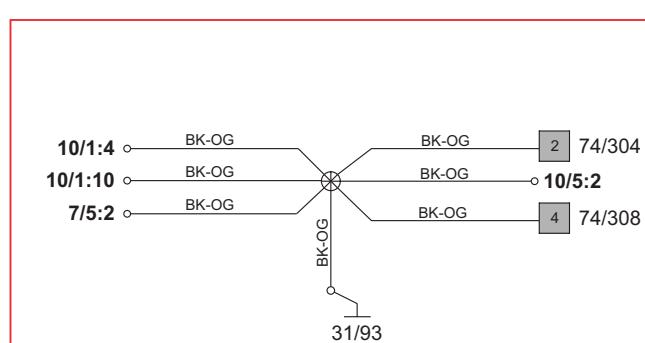


73/3039 5 cyl. diesel

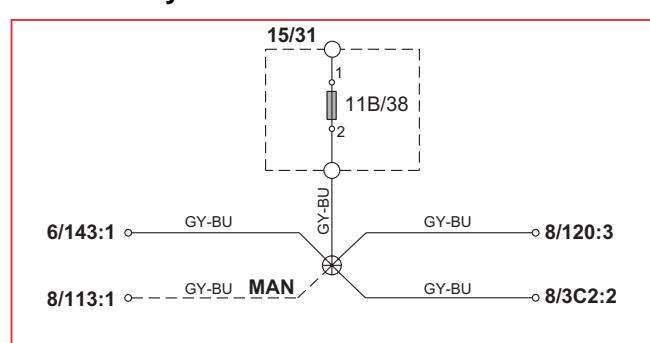


Branching points

73/3039 5 Cyl. T - 73/3052


73/3039 5 cyl. T

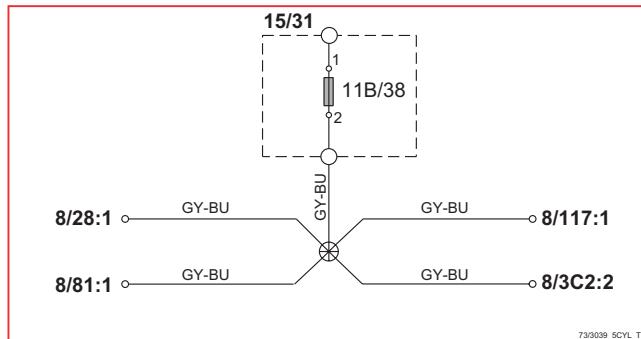


73/3042

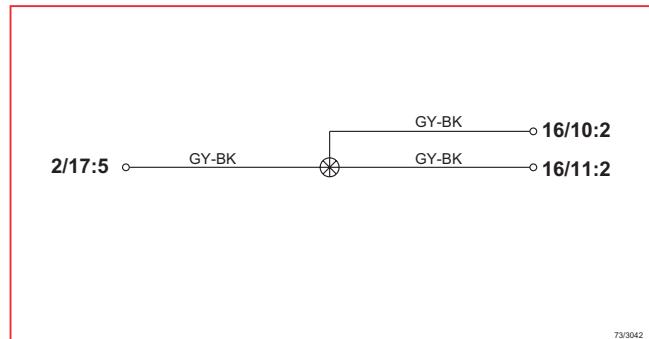


73/3039 6 cyl.

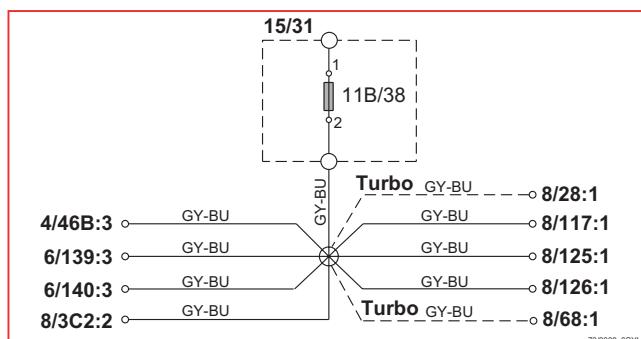


73/3046

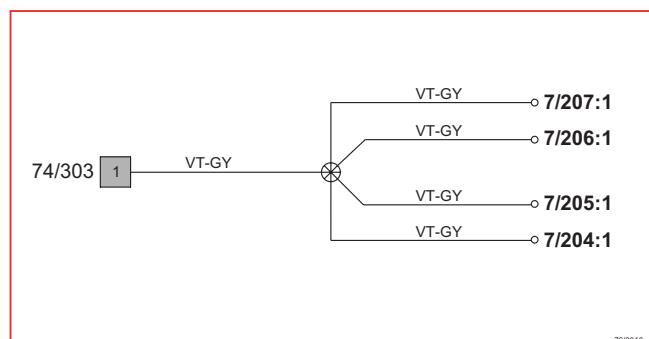


73/3039 8 cyl.

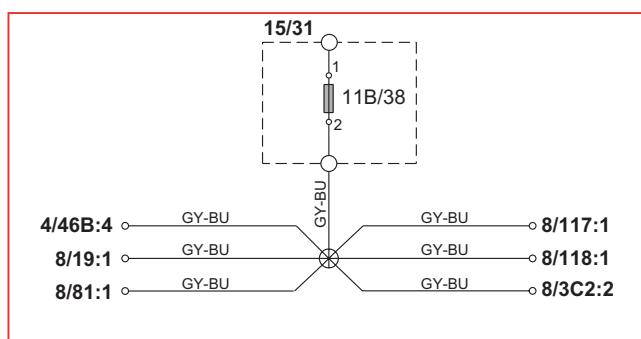


73/3047

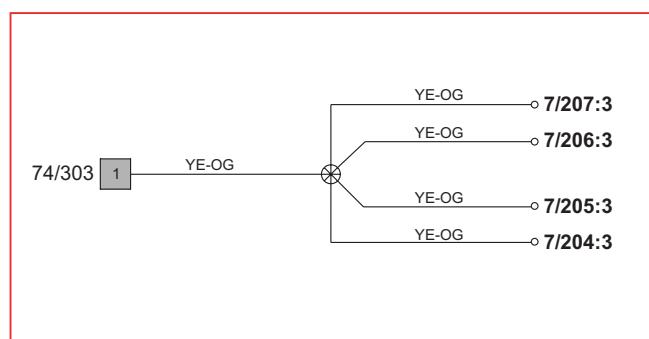


73/3040

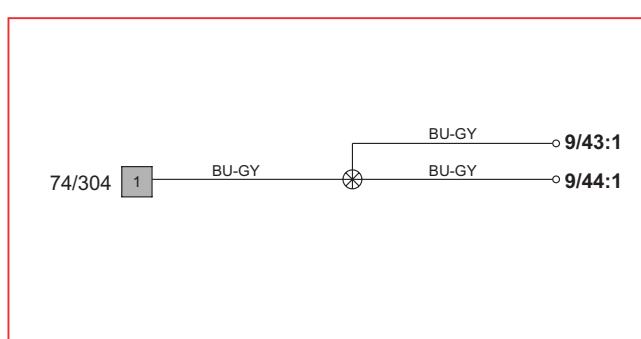


73/3051

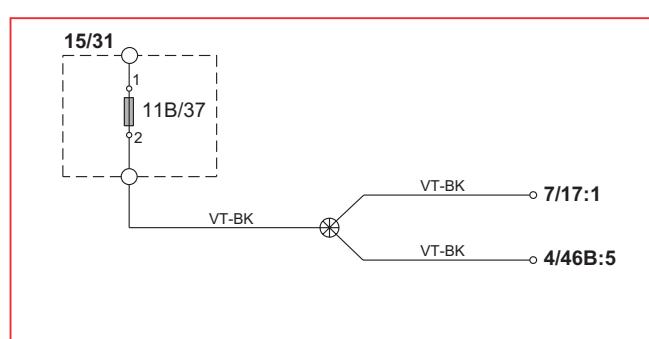

73/3041

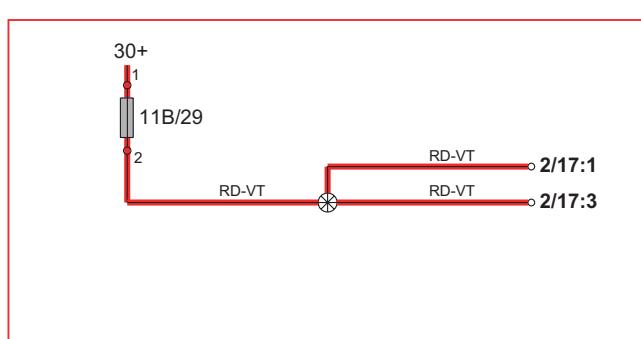


73/3052

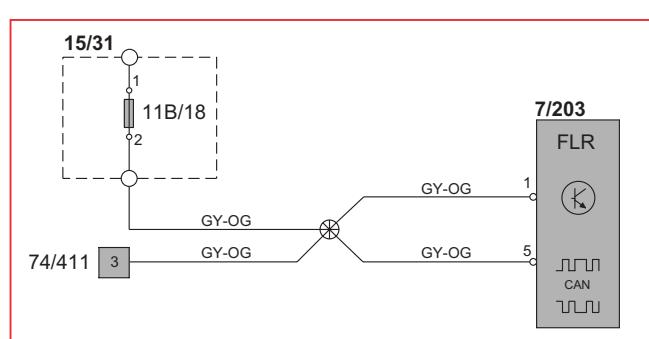


Branching points

73/3053 - 73/3070


73/3053

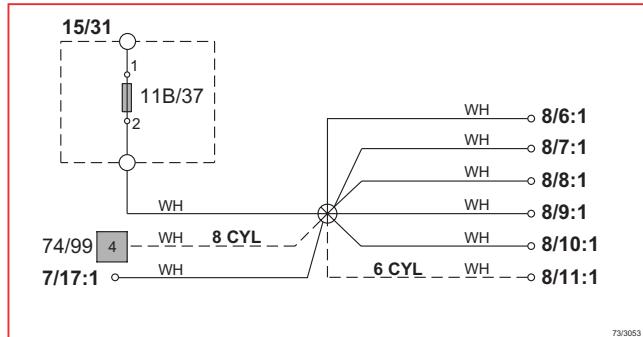


73/3060

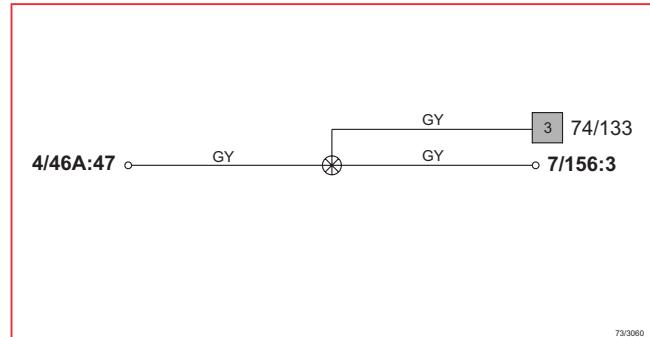


73/3056

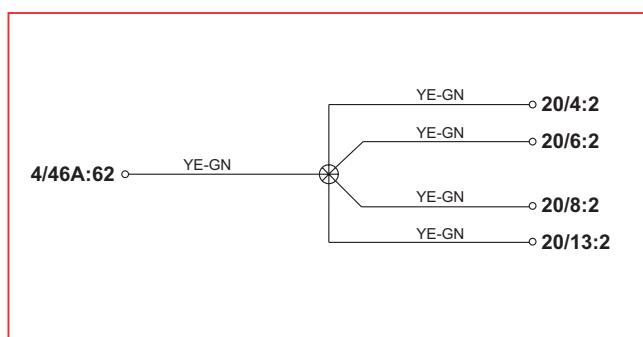


73/3061

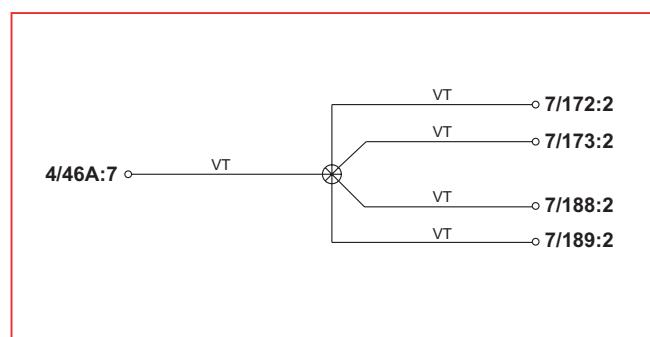


73/3057

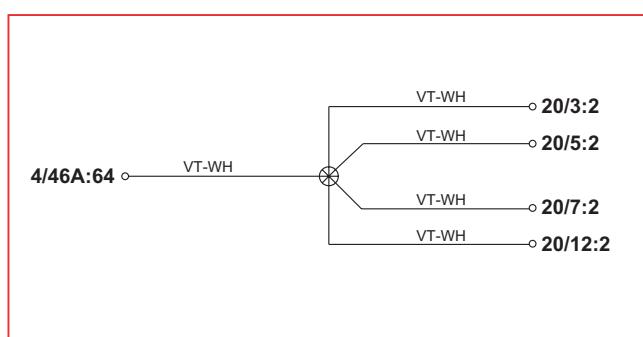


73/3064

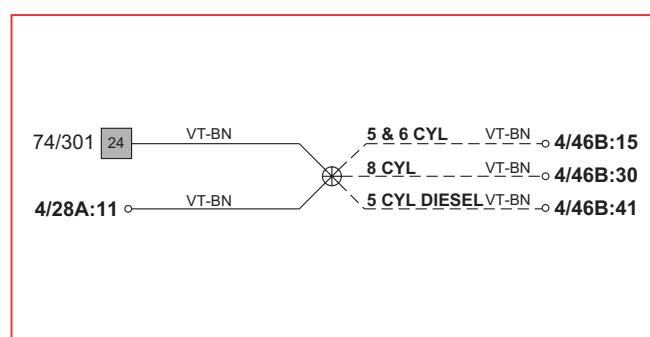


73/3058

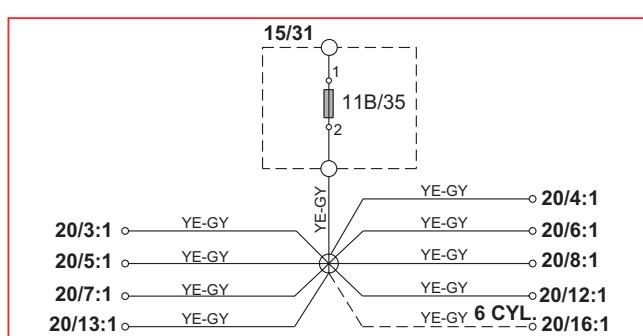


73/3068

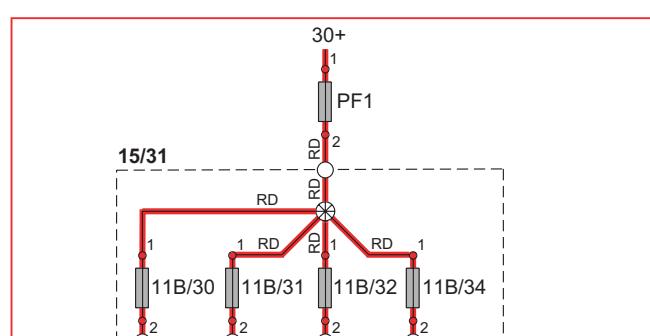

73/3059

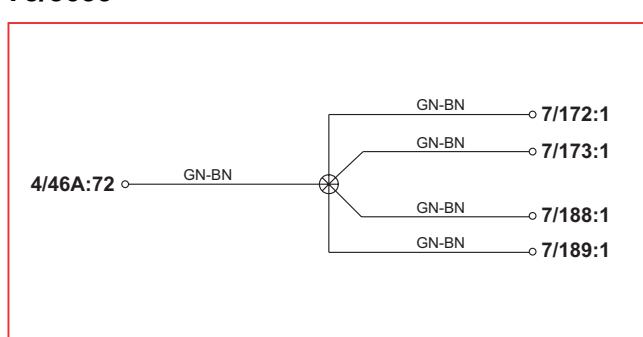


73/3070

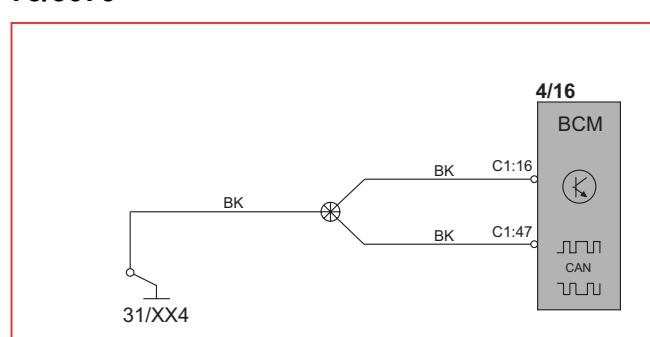


Branching points

73/3072 - 73/3089


73/3072

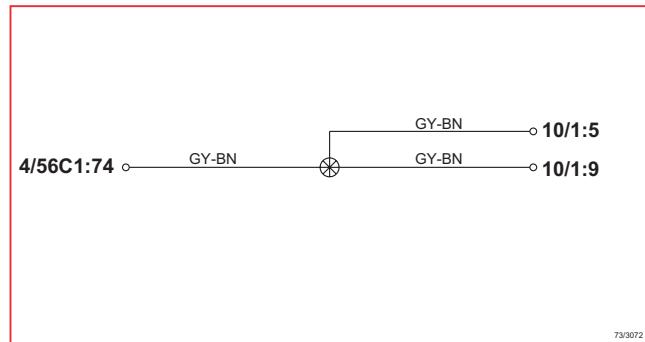


73/3078

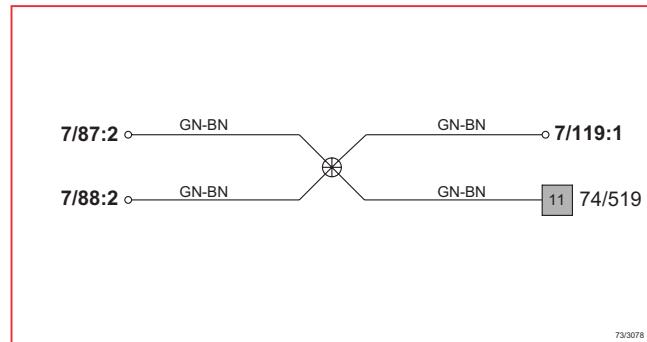


73/3073

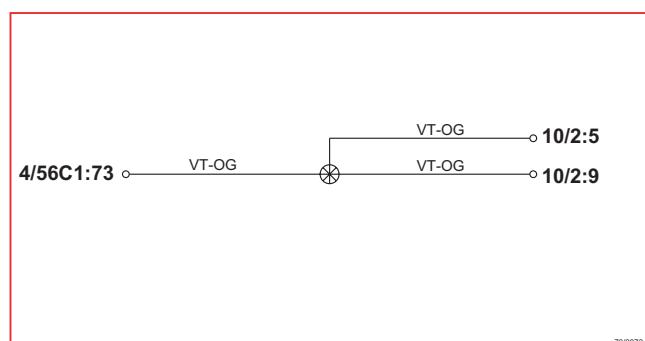


73/3083

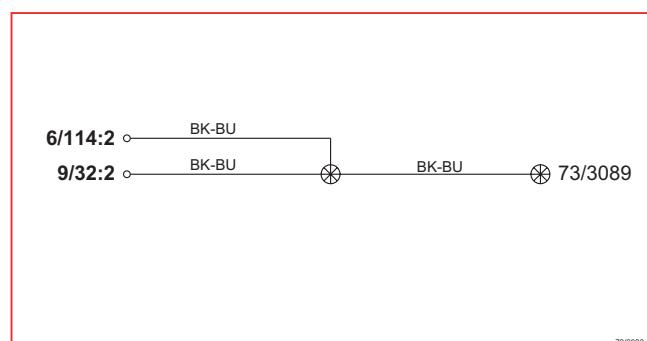


73/3074

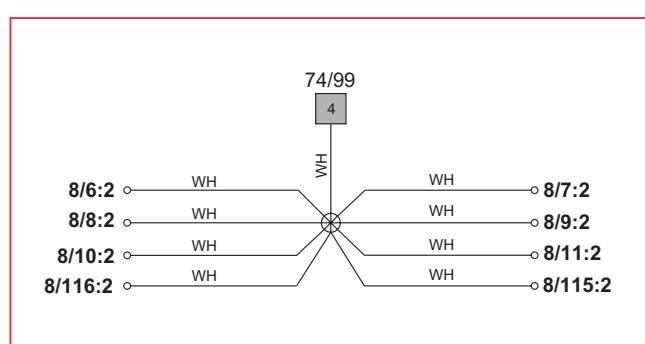


73/3085

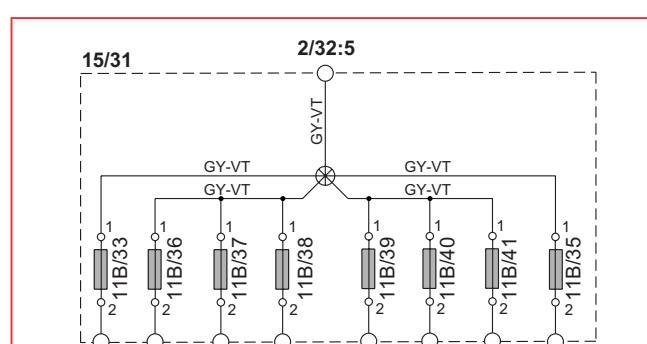


73/3076

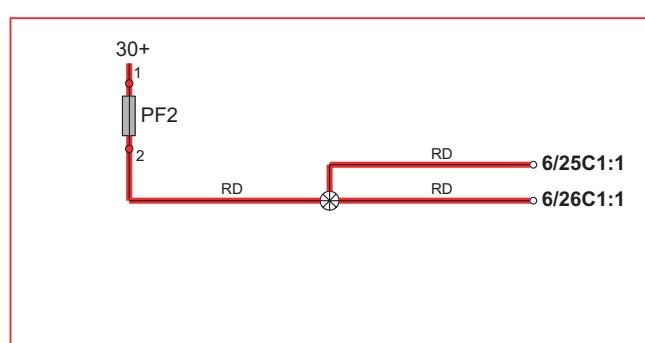


73/3088

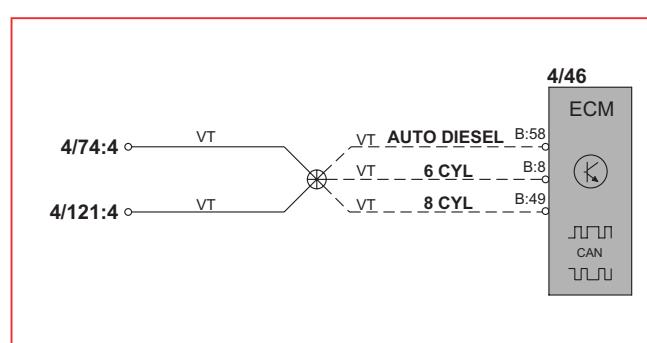

73/3077

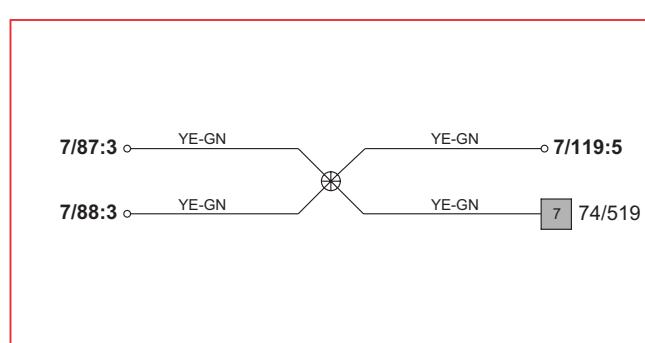


73/3089

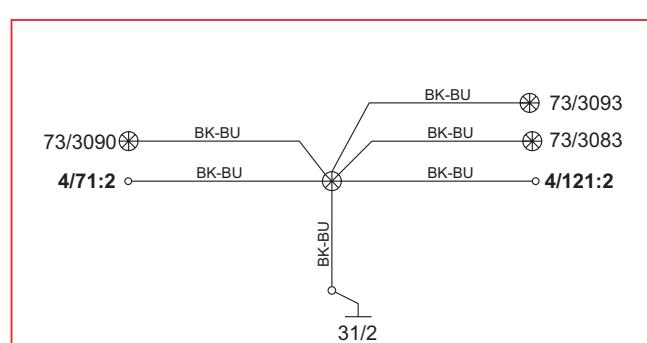


Branching points 73/3090 - 73/4001


73/3090

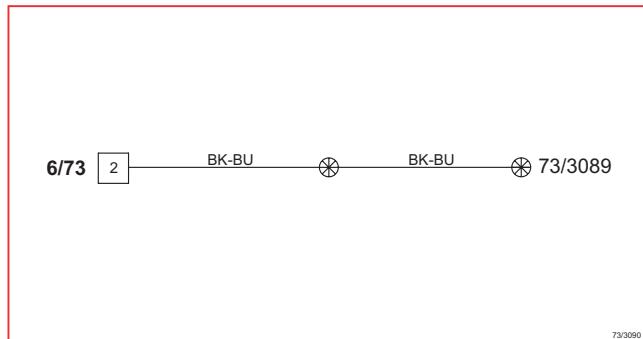


73/3100

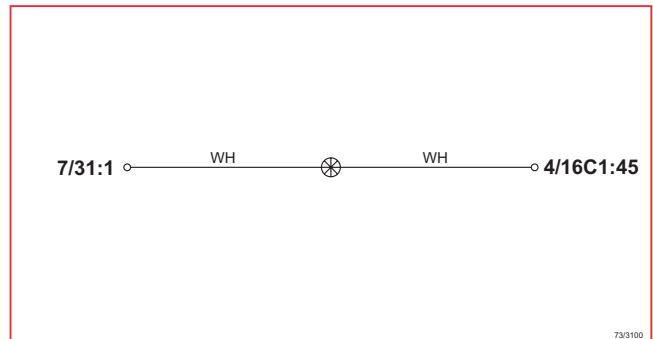


73/3091

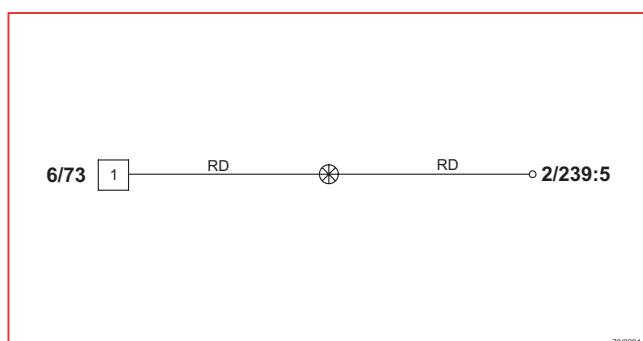


73/3101

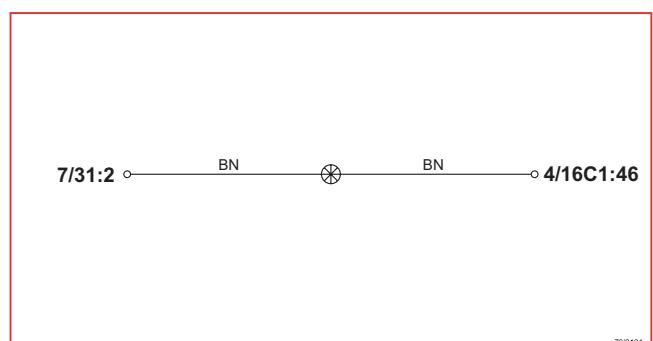


73/3092

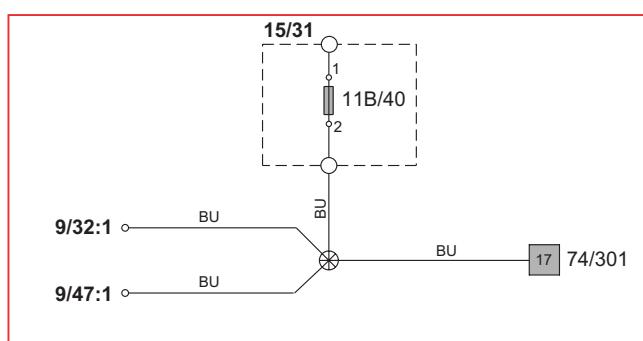


73/3102

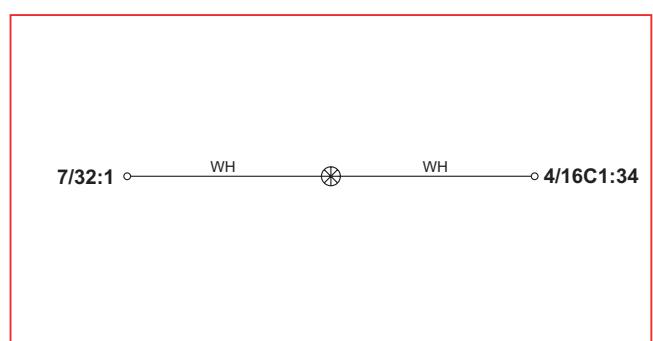


73/3093

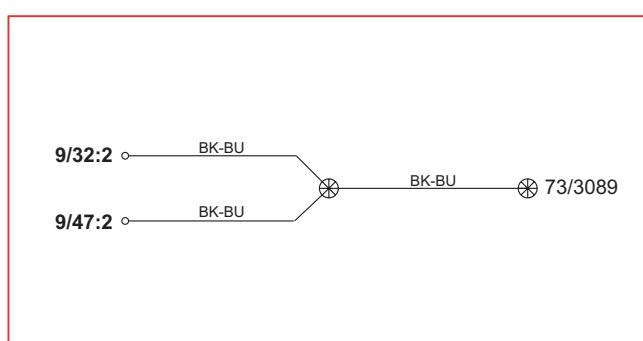


73/3103

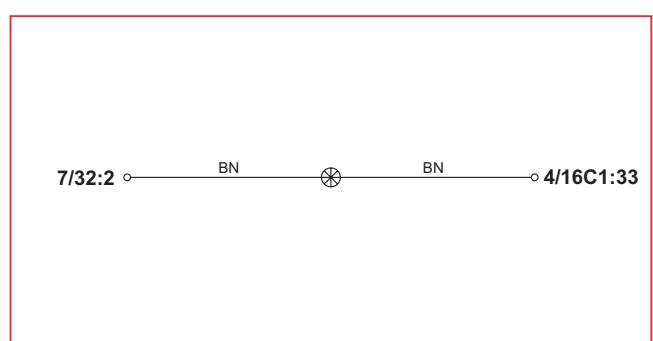

73/3094

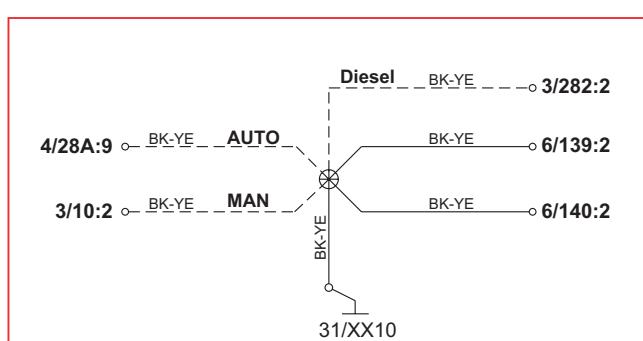


73/4001

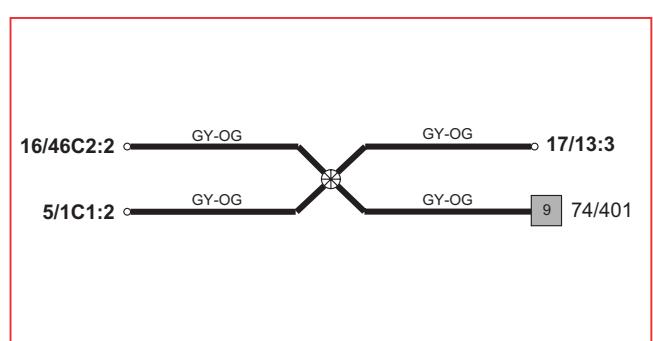


Branching points

73/4002 - 73/4016 LHD


73/4002

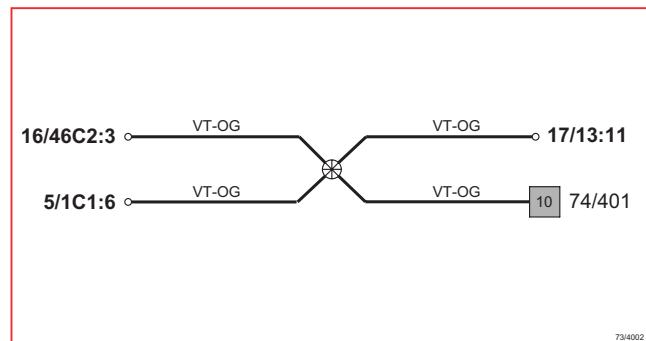


73/4009

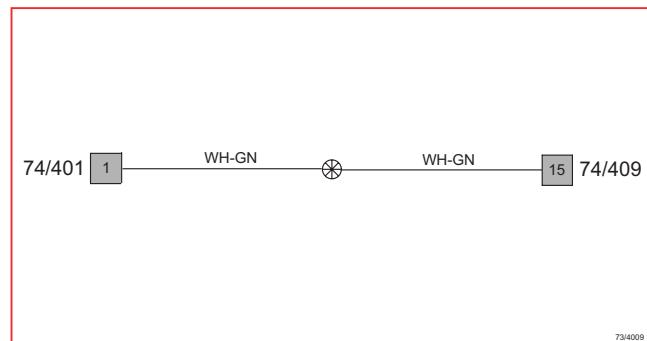


73/4005

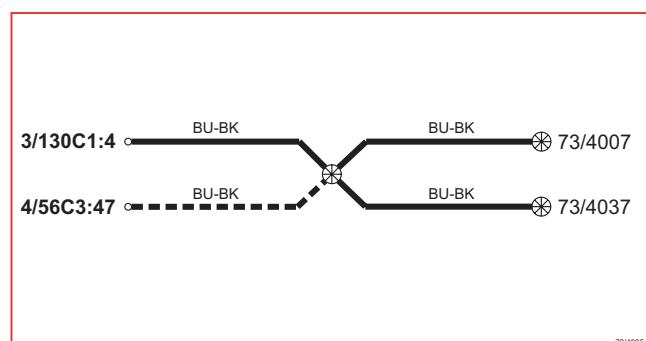


73/4010

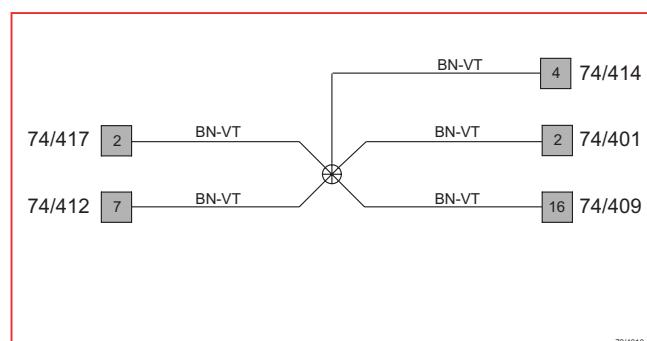


73/4006

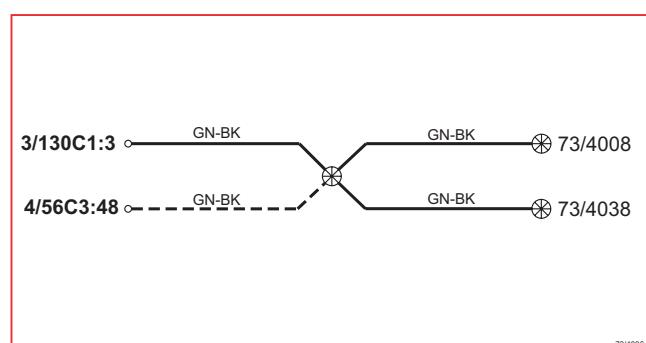


73/4012

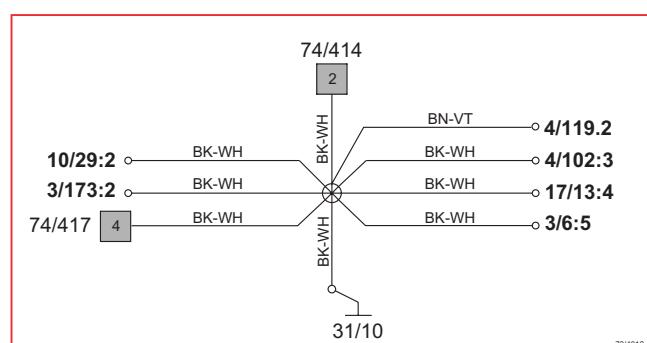


73/4007

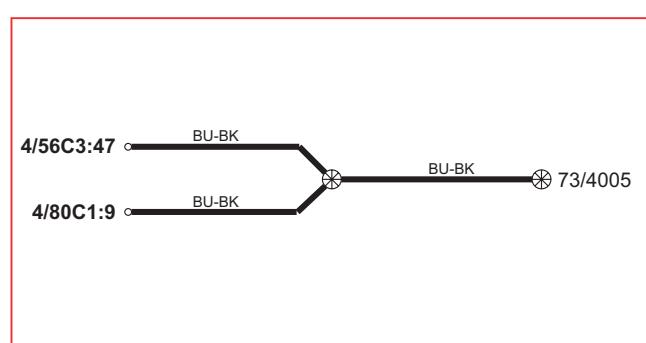


73/4014

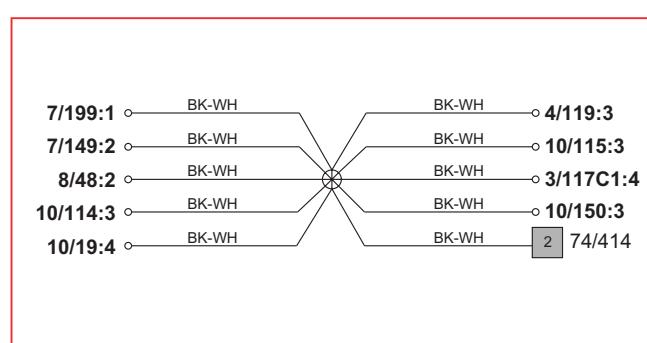

73/4008

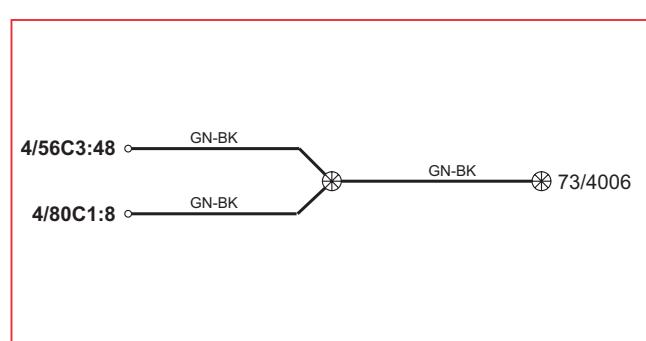


73/4016 LHD

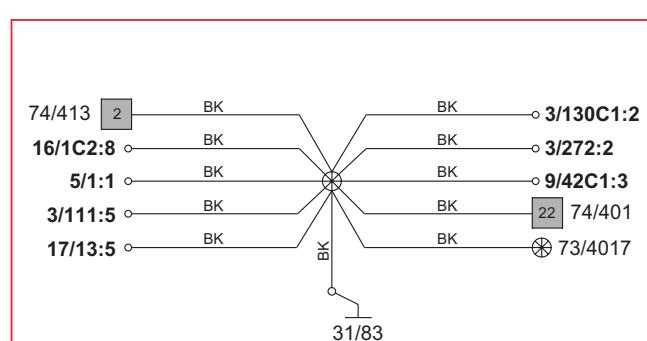


Branching points

73/4016 RHD - 73/4035


73/4016 RHD

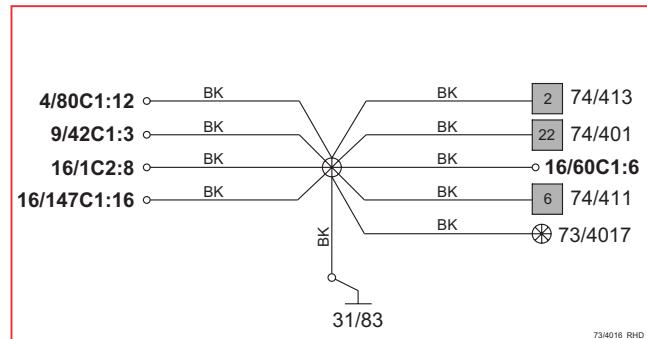


73/4020

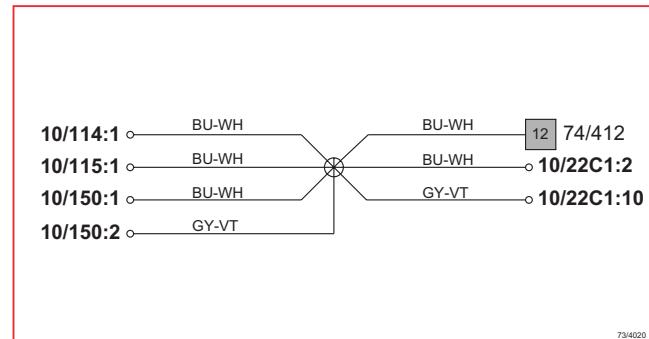


73/4017 LHD

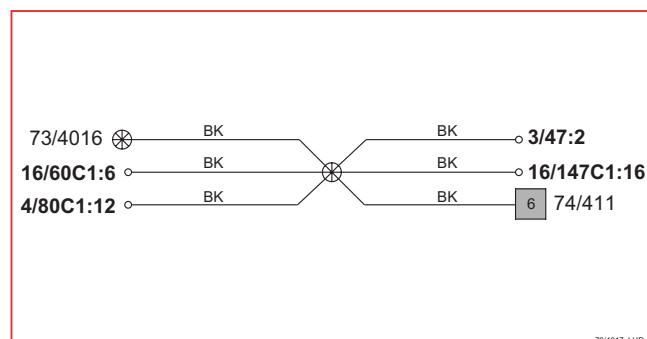


73/4027

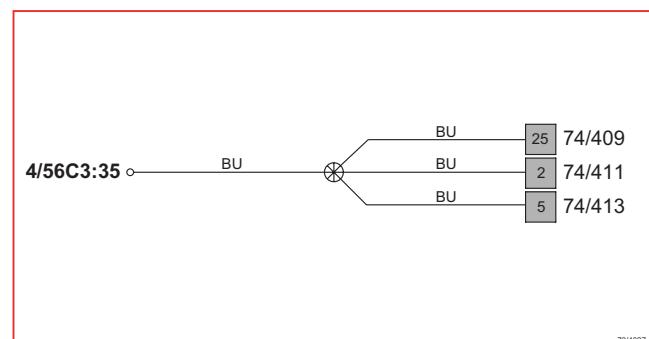


73/4017 RHD

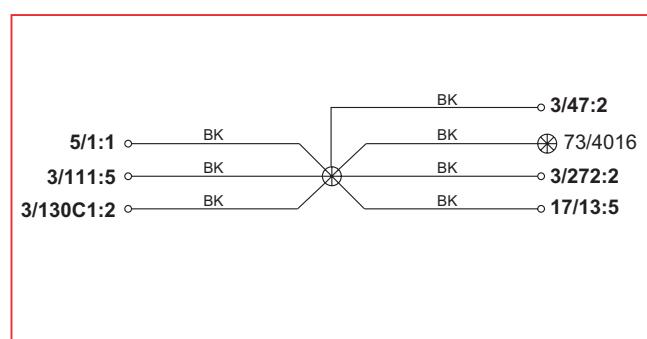


73/4031

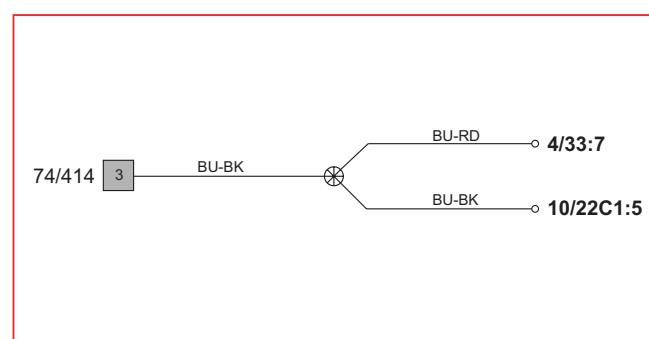


73/4018

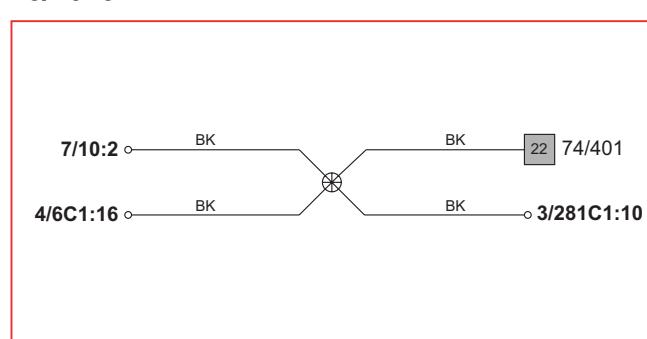


73/4034

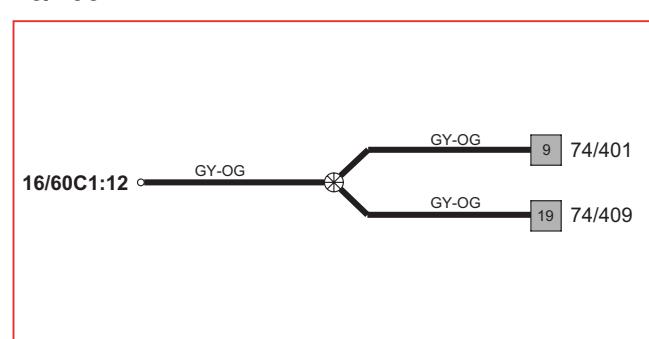

73/4019

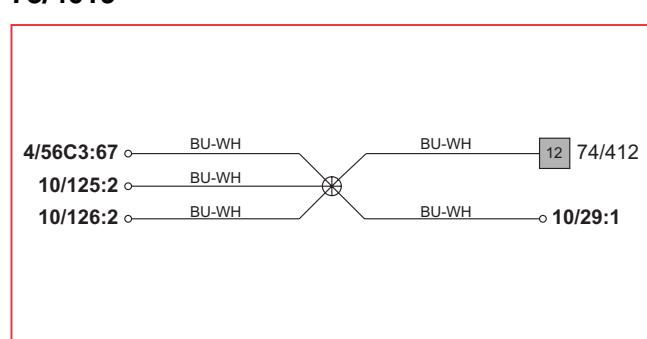


73/4035

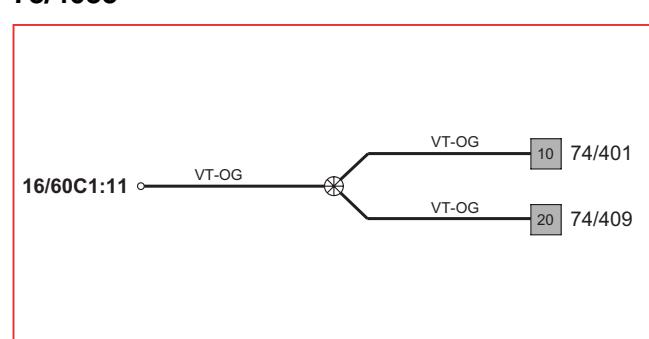


Branching points

73/4037 - 73/5004 RHD


73/4037

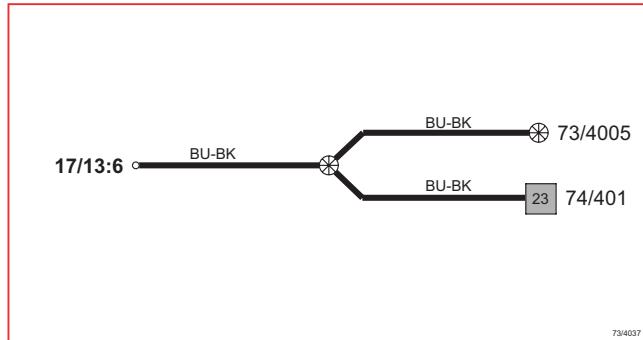


73/5002 RHD

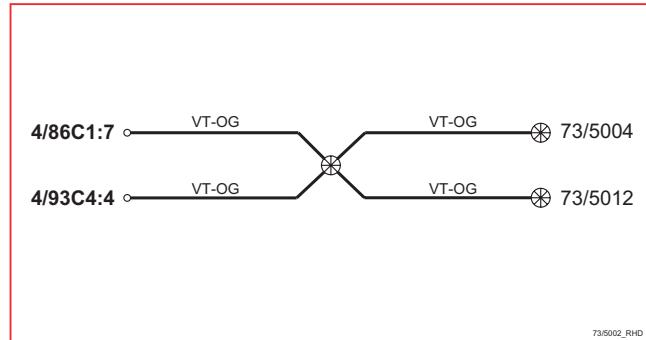


73/4038

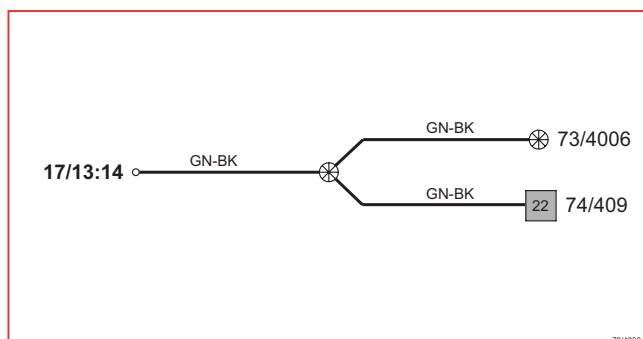


73/5003 LHD

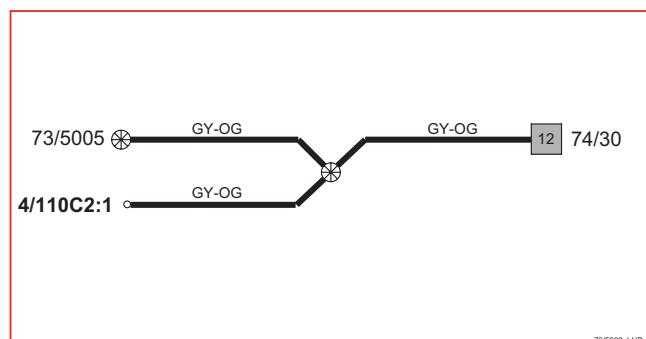


73/5001 LHD

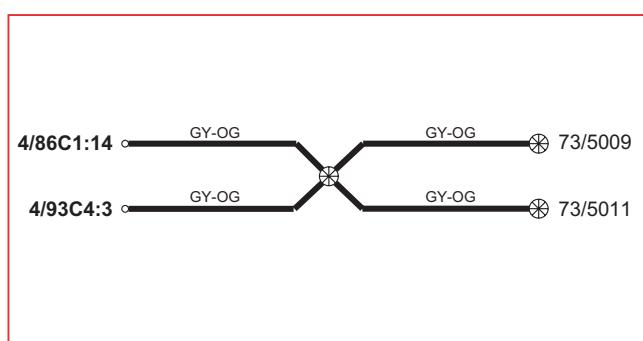


73/5003 RHD

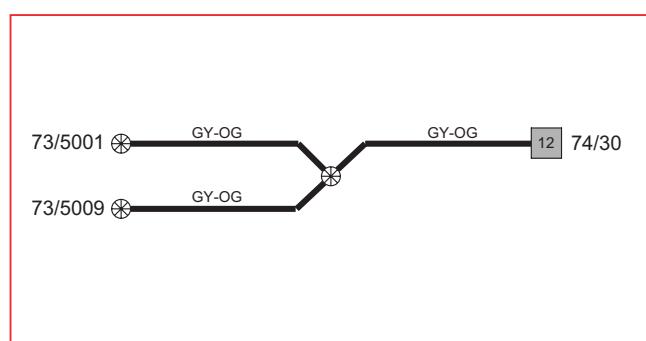


73/5001 RHD

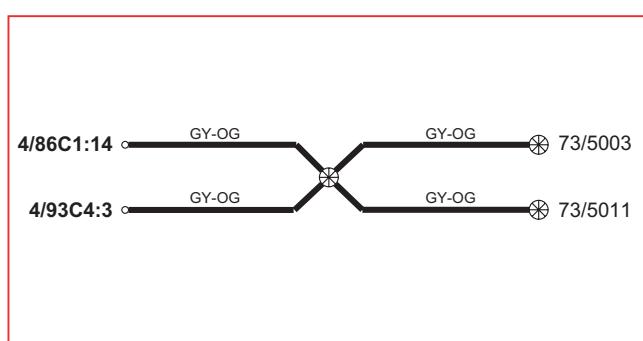


73/5004 LHD

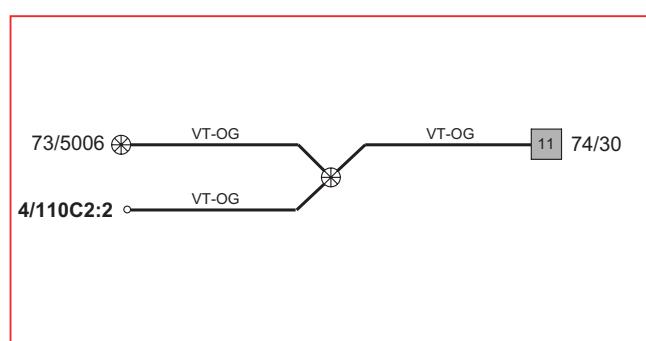

73/5002 LHD

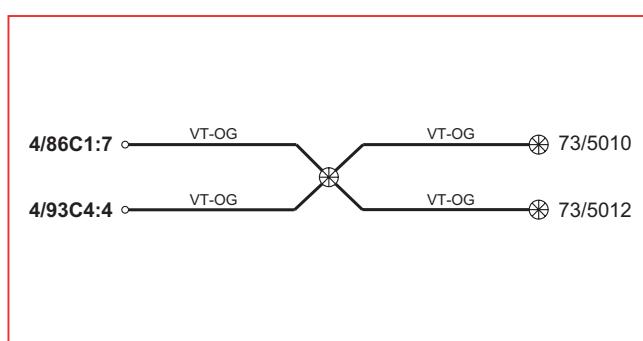


73/5004 RHD

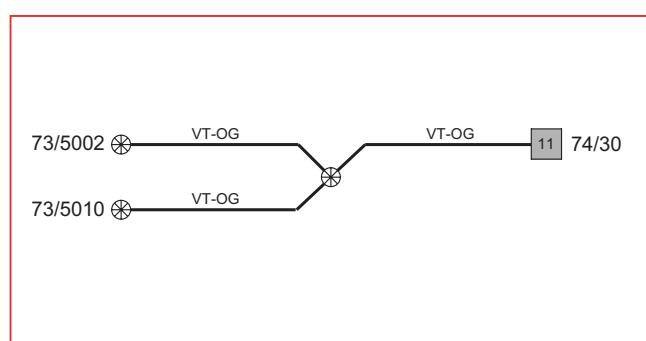


Branching points 73/5005 LHD - 73/5012


73/5005 LHD

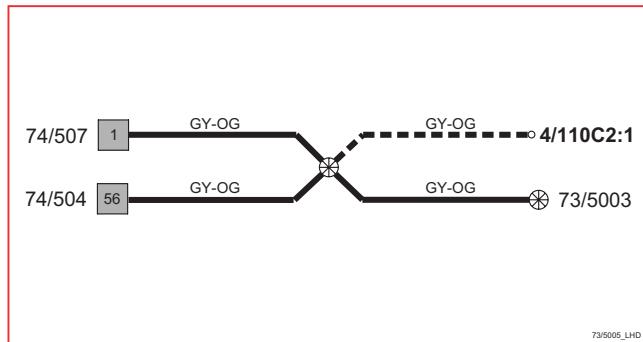


73/5009 RHD

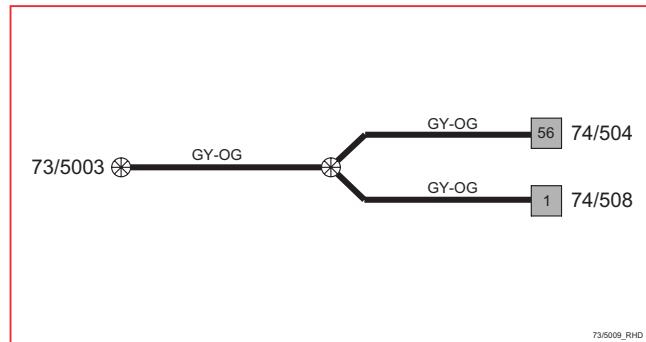


73/5005 RHD

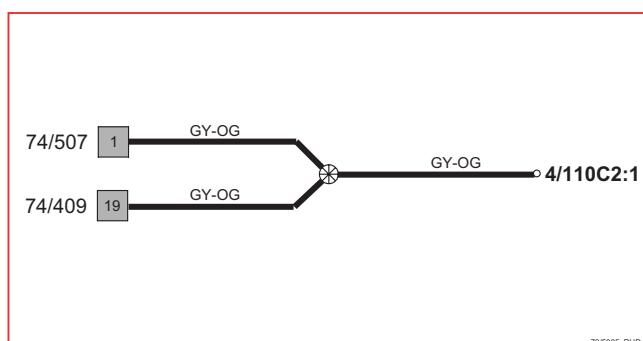


73/5010 LHD

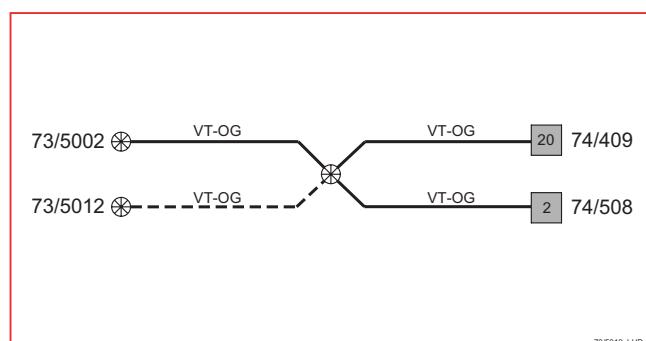


73/5006 LHD

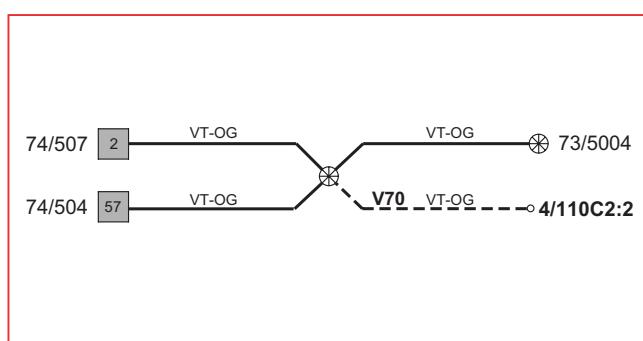


73/5010 RHD

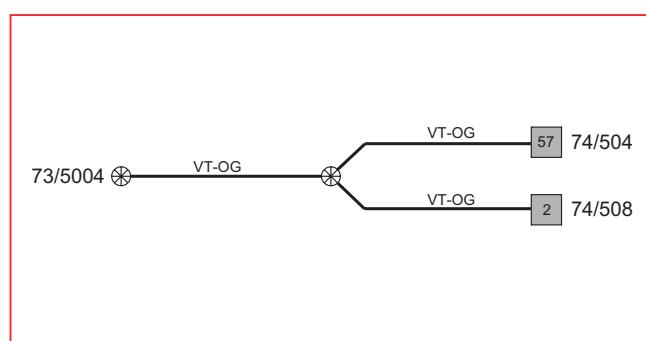


73/5006 RHD

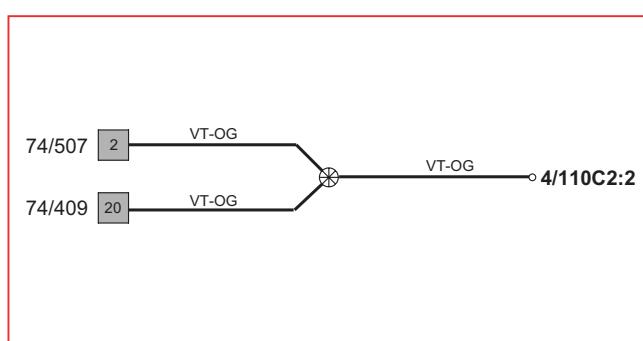


73/5011

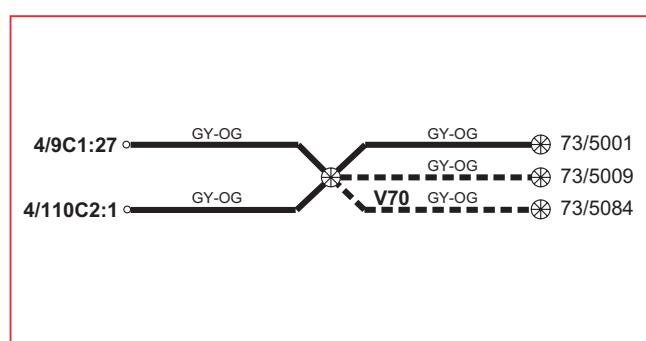

73/5009 LHD

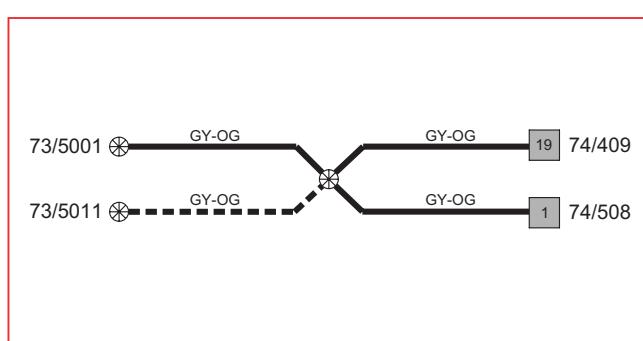


73/5012

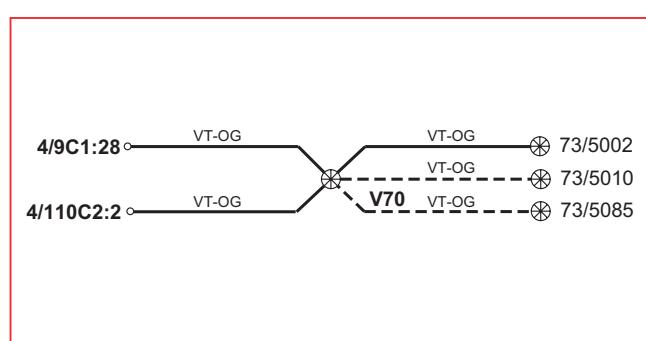


Branching points

73/5015 - 73/5027


73/5015

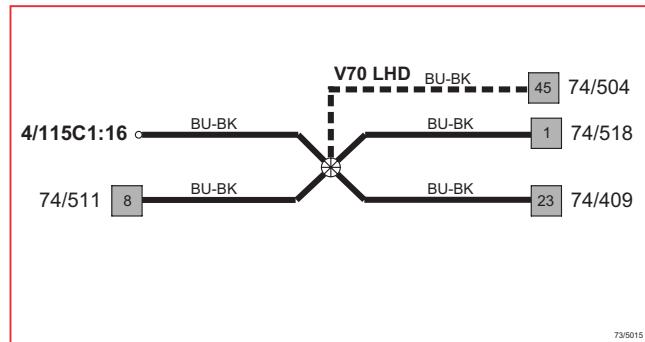


73/5024 LHD

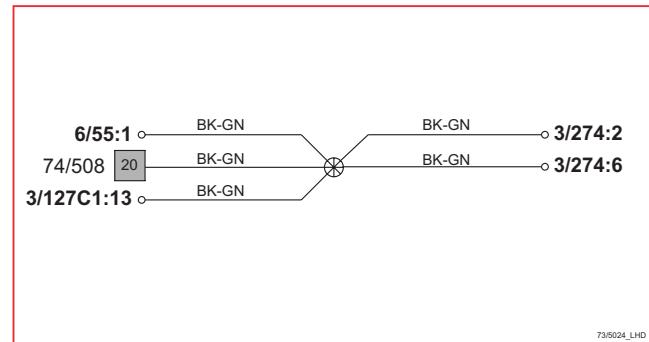


73/5016

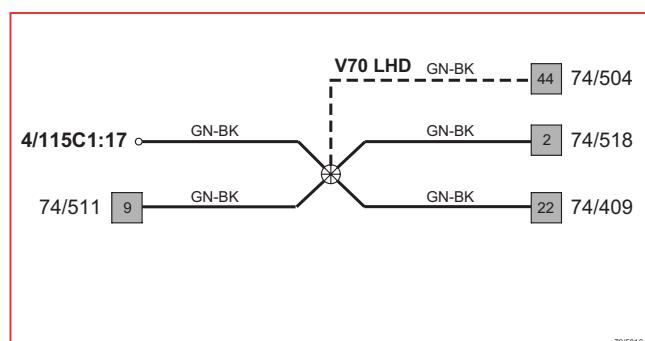


73/5024 RHD

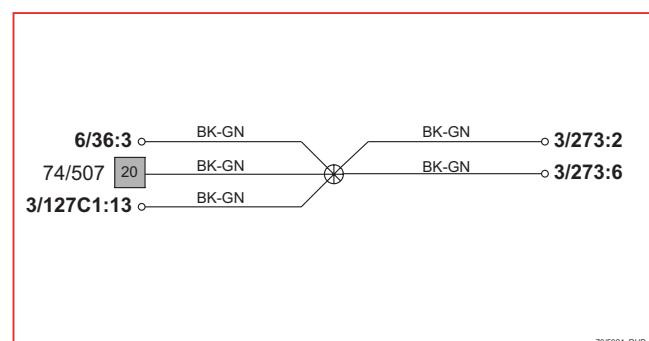


73/5019

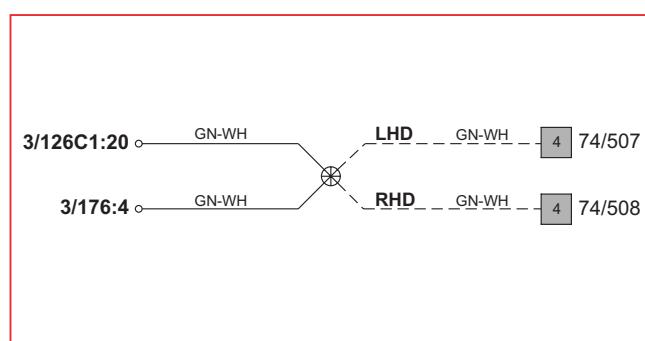


73/5025

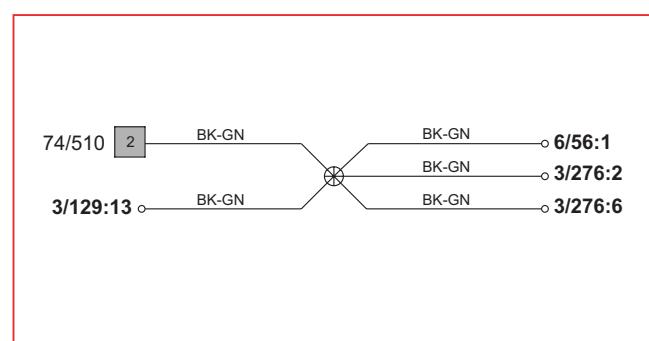


73/5021

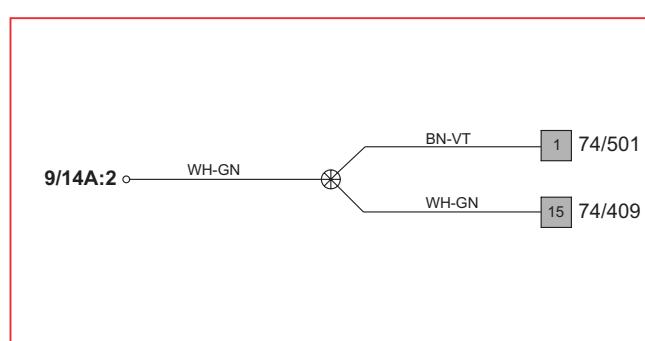


73/5026

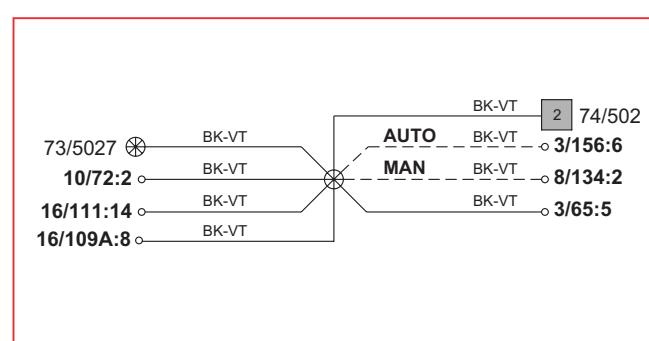

73/5023

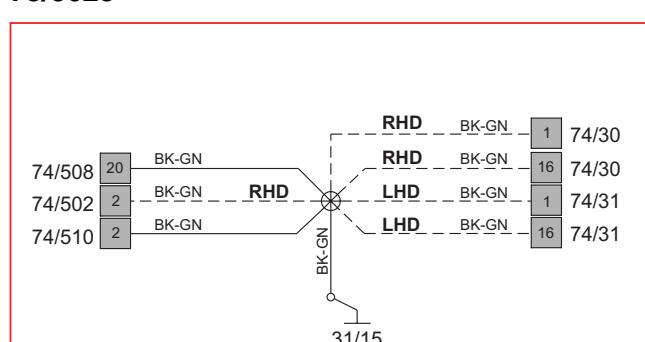


73/5027

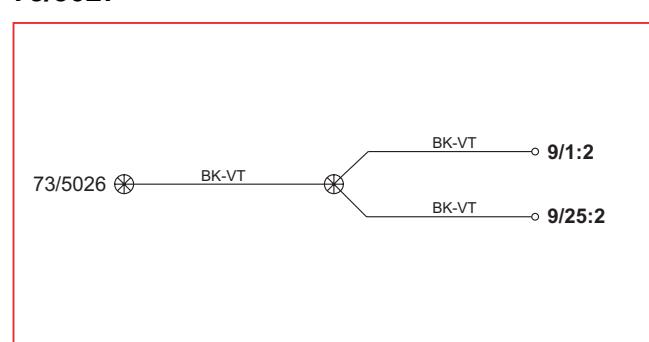


Branching points 73/5029 - 73/5045


73/5029

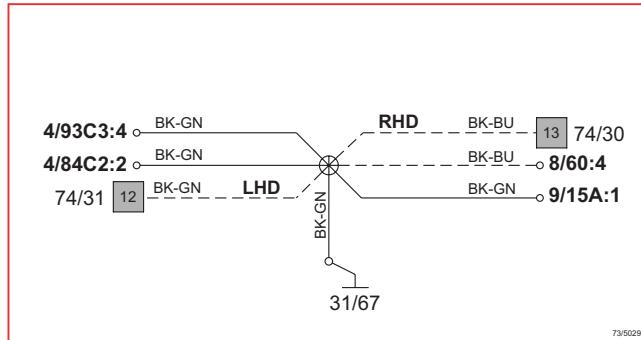


73/5037 LHD

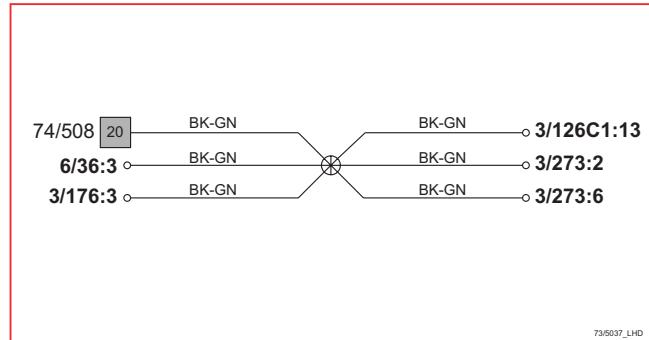


73/5030

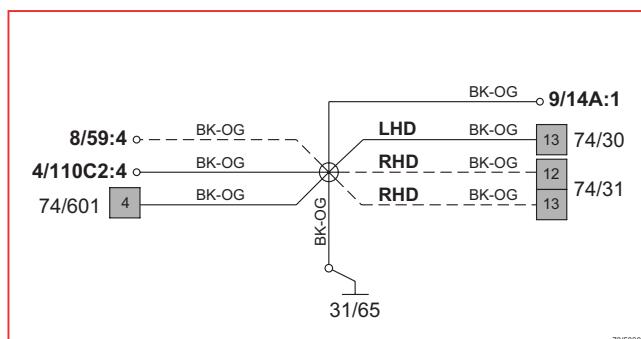


73/5037 RHD

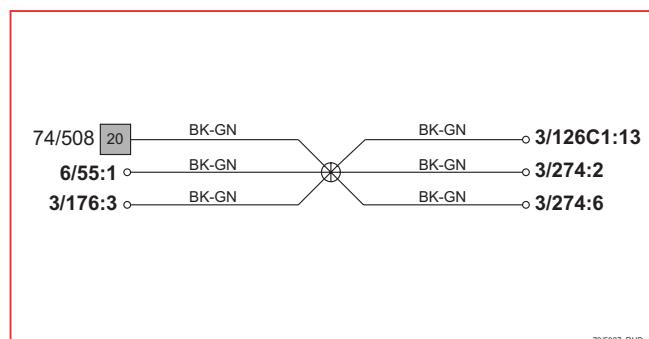


73/5033

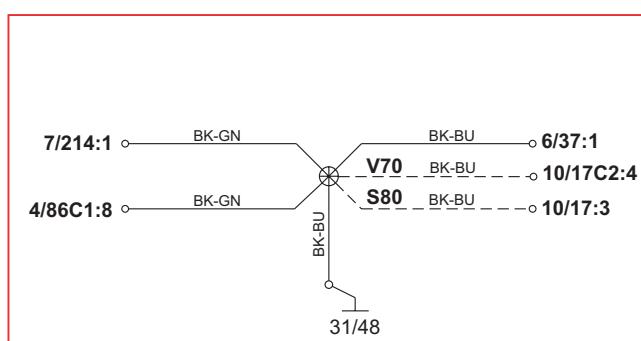


73/5040

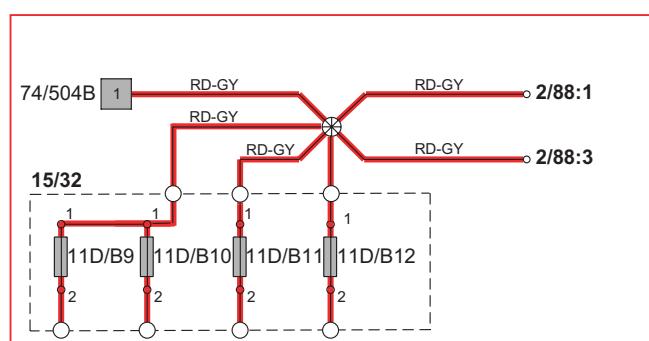


73/5035

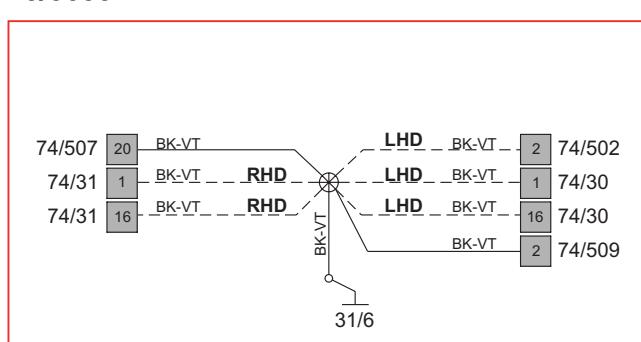


73/5044

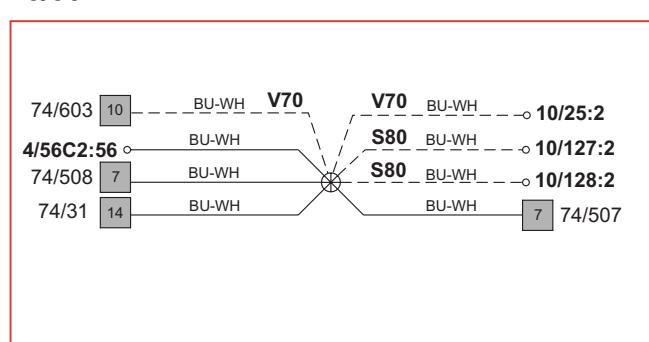

73/5036

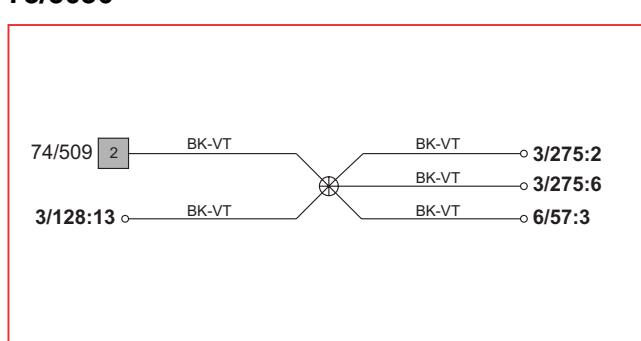


73/5045

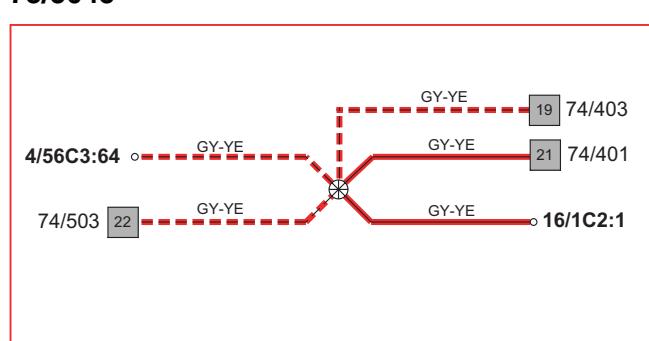


Branching points

73/5050 - 73/5070


73/5050

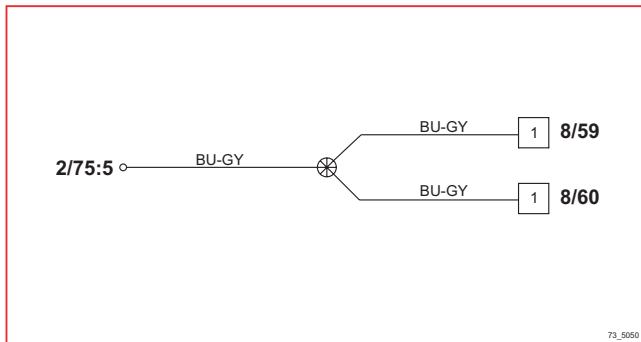


73/5064

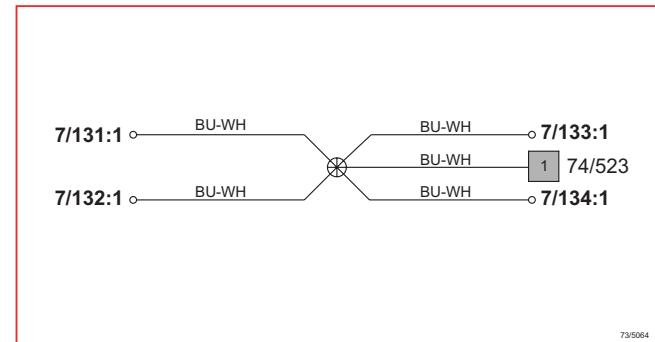


73/5052

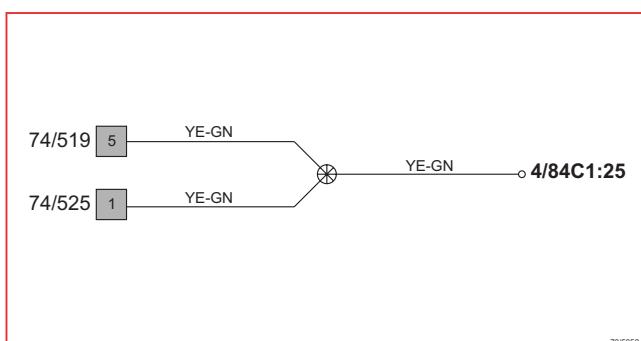


73/5066

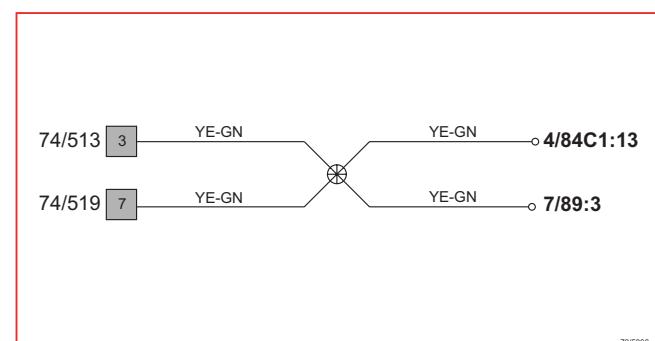


73/5053

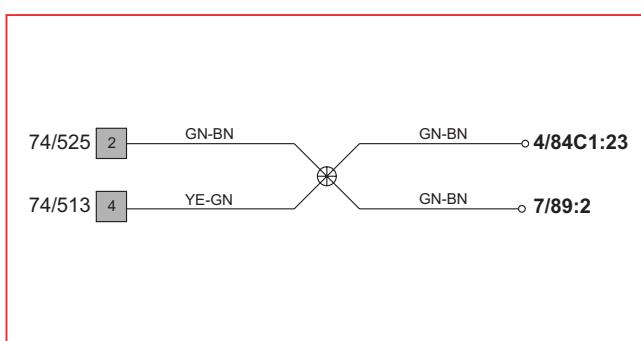


73/5067

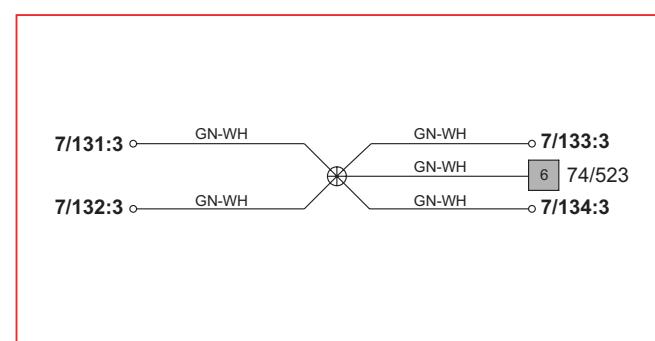


73/5054

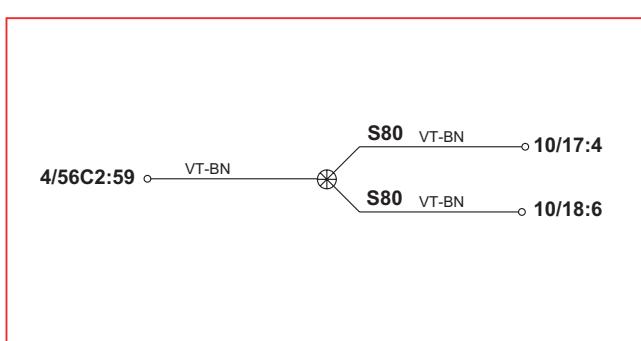


73/5069

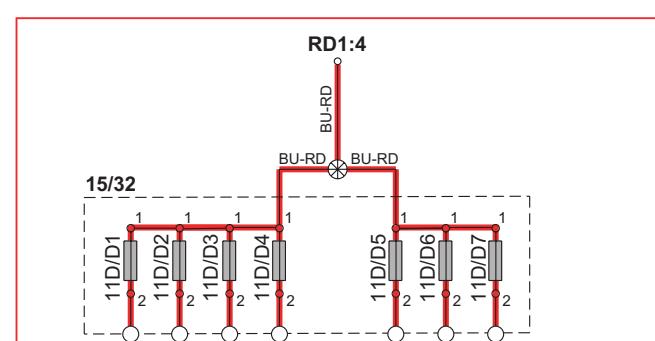

73/5055

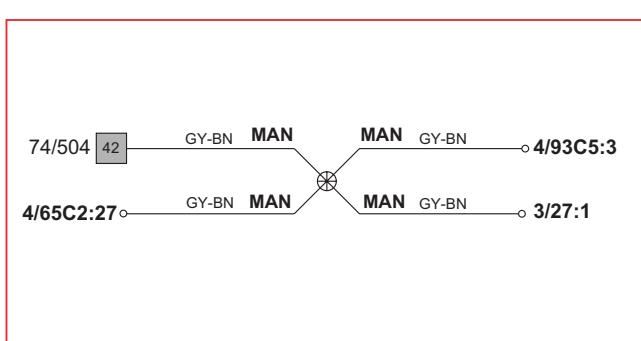


73/5070

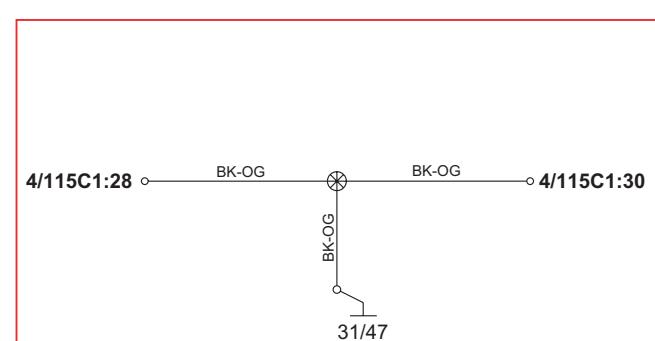


Branching points

73/5071 LHD - 73/5084 V70


73/5071 LHD

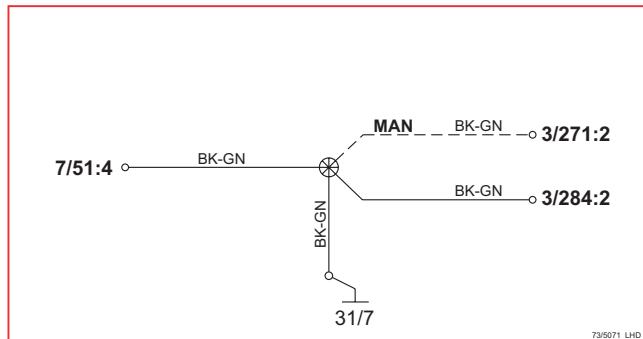


73/5078

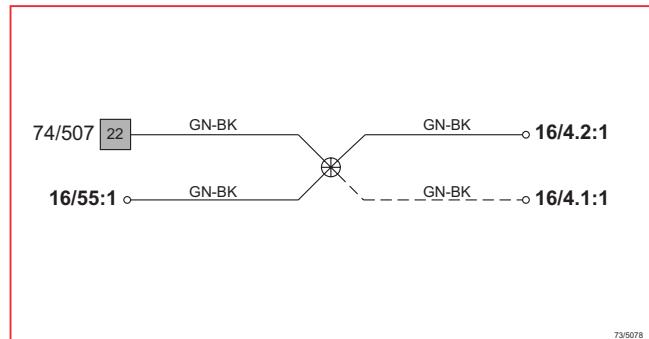


73/5072 RHD

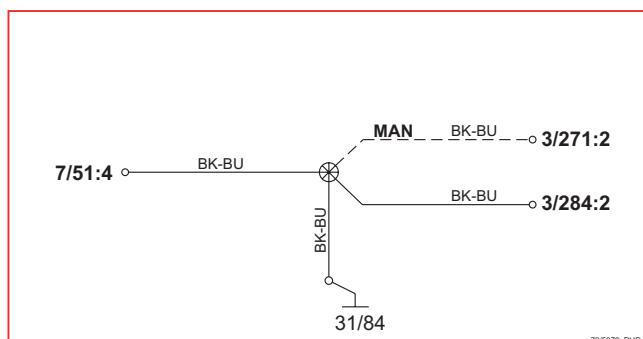


73/5079

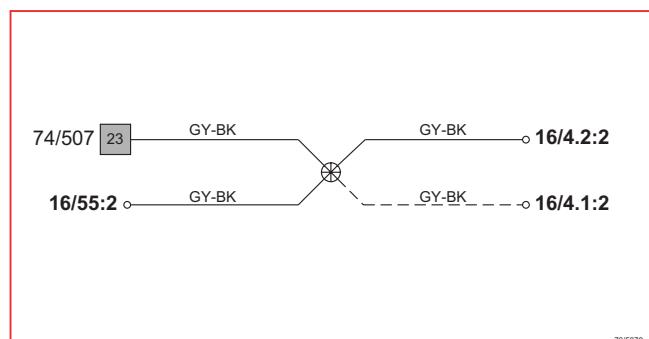


73/5075

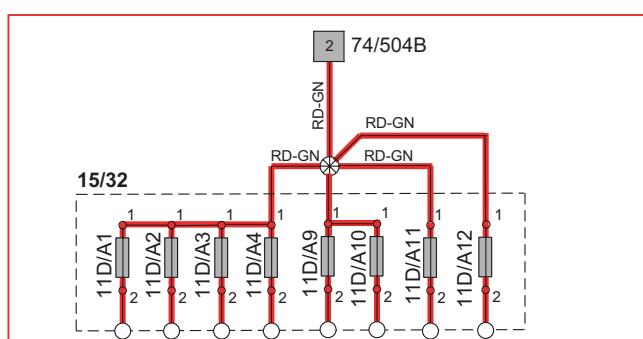


73/5080

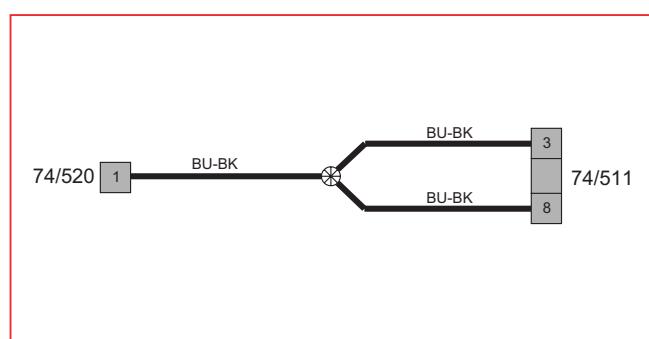


73/5076

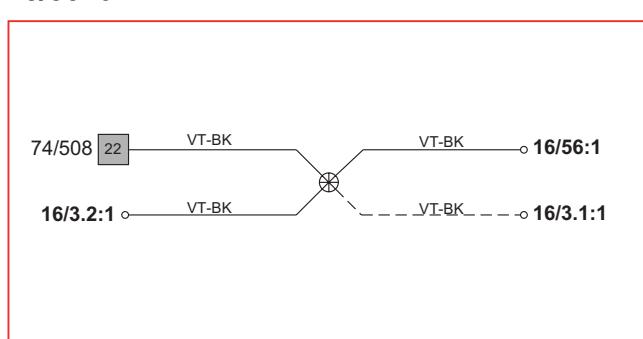


73/5081

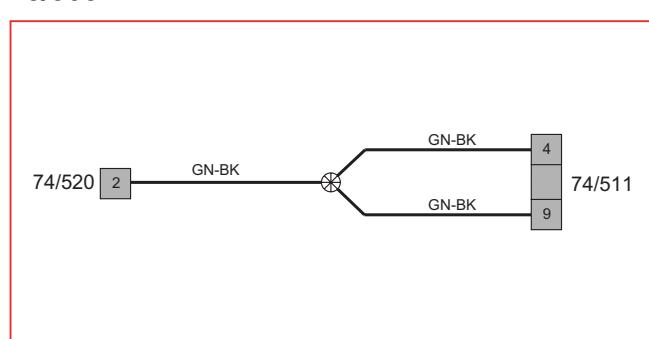

73/5077

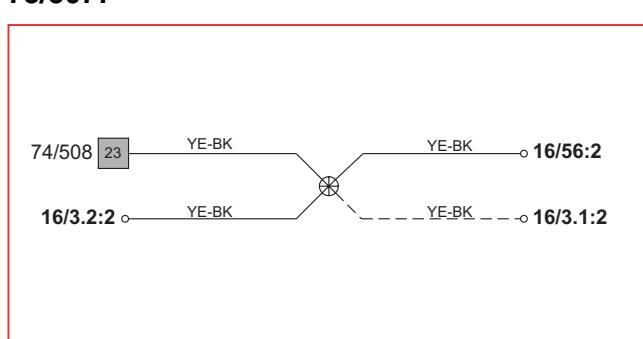


73/5084 V70

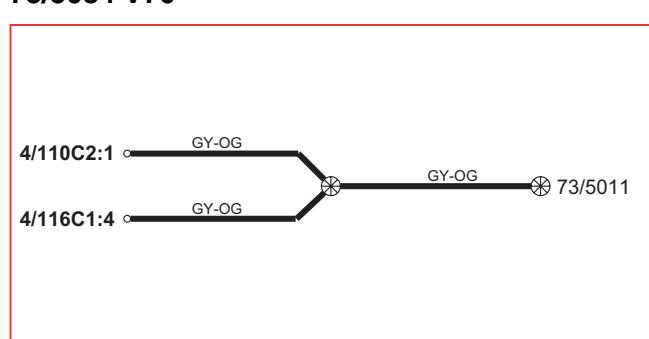


Branching points

73/5085 V70 - 73/6003 V70


73/5085 V70

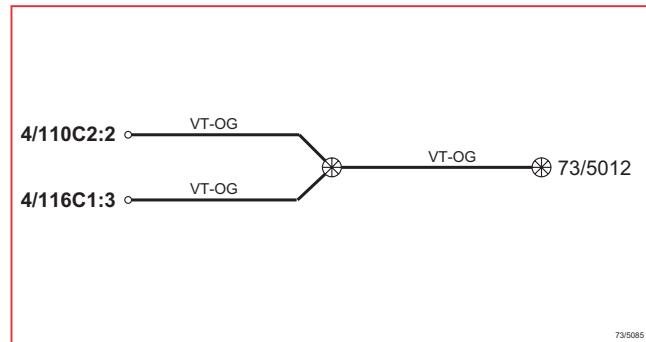


73/5106

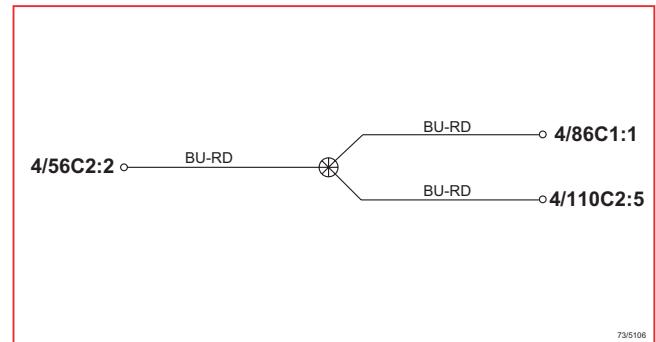


73/5086

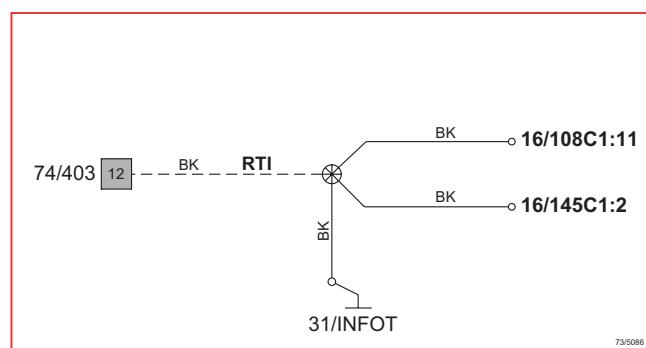


73/5107

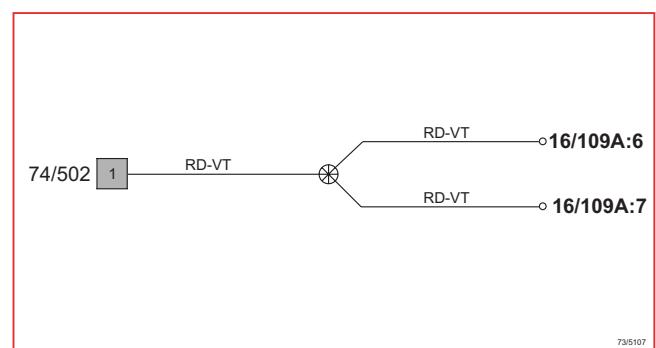


73/5088

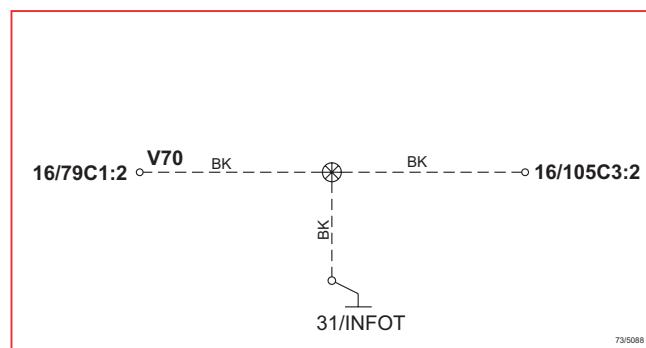


73/6001 V70

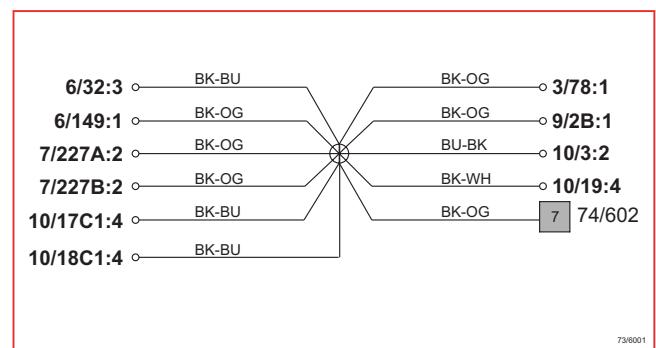


73/5089 V70

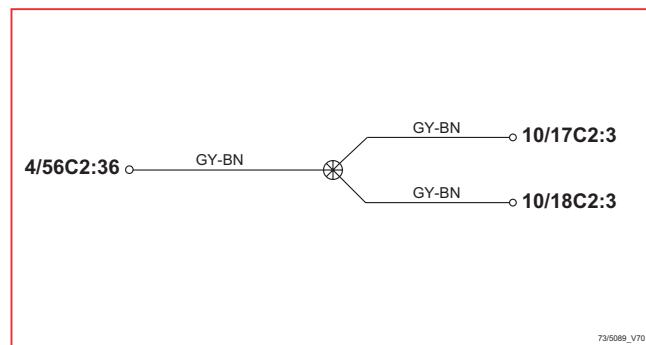


73/6002 V70

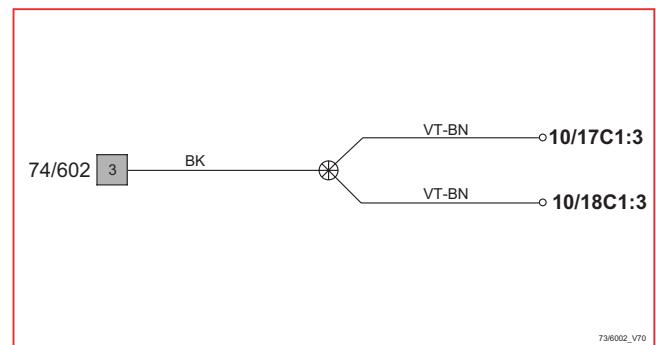

73/5105

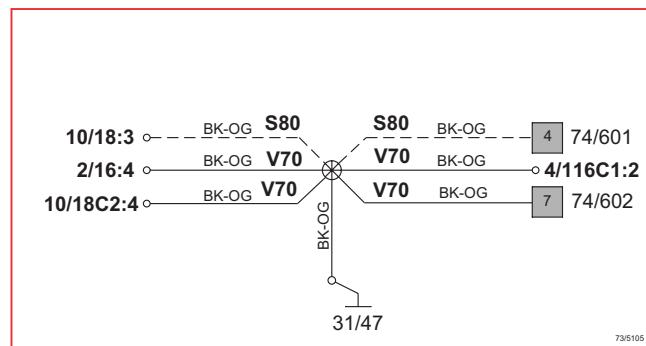


73/6003 V70

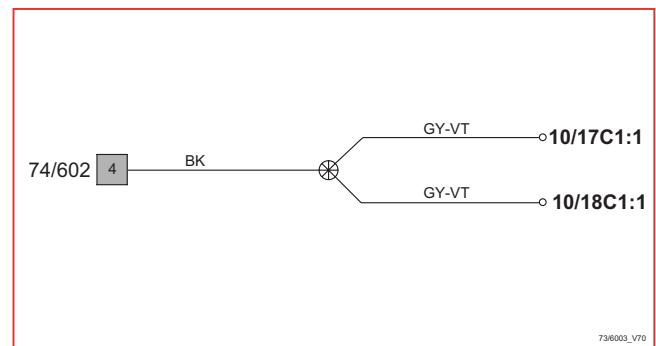


Branching points

73/6004 V70


73/6004 V70

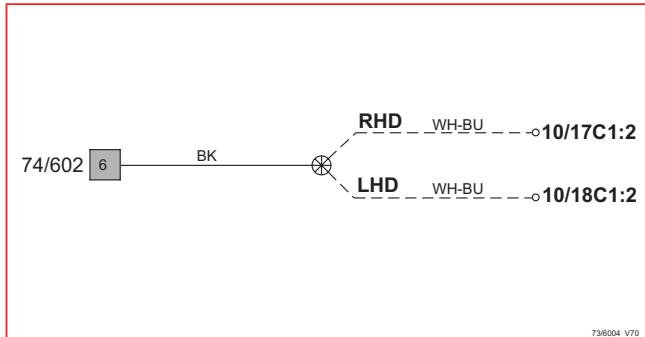

Cable harness routing in vehicle Engine harness, 5 cyl.

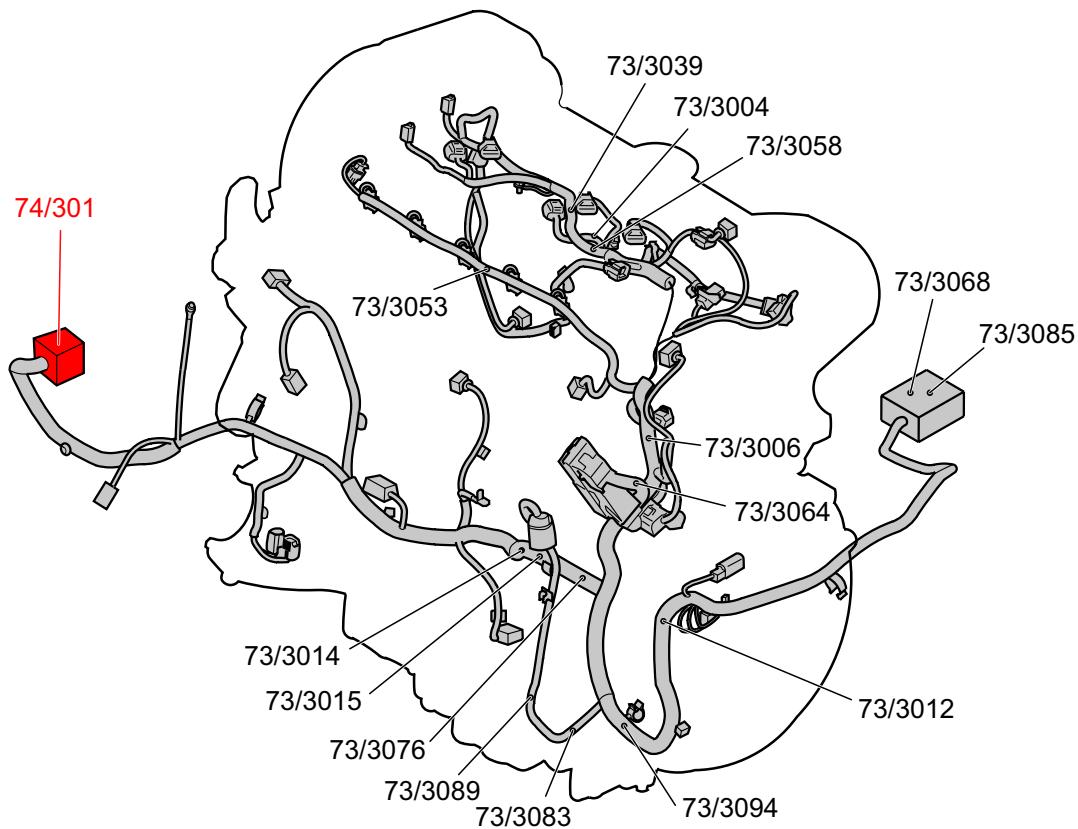


Cable harness routing in vehicle Engine harness, 6 cyl.

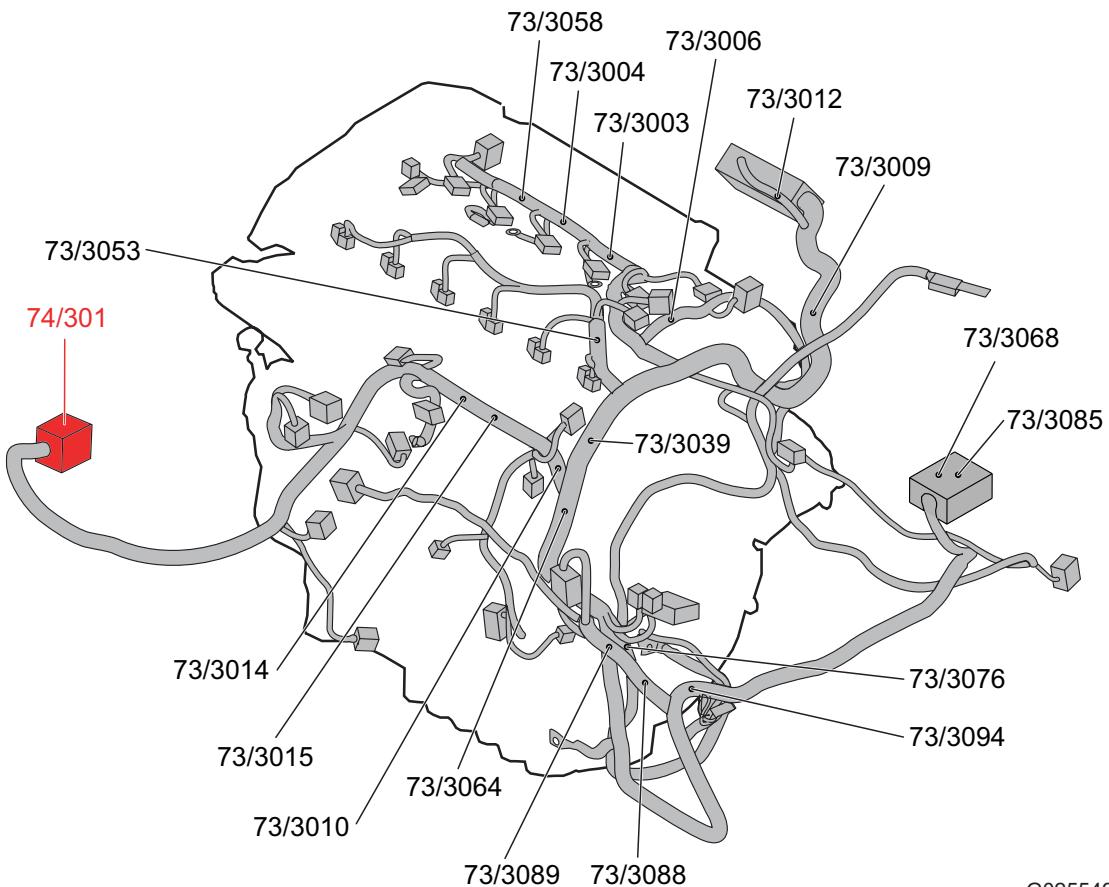


G025549

Cable harness routing in vehicle Engine harness, 6 cyl. Turbo

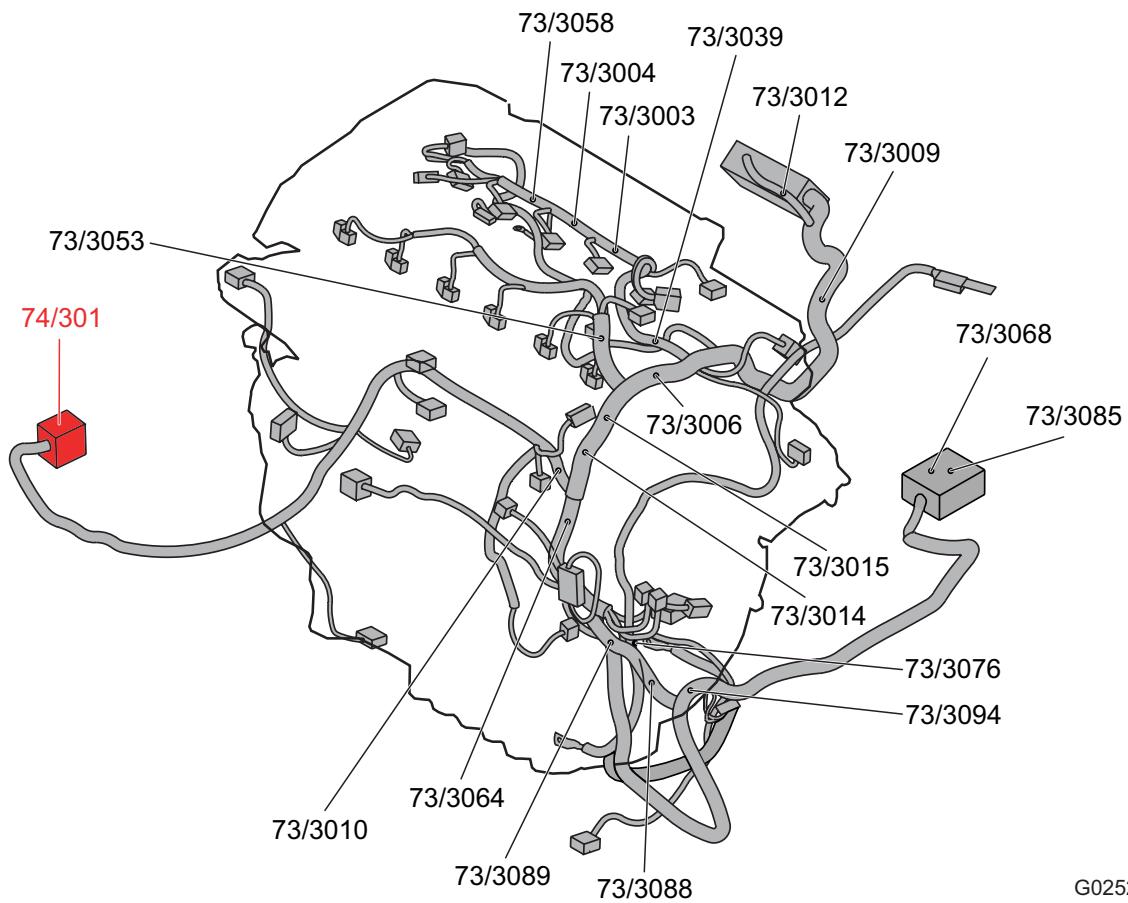


Cable harness routing in vehicle Engine harness, 8 cyl.

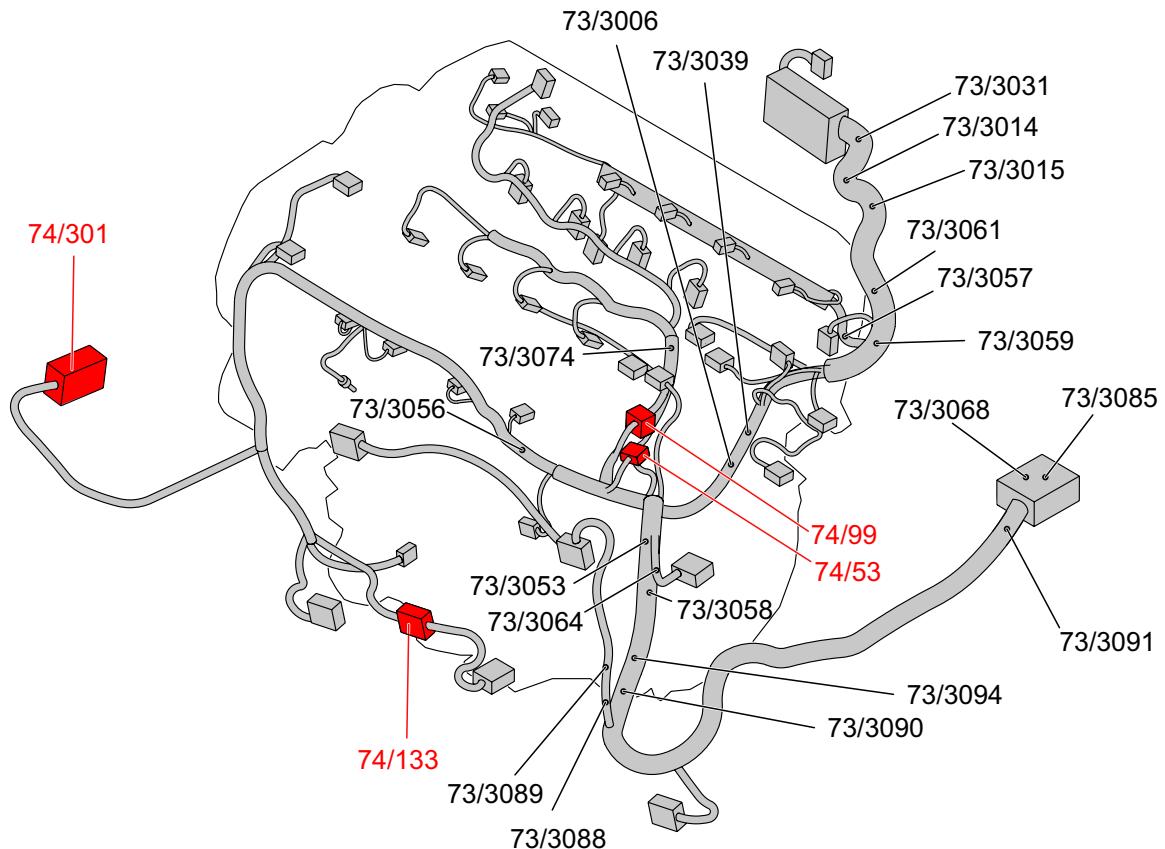


Cable harness routing in vehicle

Engine harness, Diesel

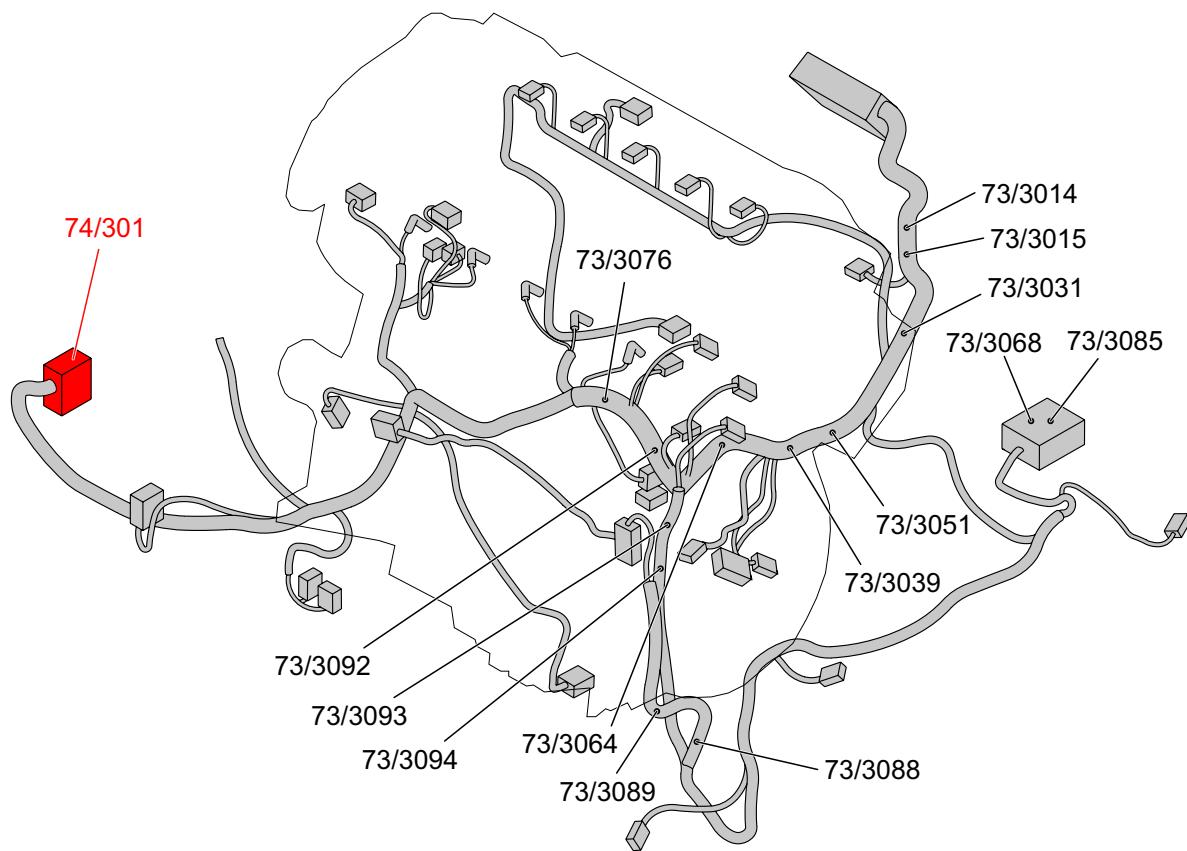


Cable harness routing in vehicle

Harness engine compartment

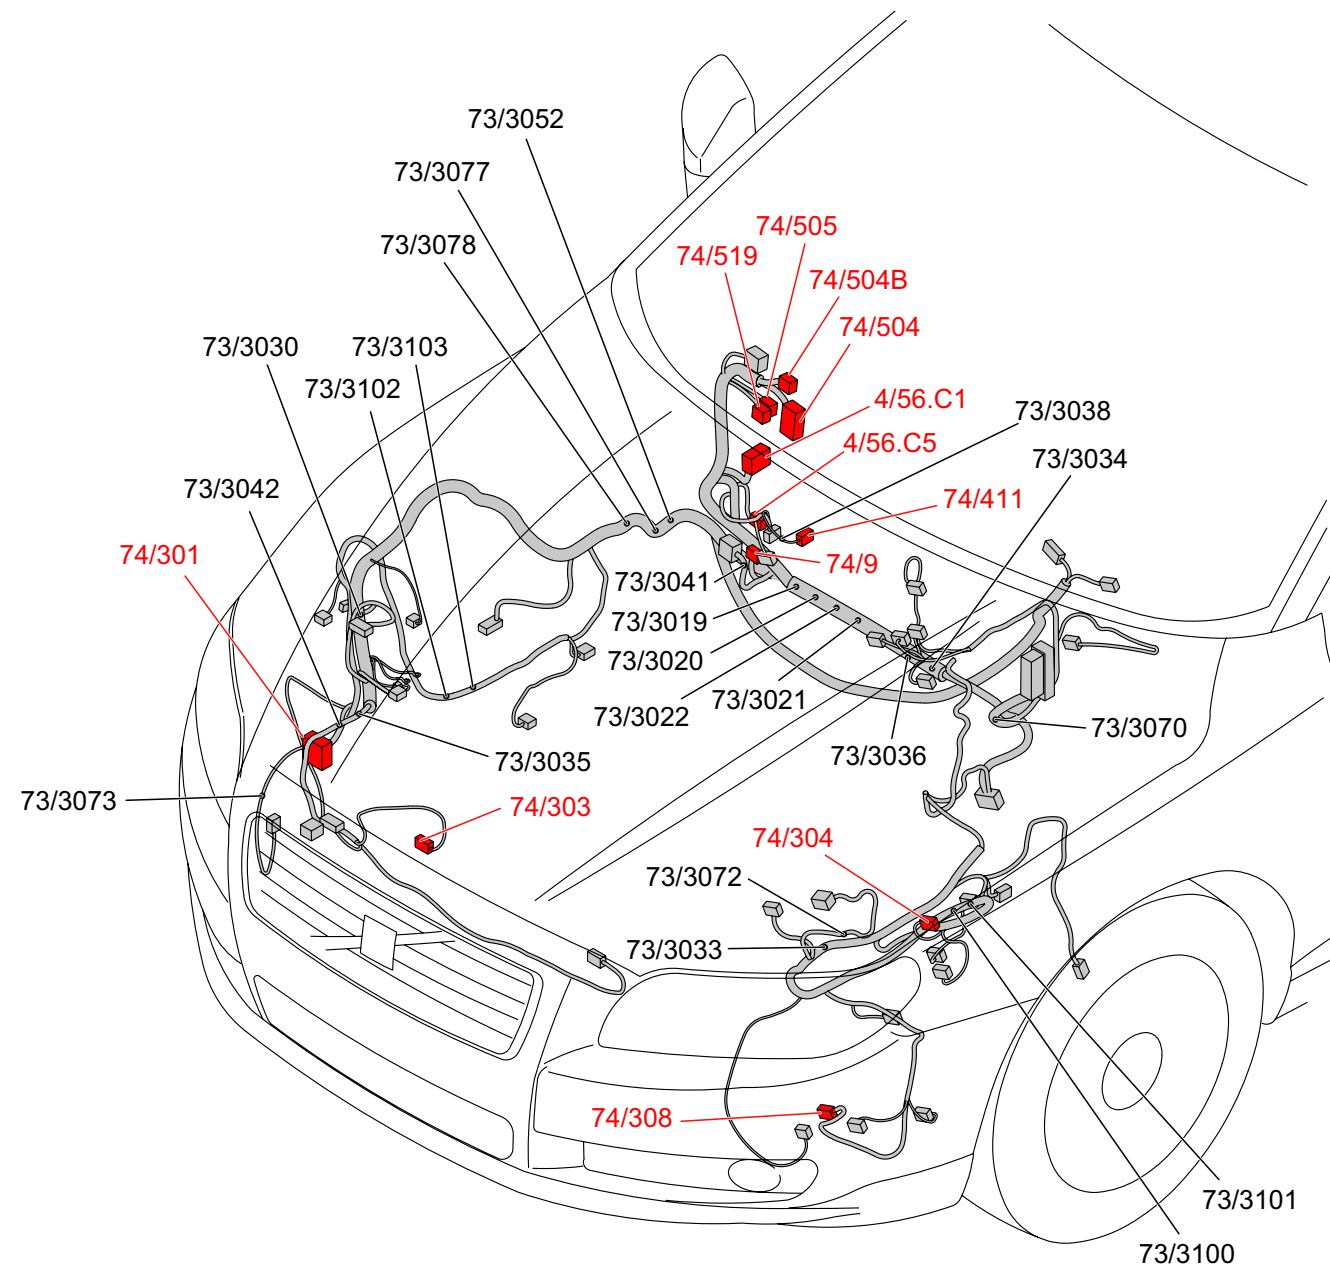


Cable harness routing in vehicle

Dashboard harness, LHD

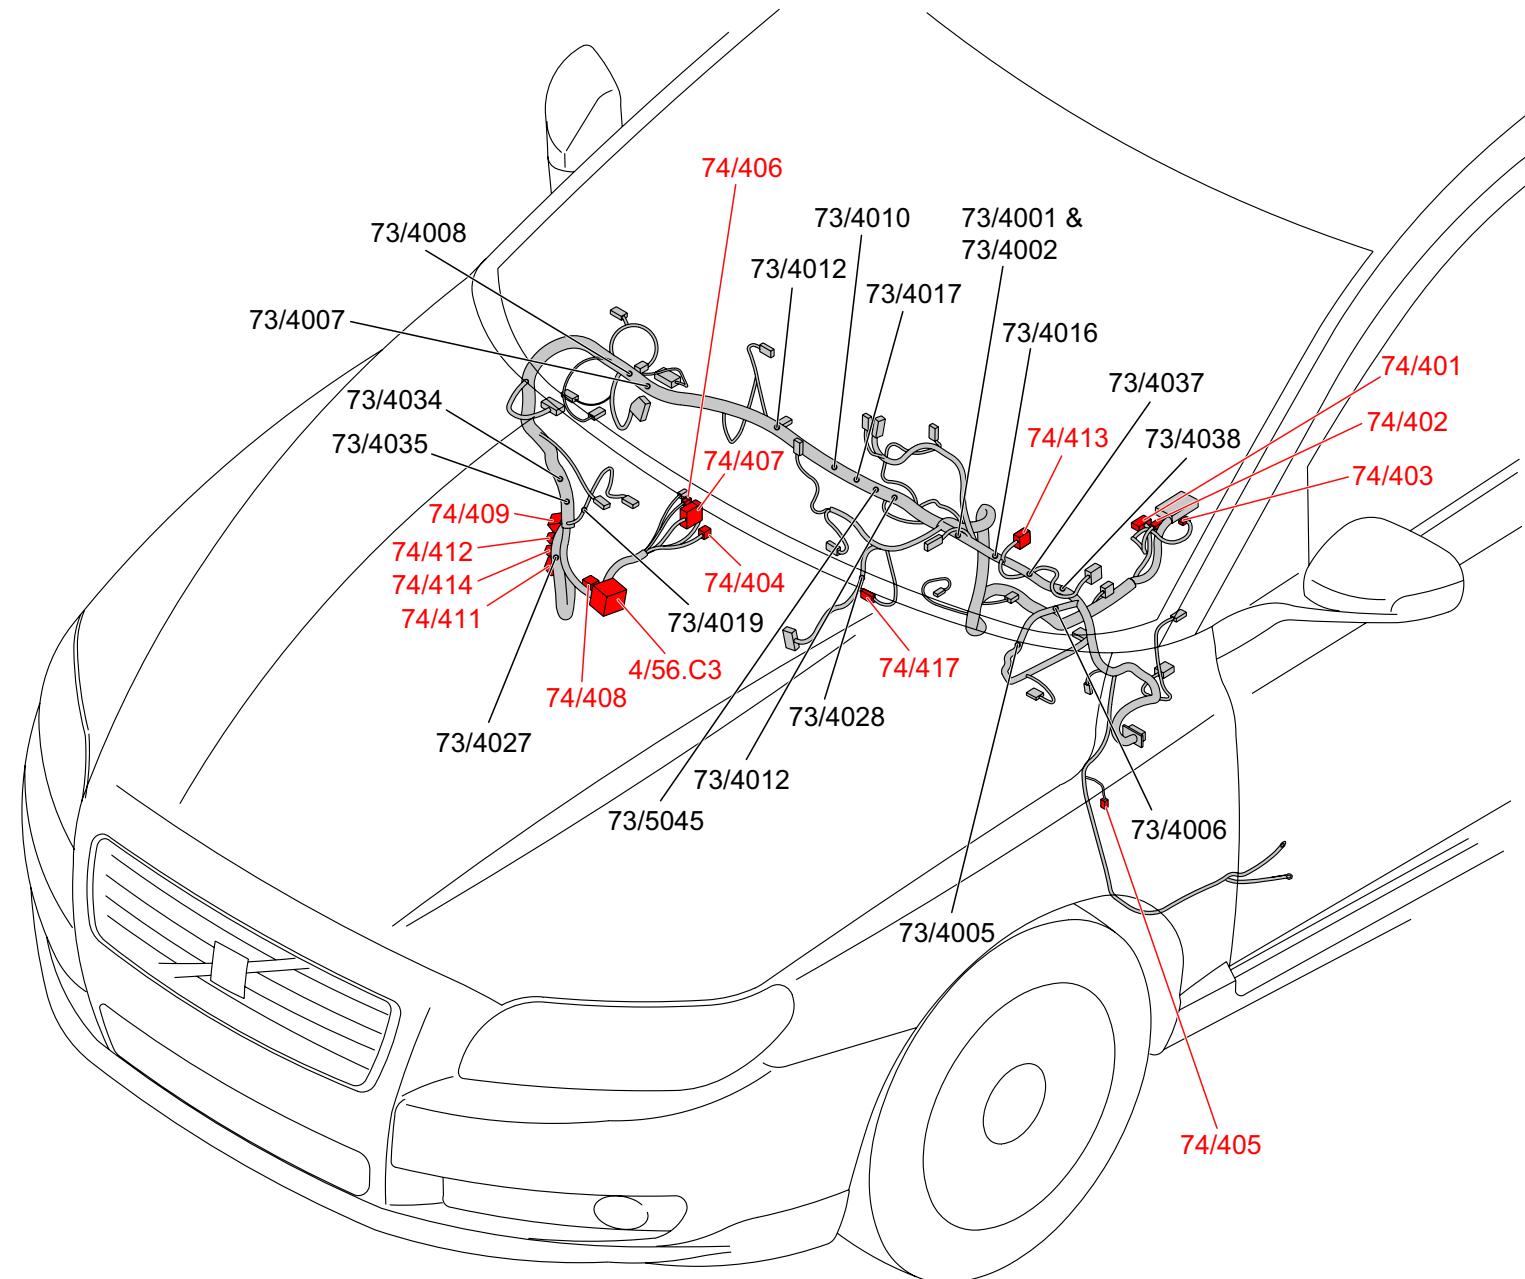


Cable harness routing in vehicle

Dashboard harness, RHD

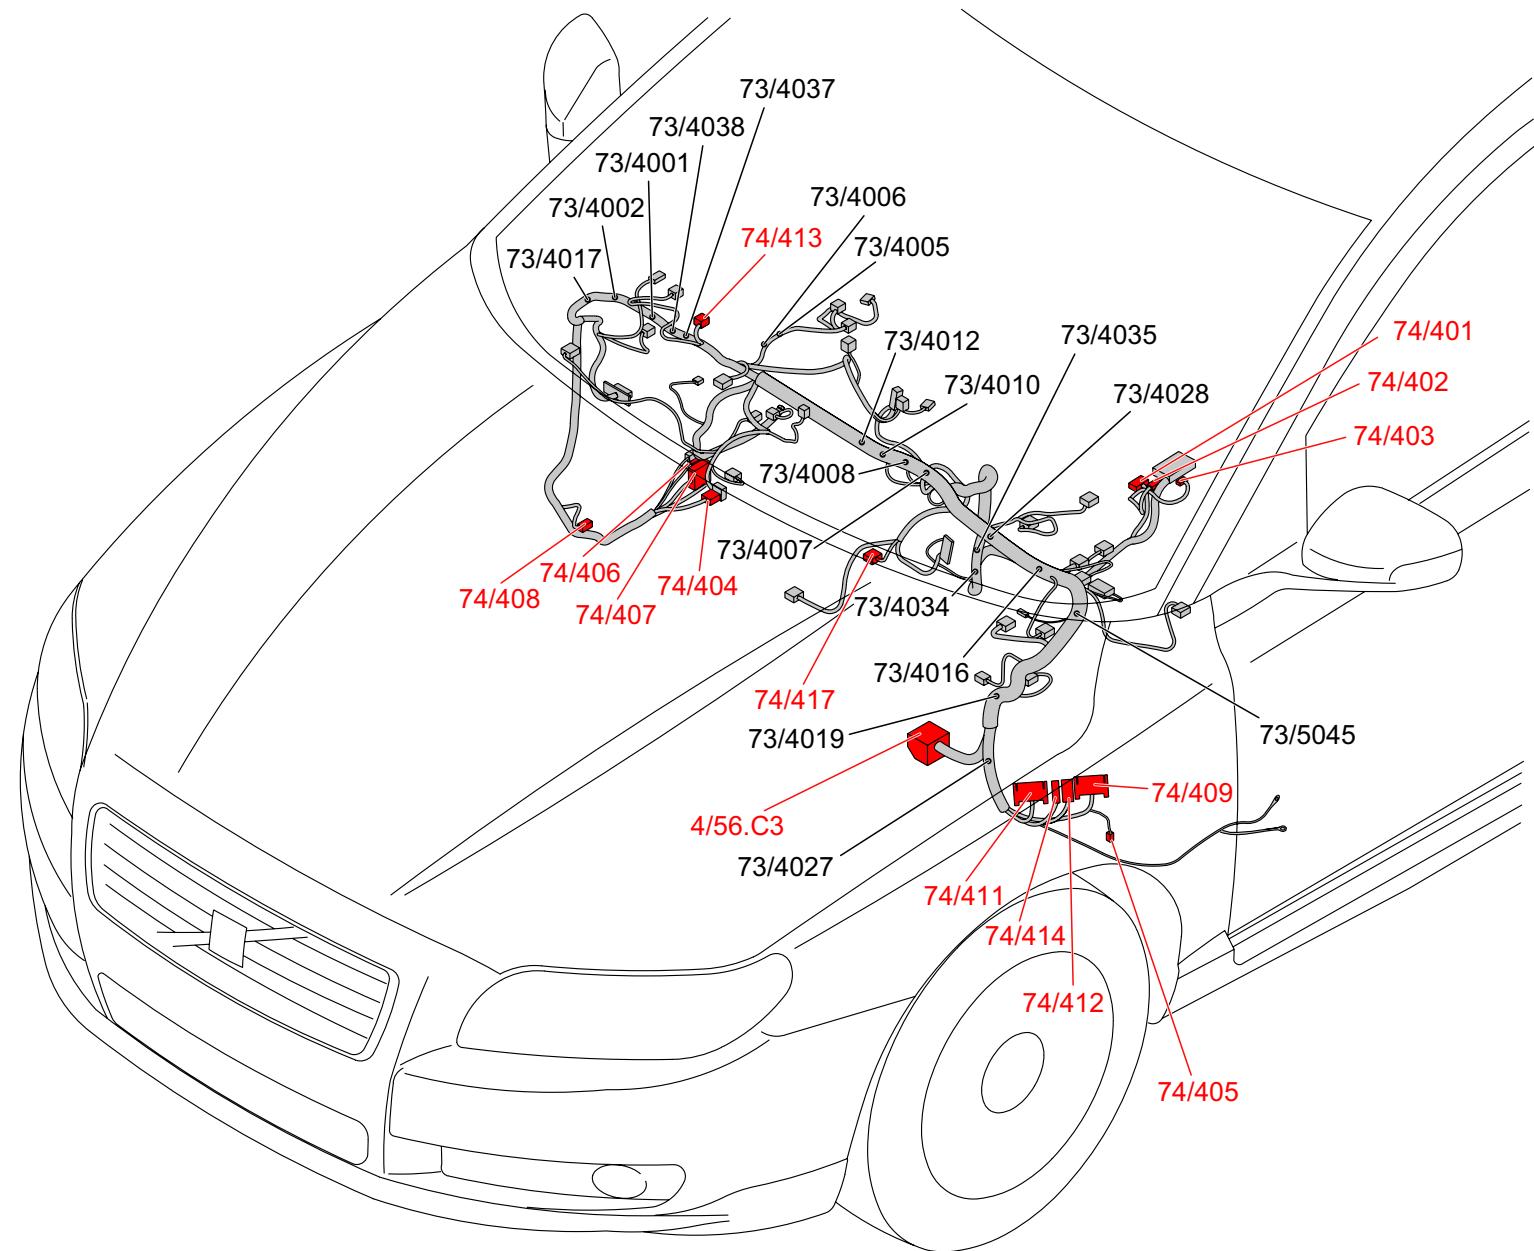


Cable harness routing in vehicle

Harness Floor, LHD S80

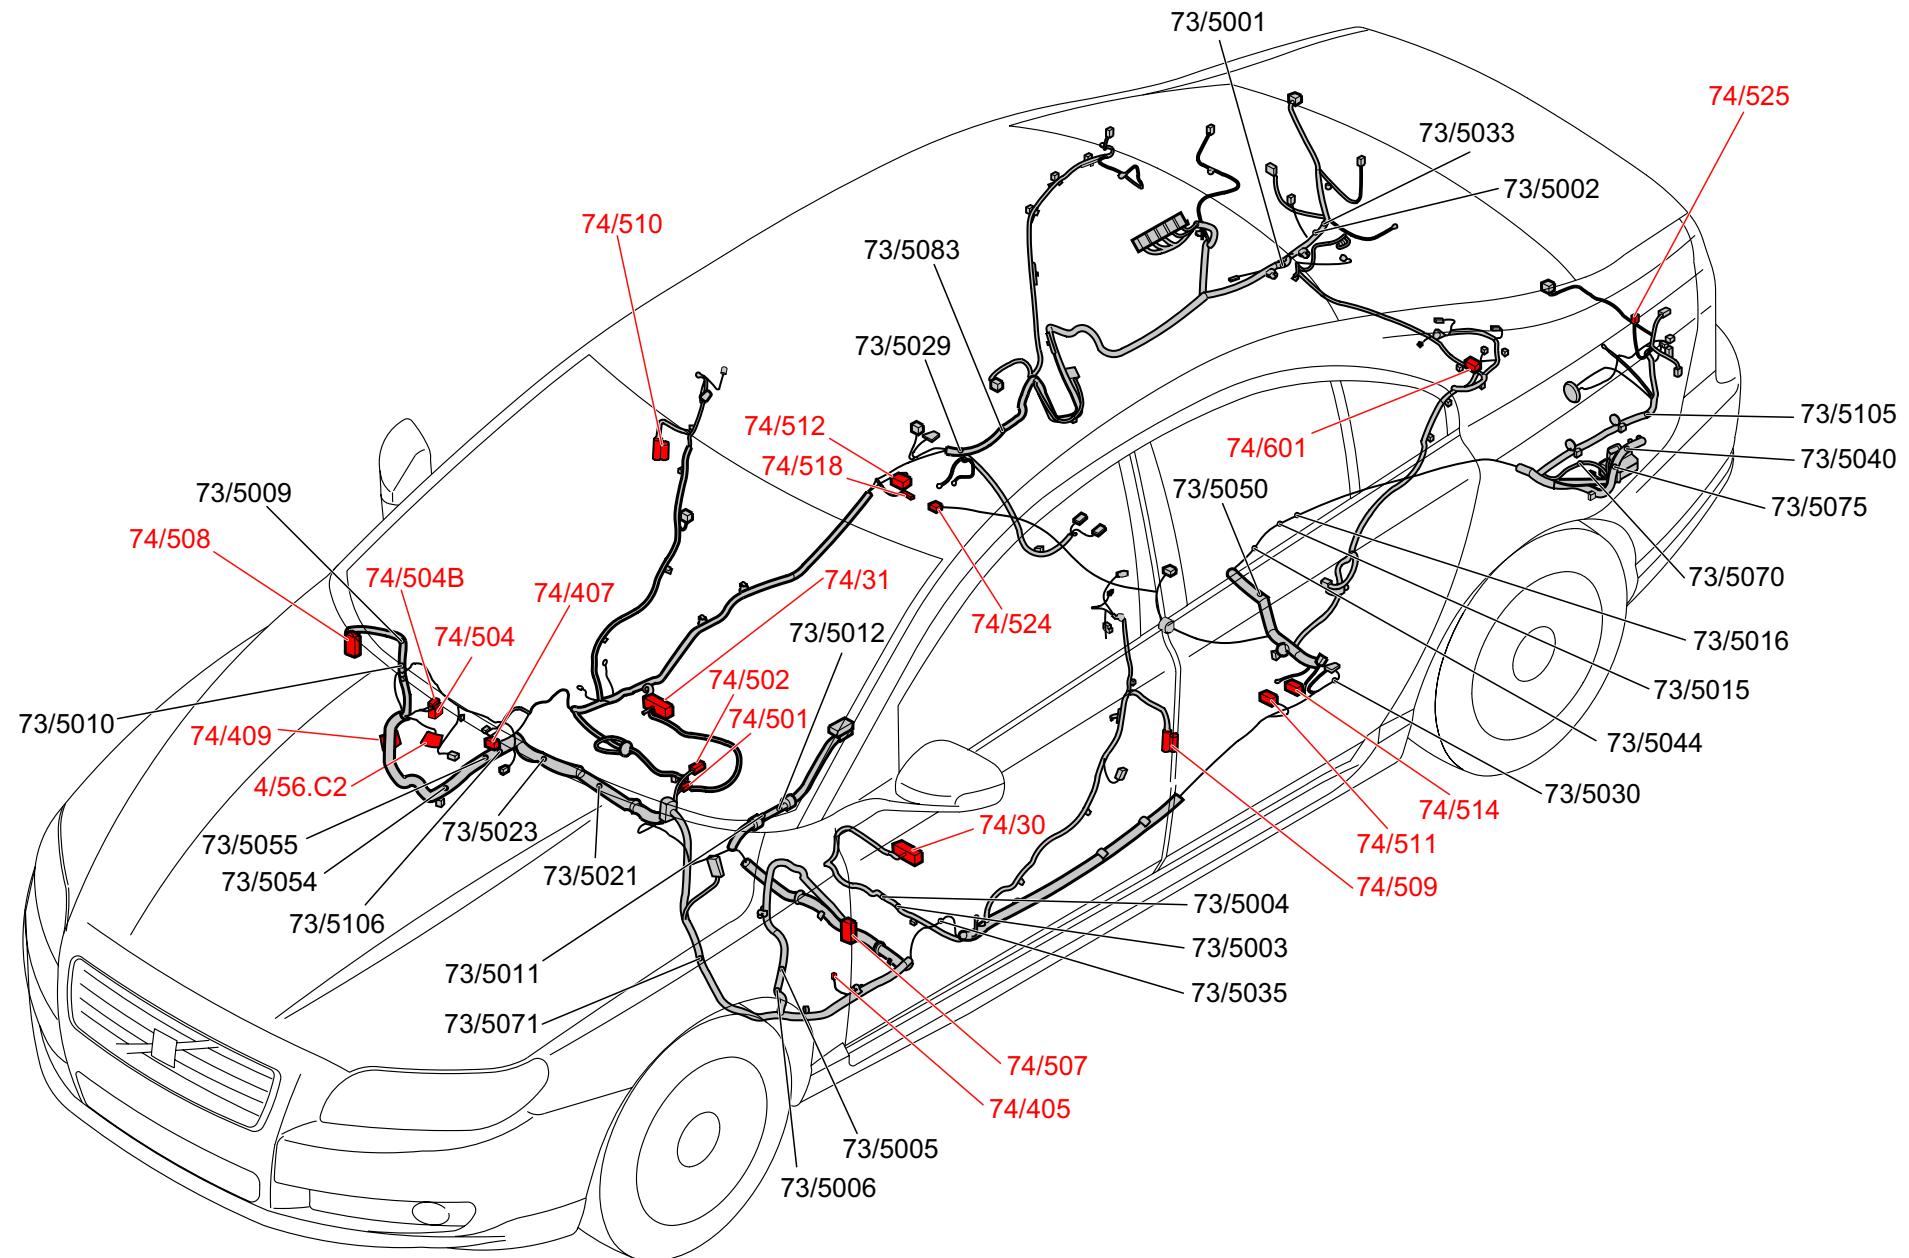


Cable harness routing in vehicle

Harness Floor, RHD S80

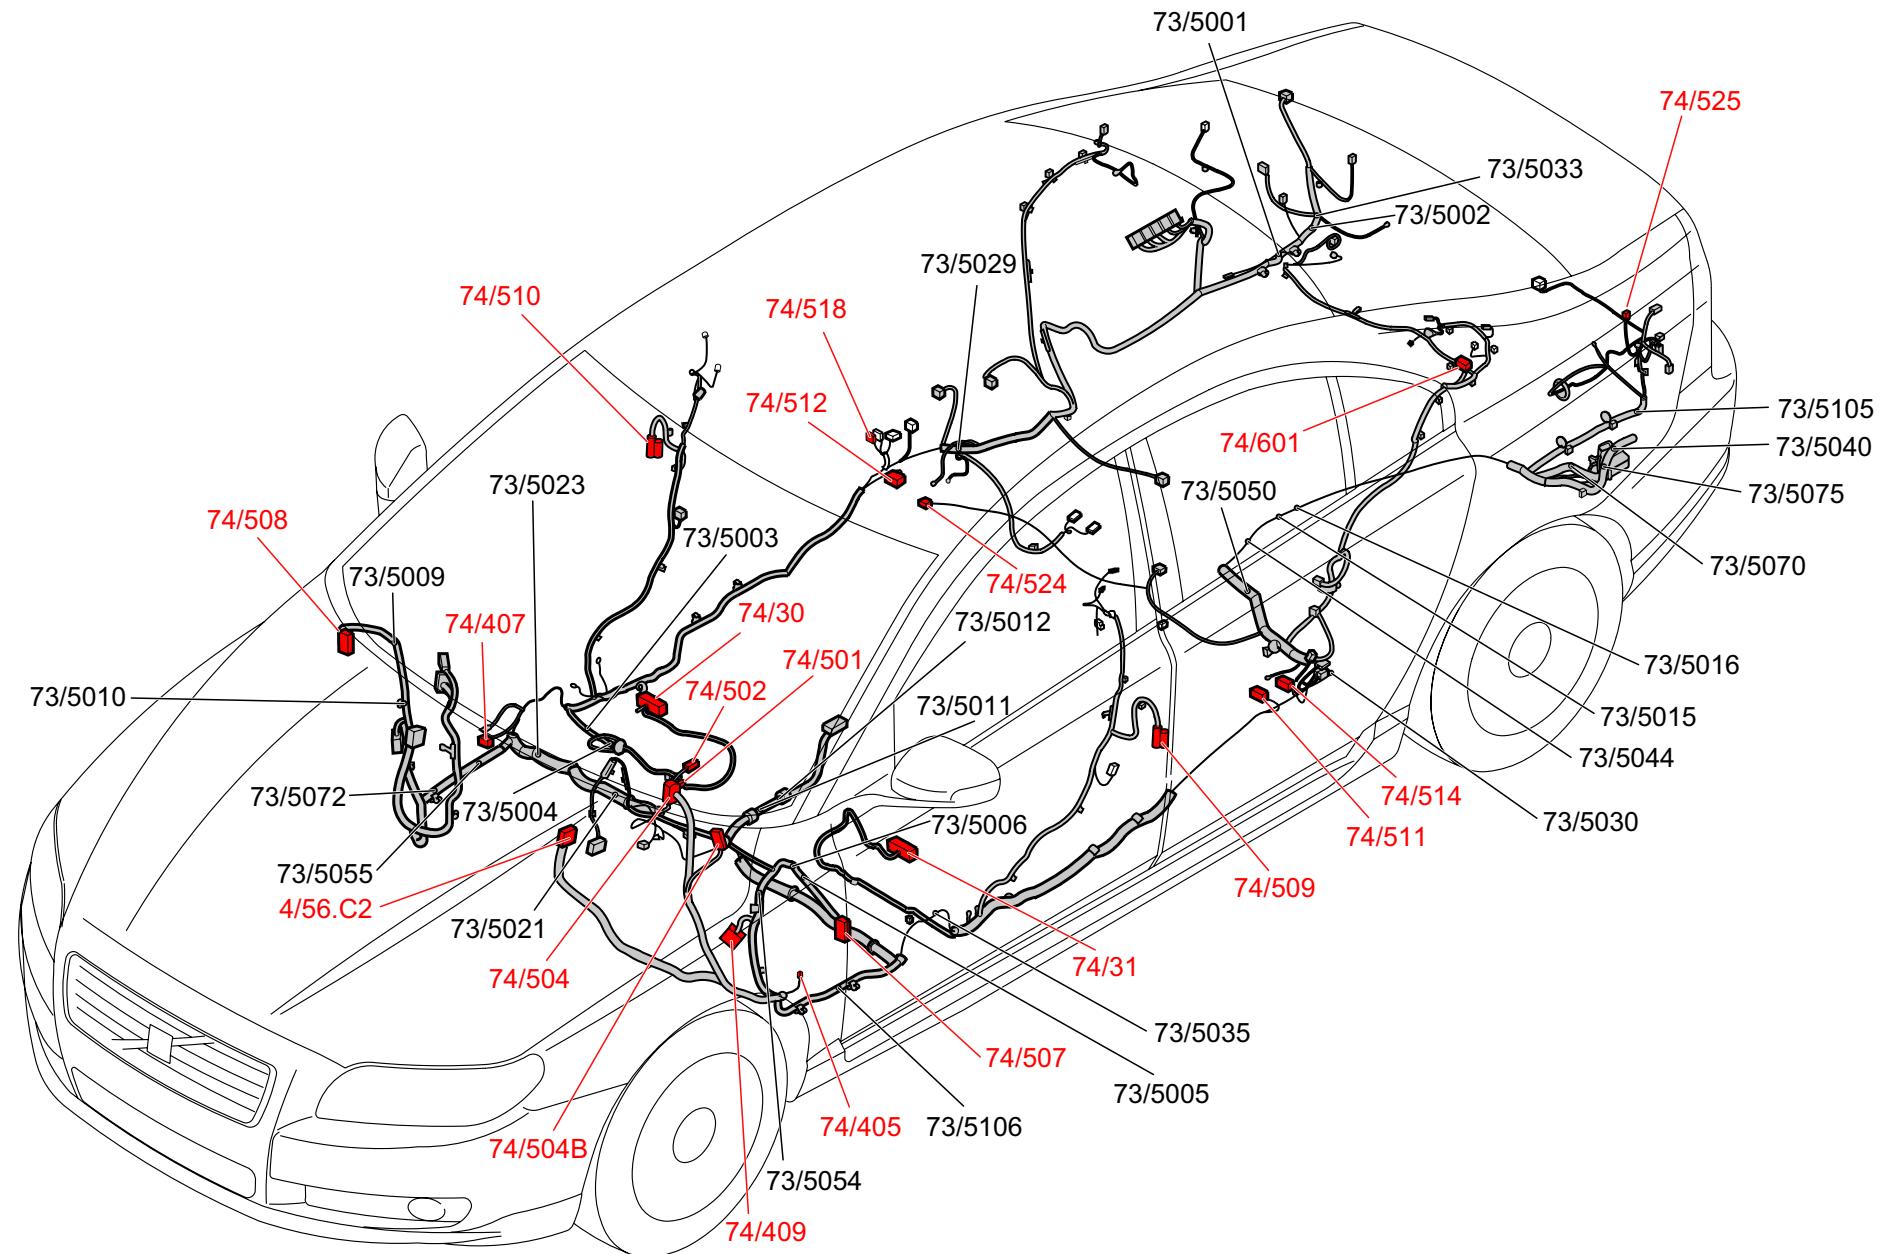

Cable harness routing in vehicle


Harness floor, LHD V70

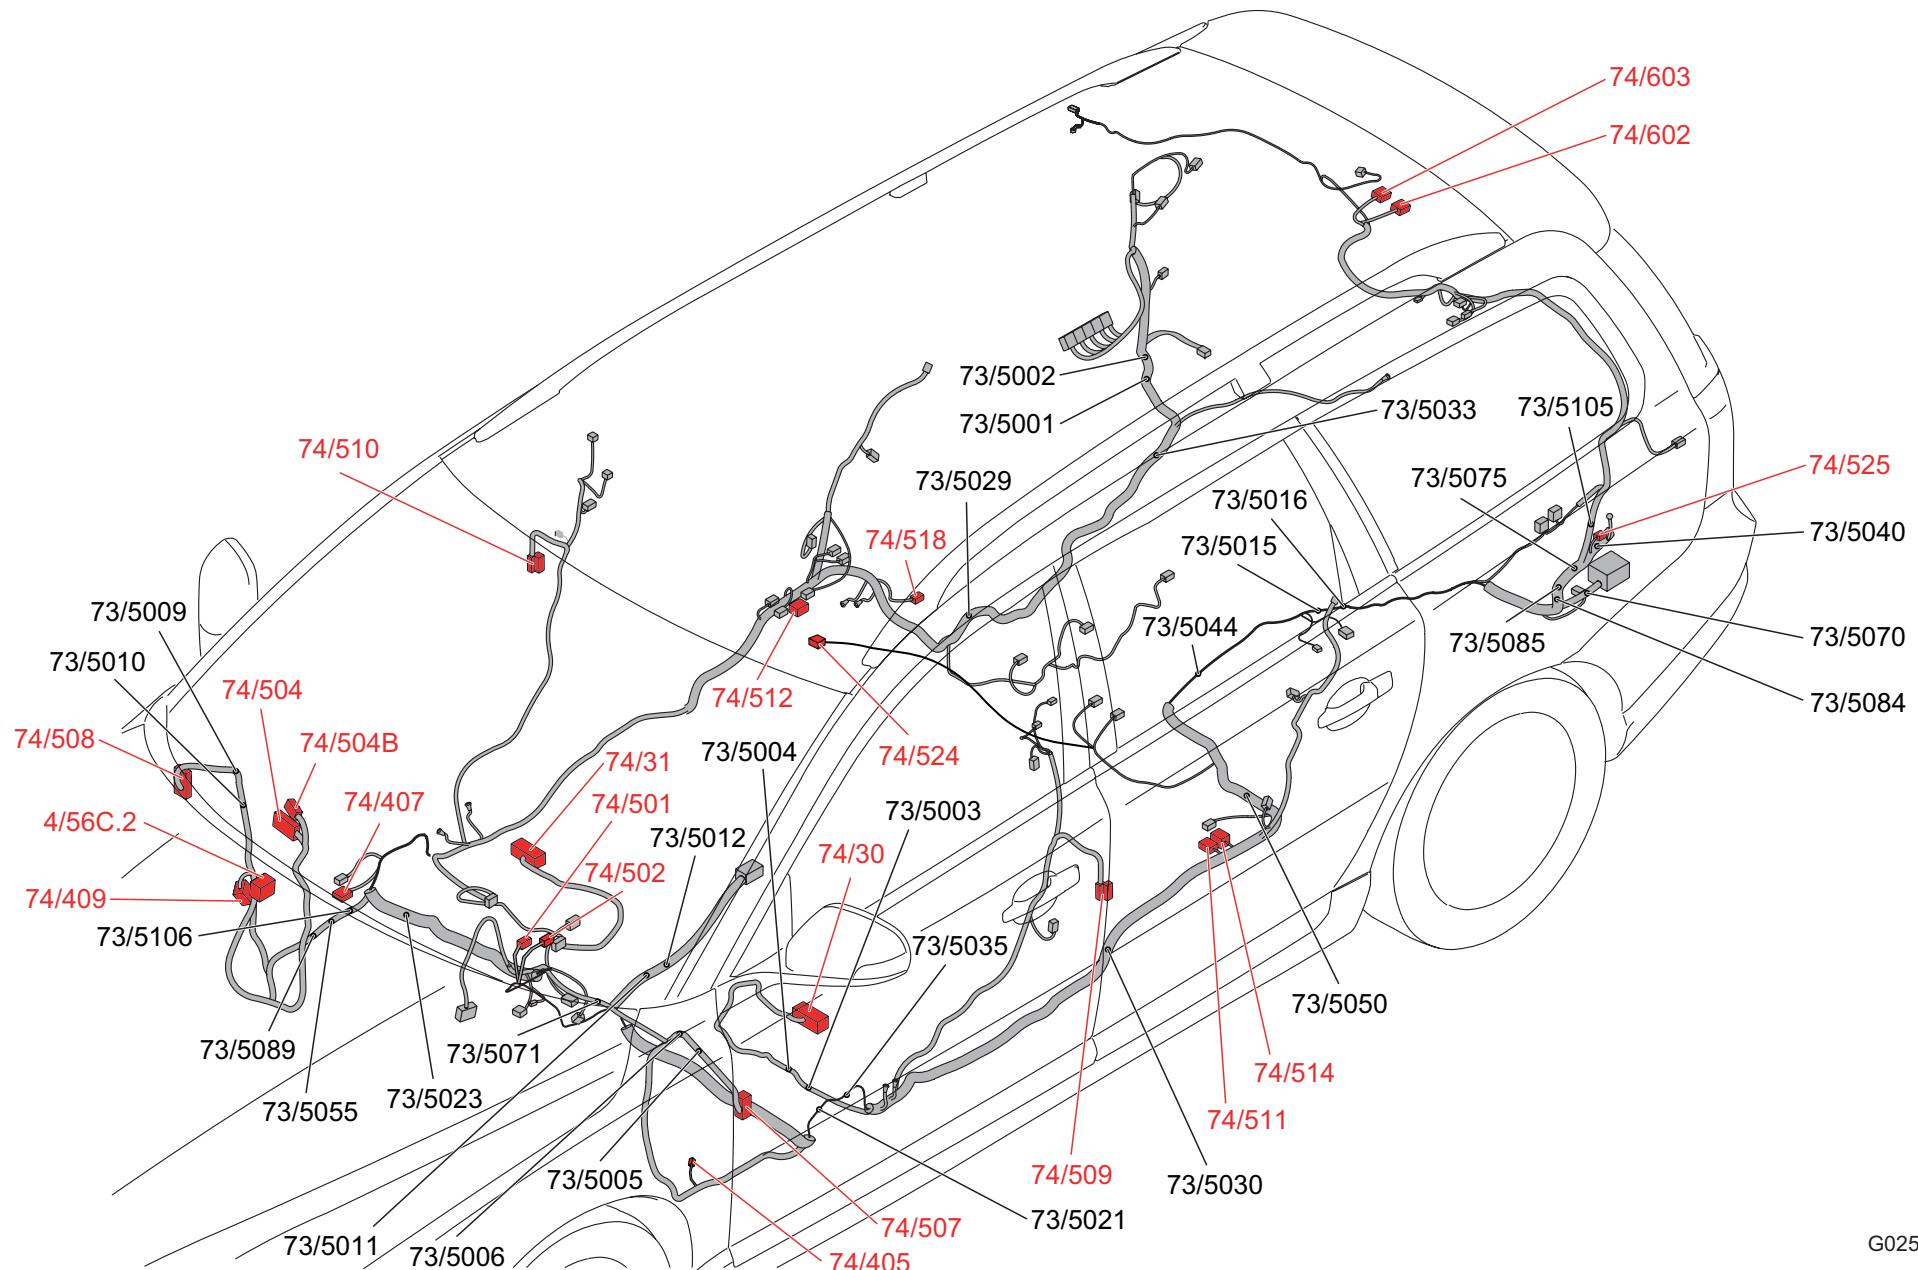

G025287

Cable harness routing in vehicle


Harness floor, RHD V70

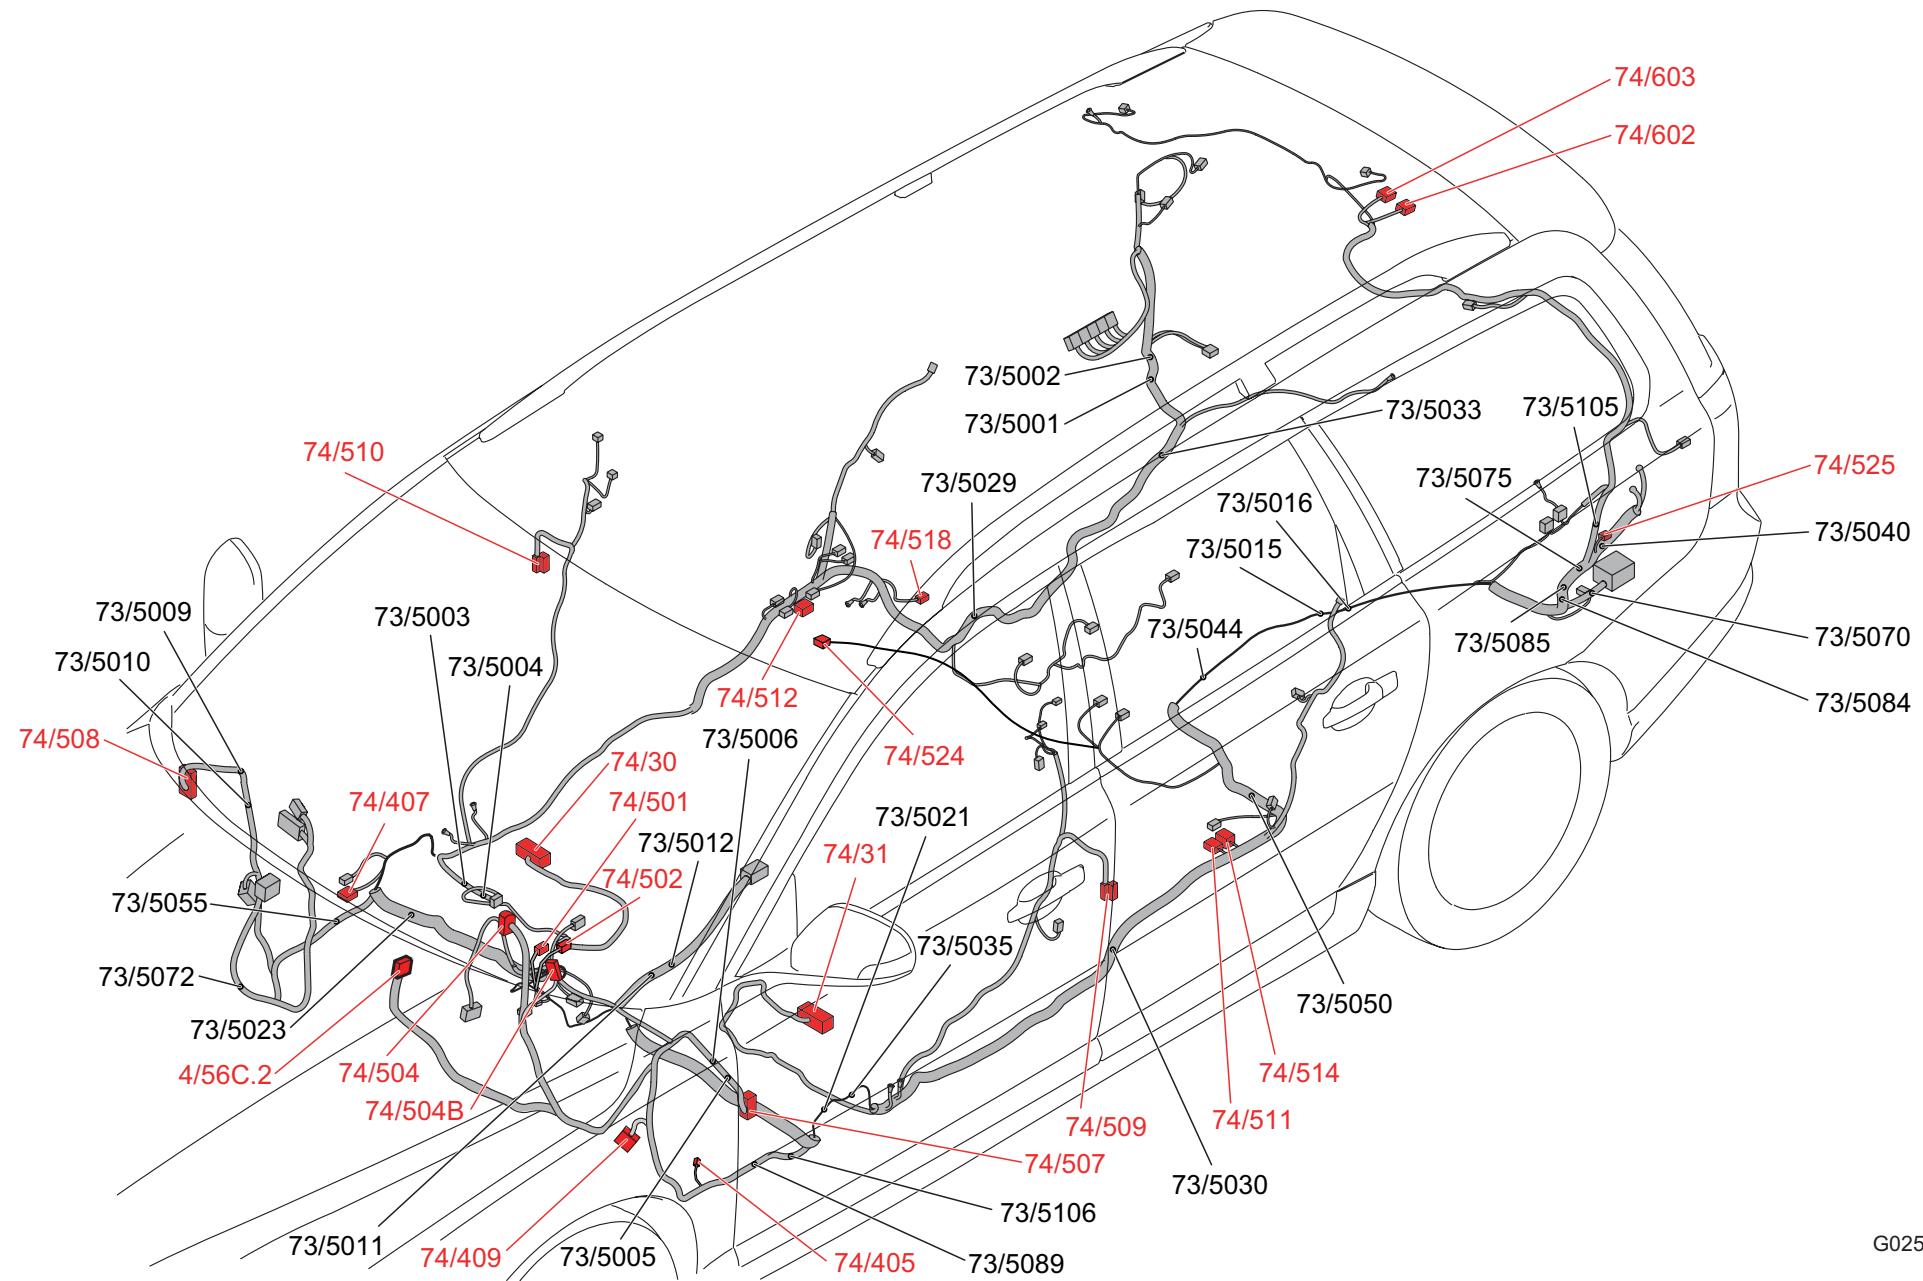

G025288


Cable harness routing in vehicle

Harness infotainment, LHD S80

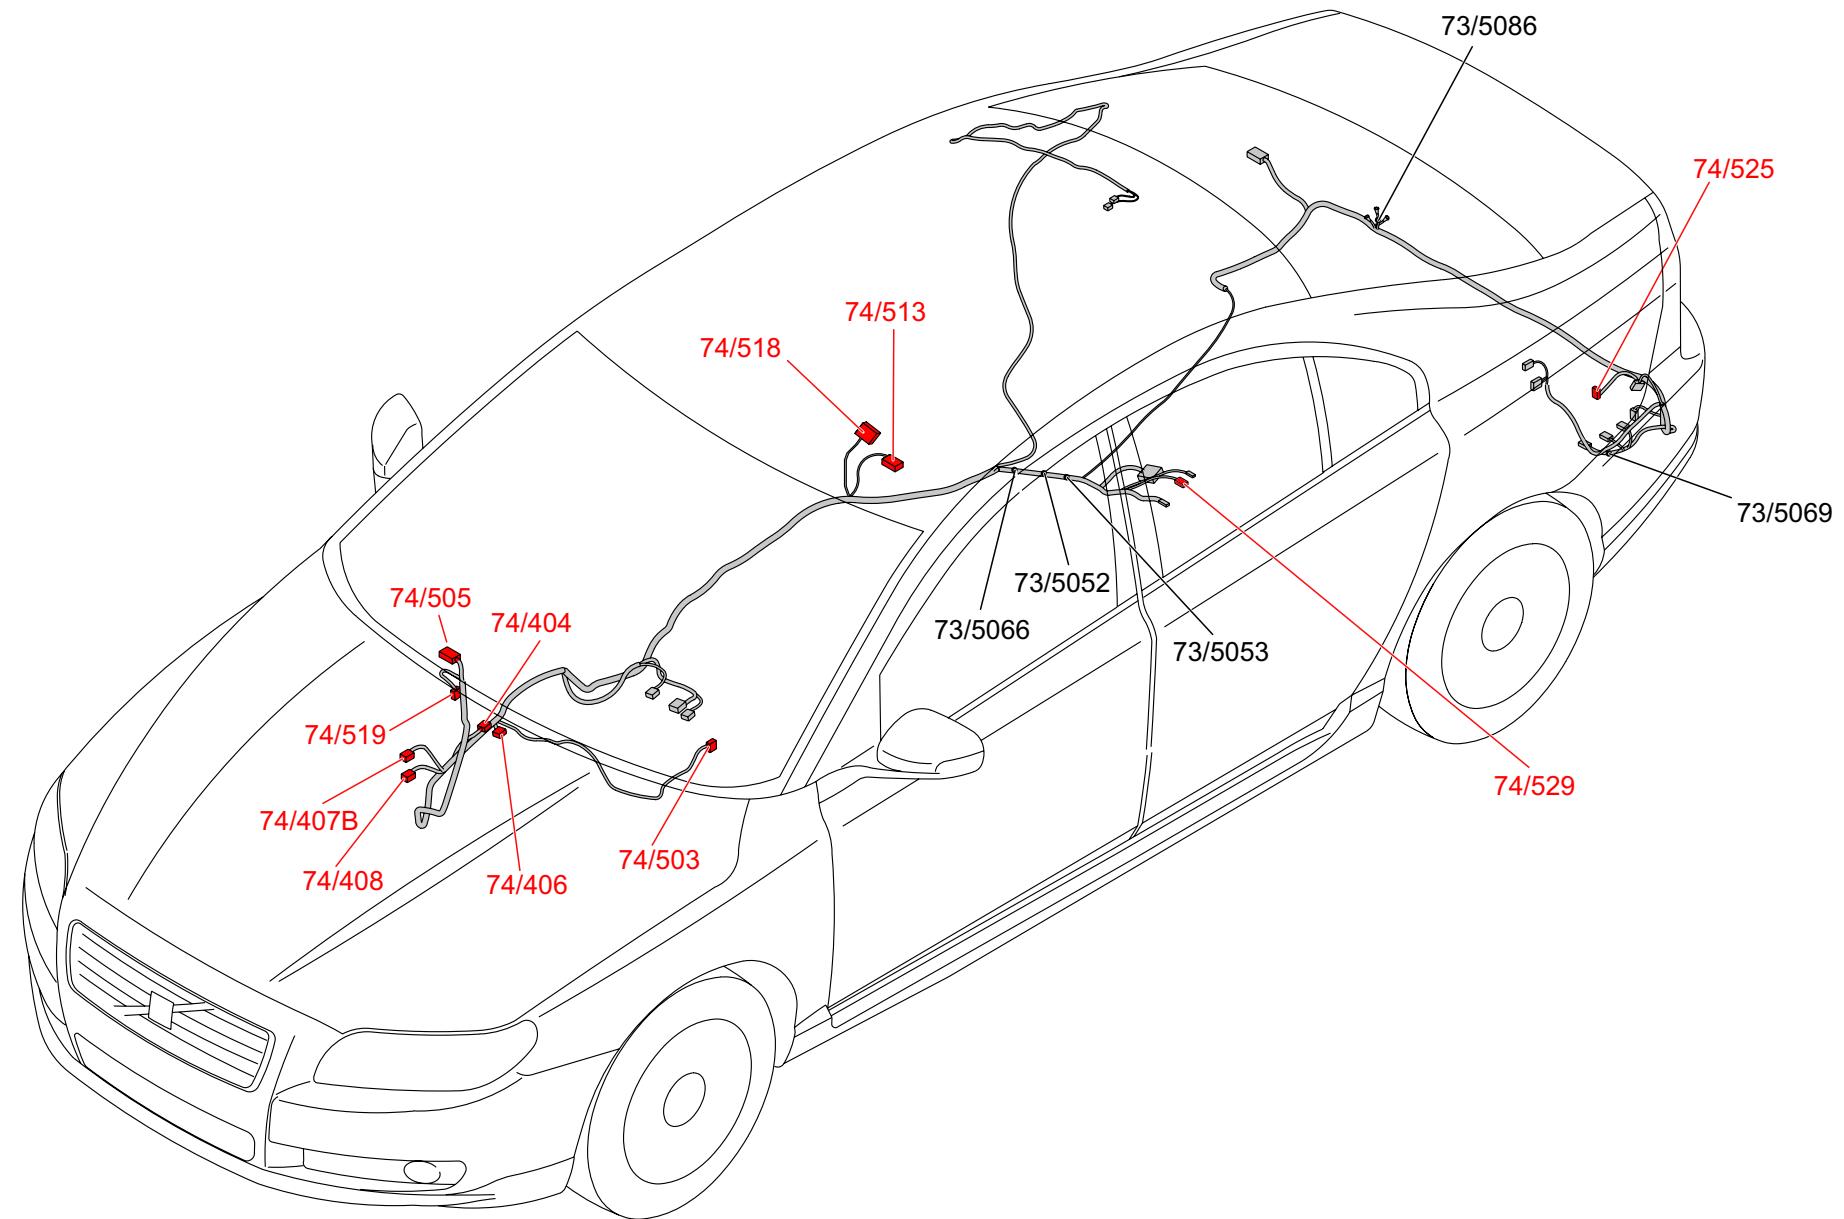


Cable harness routing in vehicle

Harness infotainment, RHD S80

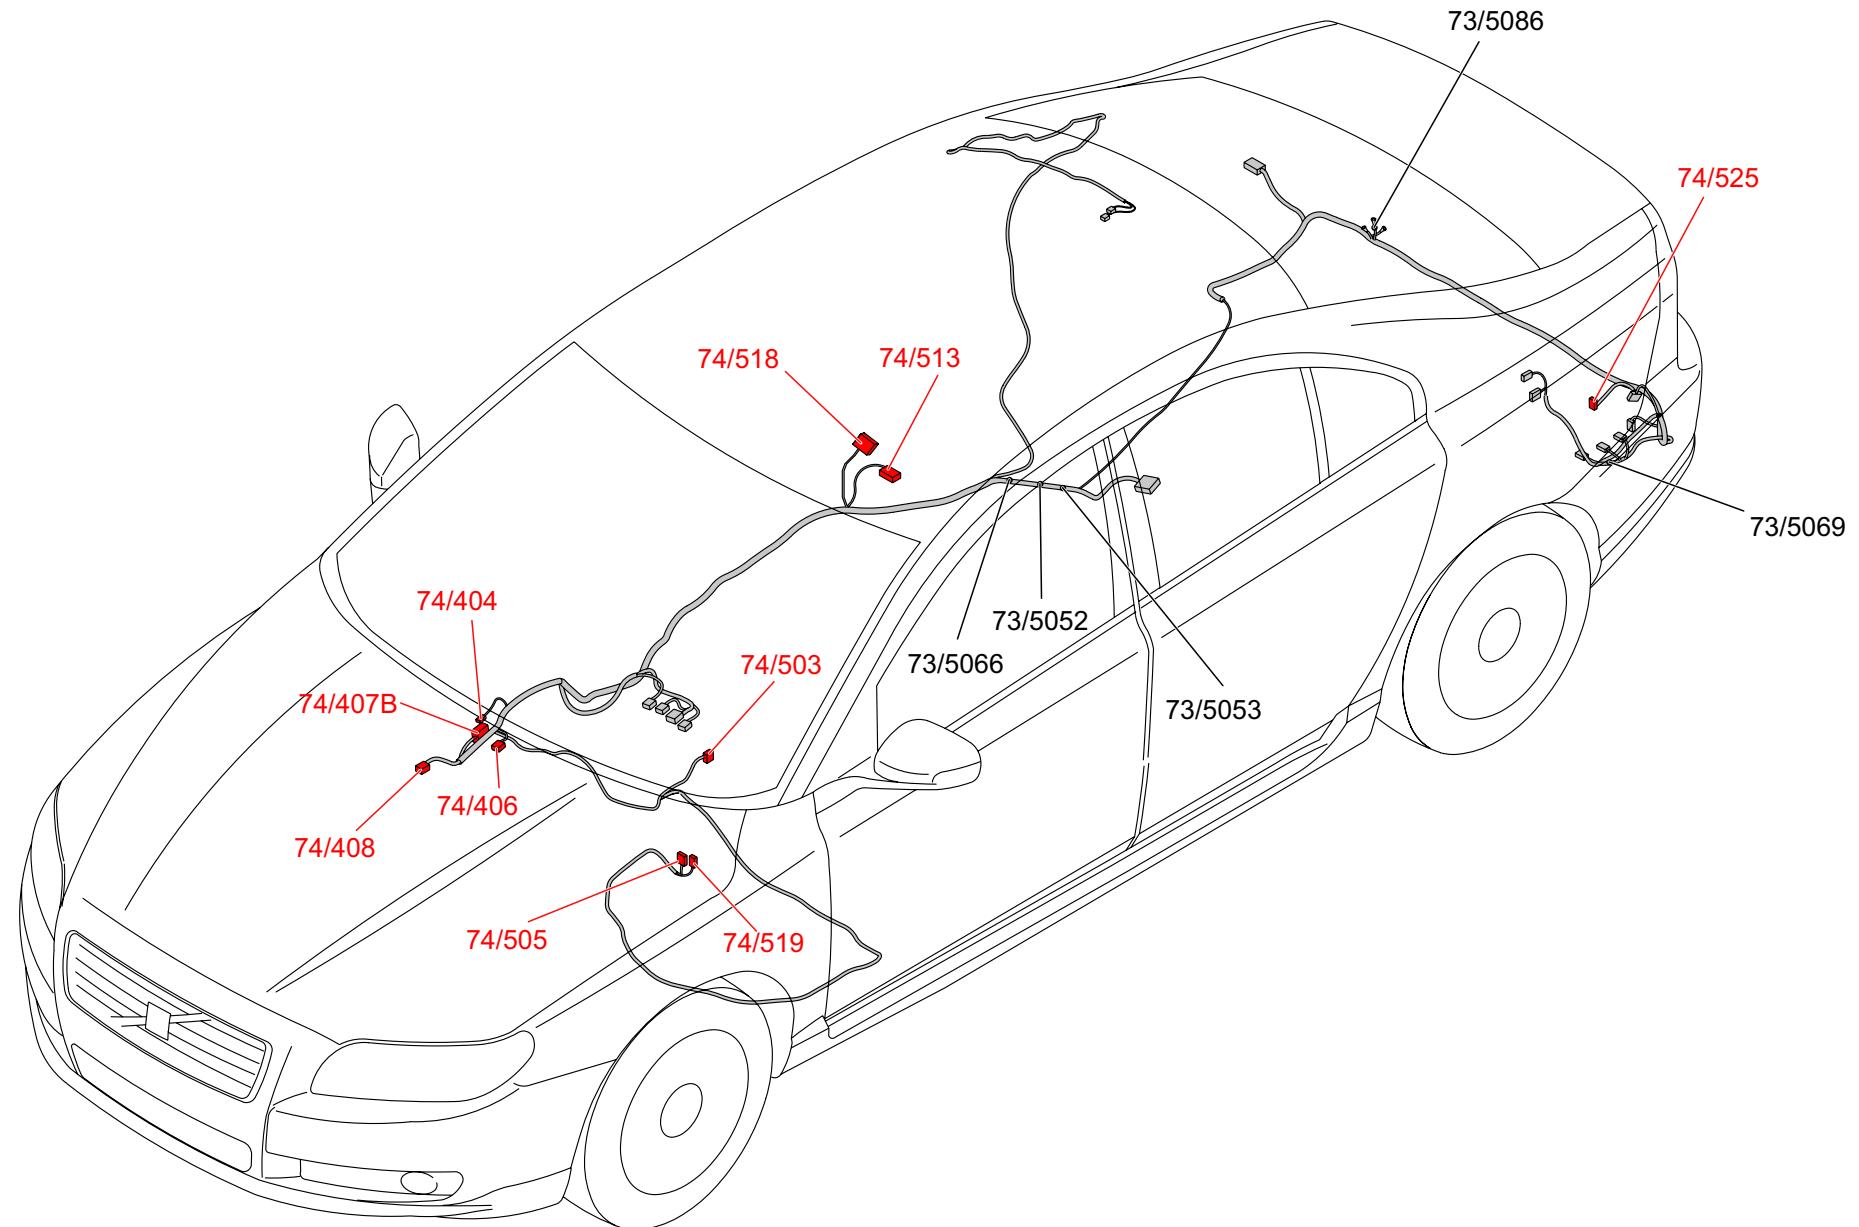

Cable harness routing in vehicle


Harness Infotainment, LHD V70

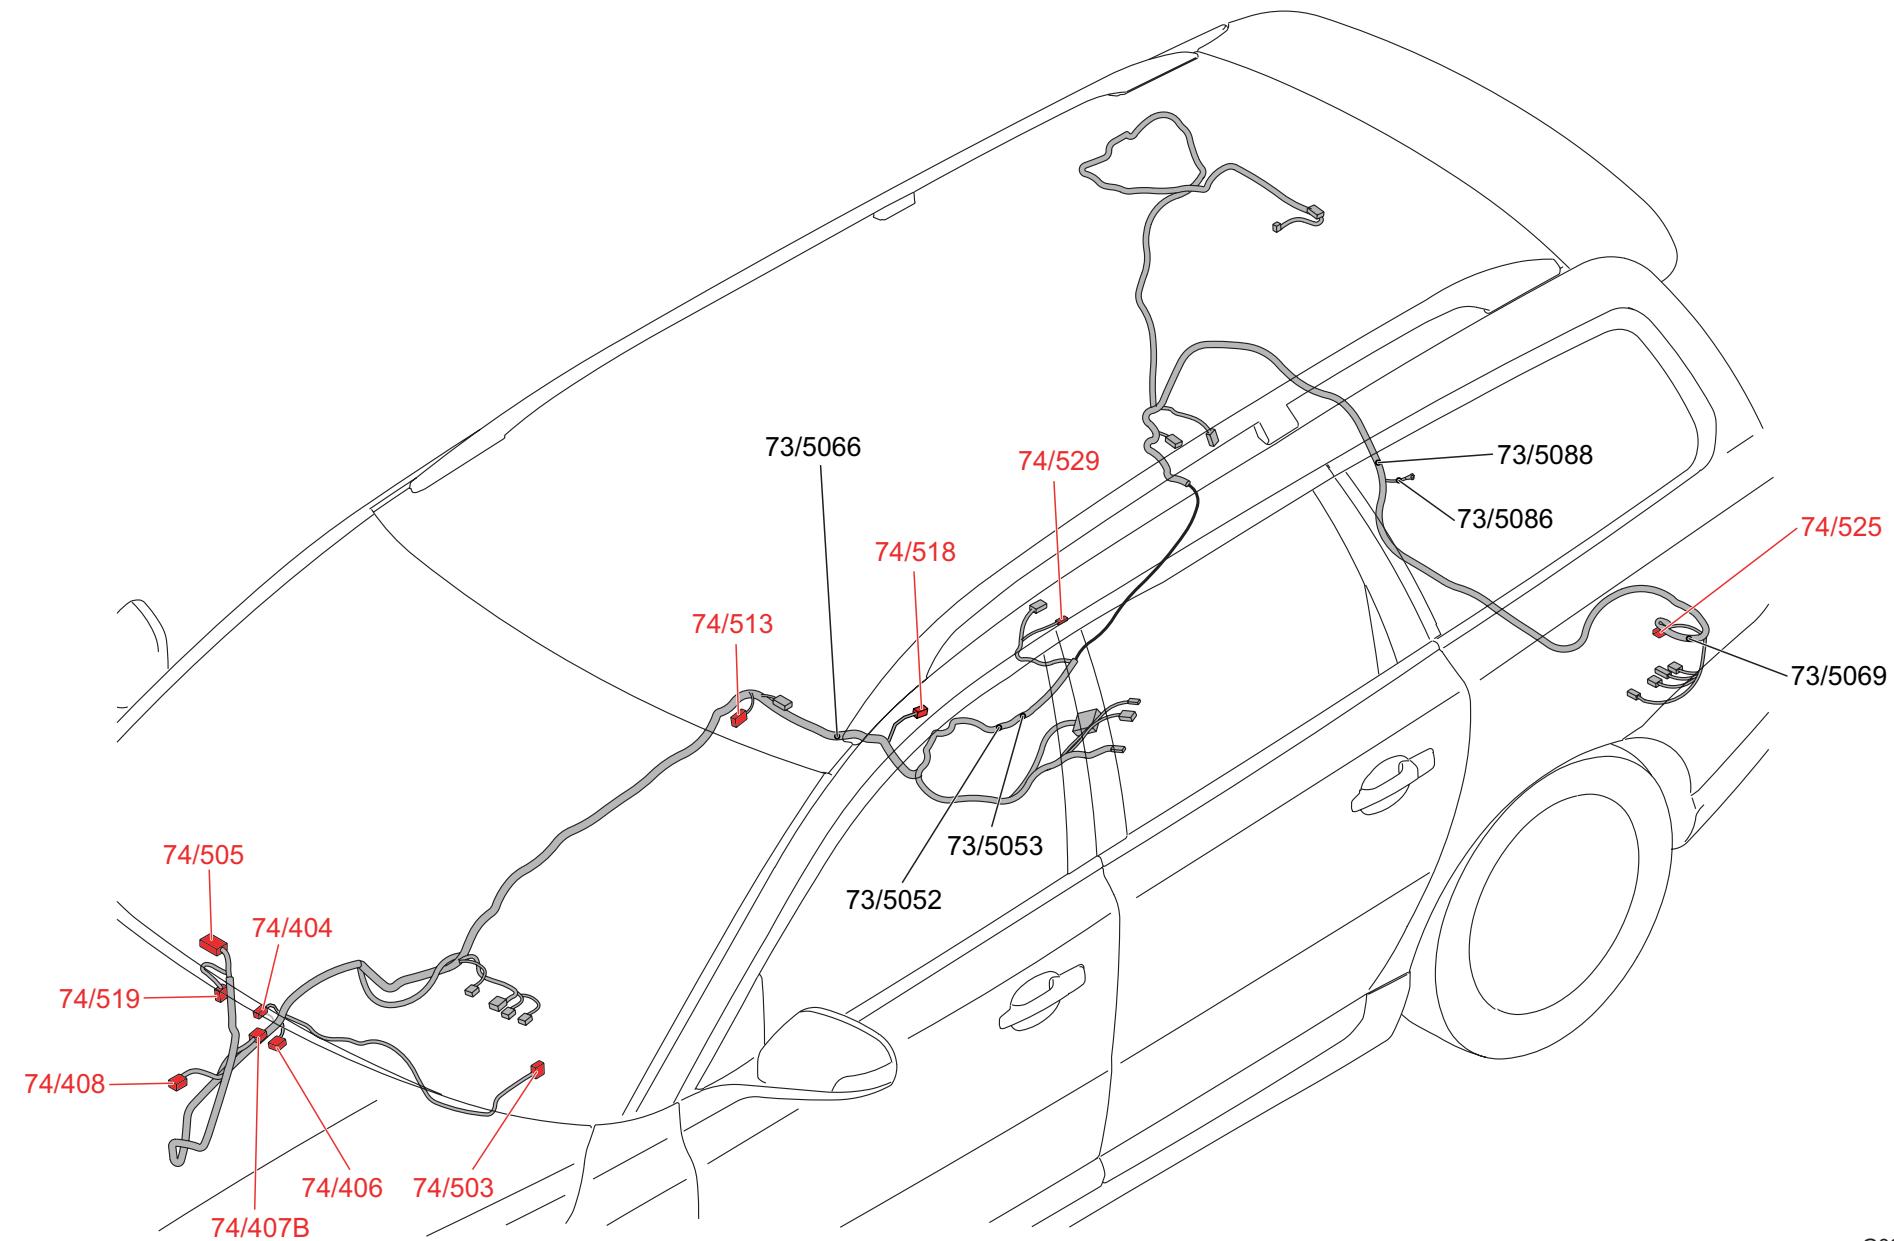

G025289


Cable harness routing in vehicle

Harness Infotainment, RHD V70

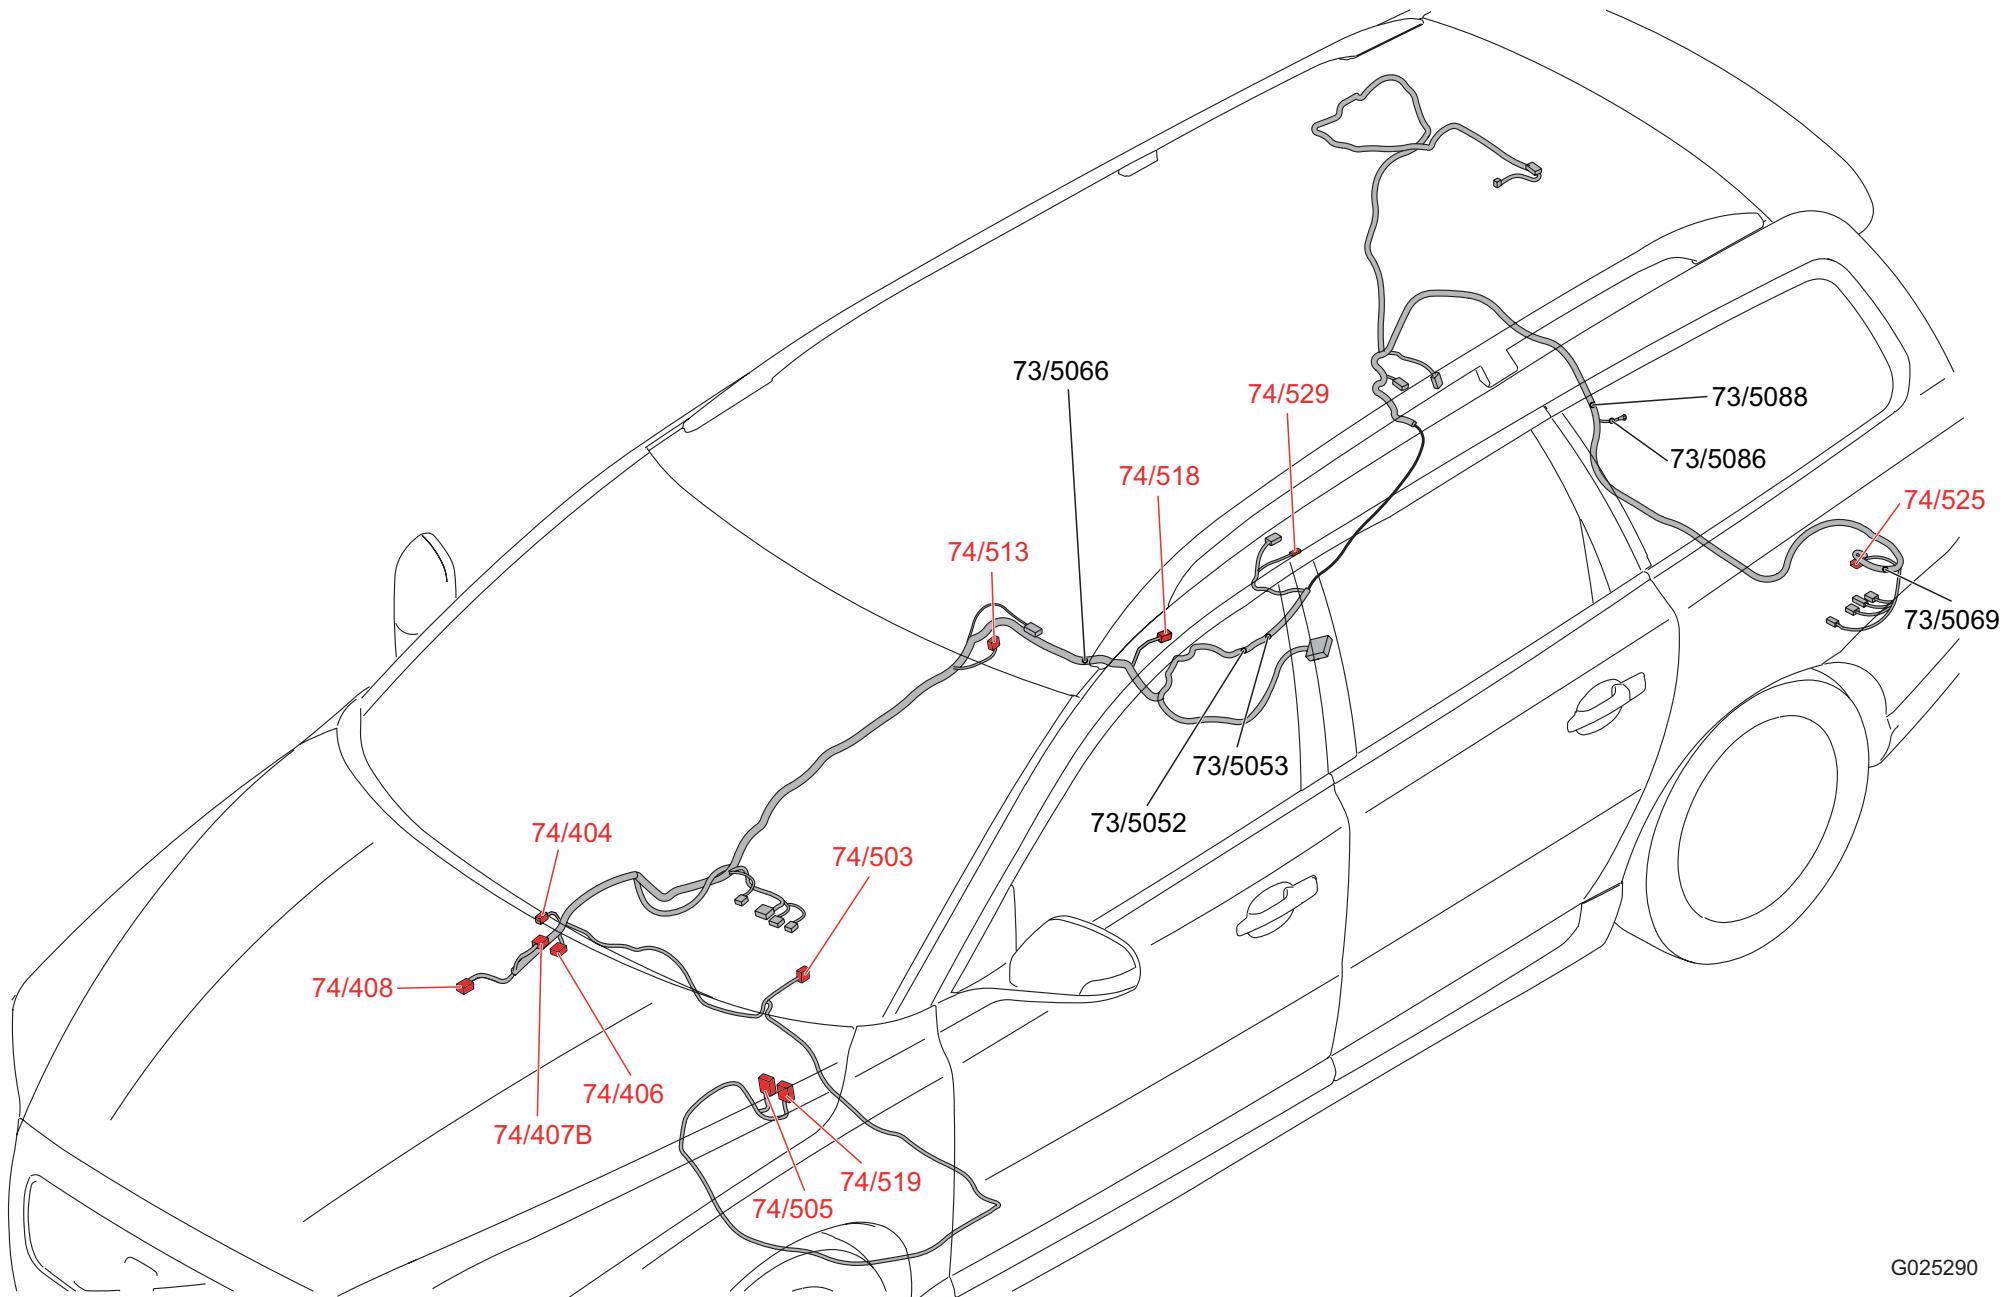


G025290


Cable harness routing in vehicle
Harness ceiling, S80

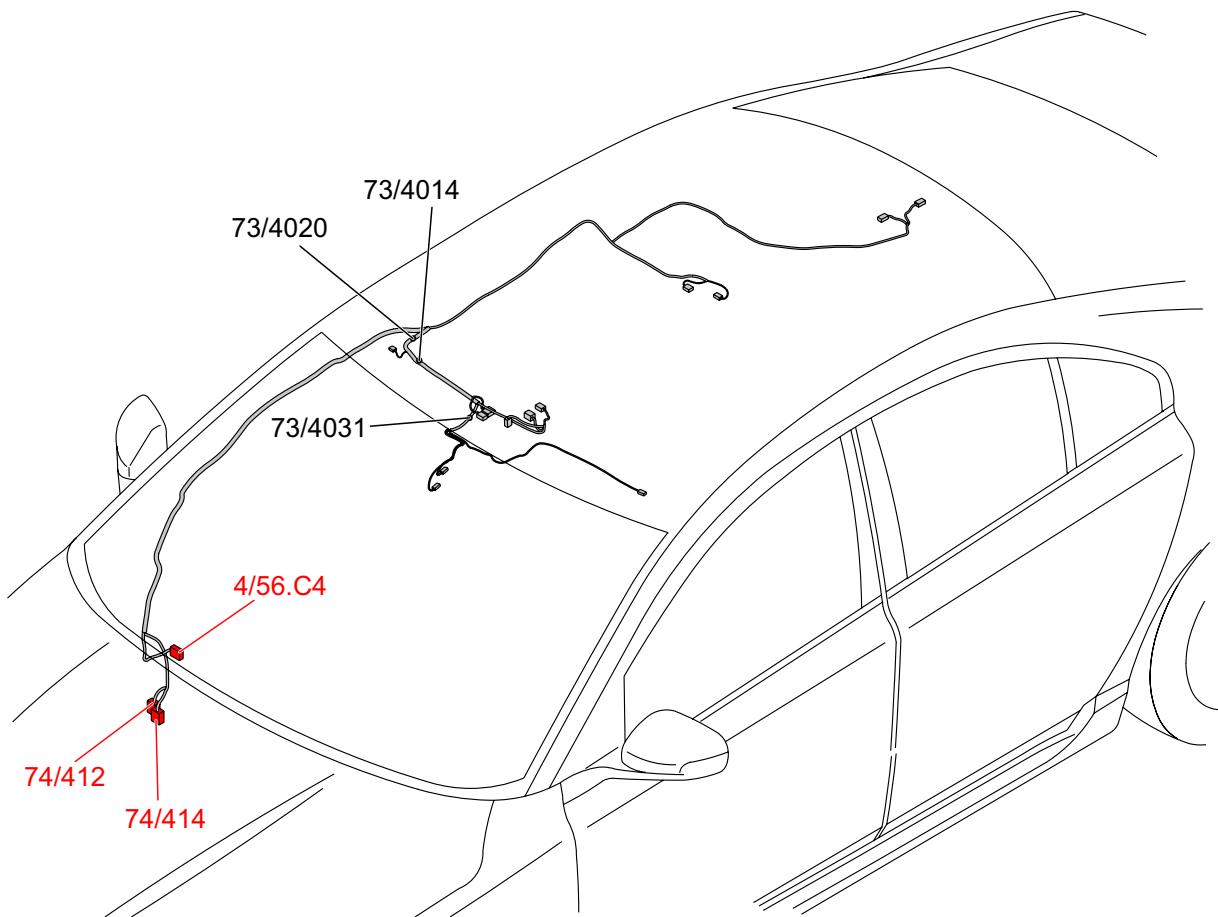


Cable harness routing in vehicle
Harness ceiling, V70

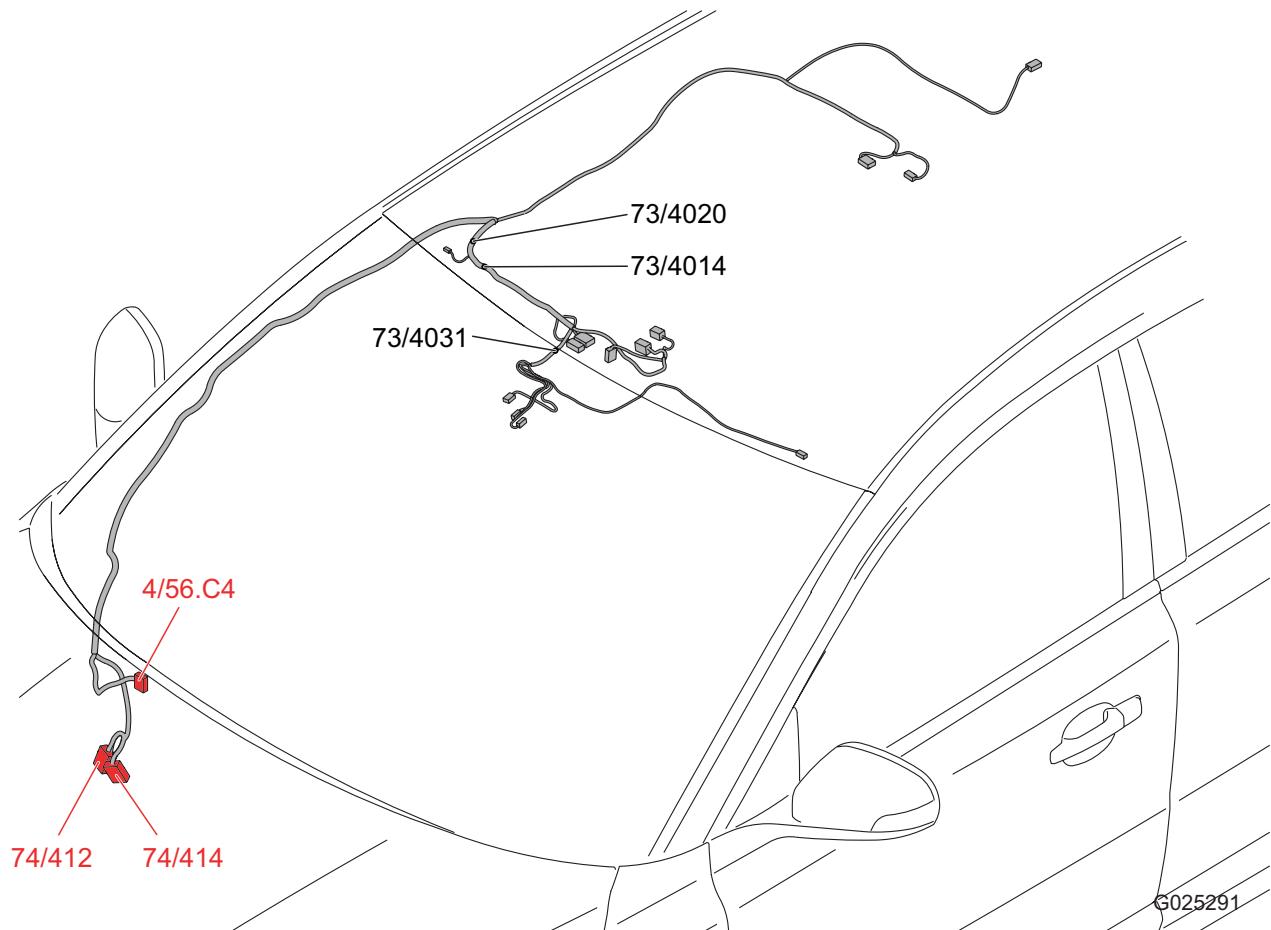


Cable harness routing in vehicle Harness center console

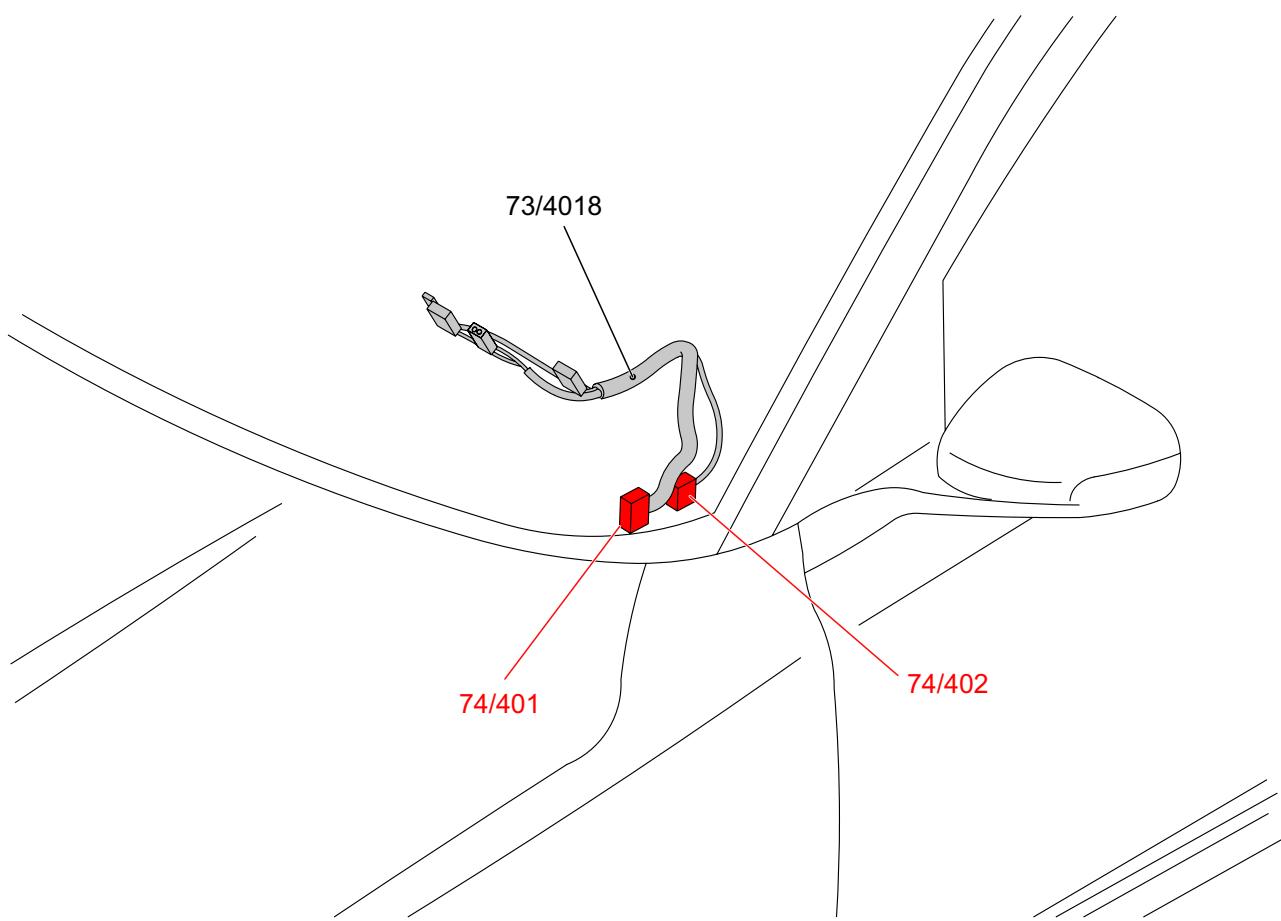


Cable harness routing in vehicle Harness tunnel

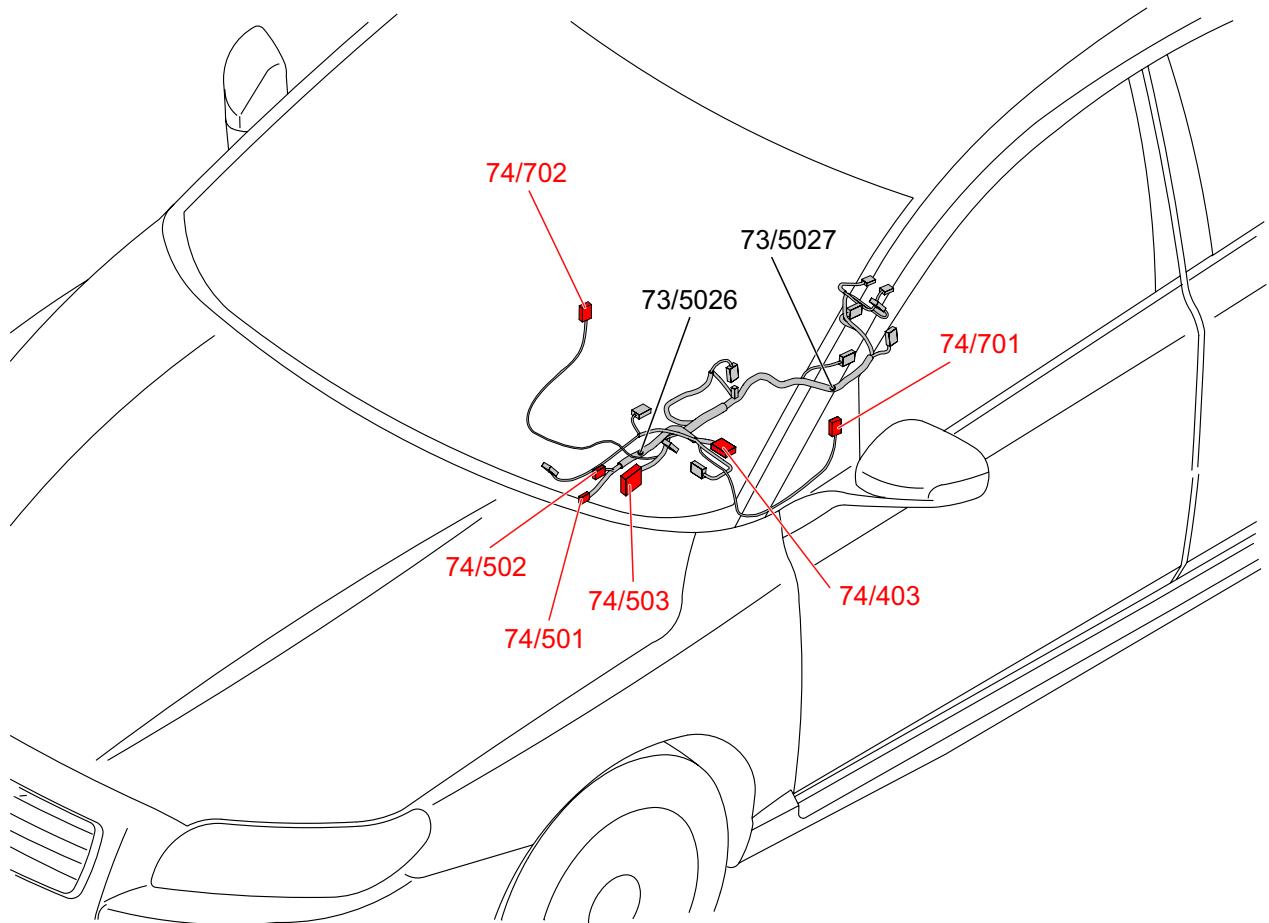


Cable harness routing in vehicle Harness front door, left

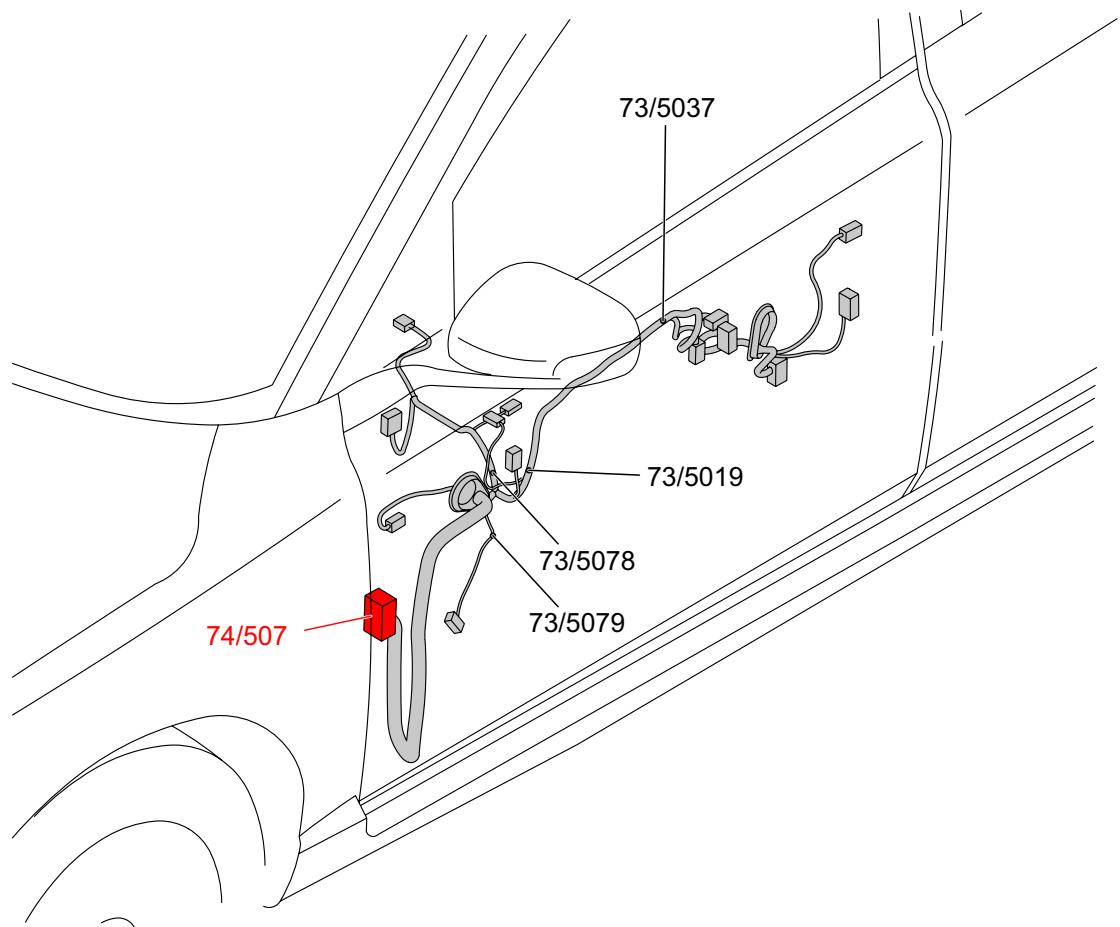


Cable harness routing in vehicle Harness front door, right

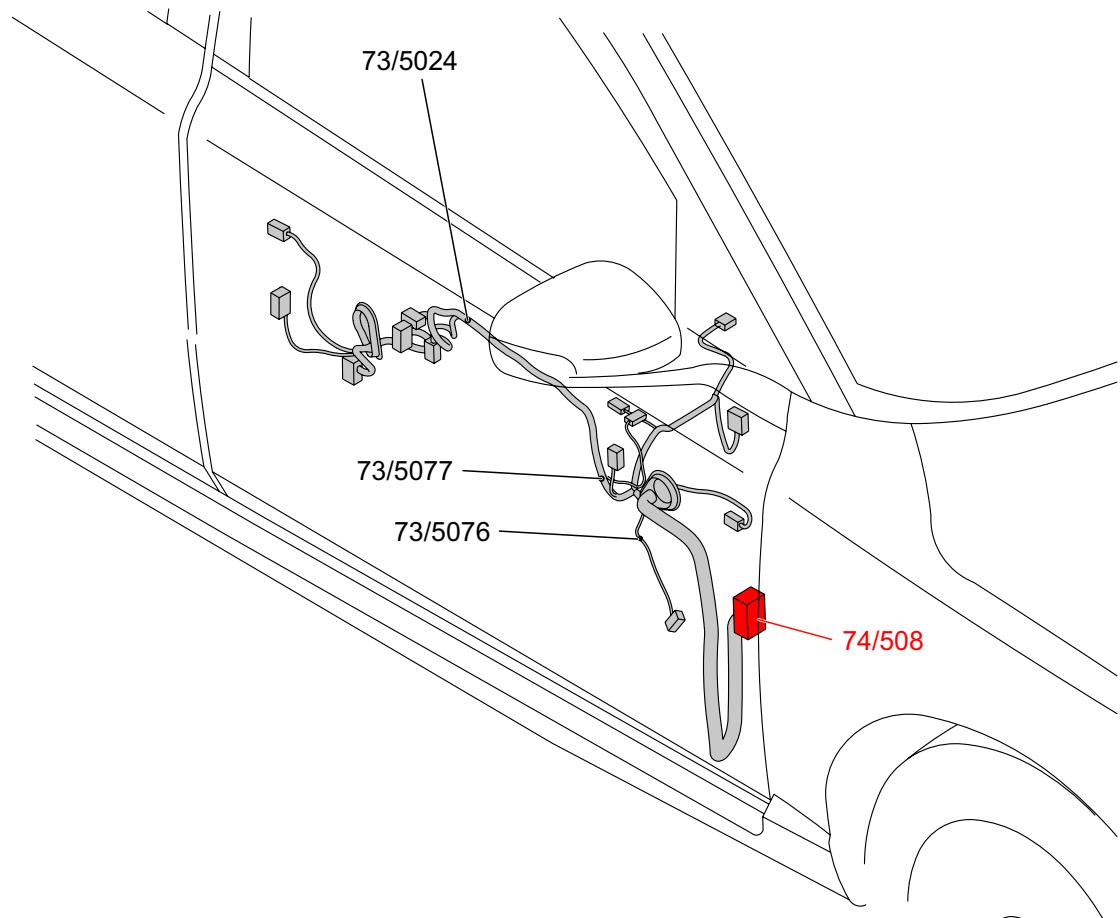


Cable harness routing in vehicle
Harness rear door, left

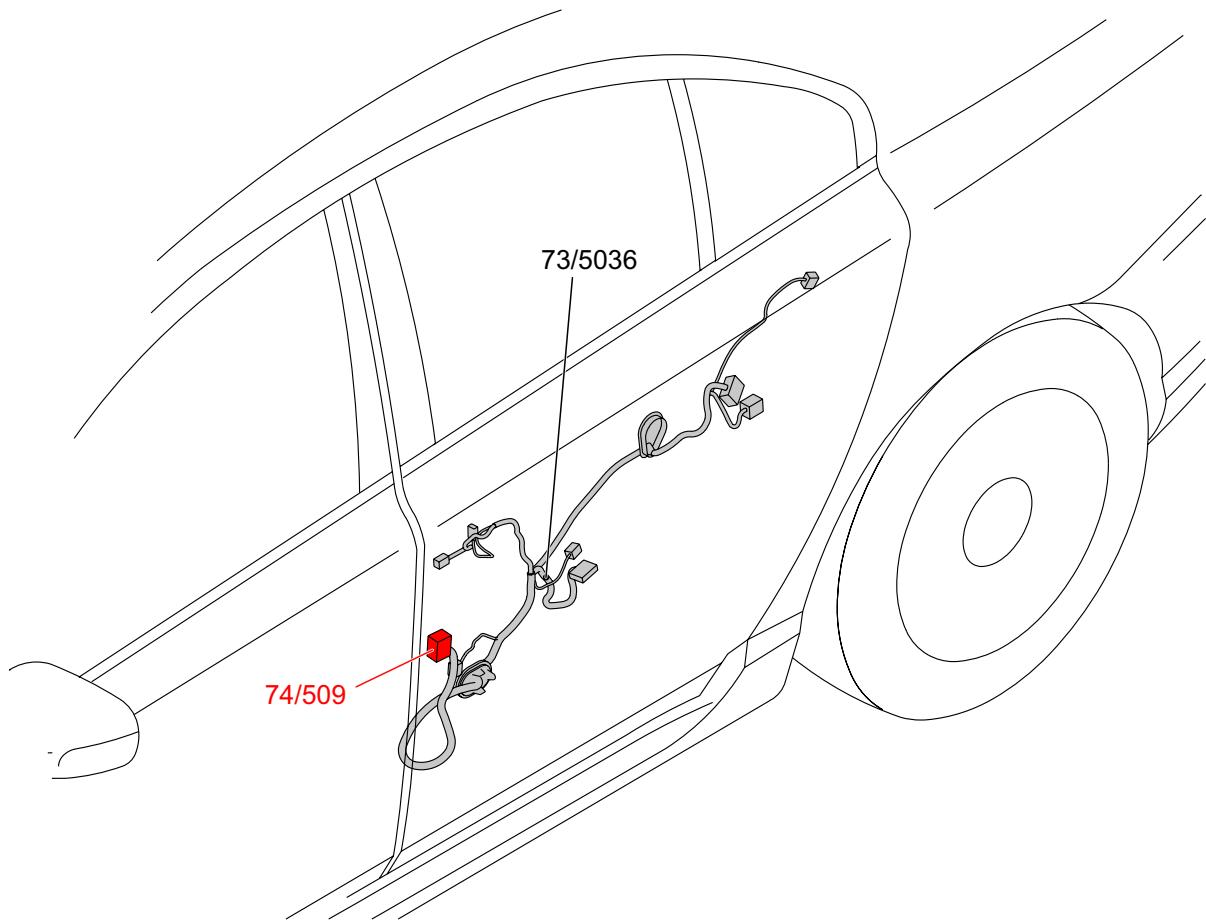


Cable harness routing in vehicle
Right rear door harness

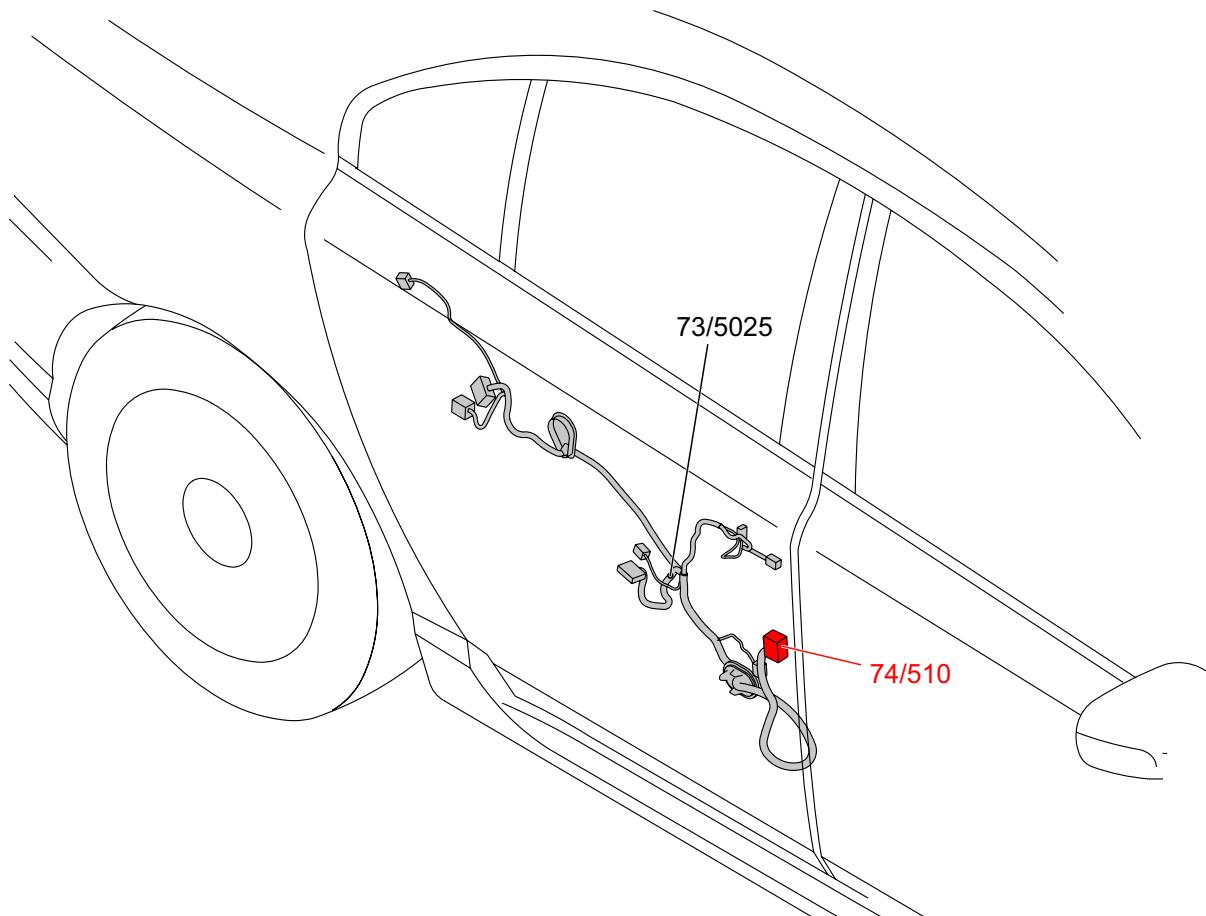

**Cable harness routing in vehicle
Harness trunk lid/tailgate, S80**

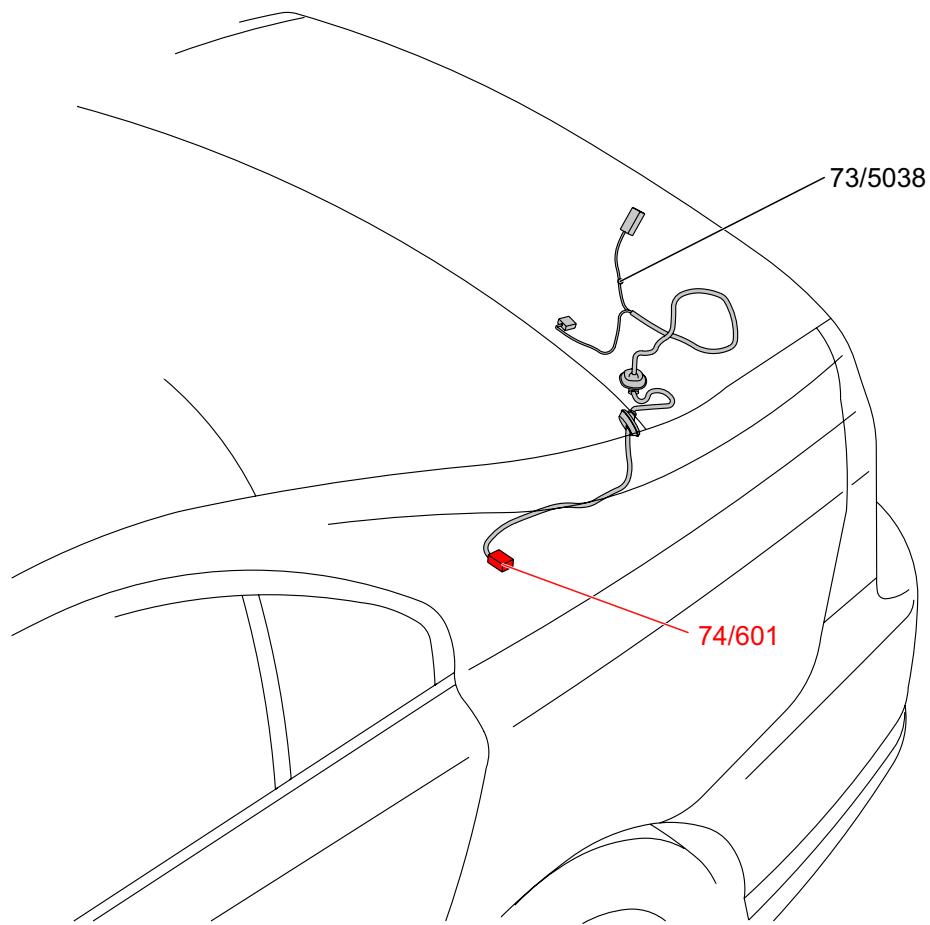


**Cable harness routing in vehicle
Harness trunk lid/tailgate, V70**

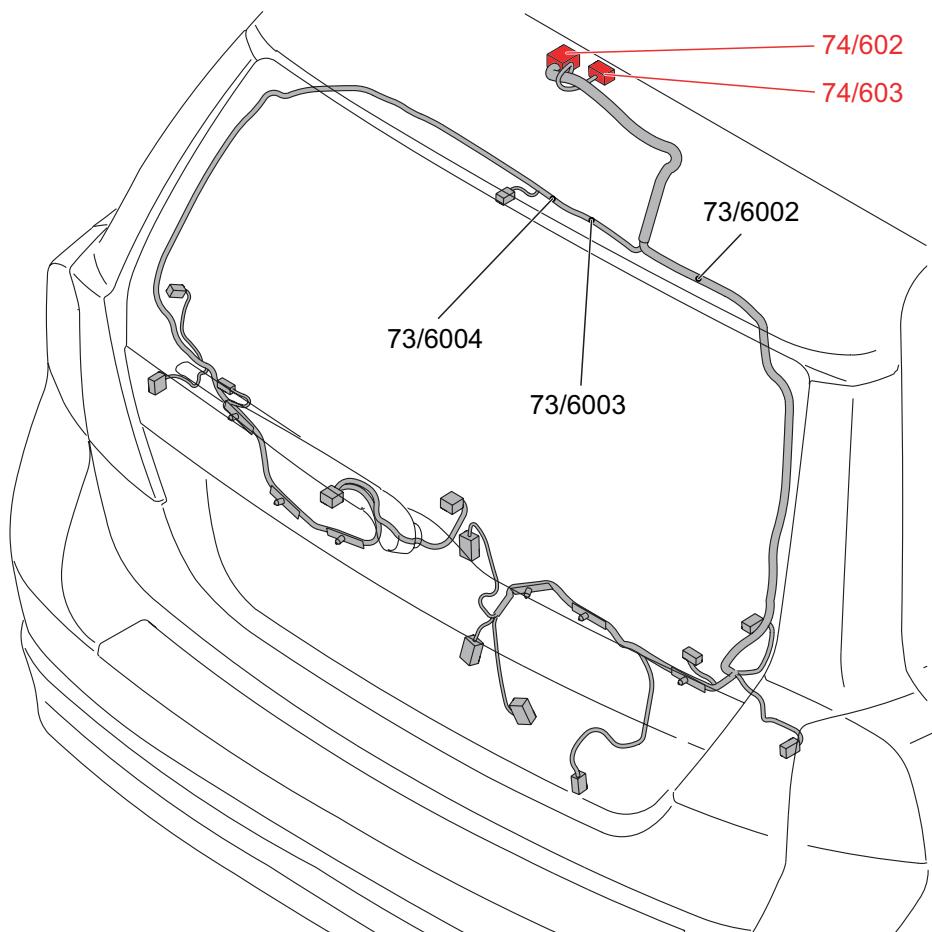

G025292

Cable harness routing in vehicle

Harnesses rear axle

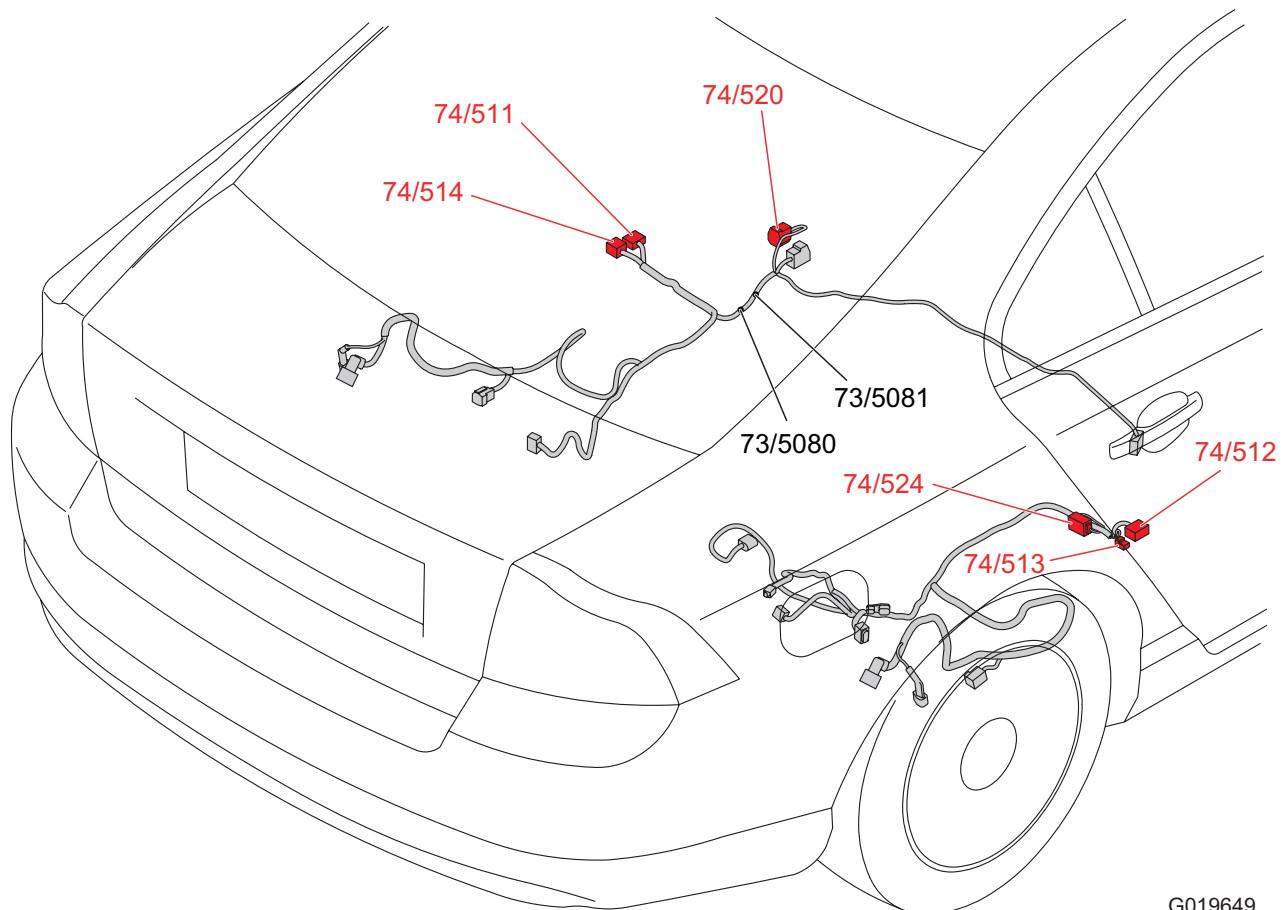


G019649


Component illustrations

1/1 - 2/75 S80


1/1 Battery

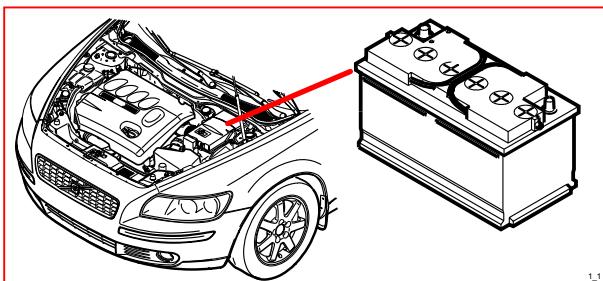


2/32 Main relay, engine management system

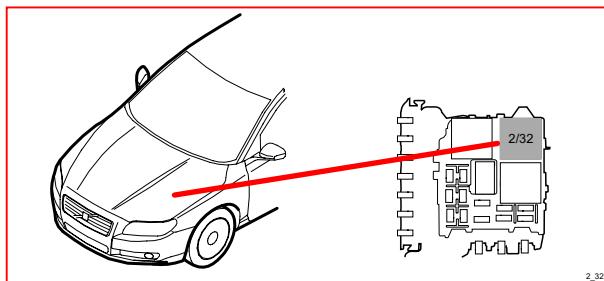


2/16 Rear window wiper relay, V70

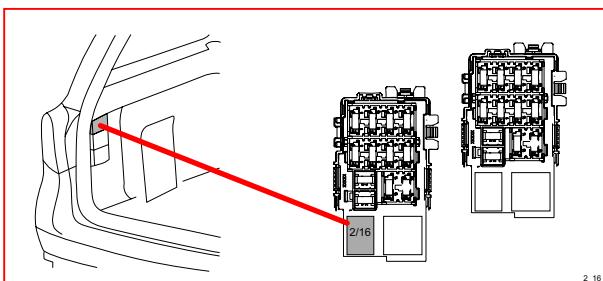


2/35 Starter motor relay

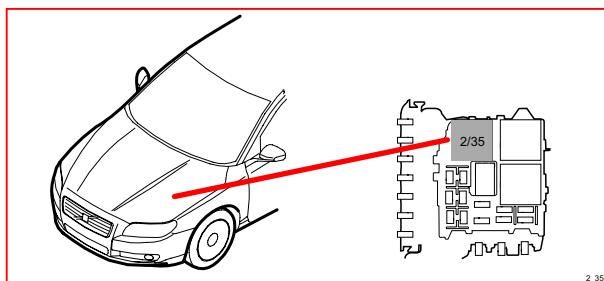


2/17 Relay, horn

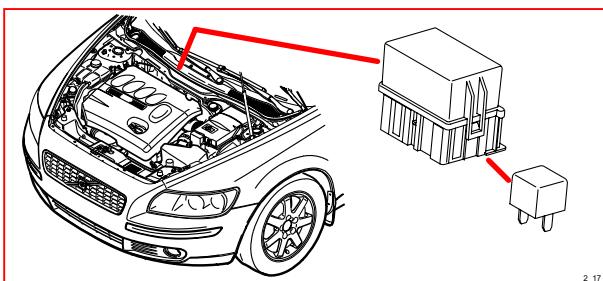


2/64 Auxiliary light relay, accessory

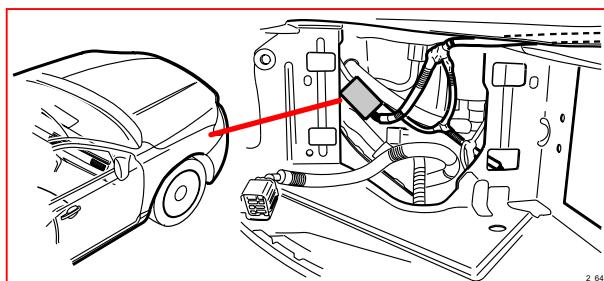


2/22 Relay, climate control system

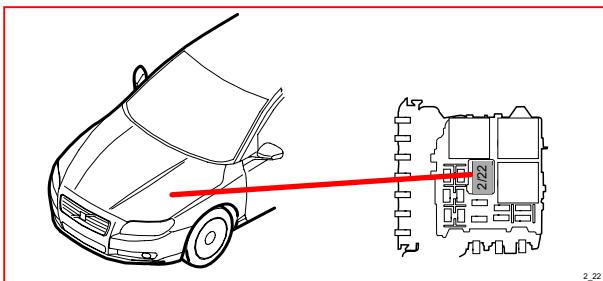


2/75 Rear adjustable head restraint relay, V70

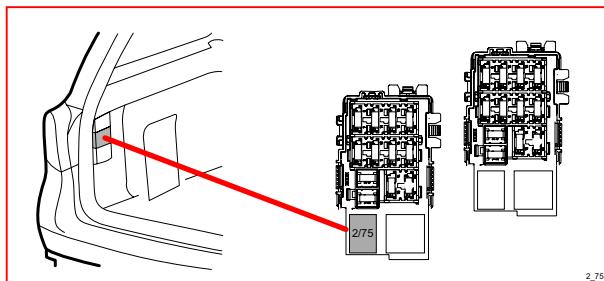

2/31 Relay, 15-feed

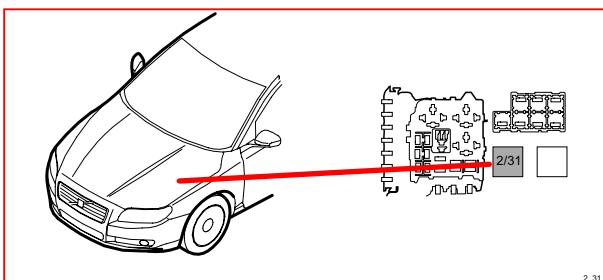


2/75 Rear adjustable head restraint relay, S80

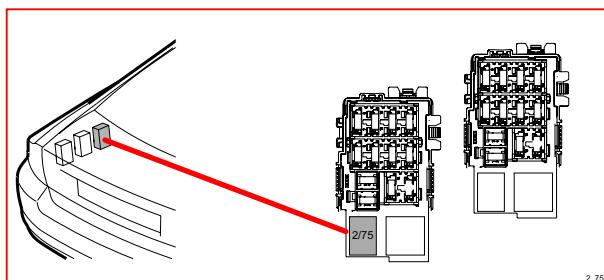


Component illustrations

2/82 V70 - 3/8


2/82 Relay, rear window defroster, V70

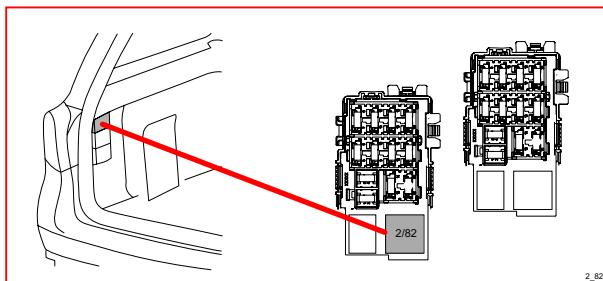


2/193 Relay, comfort functions

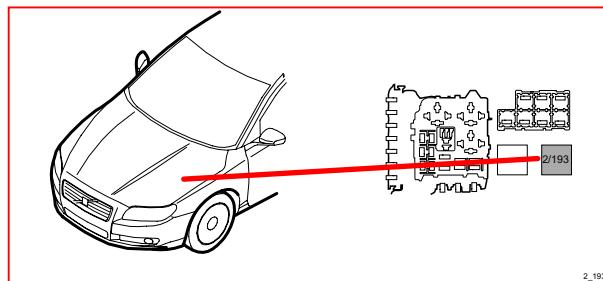


2/82 Relay, rear window defroster, S80

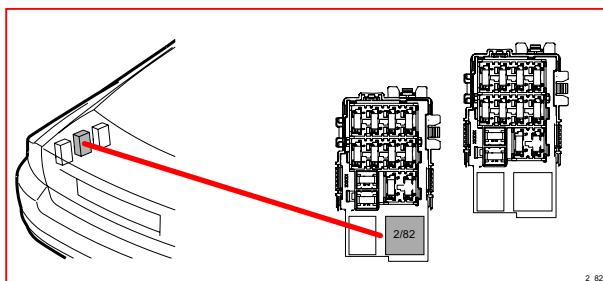


2/239 Relay, coolant pump, 8 cyl.

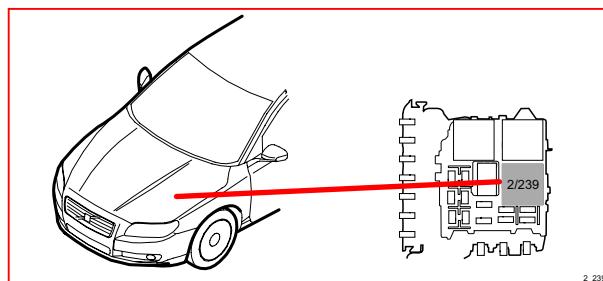


2/88 Relay, 15-feed rear, V70

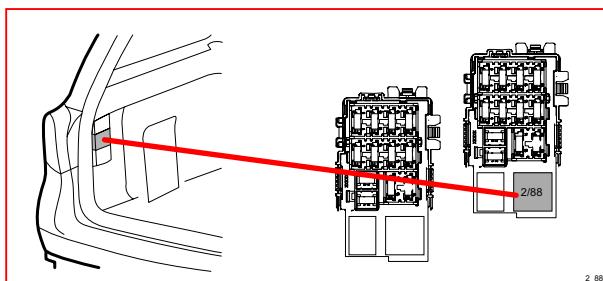


3/4 Steering wheel switch left (SWSL)

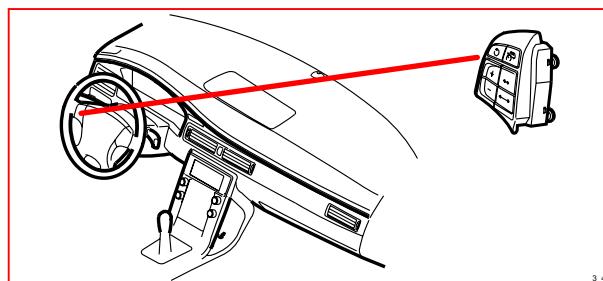


2/88 Relay, 15-feed rear, S80

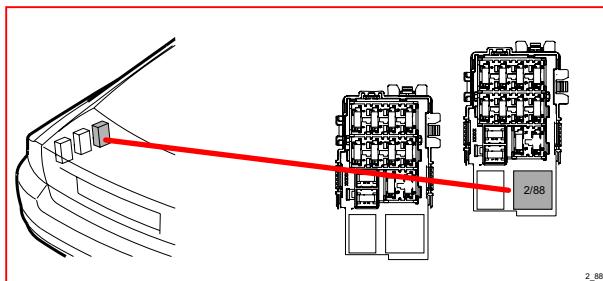


3/6 Hazard warning flasher switch

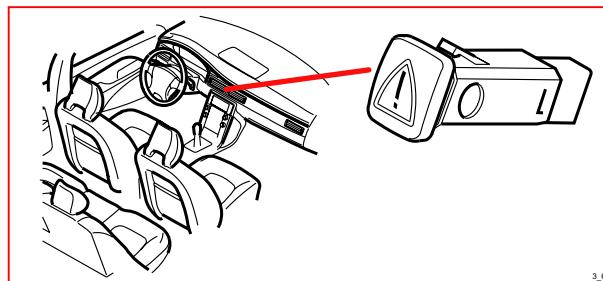

2/141 Refrigeration box relay

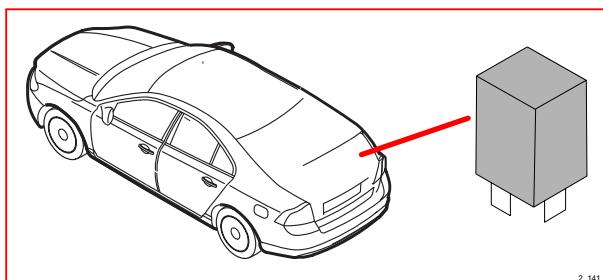


3/8 Switch, rear window/door mirror defroster

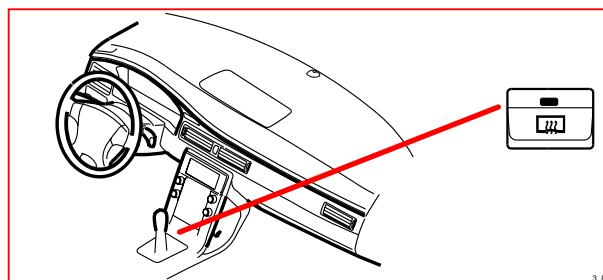


Component illustrations

3/9 - 3/37


3/9 Brake light contact

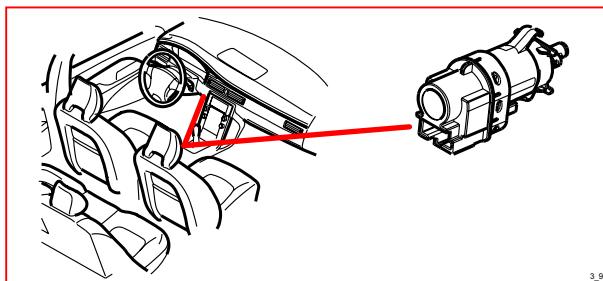


3/26 Switch unit, power driver's seat

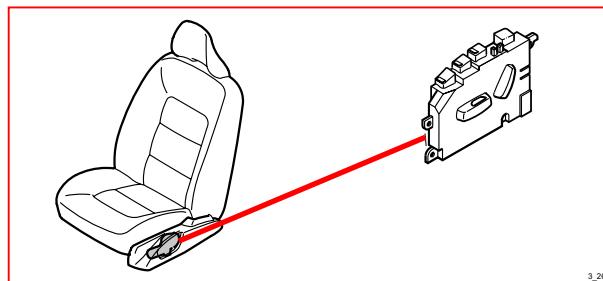


3/10 Reversing light contact

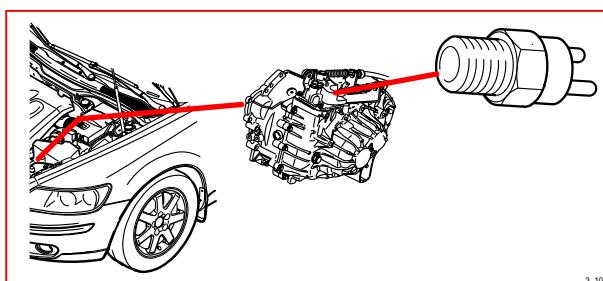


3/27 Switch unit, power passenger seat

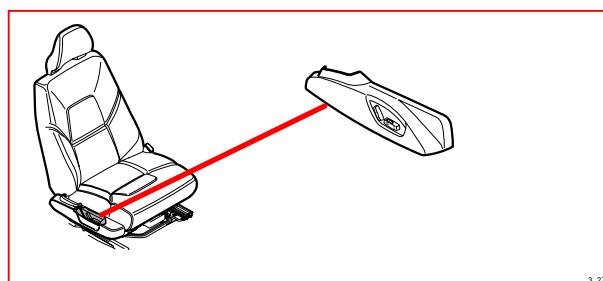


3/19 Power window switch, left rear door

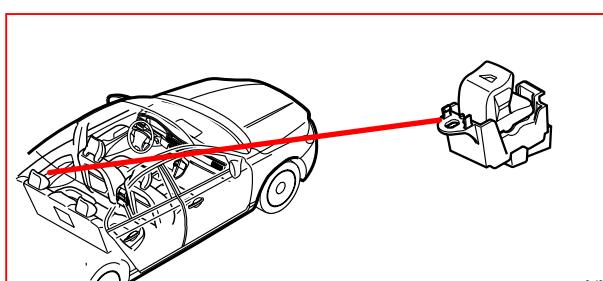


3/35 Trunk handle switch, V70

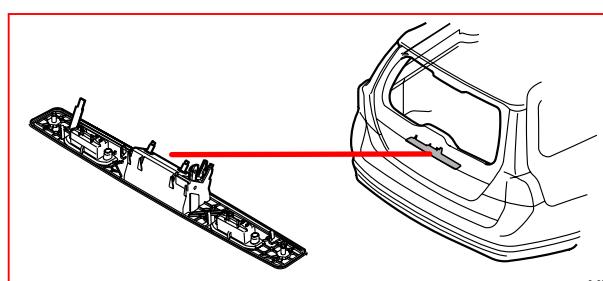


3/21 Power window switch, right rear door

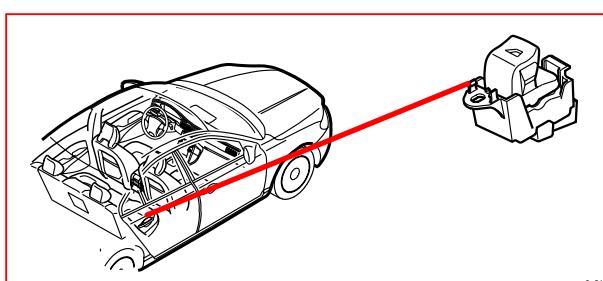


3/35 Trunk handle switch, S80

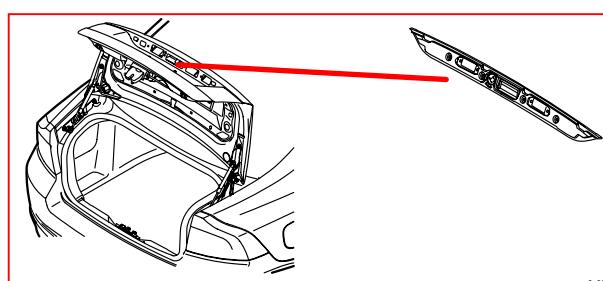

3/25 Power sunroof switch

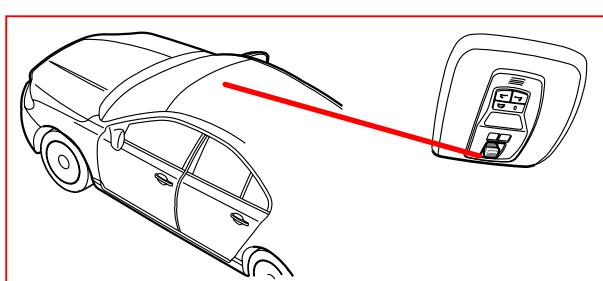


3/37 Horn contact

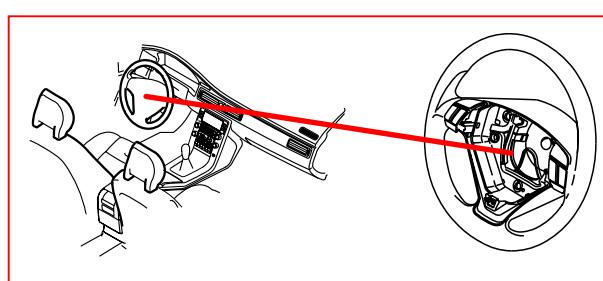


Component illustrations

3/47 - 3/94


3/47 Parking brake contact

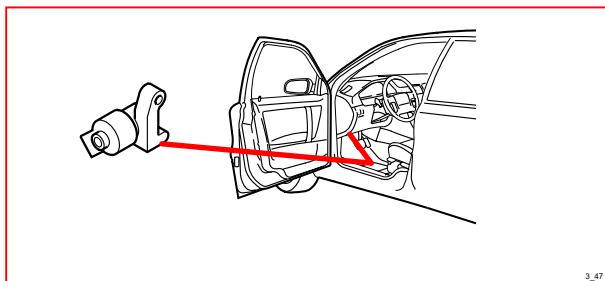


3/80 Switch, central locking system, driver's door

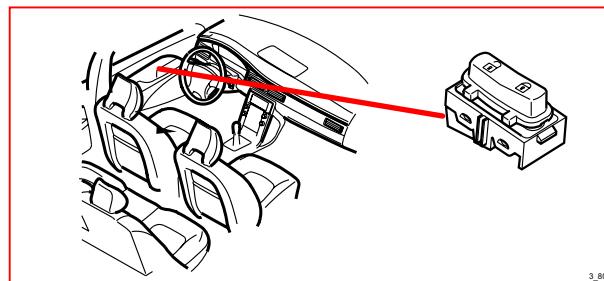


3/60 Switch, auxiliary lights

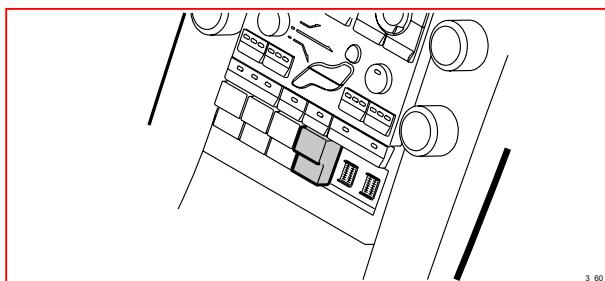


3/82 Switch, central locking system, passenger door

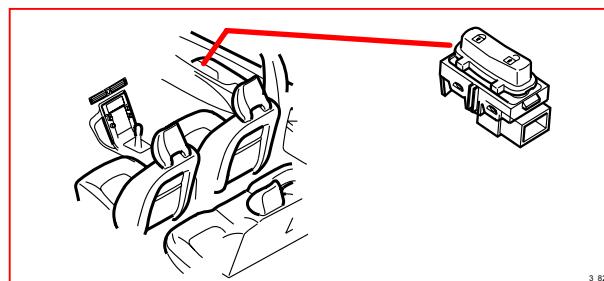


3/62 Hood alarm contact

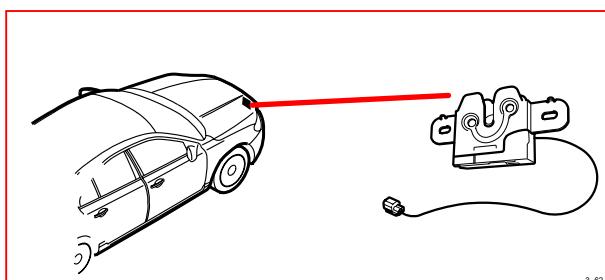


3/83 Switch, passenger door power window

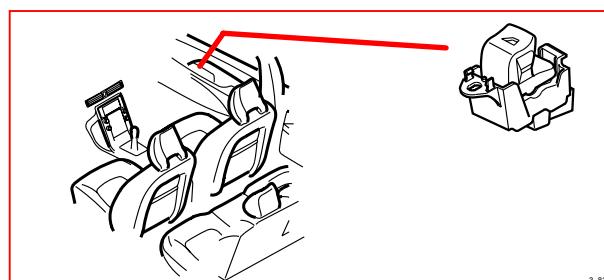


3/65 Switch, heated rear seat

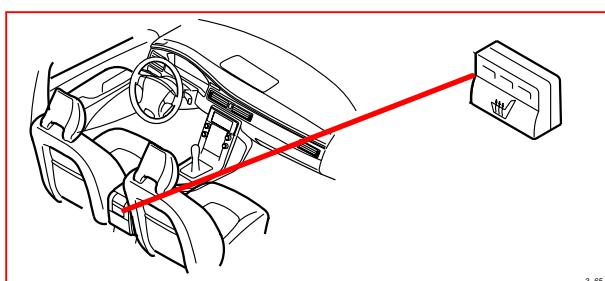


3/93 Contact, driver's seat belt buckle

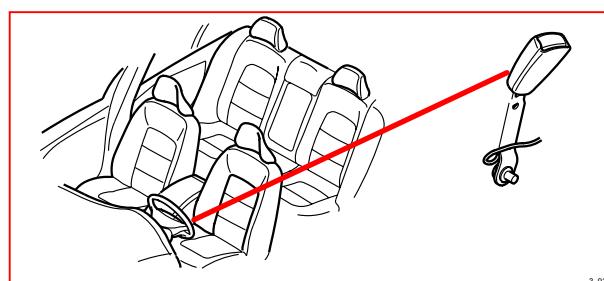

3/78 Lock unit, tailgate V70

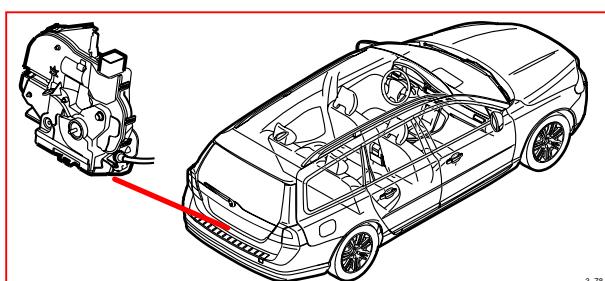


3/94 Contact, passenger seat belt buckle

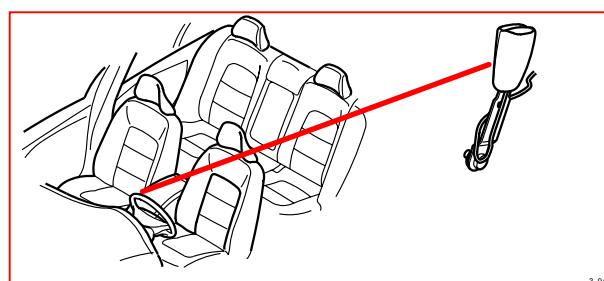


Component illustrations

3/111 - 3/131


3/111 Light Switch Module (LSM)

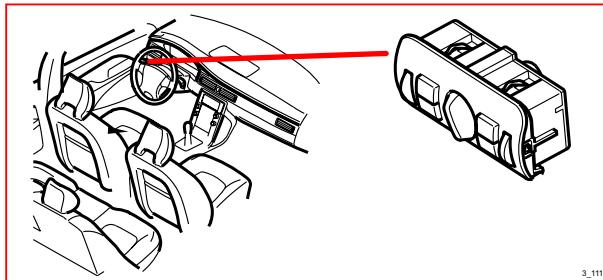


3/127 Passenger Door Module (PDM)

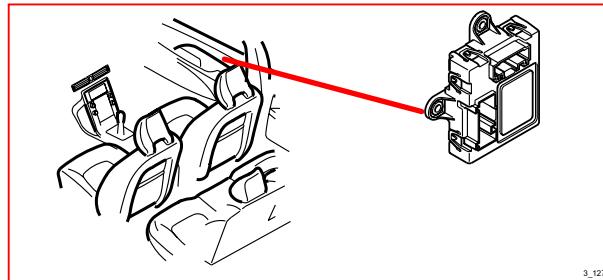


3/112 Climate control system

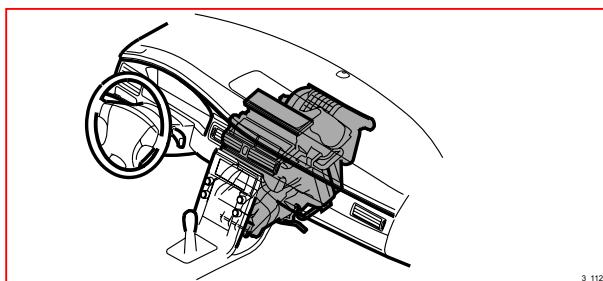


3/128 Left rear Door Module (LDM)

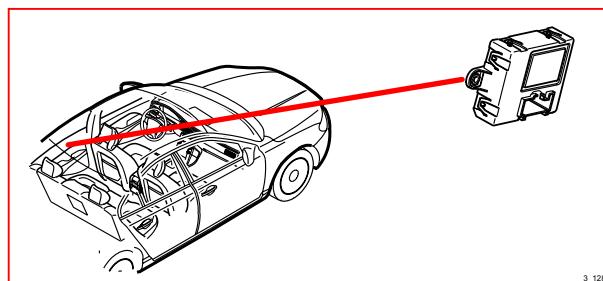


3/113 Rear adjustable head restraint relay

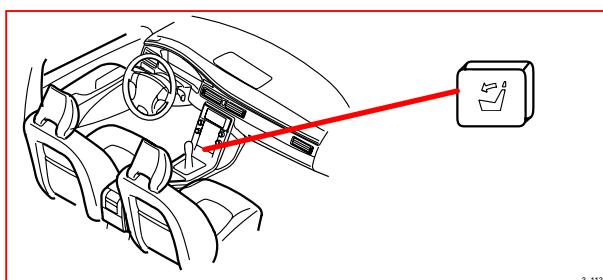


3/129 Right rear Door Module (RDM)

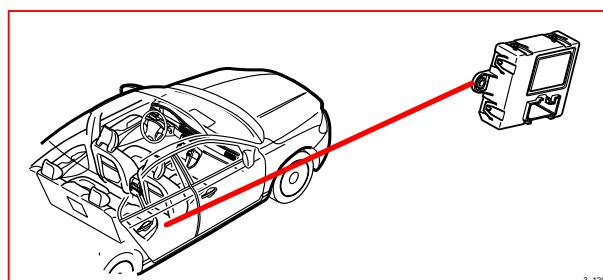


3/117 Switch unit, dome light

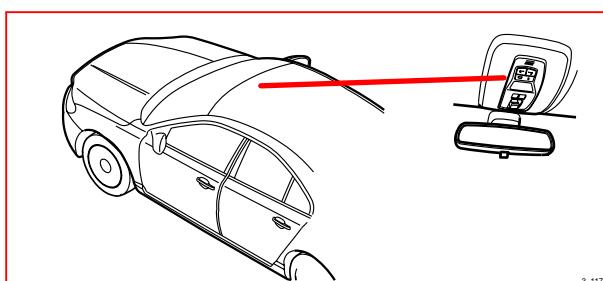


3/130 Steering Wheel Module (SWM)

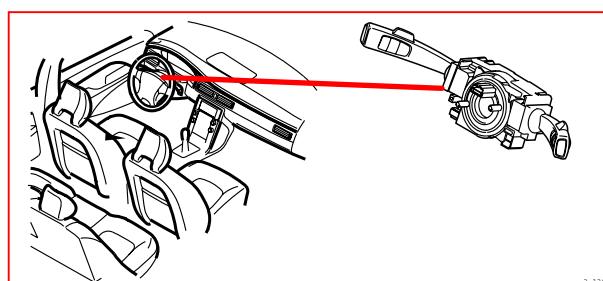

3/126 Driver's Door Module (DDM)

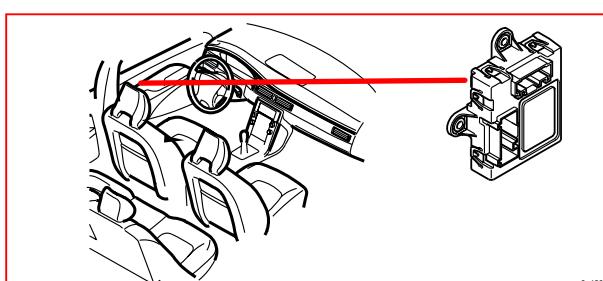


3/131 Steering wheel switch right (SWSR)

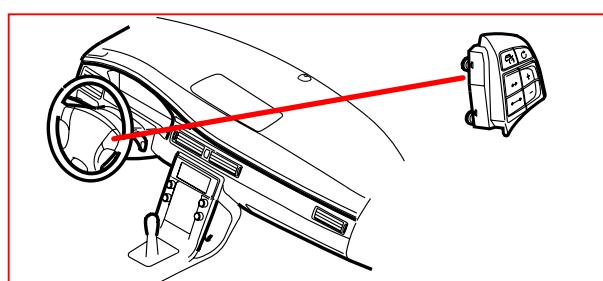


Component illustrations

3/132 - 3/225


3/132 Start Control Unit (SCU)

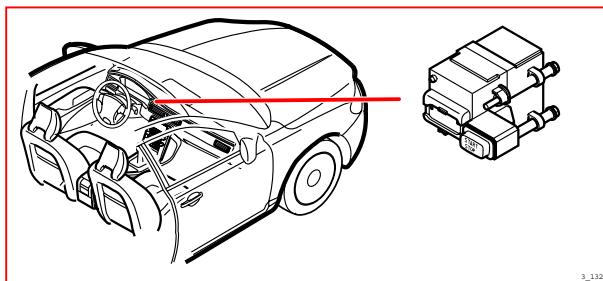


3/176 Switch, front door power window

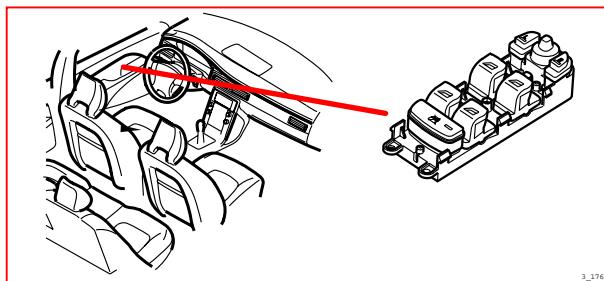


3/135 RTI switch

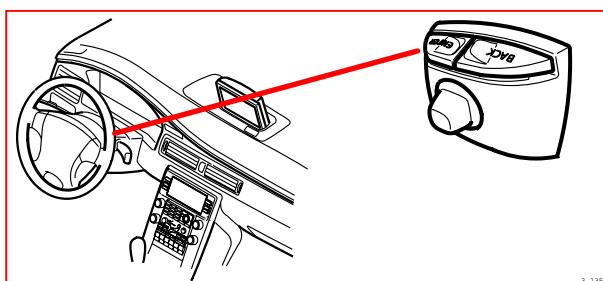


3/217 Contact, LH rear belt buckle

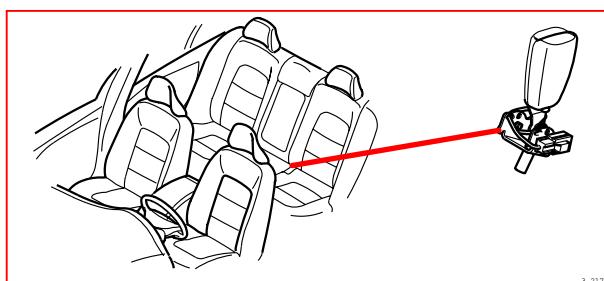


3/156 Gear Selector Module (GSM)

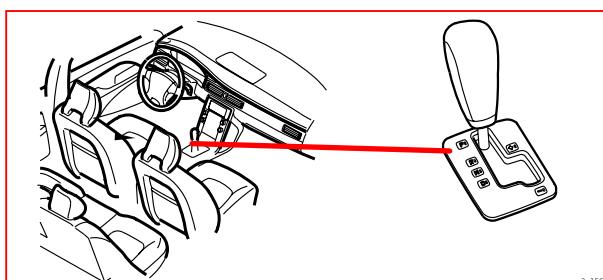


3/218 Contact, center rear belt buckle

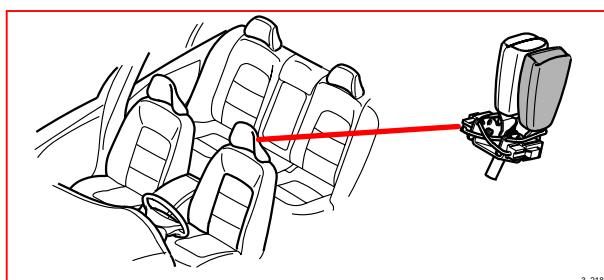


3/157 Switch, passenger side airbag

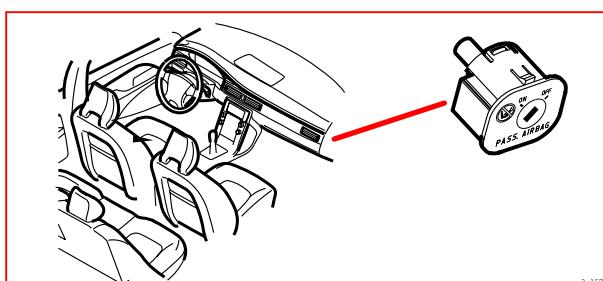


3/219 Contact, LH right belt buckle

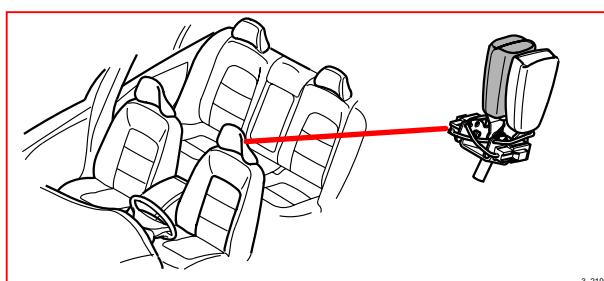

3/173 Switch, trunk lid private lock

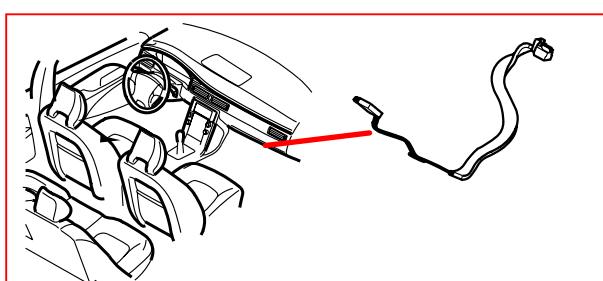


3/225 Switch unit, Continuously Controlled Damping (CCD)

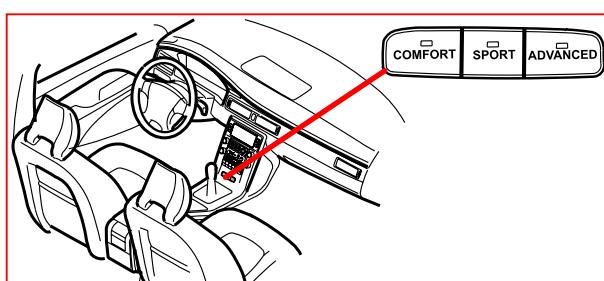


Component illustrations

3/255 - 3/281


3/255 Position sensor, driver's seat

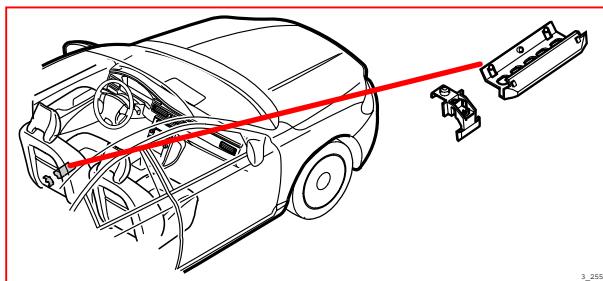


3/273 Lock contact, LH front door

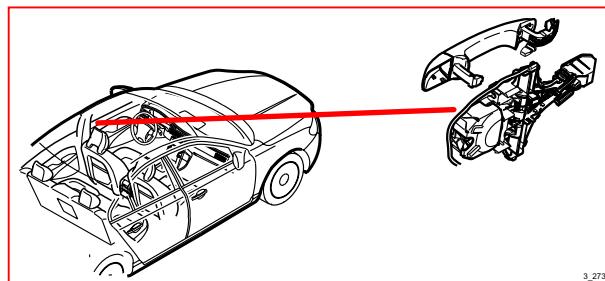


3/256 Position sensor, passenger seat

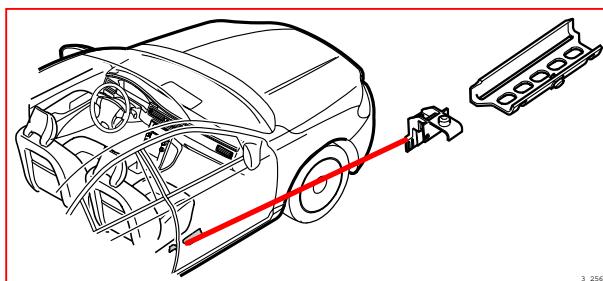


3/274 Lock contact, RH front door

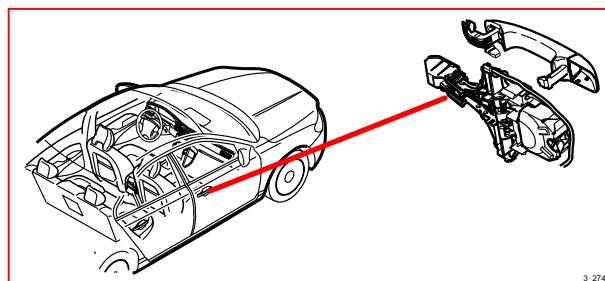


3/267 Switch unit, telematics

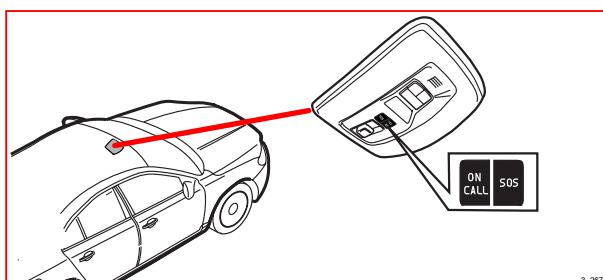


3/275 Lock contact, LH rear door

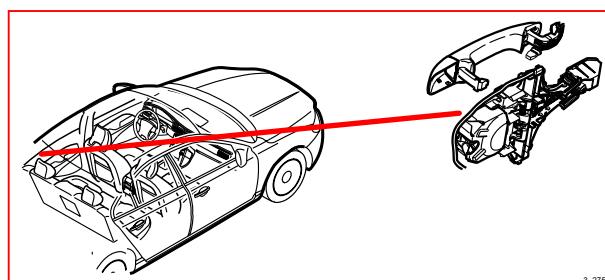


3/271 Contact, immobilizer, clutch pedal

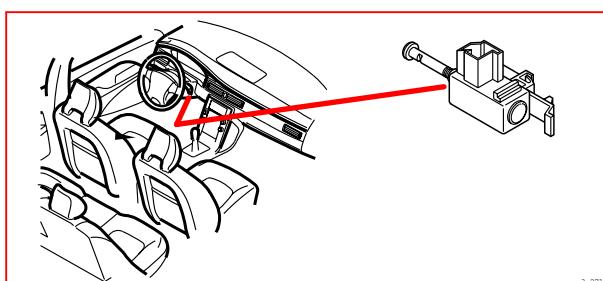


3/276 Lock contact, RH rear door

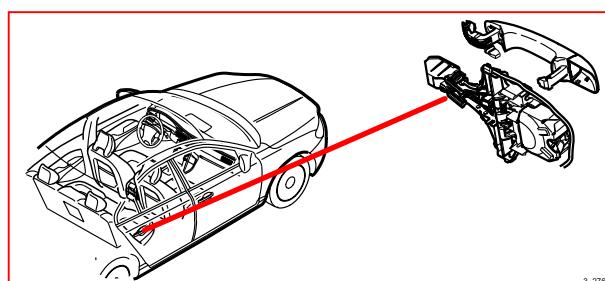

3/272 Switch, parking brake

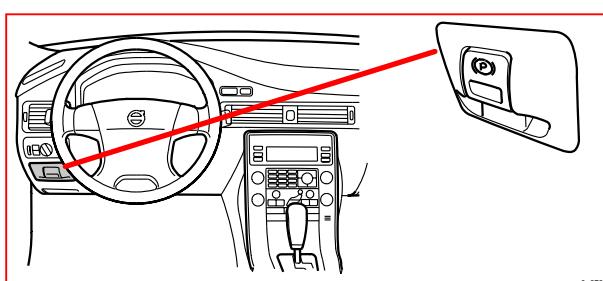


3/281 Infotainment Control Module (ICM)

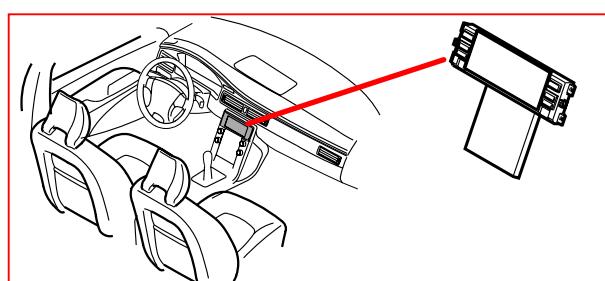


Component illustrations

3/282 - 4/31


3/282 Switch indicator 1st gear

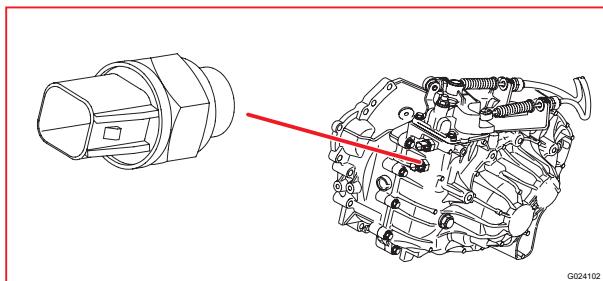


4/7 Combustion Preheater Module (CPM)

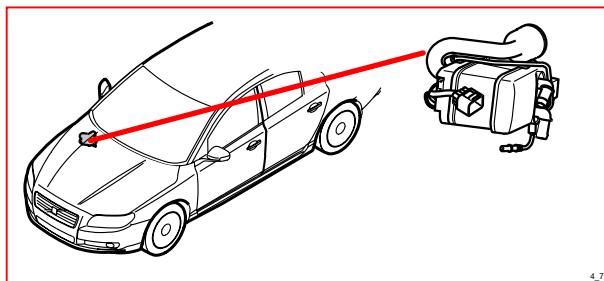


3/284 Diagnostic contact, brake light

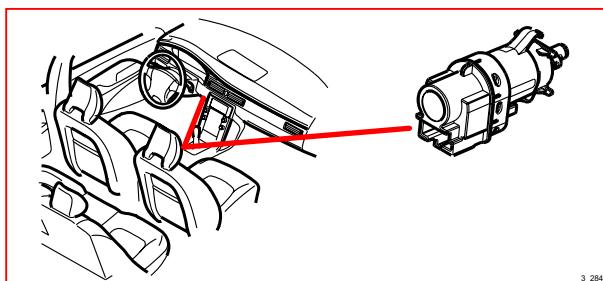


4/9 Supplemental restraint system module (SRS)

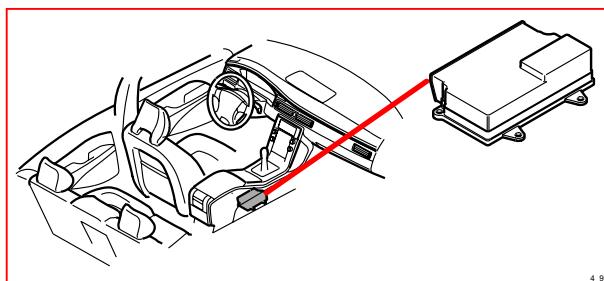


3/291 Trunk lid/tailgate closing switch, V70

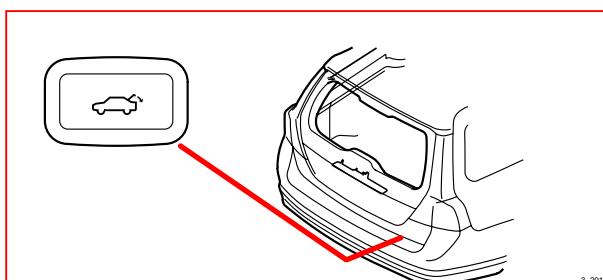


4/16 Brake Control Module (BCM)

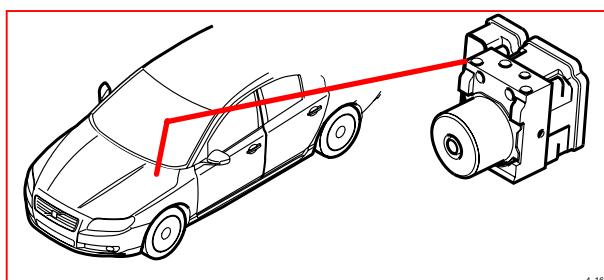


3/293 Handsfree control panel cellular phone

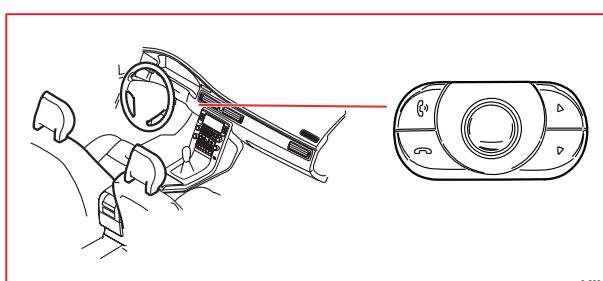


4/28 Transmission Control Module (TCM)

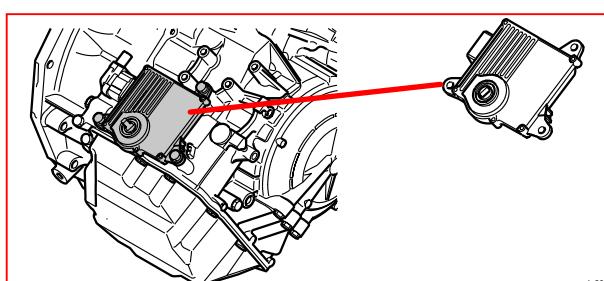

4/6 Climate Control Module (CCM)

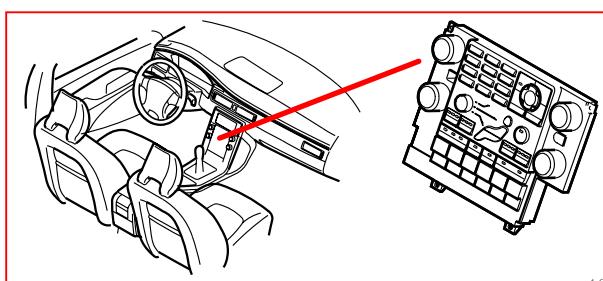


4/31 Fan control module

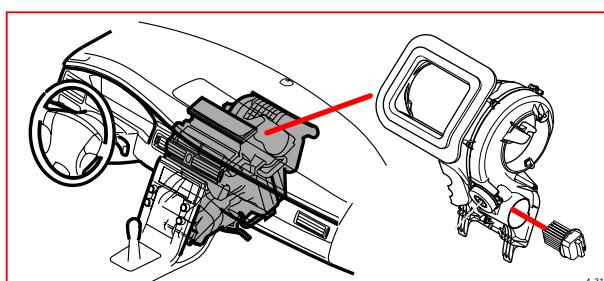


Component illustrations

4/33 - 4/56:C3


4/33 Sunroof module

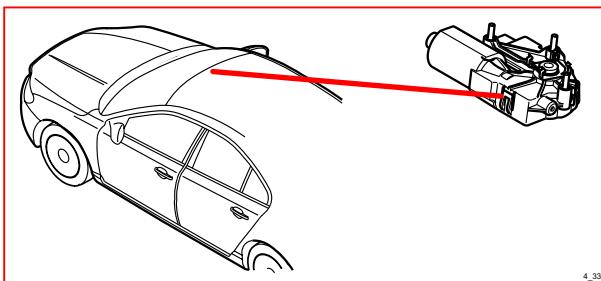


4/52 Power Seat Module (PSM)

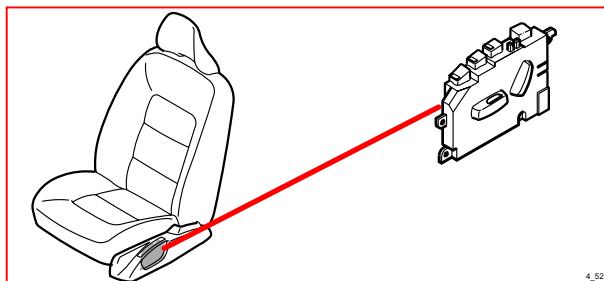


4/46 Engine Control Module (ECM), 5 cyl.

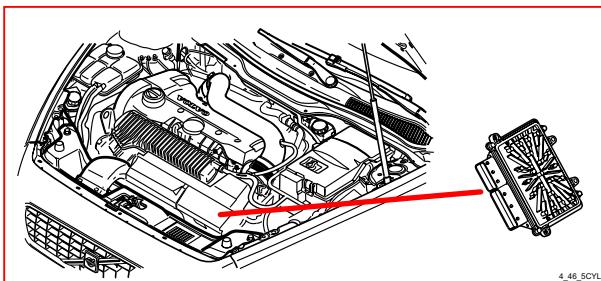


4/56 Central Electronic Module (CEM)

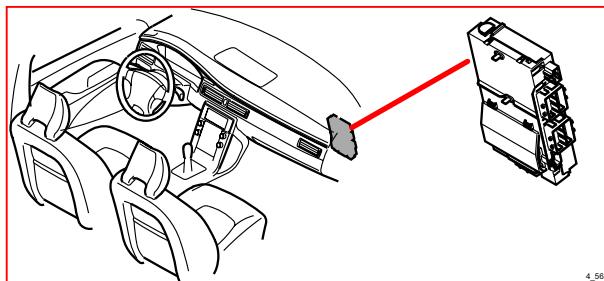


4/46 Engine Control Module (ECM), 6 cyl.

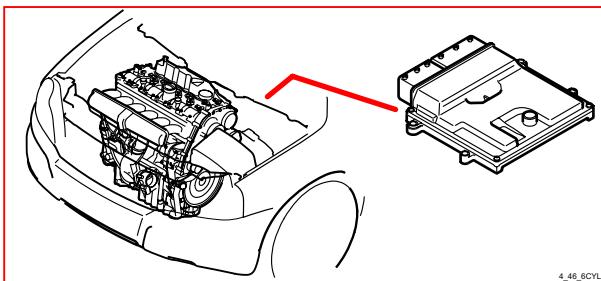


4/56:C1 Central Electronic Module (CEM)

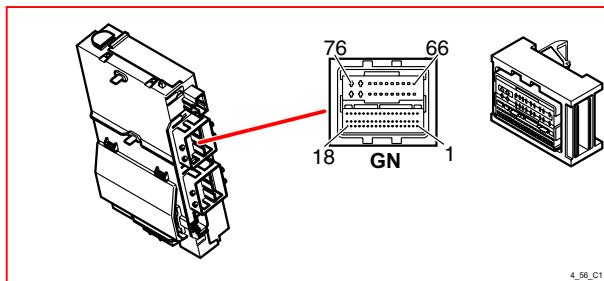


4/46 Engine Control Module (ECM), 8 cyl.

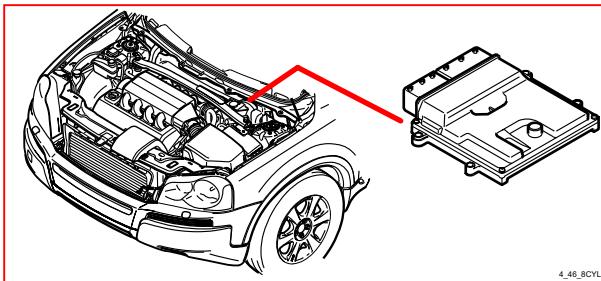


4/56:C2 Central Electronic Module (CEM)

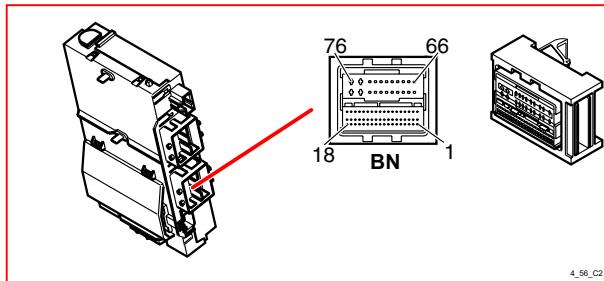

4/46 Engine Control Module (ECM), diesel

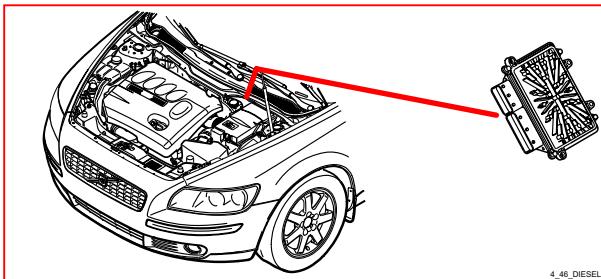


4/56:C3 Central Electronic Module (CEM)

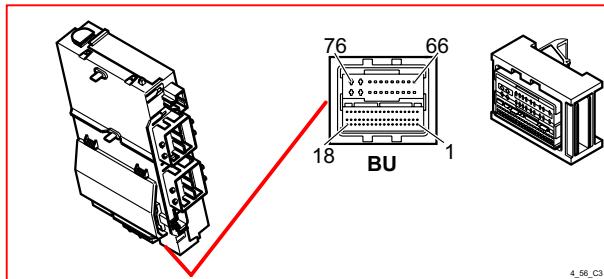


Component illustrations

4/56:C4 - 4/86


4/56:C4 Central Electronic Module (CEM)

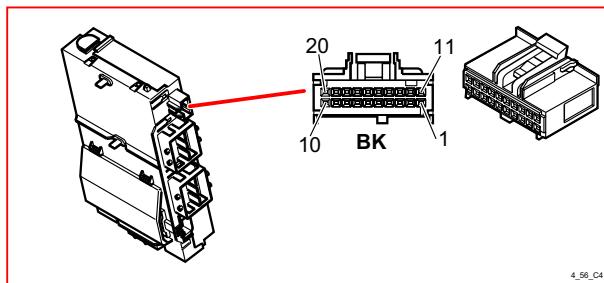


4/80 Forward Sensing Module (FSM)

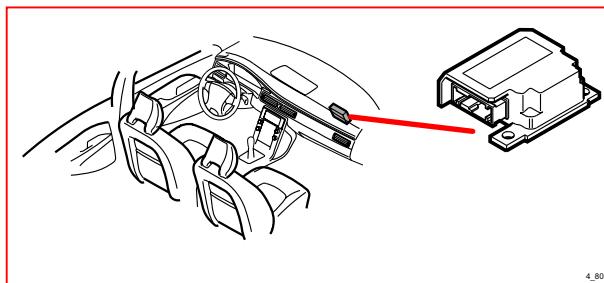


4/56:C5 Central Electronic Module (CEM)

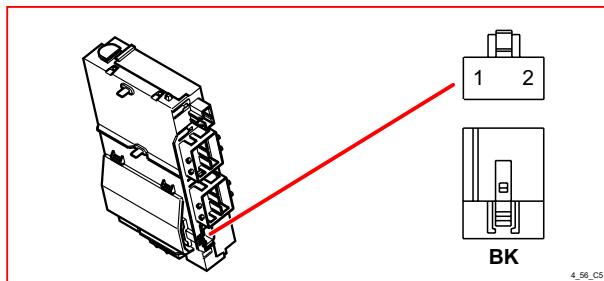


4/82 Differential Electronic Module (DEM)

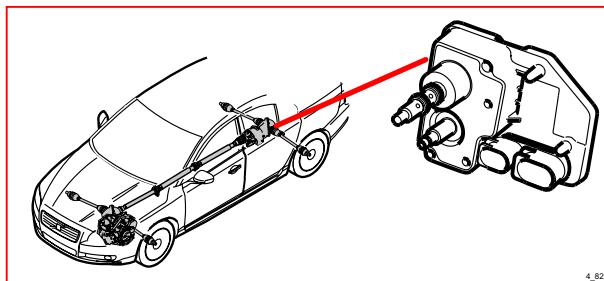


4/68 Steering Wheel Angle Sensor Module (SAS)

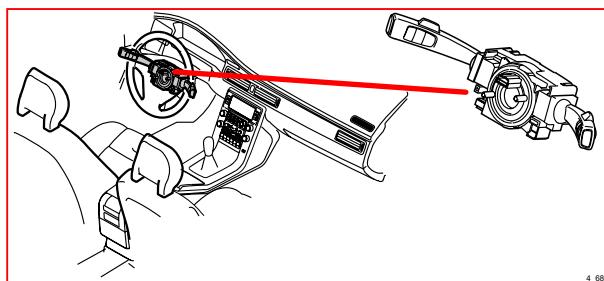


4/83 Fuel pump control module

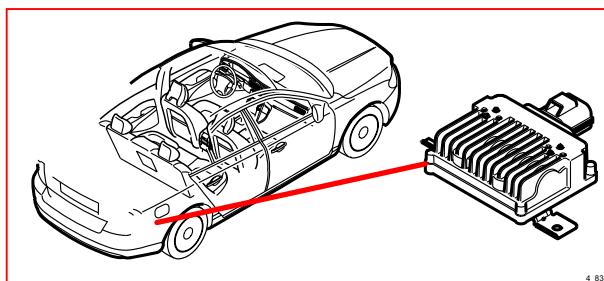


4/71 Cooling fan control module

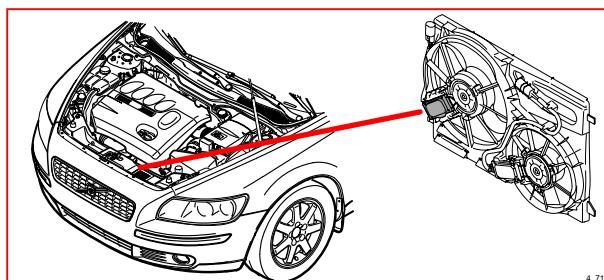


4/84 Suspension Module (SUM)

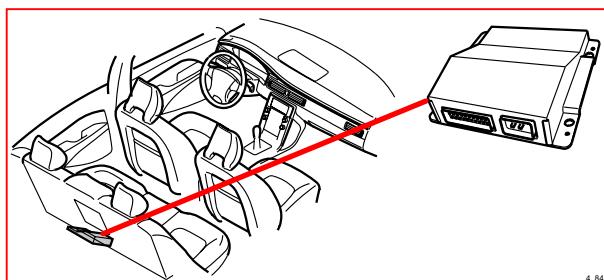

4/76 Remote control unit for garage door opener

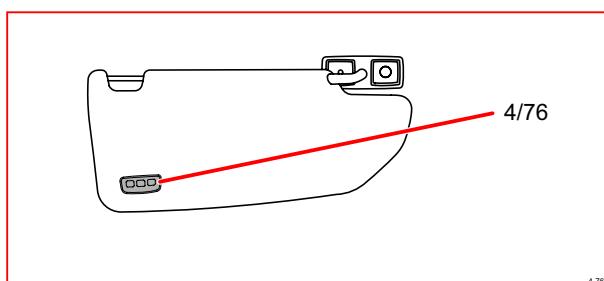


4/86 Parking Assistance Module (PAM)

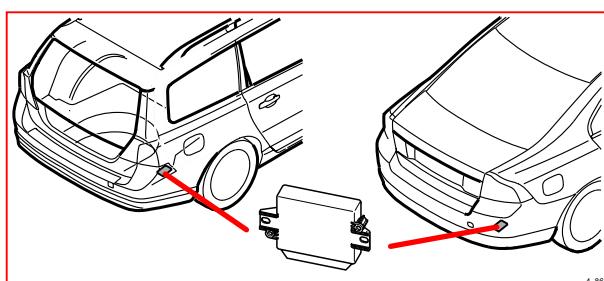


Component illustrations

4/93 - 4/119


4/93 Keyless Vehicle Module (KVM)

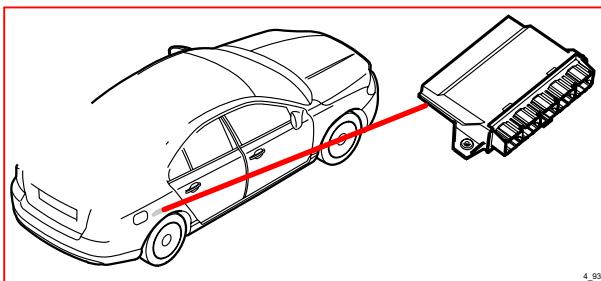


4/110 Trailer Module (TRM)

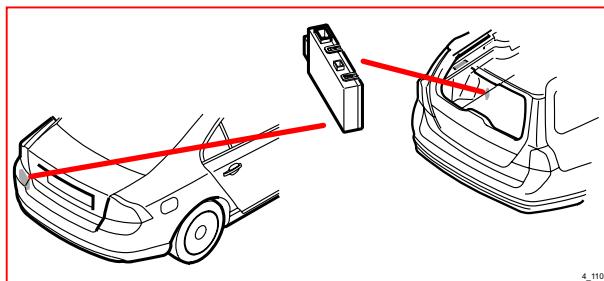


4/99 Electronic power steering control module

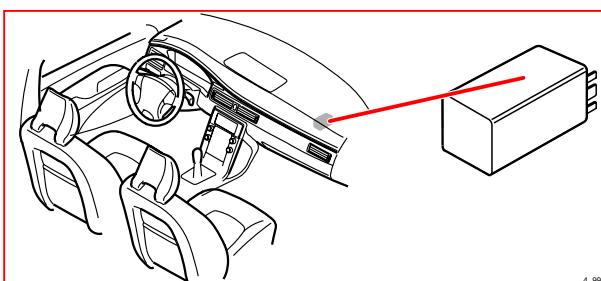


4/115 Parking Brake Module (PBM)

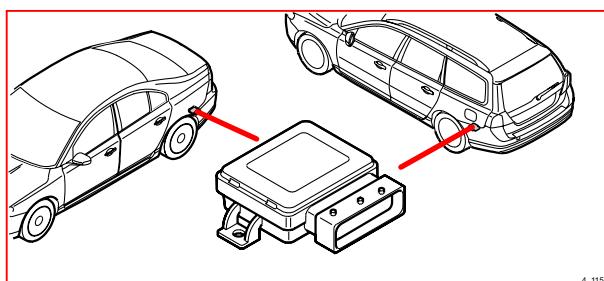


4/102 Steering Column Lock module (SCL)

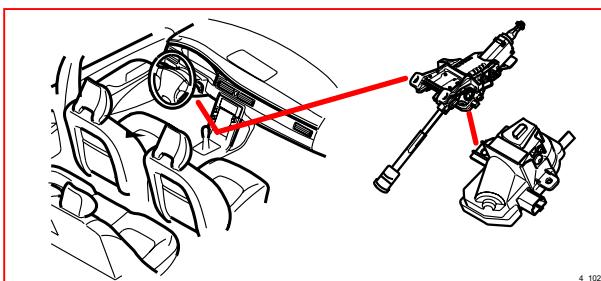


4/116 Power Operated Tailgate Module (POT), V70

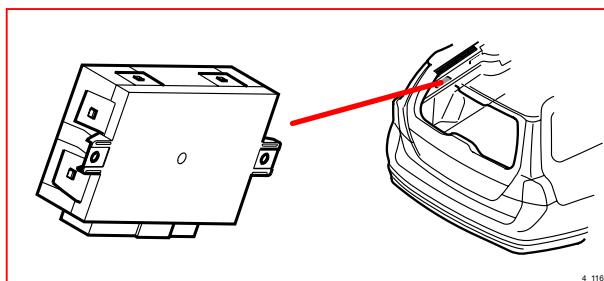


4/106 Control module parking heater remote start

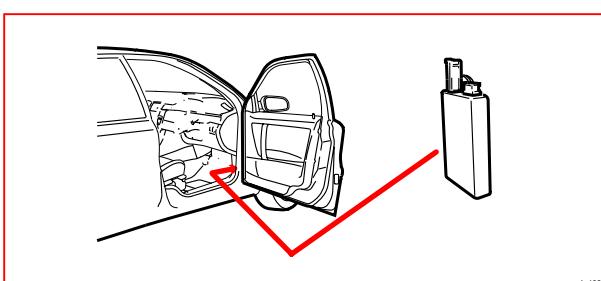


4/118 Headlamp Control Module (HCM)

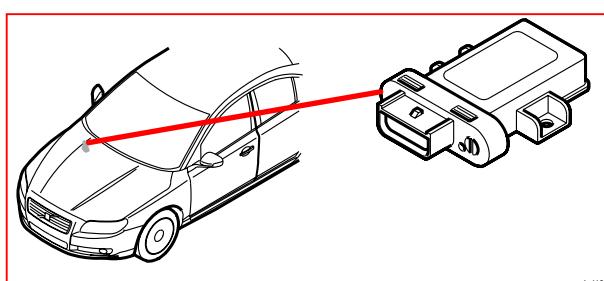

4/109 Glow plug control module

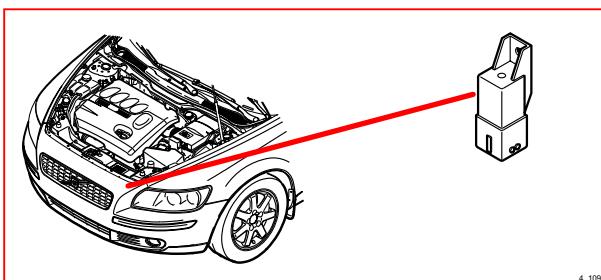


4/119 Remote Keyless Entry (RKE)

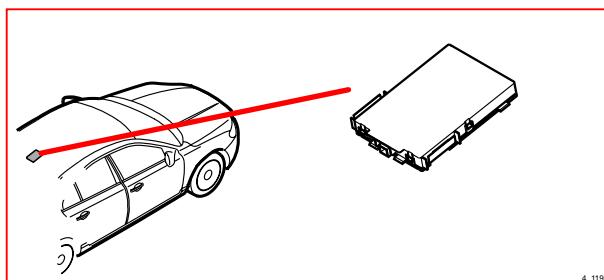

Component illustrations


4/119.2 - 6/18

4/119.2 Remote Receiver Module (RRX)

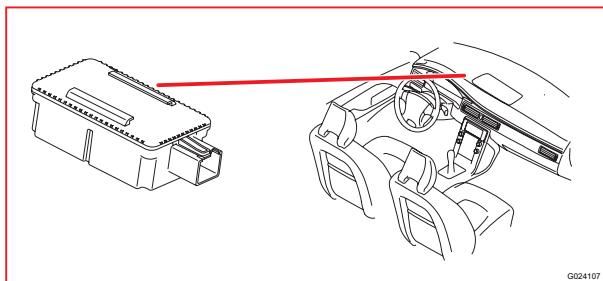


G024107

4/120 Parking Assistance Camera module (PAC)

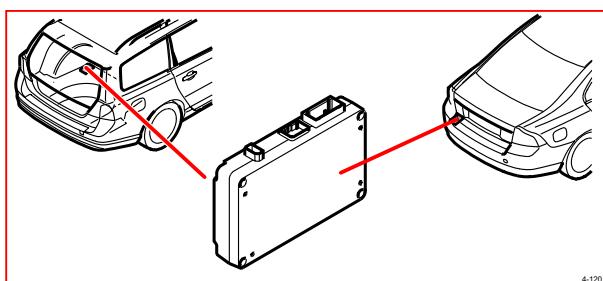


4_120

6/1 Wiper Motor Module (WMM)

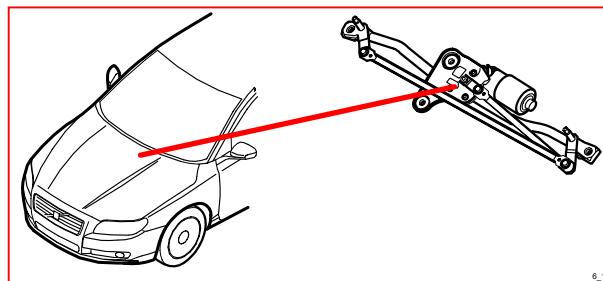


6_1

6/8 Lock motor central locking, trunk lid/tailgate, S80

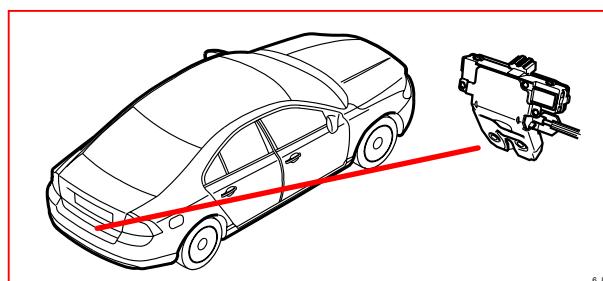


6_8

4/121 Cooling fan control module 2

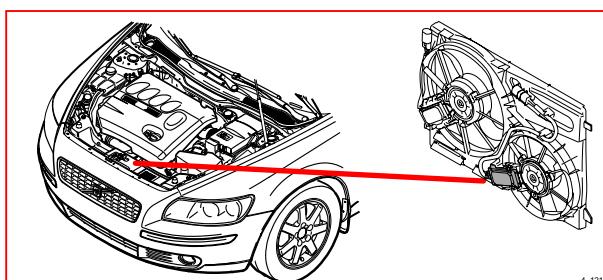


4_121

6/16 Driver seat motor, backrest angle

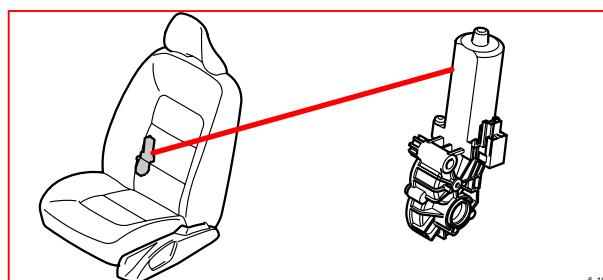


6_16

4/124 Accessory USB unit (AUU)

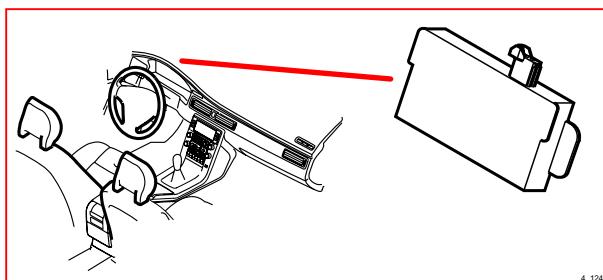


4_124

6/17 Driver seat motor, up/down front edge

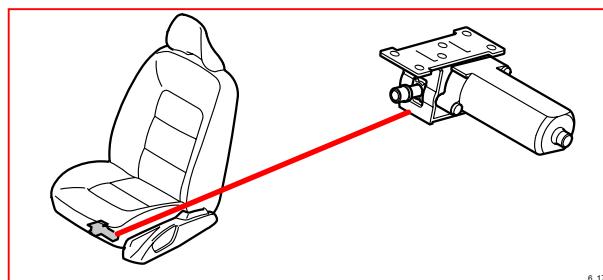


6_17

5/1 Driver Information Module (DIM)

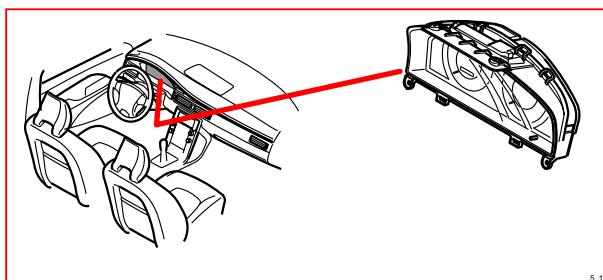

5_1

6/18 Driver seat motor, up/down rear edge

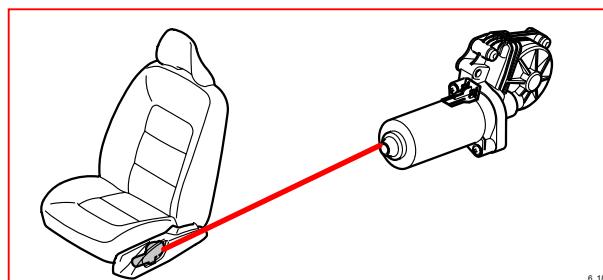


6_18


Component illustrations

6/19 - 6/37


6/19 Driver seat motor, forward/backward

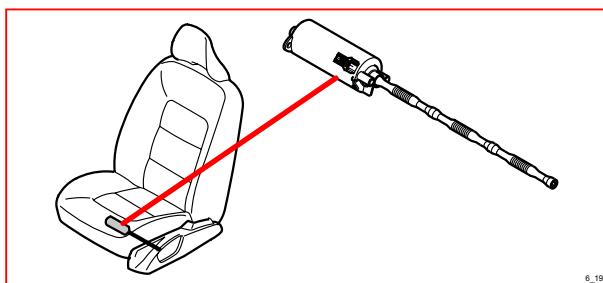


6/20 Passenger seat motor, forward/backward

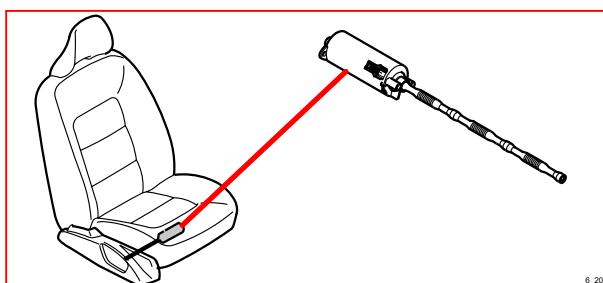


6/25 Starter motor

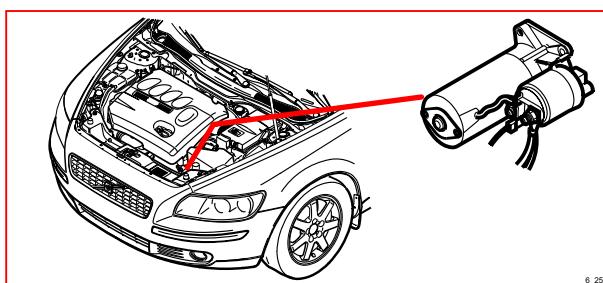


6/26 Alternator Control Module (ACM)

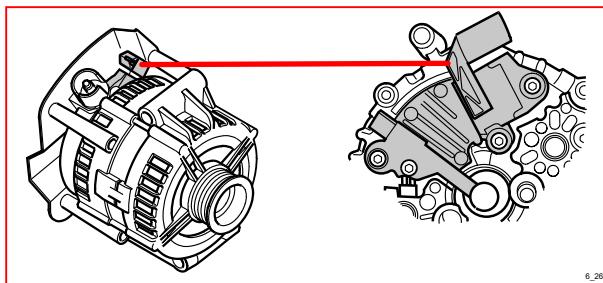


6/28 Motor, passenger compartment fan

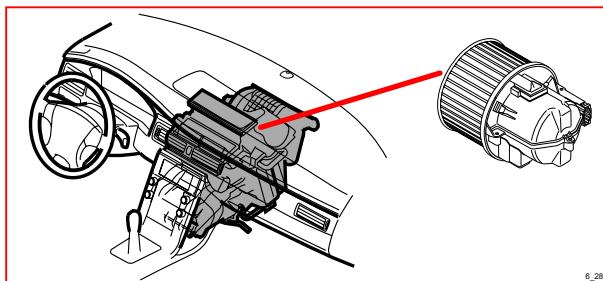


6/32 Rear window wiper motor, V70

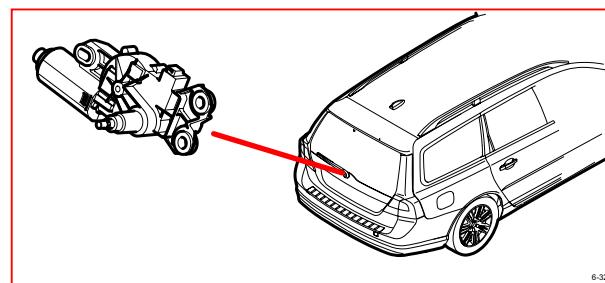


6/33 Fuel pump

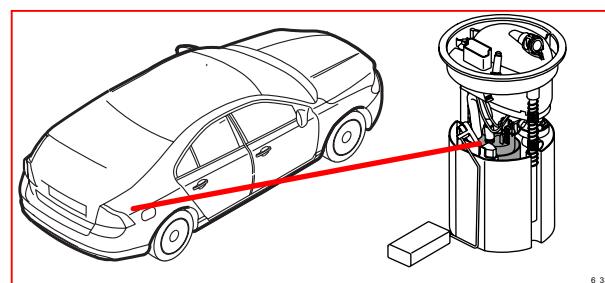


6/35 Fuel pump, auxiliary heater

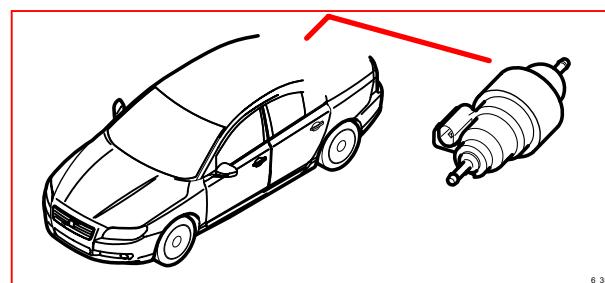

6/36 Lock motor, central locking, LH front door

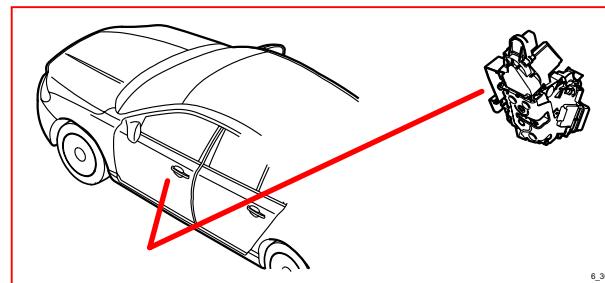


6/37 Lock motor, fuel filler cover

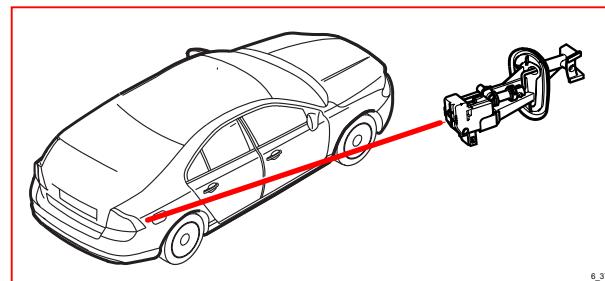


Component illustrations

6/38 - 6/61


6/38 Left-hand headlight level adjustment motor

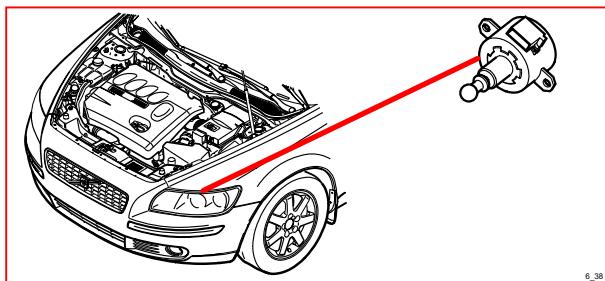


6/39 Right-hand headlight level adjustment motor

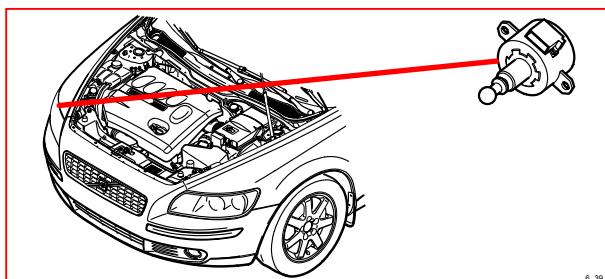


6/48 Damper Motor Module (DMM), recirculation

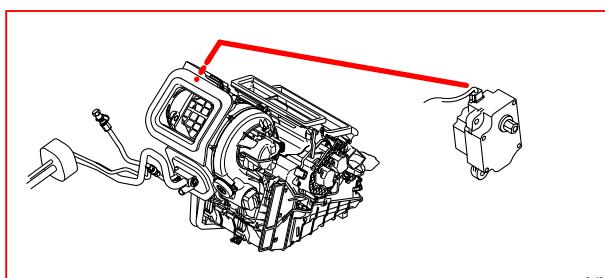


6/55 Lock motor, central locking, RH front door

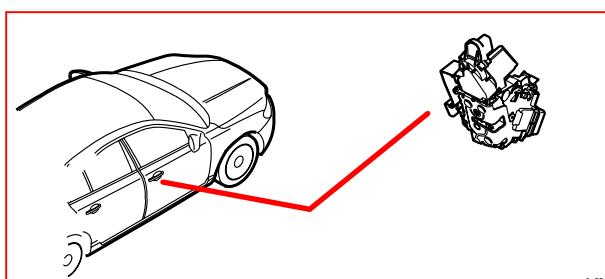


6/56 Lock motor, central locking, RH rear door

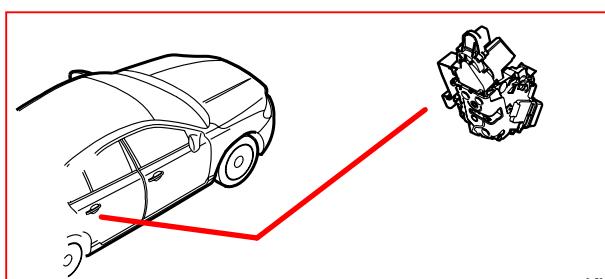


6/57 Lock motor, central locking, LH rear door

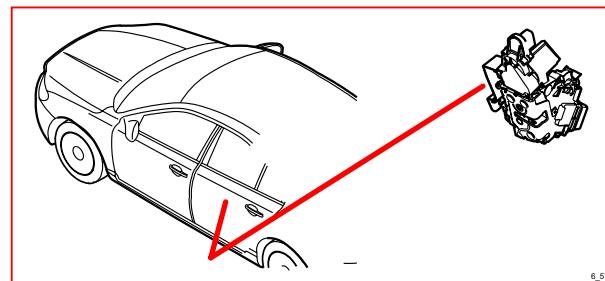


6/58 Motor, front driver's door power window

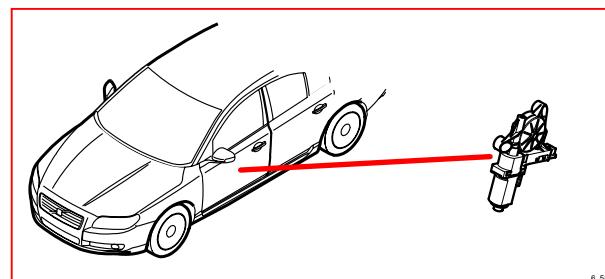


6/59 Motor, rear left power window

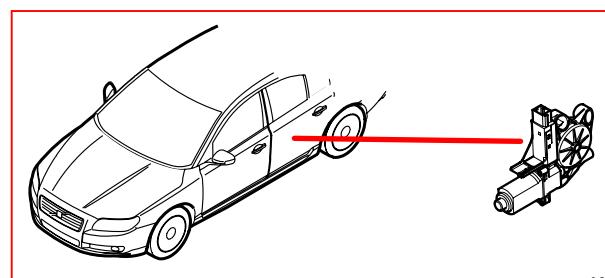

6/60 Motor, front passenger door power window

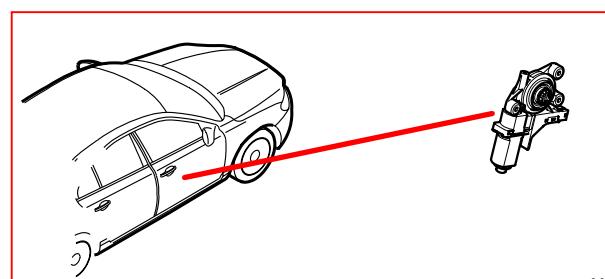


6/61 Motor, rear right power window

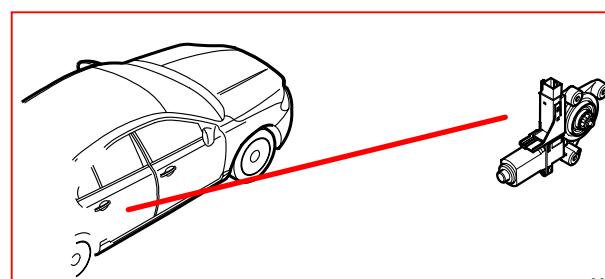


Component illustrations

6/62 - 6/96


6/62 Power door mirror, left

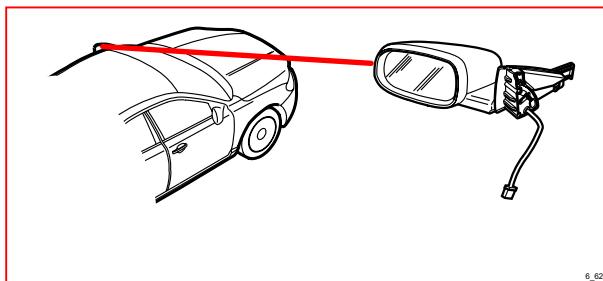


6/63 Power door mirror, right

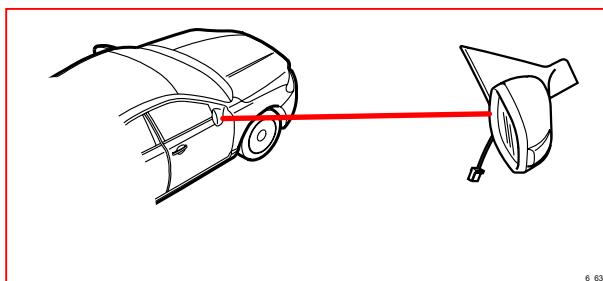


6/64 Passenger seat motor, backrest angle

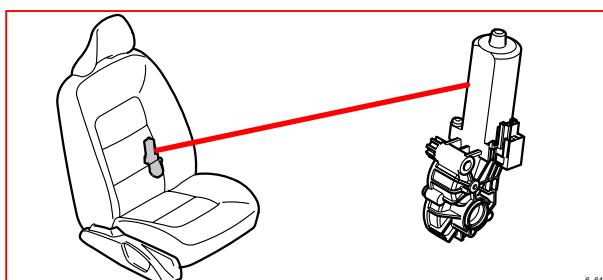


6/65 Passenger seat motor, up/down front edge

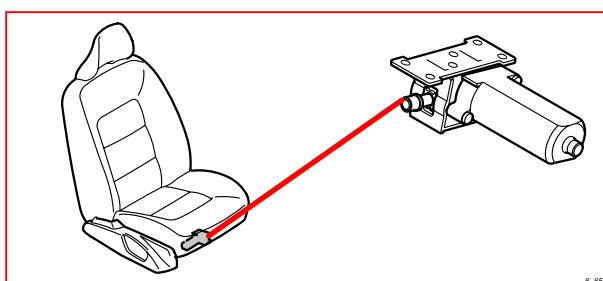


6/66 Passenger seat motor, up/down rear edge

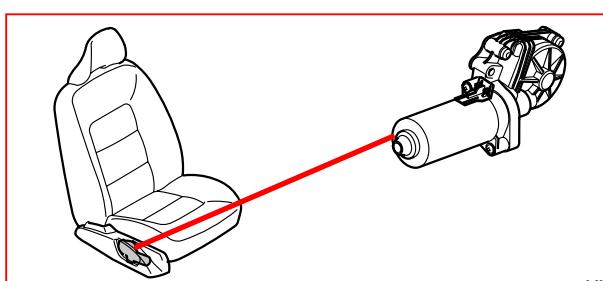


6/67 Pump, fuel leakage control

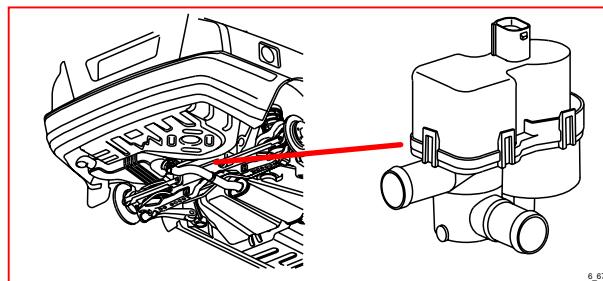


6/71 Valve, speed-dependent power steering

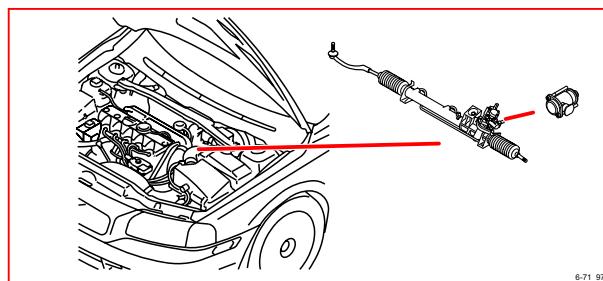


6/73 Coolant pump

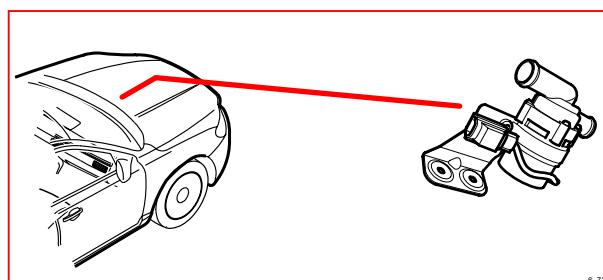

6/95 Damper Motor Module (DMM), temperature, left side

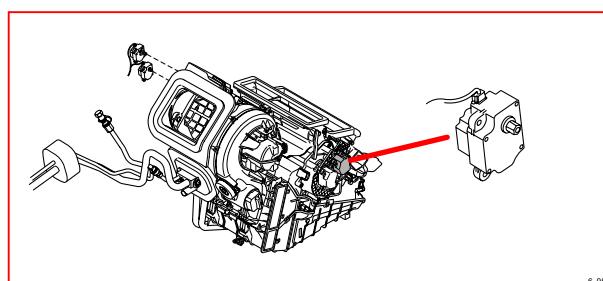


6/96 Damper Motor Module (DMM), temperature, right side

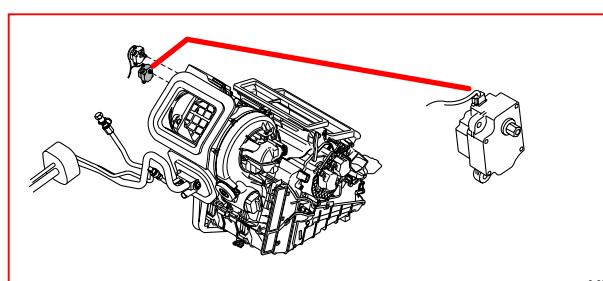


Component illustrations

6/102 - 6/127


6/102 Damper Motor Module (DMM),
defroster

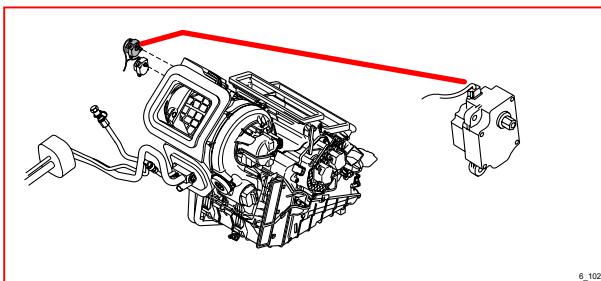


6/103 Damper Motor Module (DMM),
floor/ventilation

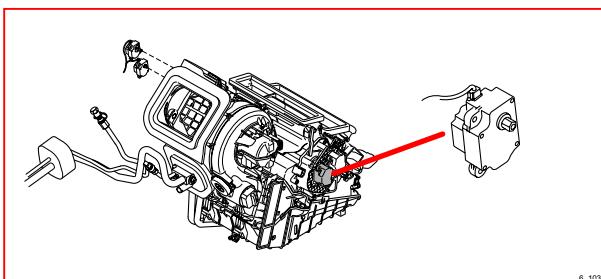


6/104 High pressure headlight washer
motor

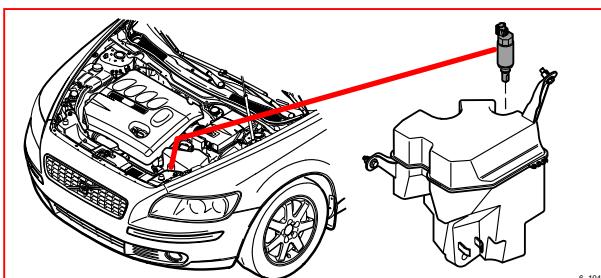


6/114 Vacuum pump

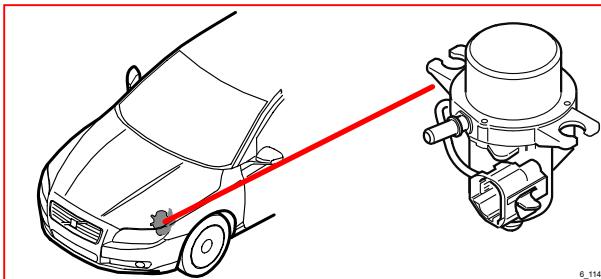


6/118 Regulator motor, swirl throttle

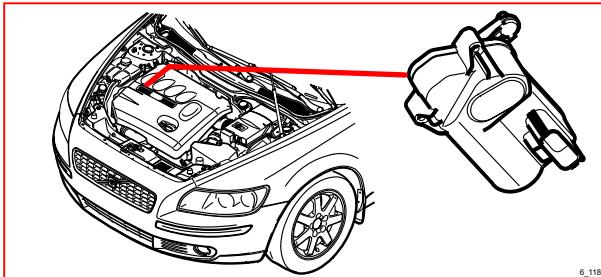


6/120 Electronic throttle actuator, 5 cyl.

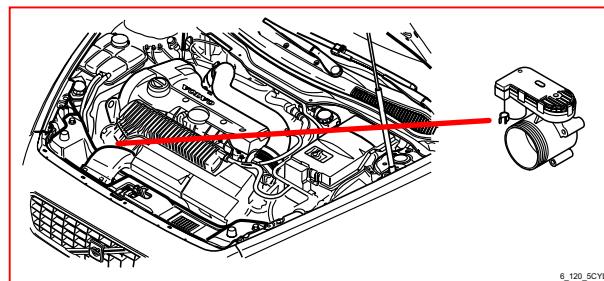


6/120 Electronic throttle actuator, 6 cyl.

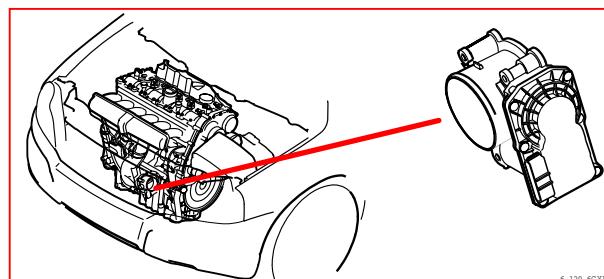


6/120 Electronic throttle actuator, 8 cyl.

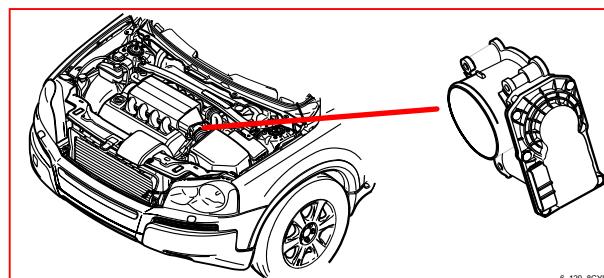

6/120 Electronic throttle actuator, diesel

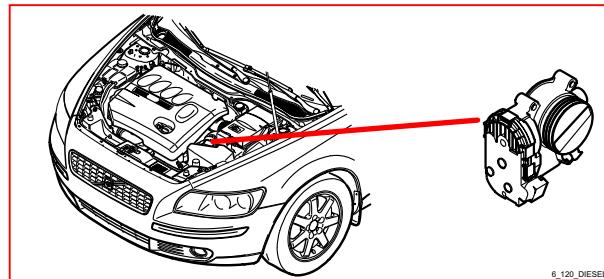


6/127 Washer motor

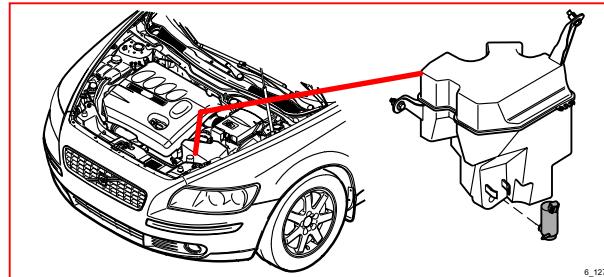


Component illustrations

6/139 - 7/4


6/139 Upper actuating motor, intake manifold

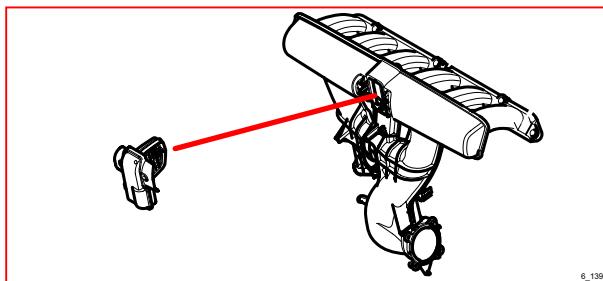


6/140 Lower actuating motor, intake manifold

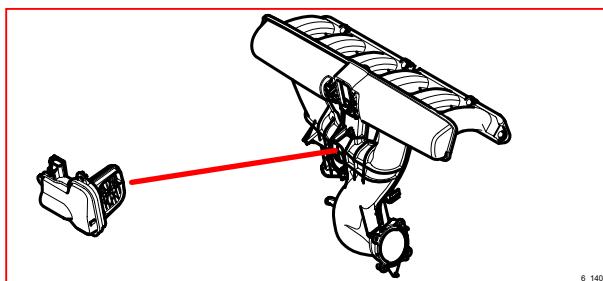


6/143 Regulator motor, turbo

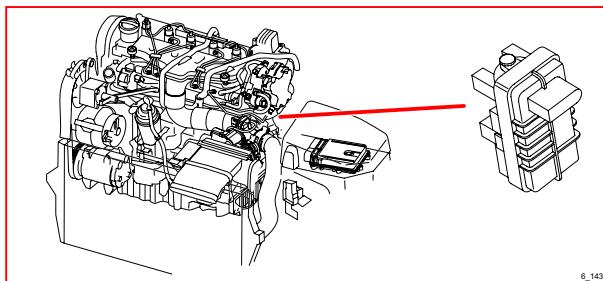


6/144 Telescopic nozzle, left

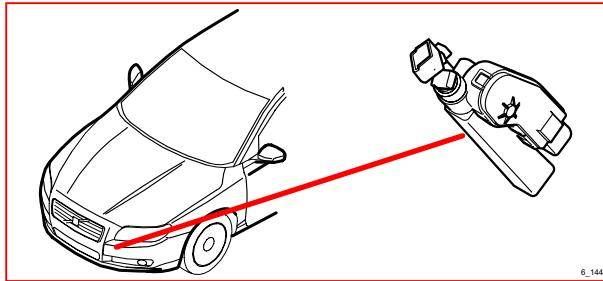


6/145 Telescopic nozzle, right

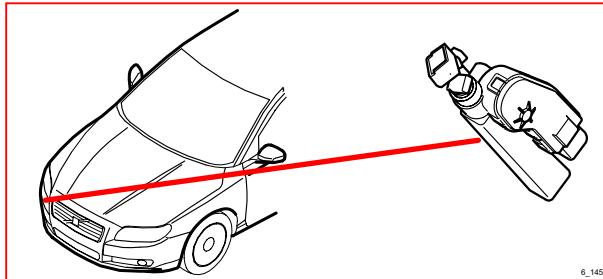


6/146 Lock motor, rear left brake disc

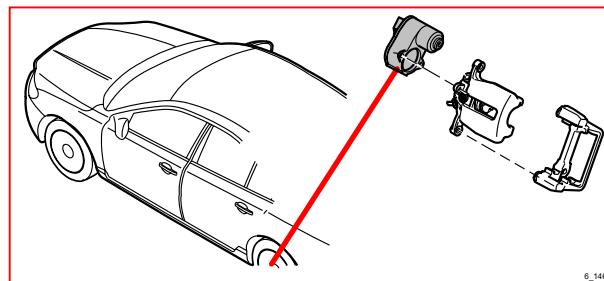


6/147 Lock motor, rear right brake disc

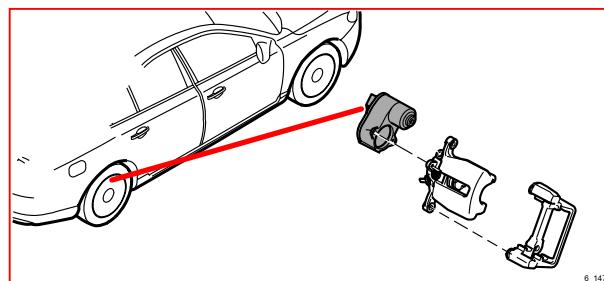


6/148 Hydraulic pump trunk lid/tailgate operation, V70

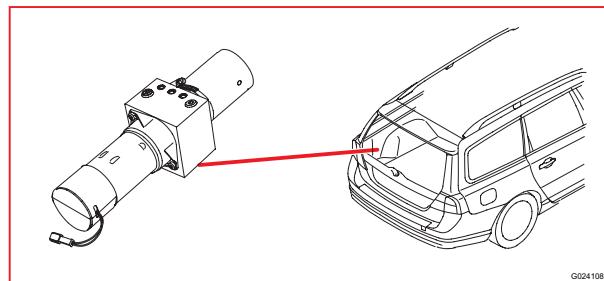

6/149 Tailgate closing motor, V70

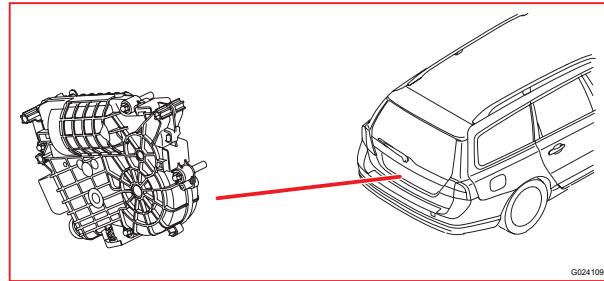


7/4 Brake fluid level sensor

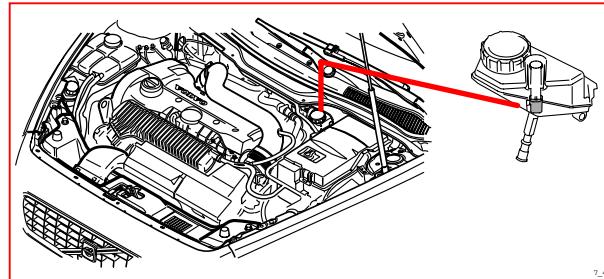


Component illustrations

7/5 - 7/16


7/5 Washer fluid level sensor

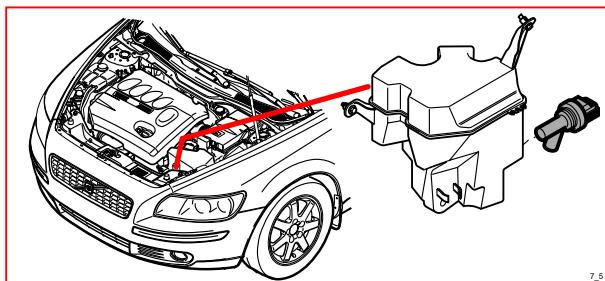


7/15 Front heated oxygen sensor, 5 cyl.

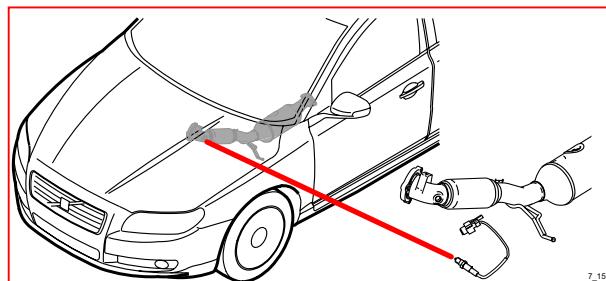


7/6 Oil pressure sensor

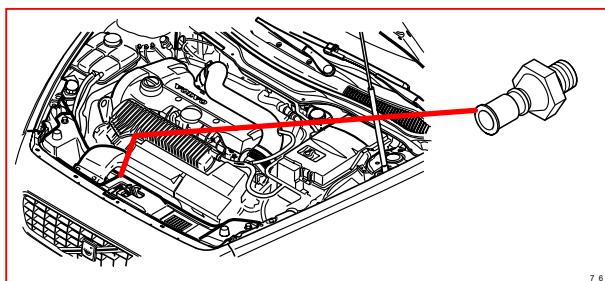


7/15 Front oxygen sensor, bank 1, 6 Cyl.

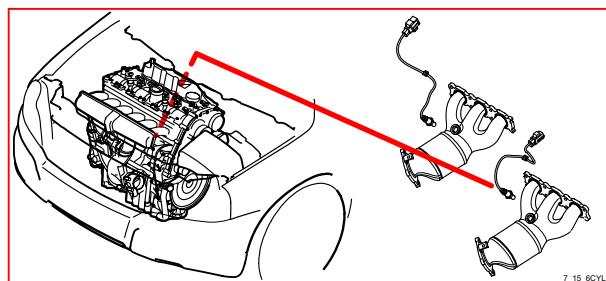


7/8 Pressure sensor, climate control system

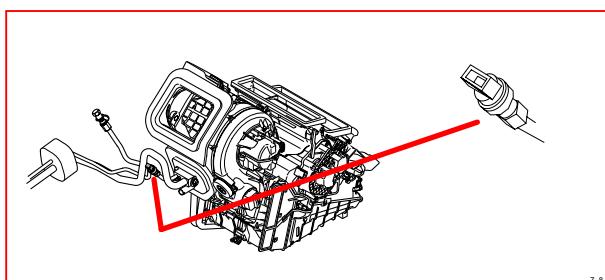


7/15 Front oxygen sensor, bank 2, 8 cyl.

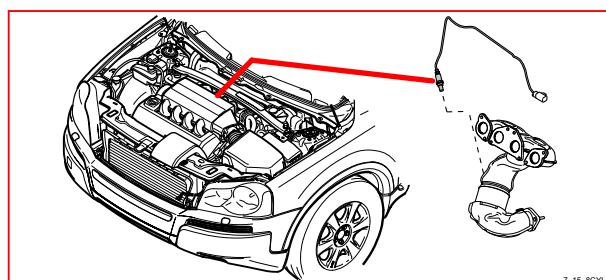


7/10 Interior temperature sensor

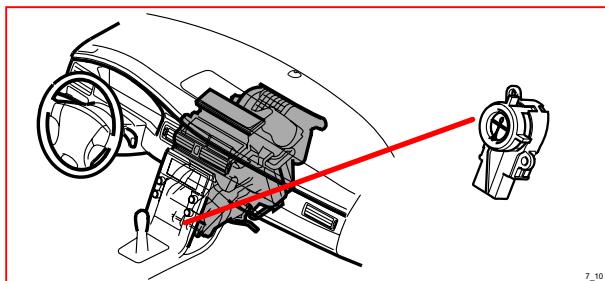


7/15 Front heated oxygen sensor, diesel

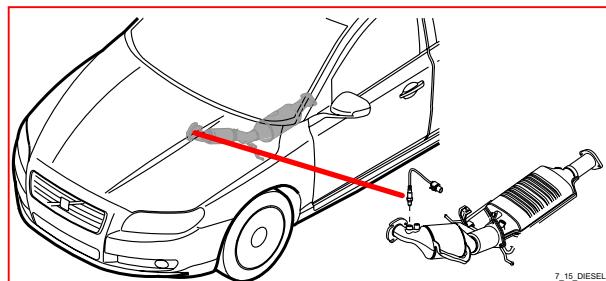

7/12 Solar sensor, twilight sensor and indicator alarm

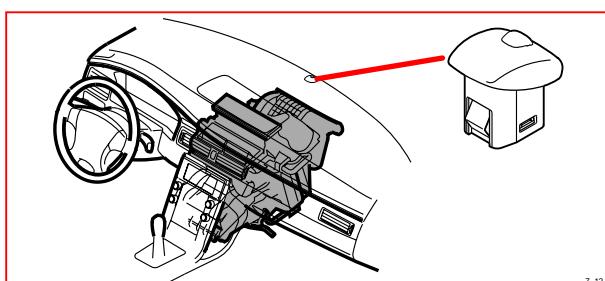


7/16 Coolant temperature sensor

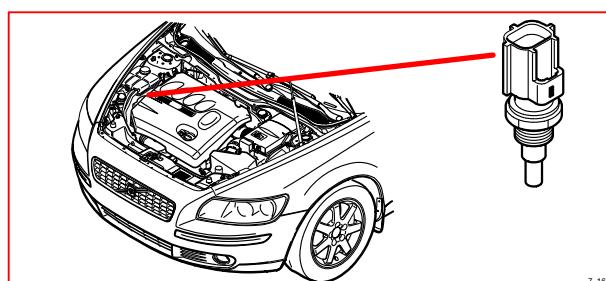


Component illustrations

7/17 - 7/32


7/17 Mass air flow sensor (MAF)

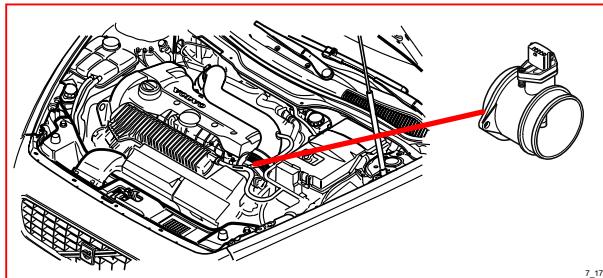


7/25 Impulse sensor, 5 Cyl. & Diesel

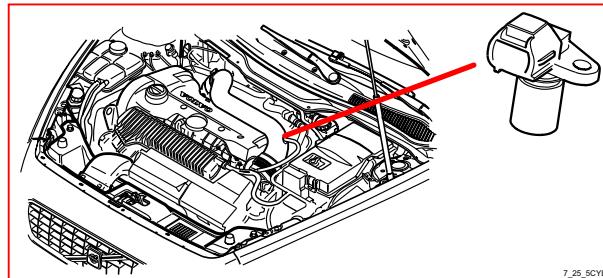


7/23 Rear knock sensor

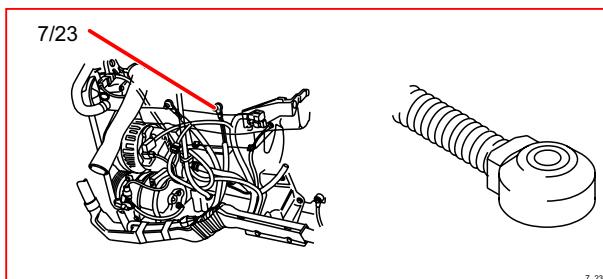


7/25 Impulse sensor, 6 cyl.

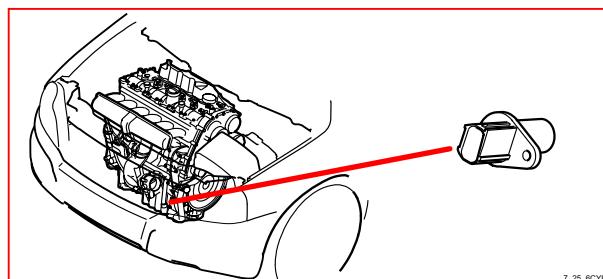


7/23 Rear knock sensor, 8 cyl.

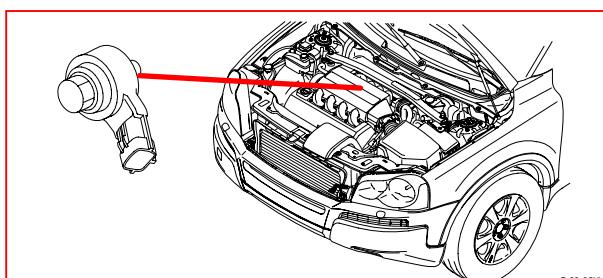


7/25 Impulse sensor, 8 cyl.

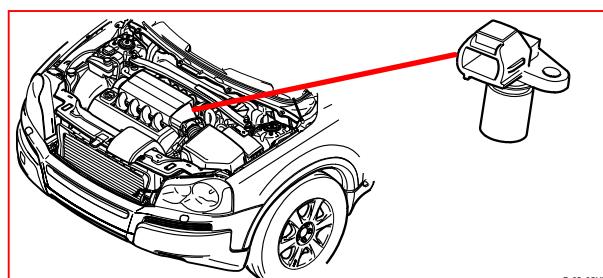


7/24 Front knock sensor

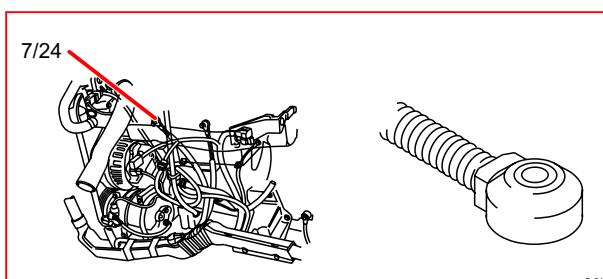


7/31 Left-hand front ABS sensor

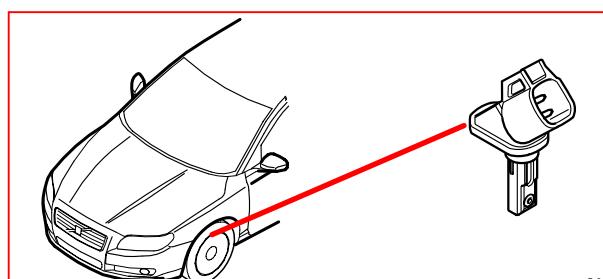

7/24 Front knock sensor, 8 cyl.

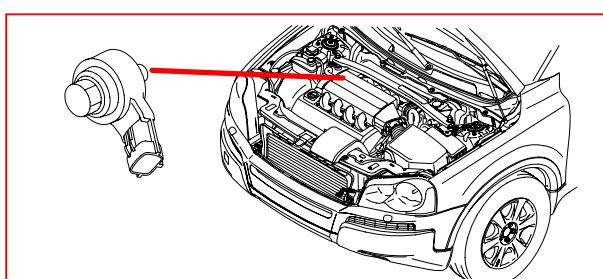


7/32 Right-hand front ABS sensor

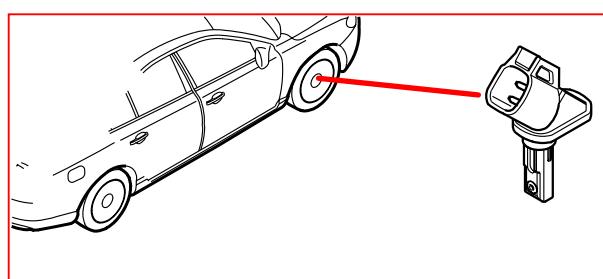


Component illustrations

7/35 - 7/74


7/35 Oil level sensor

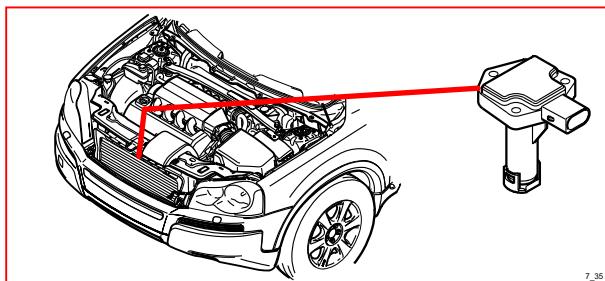


7/61 Input speed sensor

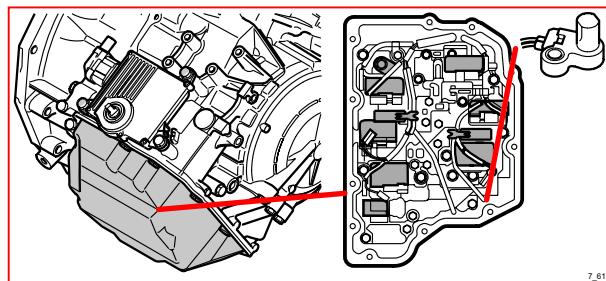


7/41 Temperature sensor, evaporator

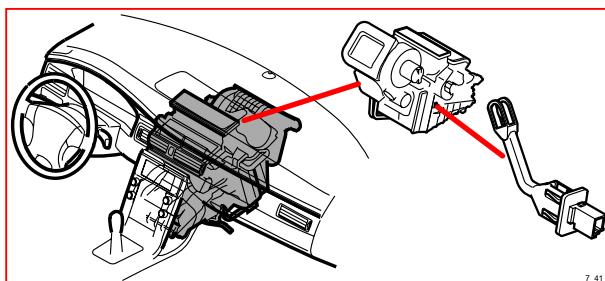


7/62 Output speed sensor

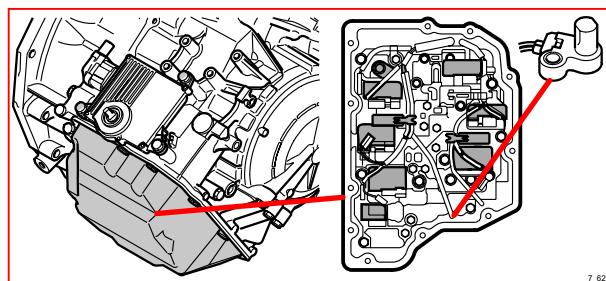


7/51 Accelerator pedal sensor

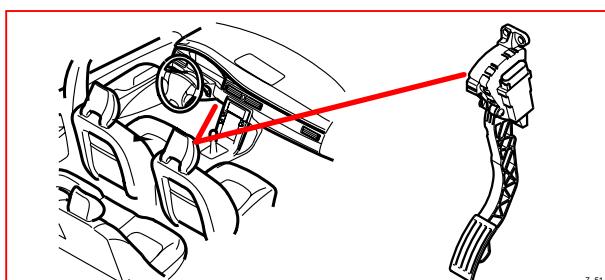


7/69 Outside temperature sensor

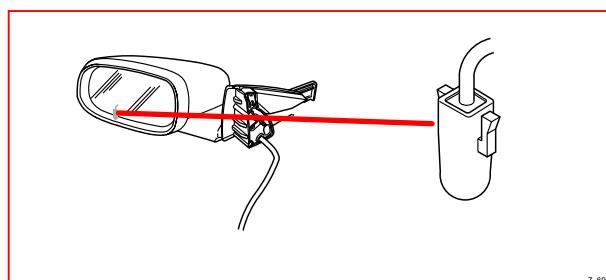


7/56 Left-hand rear ABS sensor

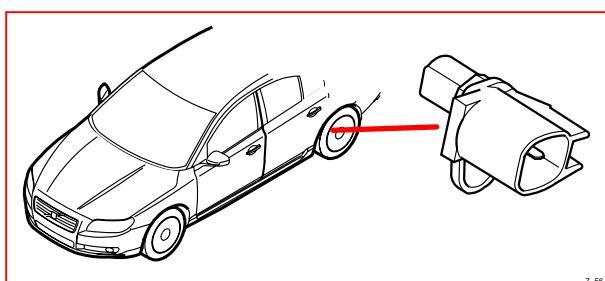


7/73 Coolant level sensor

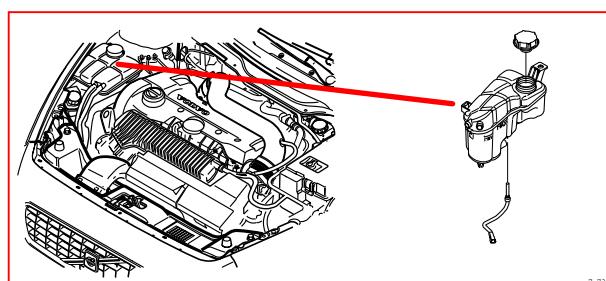

7/57 Right-hand rear ABS sensor

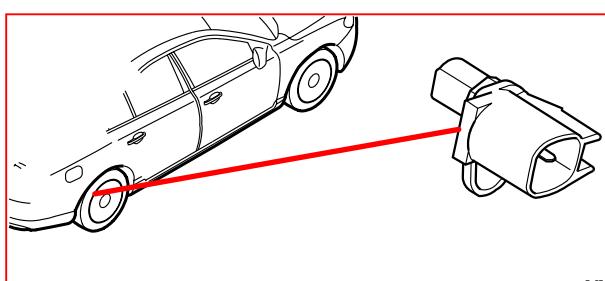


7/74 Fluid temperature sensor, automatic transmission

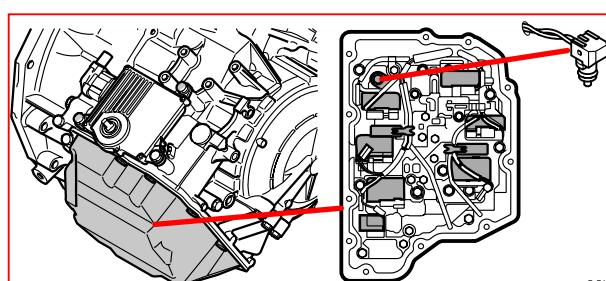


Component illustrations

7/81 6 Cyl. - 7/100.


7/81 Pressure sensor, intake manifold, 6 cyl.

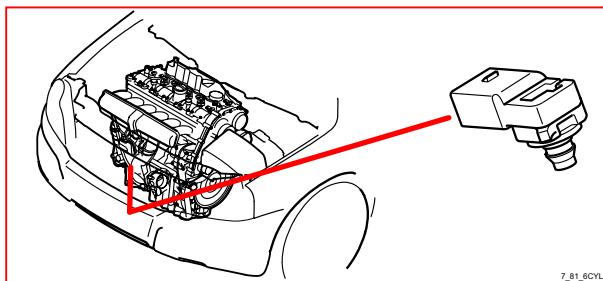


7/81 Pressure sensor, intake manifold, 8 cyl.

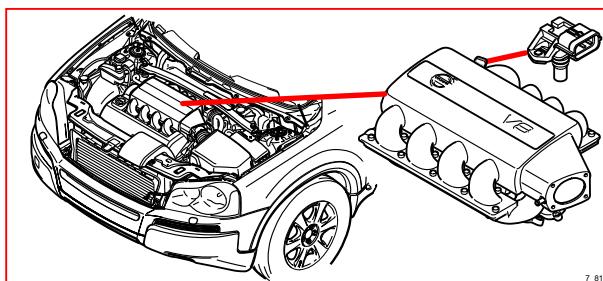


7/82 Rear oxygen sensor, bank 1, 6 cyl.

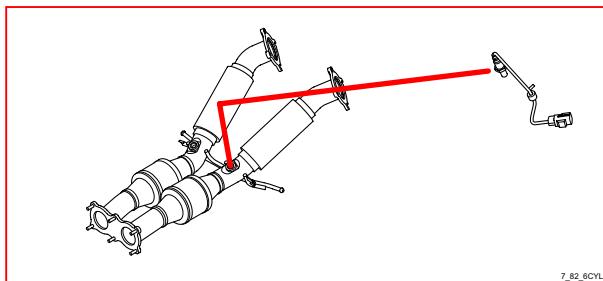


7/82 Front oxygen sensor, bank 1, 8 cyl.

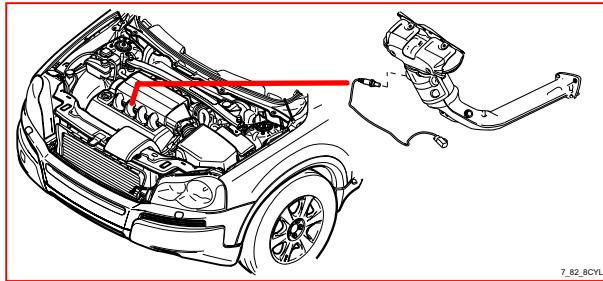


7/87 Acceleration sensor, Four-C, front left

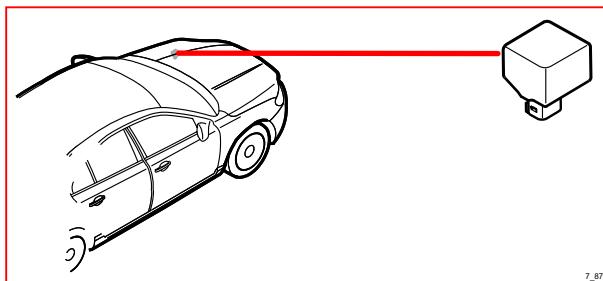


7/88 Acceleration sensor, Four-C, front right

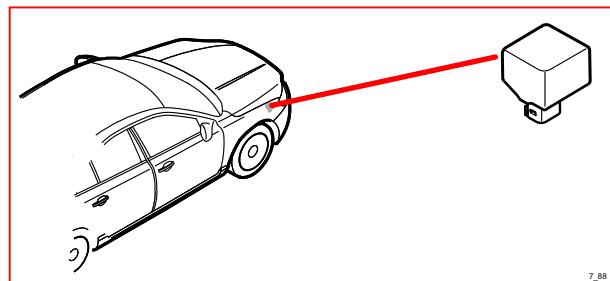


7/89 Acceleration sensor, Four-C, rear left

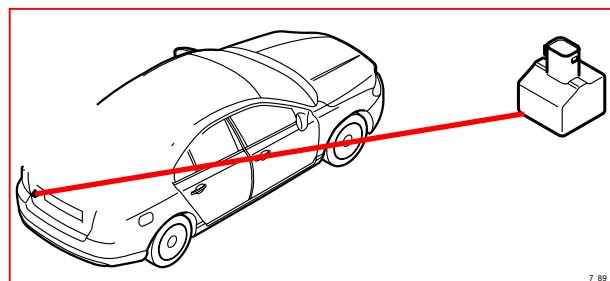


7/91 Steering angle sensor

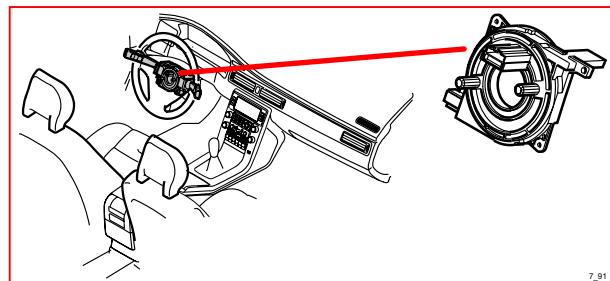

7/93 Occupant Weight Sensor (OWS)

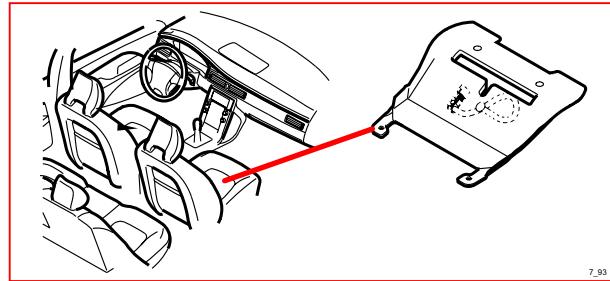


7/100 Inclination Sensor Module (ISM)

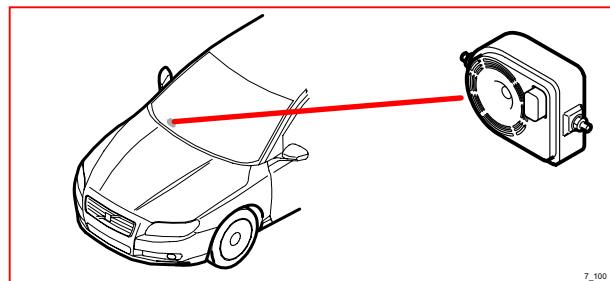


Component illustrations

7/103 - 7/112


7/103 Rear heated oxygen sensor, 5 cyl.

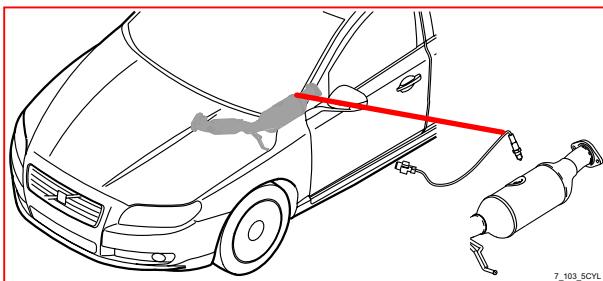


7/108 Left-hand rear side impact sensor

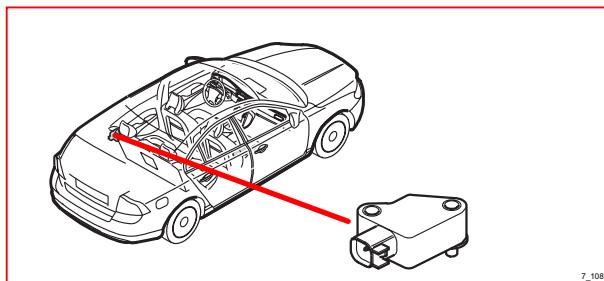


7/103 Front oxygen sensor, bank 2, 6 Cyl.

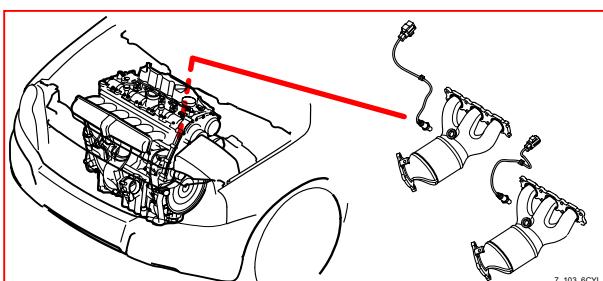


7/109 Right-hand rear side impact sensor

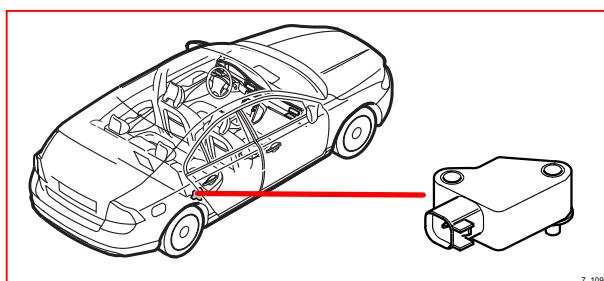


7/103 Rear oxygen sensor, bank 2, 8 cyl.

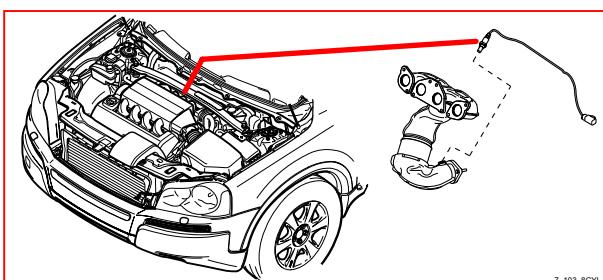


7/110 Temperature sensor, driver's seat

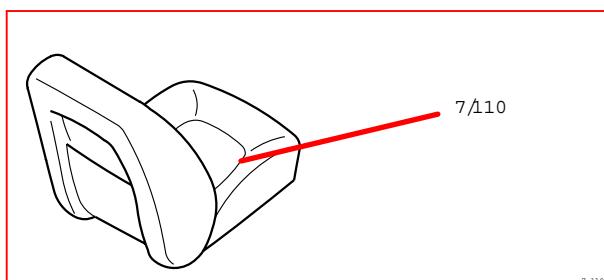


7/104 Rear oxygen sensor, bank 2, 6 cyl.

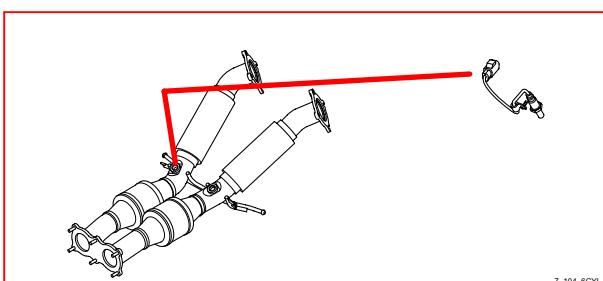


7/111 Temperature sensor, passenger seat

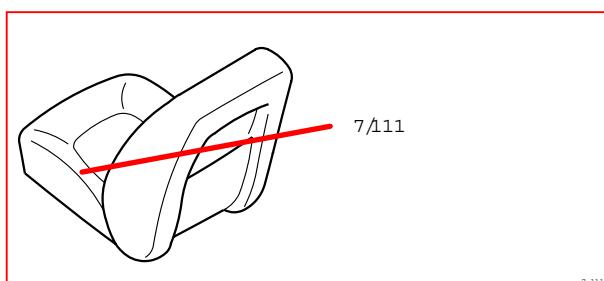

7/104 Rear oxygen sensor, bank 1, 8 cyl.

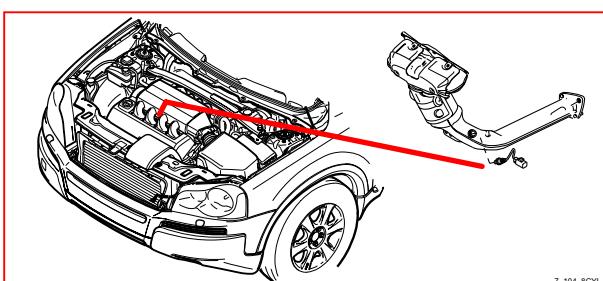


7/112 Seat temperature sensor, LH rear

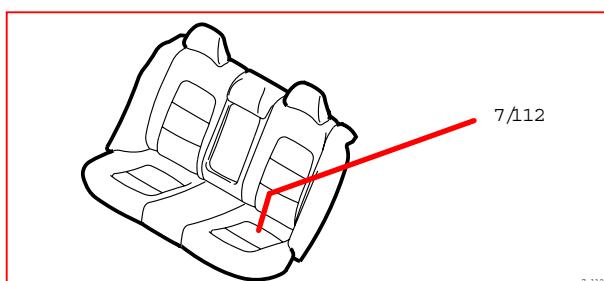


Component illustrations

7/113 - 7/130


7/113 Seat temperature sensor, RH rear

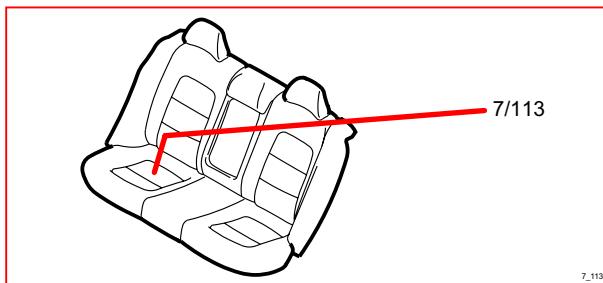


7/120 Height sensor, suspension, rear left

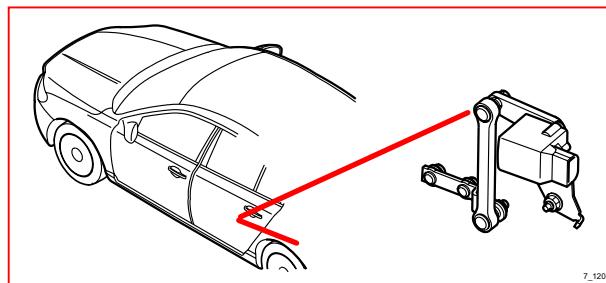


7/115 Side impact sensor, left B-post

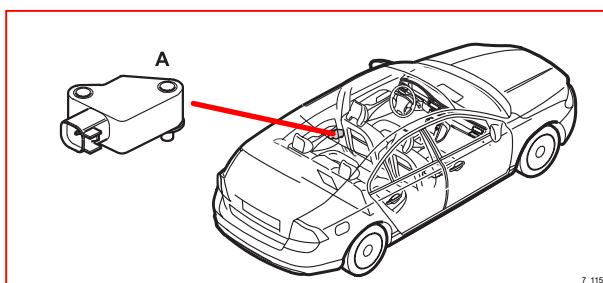


7/121 Height sensor, suspension, rear right

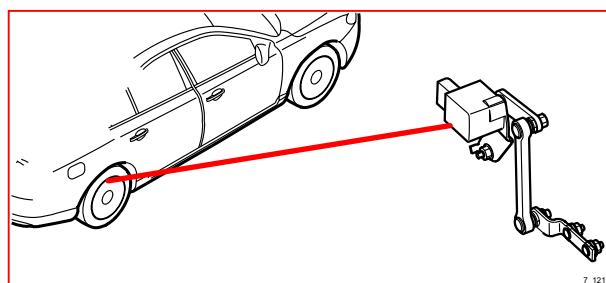


7/116 Side impact sensor, right B-post

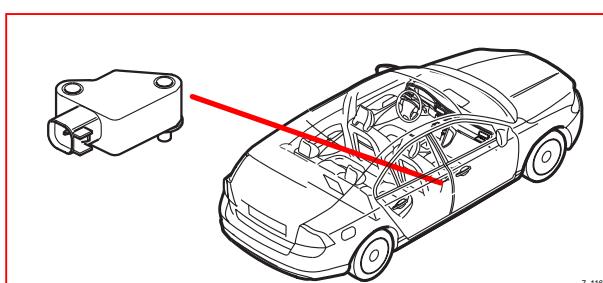


7/123 Clutch pedal sensor

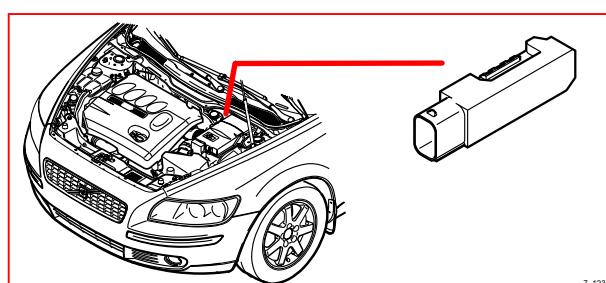


7/118 Height sensor, suspension, front left

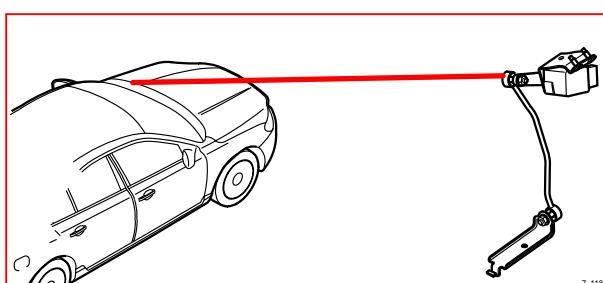


7/124 Brake pedal sensor

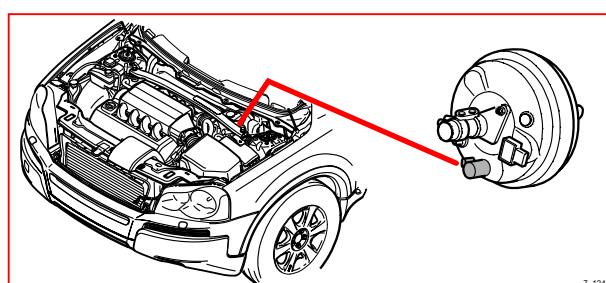

7/119 Height sensor, suspension, front right

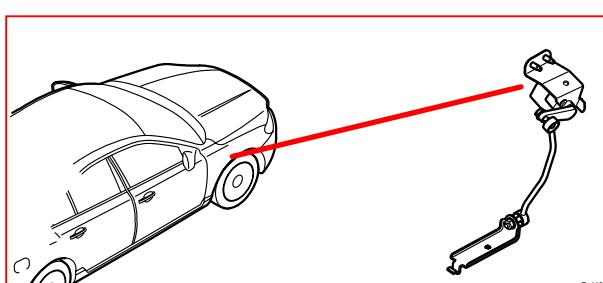

7/130 Fuel level sensor, ejector side

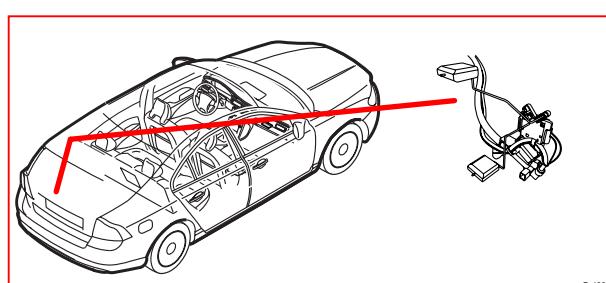


Component illustrations


7/131 - 7/164

7/131-


7/134 Rear parking assistance sensor

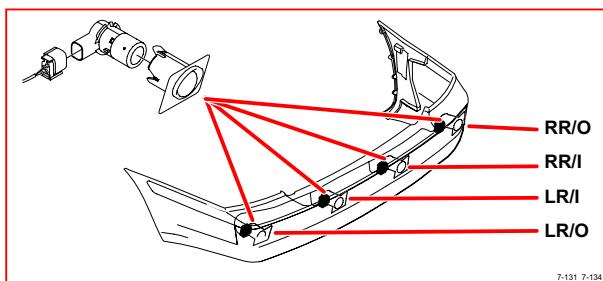


7/138 Exhaust pressure sensor

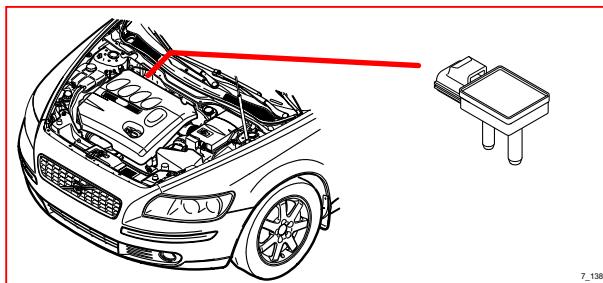


7/143 Fuel level sensor, pump side

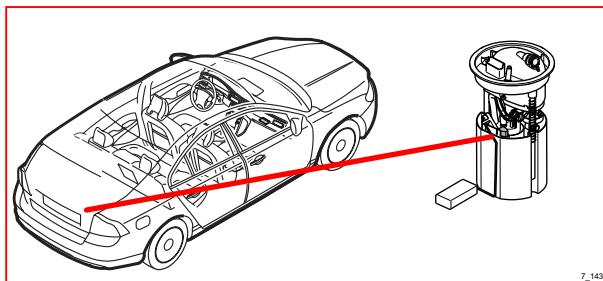


7/149 Rain Sensor Module (RSM)

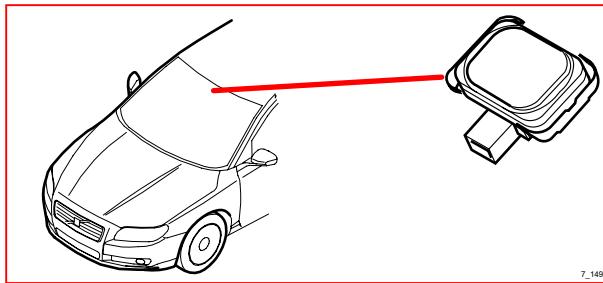


7/154 Fuel temperature sensor

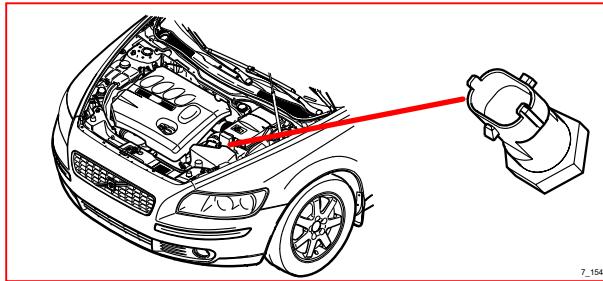


7/156 Pressure and temperature sensor, fuel

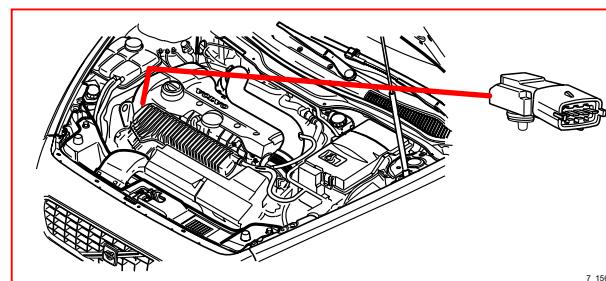


7/159 Air Quality Sensor (AQS)

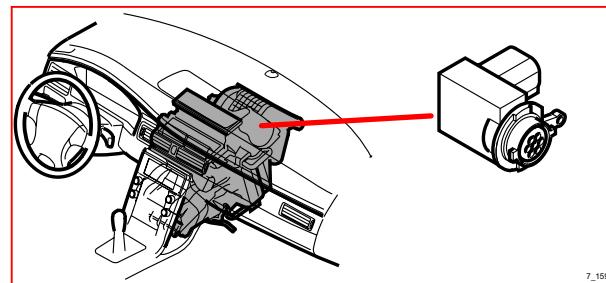


7/160 Brake vacuum sensor

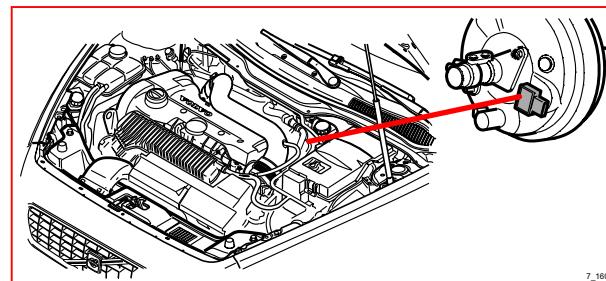

7/162 Pressure sensor, fuel line

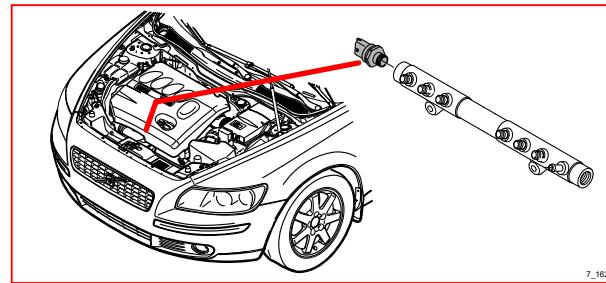


7/164 Body Sensor Cluster Stability Sensor (BSC)

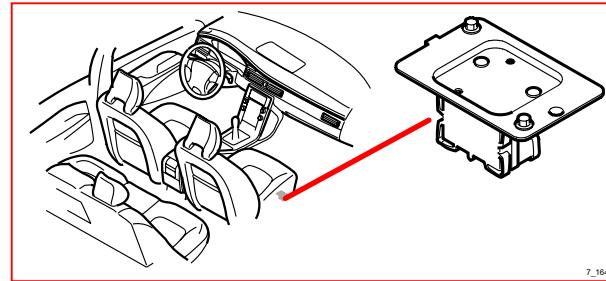


Component illustrations

7/165 5 Cyl. - 7/173 5 Cyl.


7/165 Pressure and temperature sensor, intake manifold, 5 Cyl.

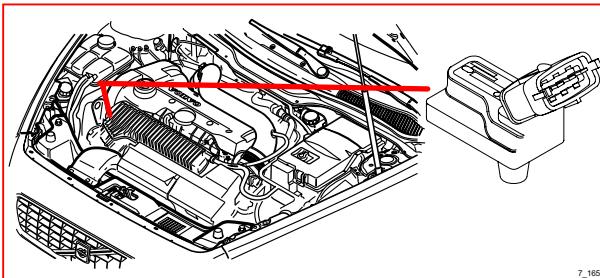


7/165 Pressure and temperature sensor, intake manifold, Diesel

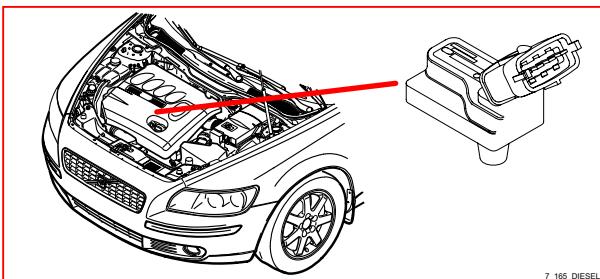


7/165 Pressure and temperature sensor, intake manifold, 6 Cyl.

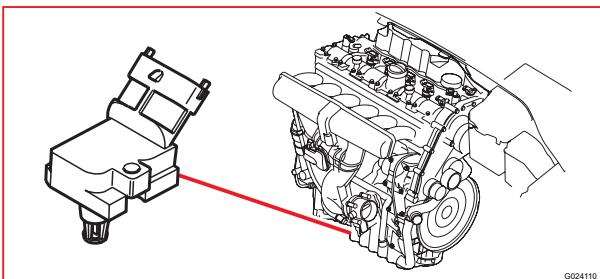


7/166 Oil level sensor, 5 cyl.

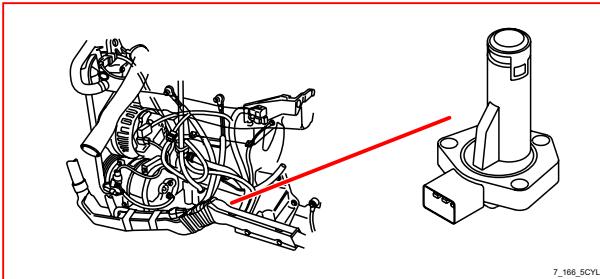


7/166 Oil level sensor, 6 cyl.

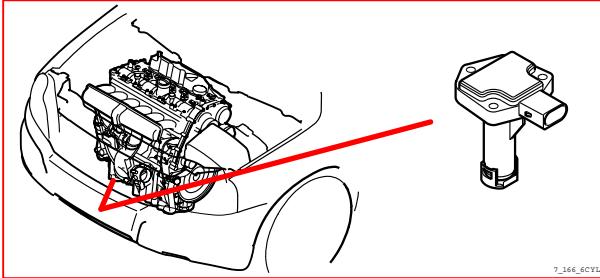


7/166 Oil level sensor, diesel

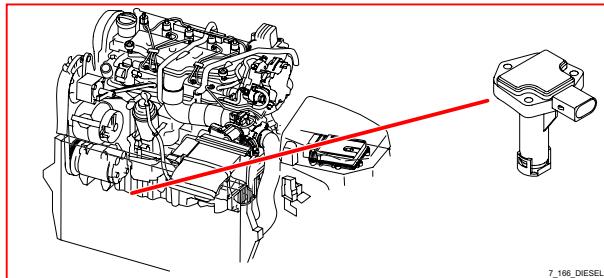


7/172 Camshaft position sensor, intake side, 5 cyl.

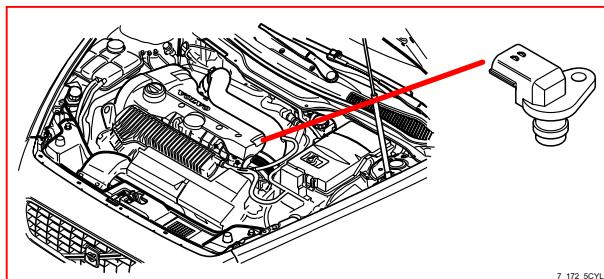


7/172 Camshaft position sensor, intake side, 6 cyl.

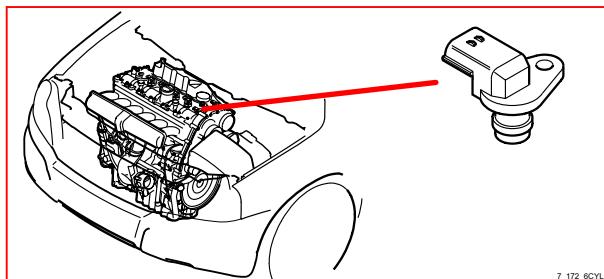

7/172 Intake camshaft position sensor, bank 2, 8 cyl.

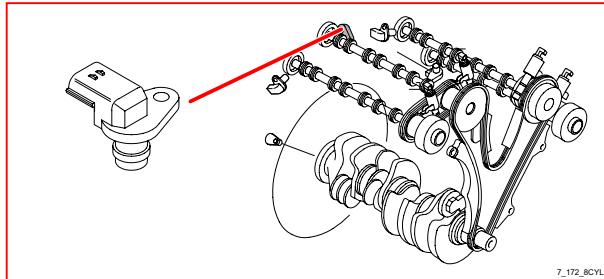


7/173 Camshaft position sensor, exhaust side, 5 Cyl.

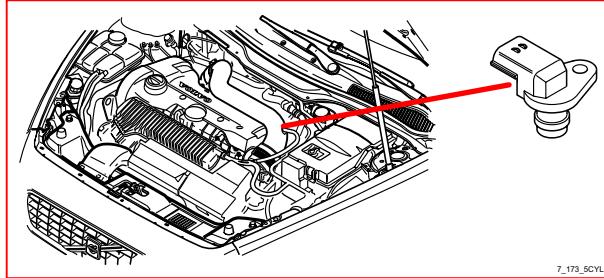


Component illustrations

7/173 6 Cyl. - 7/191


7/173 Camshaft position sensor, exhaust side, 6 Cyl.

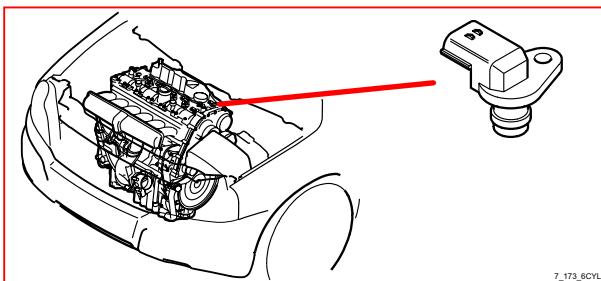


7/173 Exhaust camshaft position sensor, exhaust bank 2, 8 Cyl.

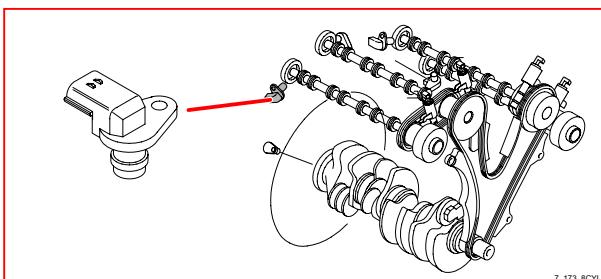


7/173 Camshaft position sensor, exhaust side, Diesel

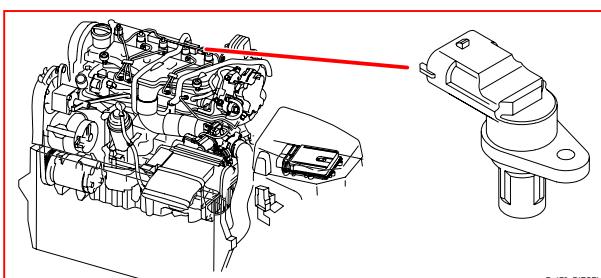


7/175 Occupant weight sensor, seat belt reminder

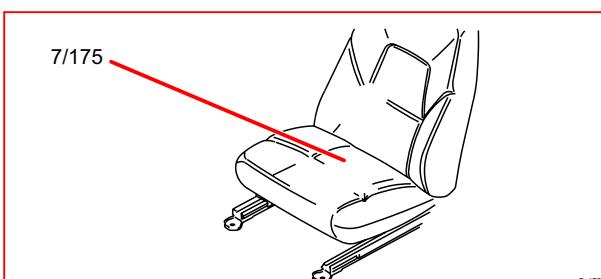


7/178 Front impact sensor, right

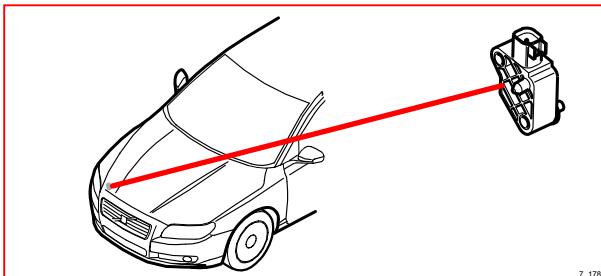


7/179 Front impact sensor, left

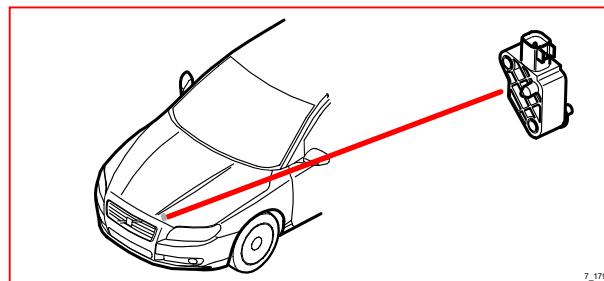


7/188 Camshaft position sensor, intake bank 1, 8 Cyl.

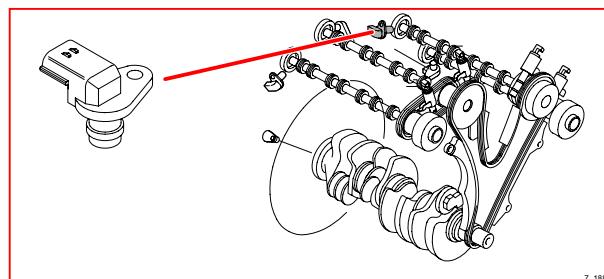


7/189 Camshaft position sensor, exhaust bank 1, 8 Cyl.

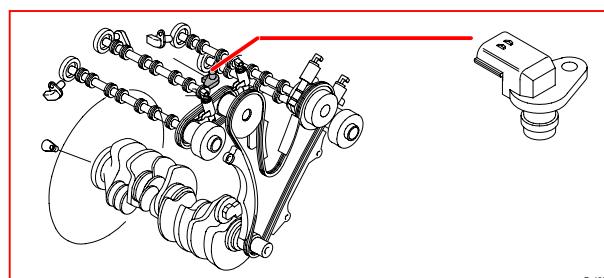

7/190 Temperature sensor catalytic converter

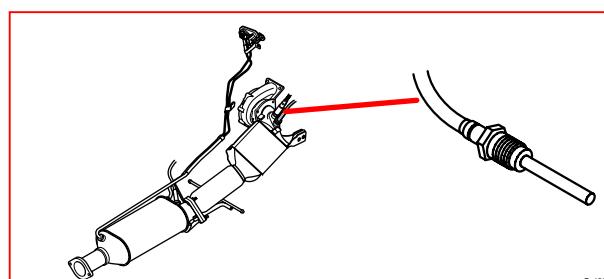


7/191 Temperature sensor particle filter

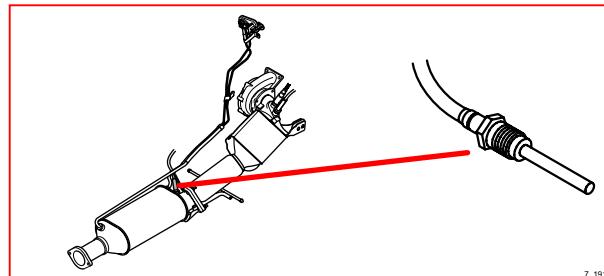


Component illustrations

7/194 - 7/220


7/194 Belt retractor sensor, driver

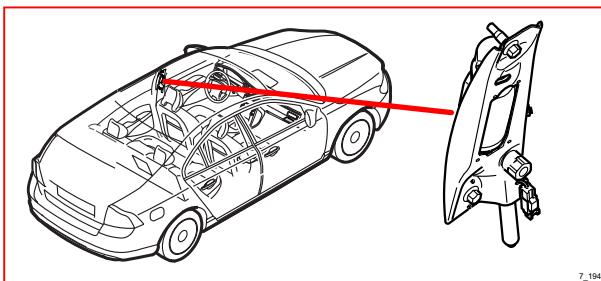


7/208 Side impact sensor, left front door

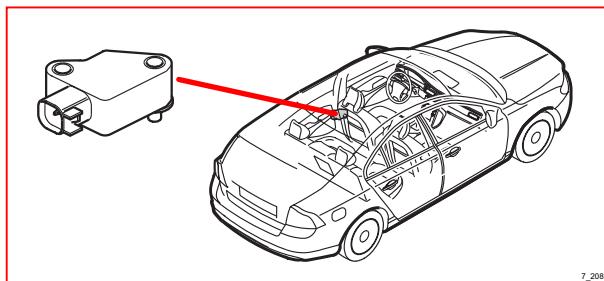


7/195 Belt retractor sensor, passenger

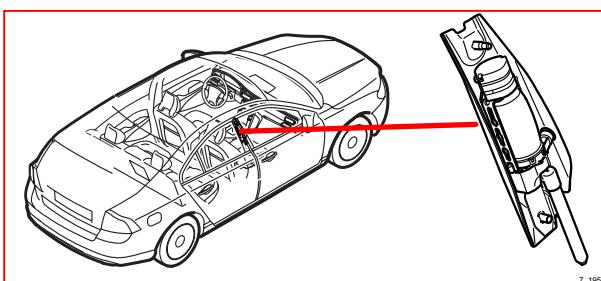

7/209 Side impact sensor, right front door

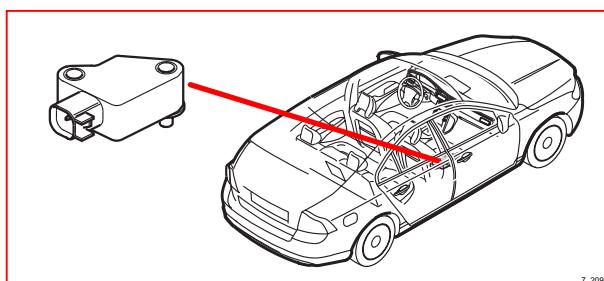


7/199 Ultrasonic sensor (IMS)

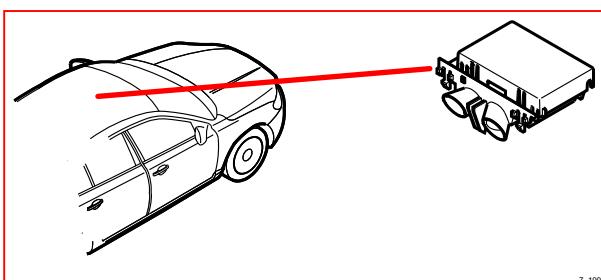


7/210-


7/213 Tire pressure sensor

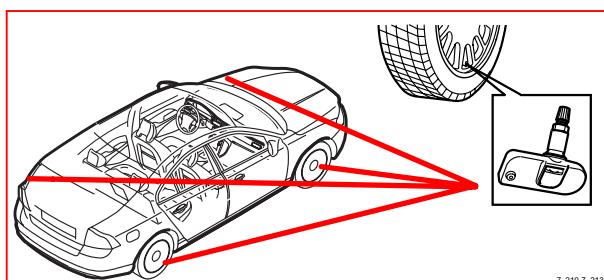

7/203 Forward-aimed radar (FLR)

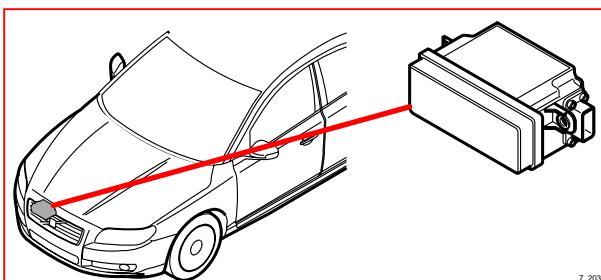


7/214 Heartbeat sensor

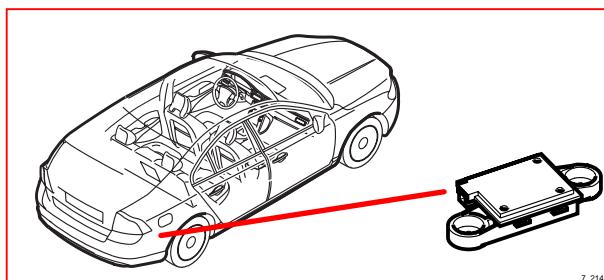


7/204-

7/207 Front parking assistance sensor

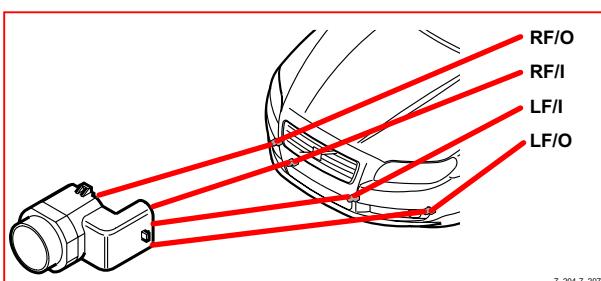


7/220 Load sensor hydraulic pump

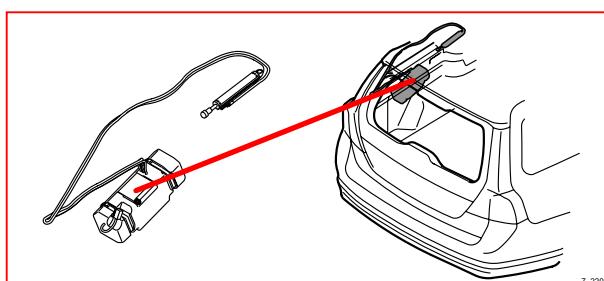


Component illustrations

7/227A - 8/21


7/227A Tailgate pinch sensor, right

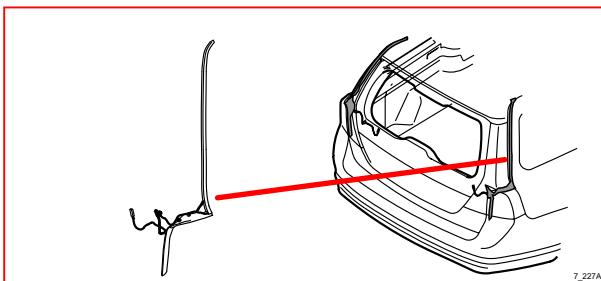


8/18 EVAP valve, 6 cyl.

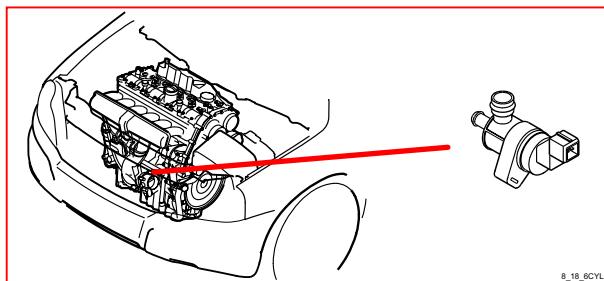


7/227B Tailgate pinch sensor, left

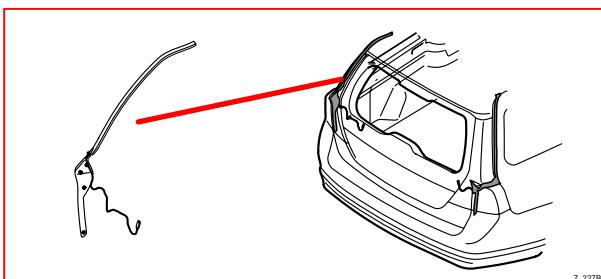


8/18 EVAP valve, 8 cyl.

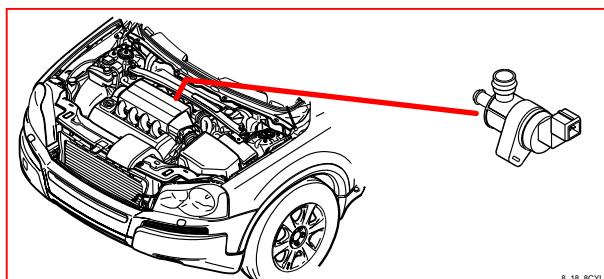


8/3 Electromagnetic clutch, climate control system

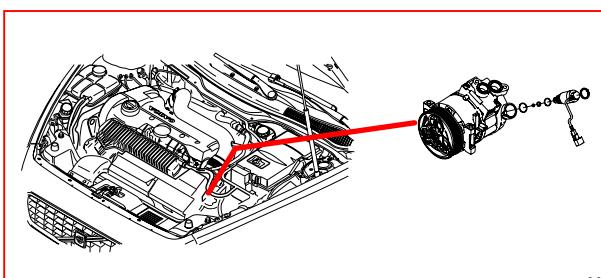


8/19 Solenoid, variable valve timing, intake, bank 2, 8 Cyl.

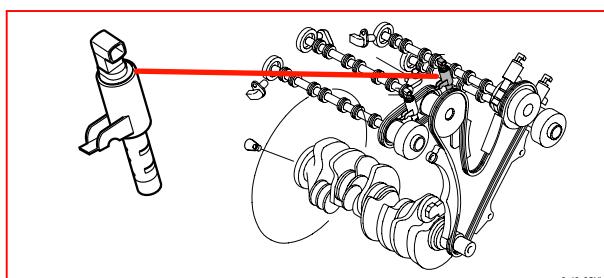


8/6-11 Injectors

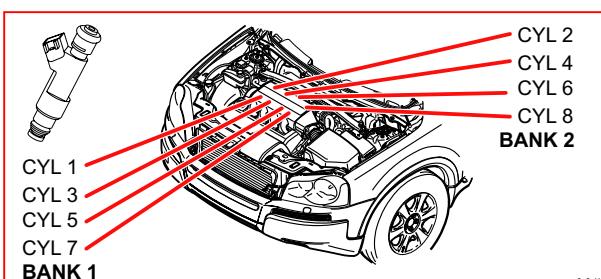


8/20 Shock absorber, Four-C, front left

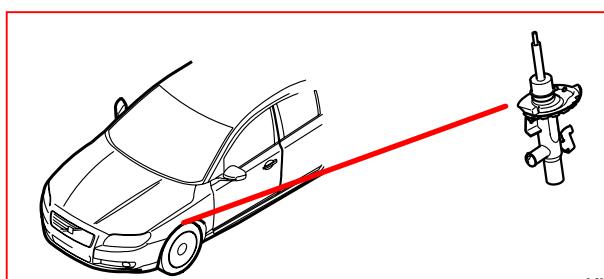

8/18 EVAP valve, 5 cyl.

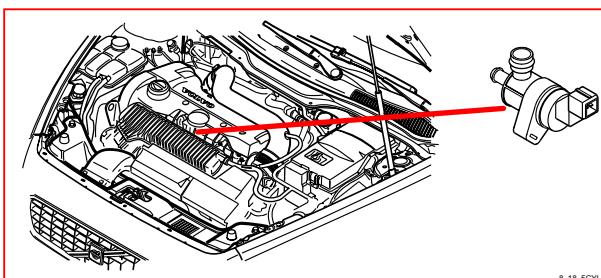


8/21 Shock absorber, Four-C, front right

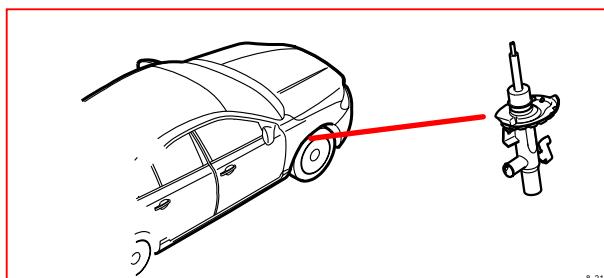


Component illustrations

8/22 - 8/37


8/22 Shock absorber, Four-C, rear left

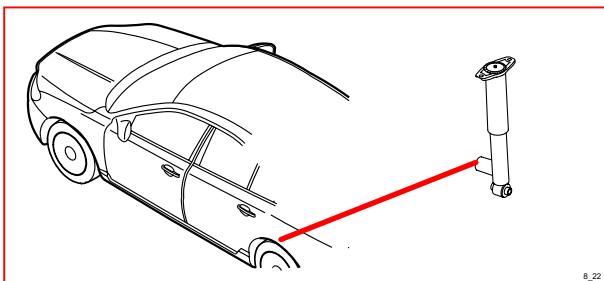


8/32 Passenger side airbag igniter, stage 2

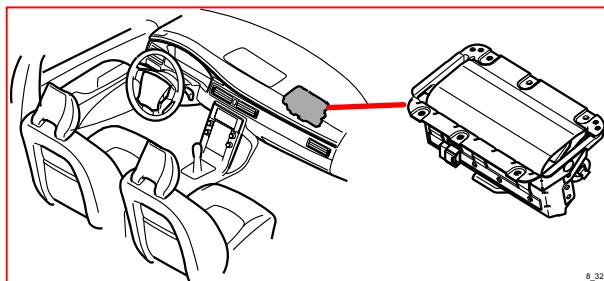


8/23 Shock absorber, Four-C, rear right

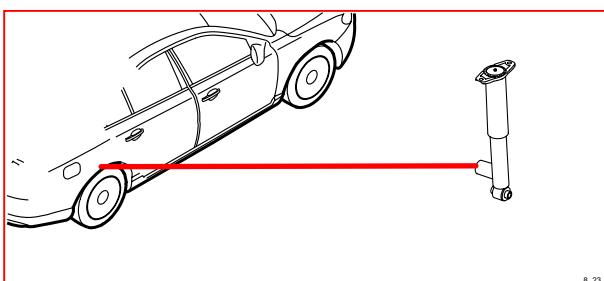


8/33 Driver's belt tensioner igniter

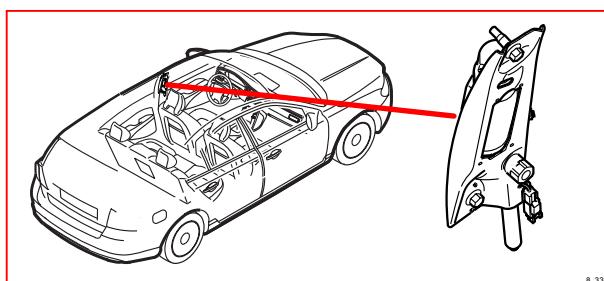


8/28 Turbo control valve

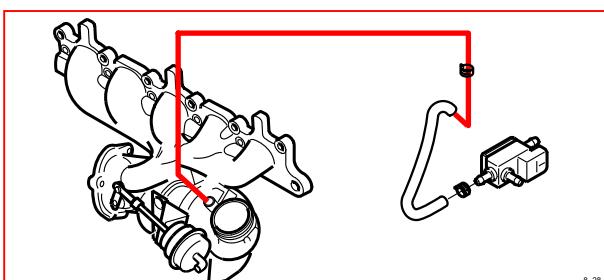


8/34 Passenger belt tensioner igniter

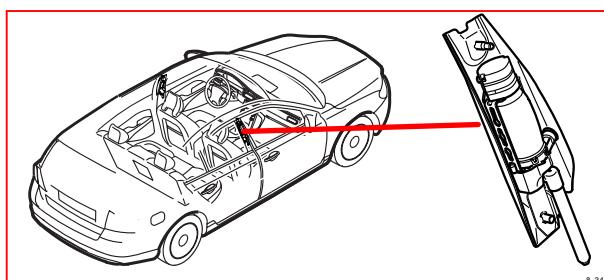


8/30 Driver's side airbag igniter, stage 1

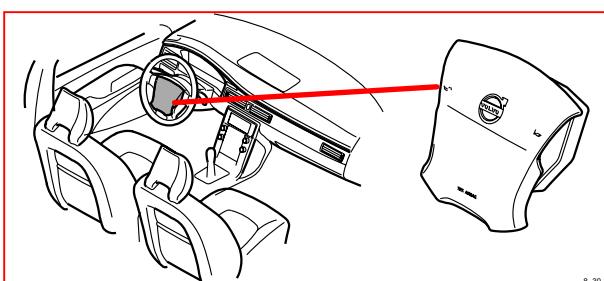


8/36 Shift lock solenoid

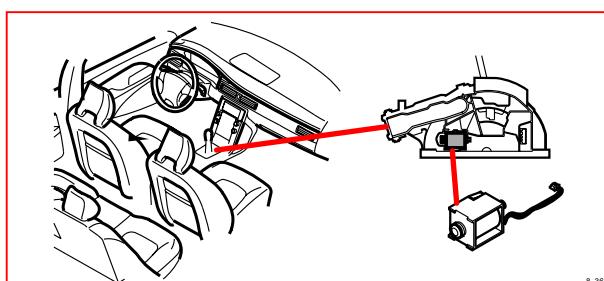

8/31 Passenger side airbag igniter, stage 1

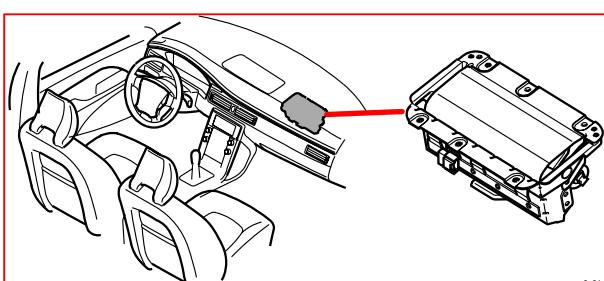


8/37 Automatic transmission

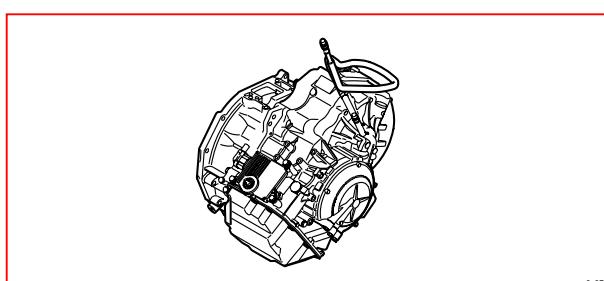


Component illustrations

8/38 - 8/59


8/38 Shift solenoid 1

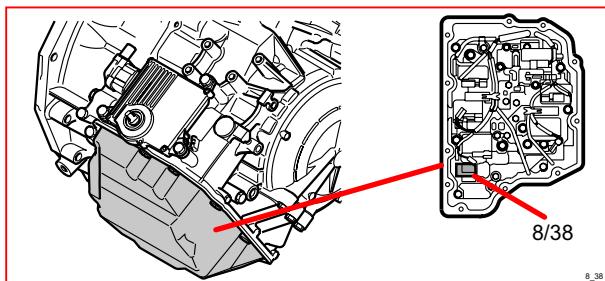


8/39 Shift solenoid 2

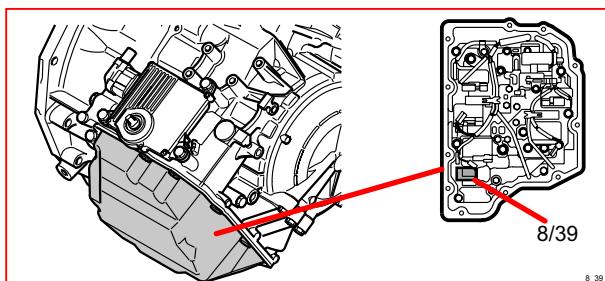


8/40 Lock-up solenoid

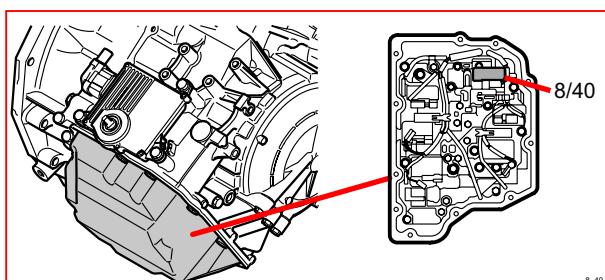


8/46 Archive unit, DSTC

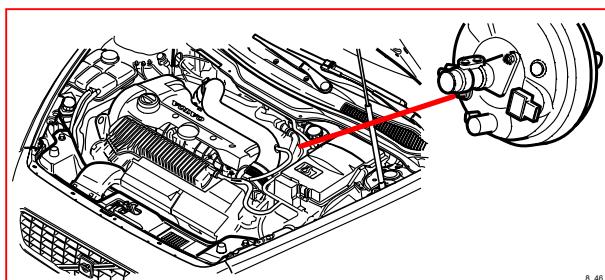


8/48 Automatic anti-dazzle rearview mirror

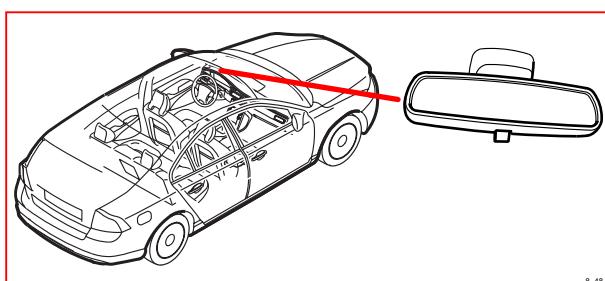


8/51 Igniter side airbag front driver's seat

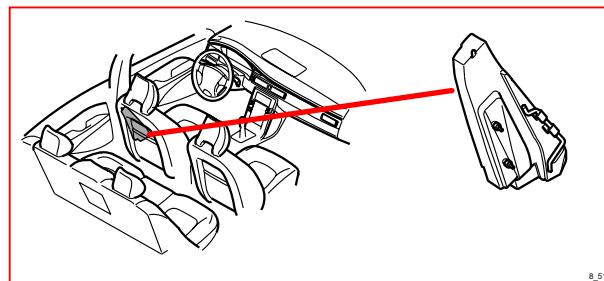


8/52 Igniter side airbag front passenger seat

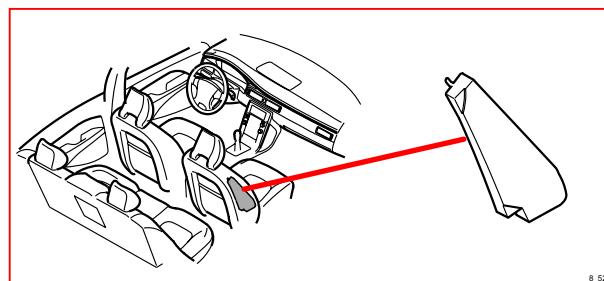


8/55 Rear left belt tensioner igniter

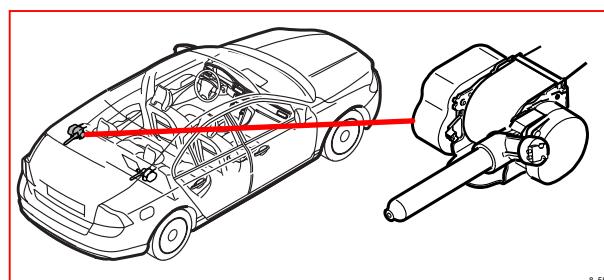

8/56 Rear right belt tensioner igniter

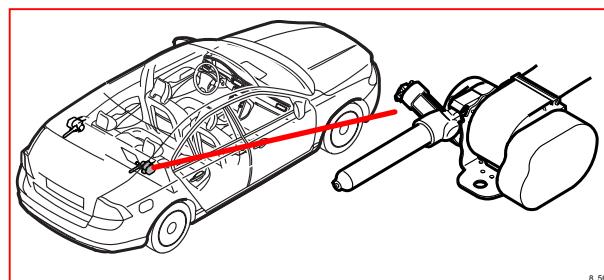


8/59 Rear left head restraint solenoid

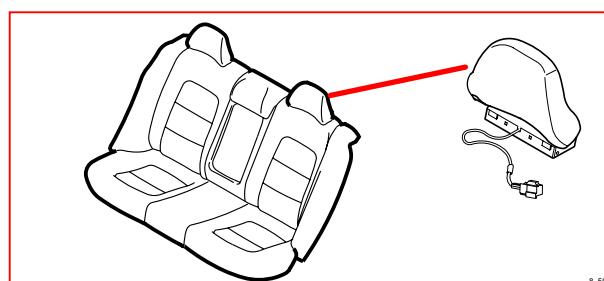


Component illustrations

8/60 - 8/84


8/60 Rear right head restraint solenoid

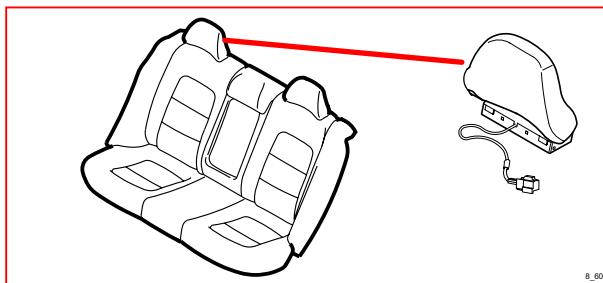


8/68 Relief valve

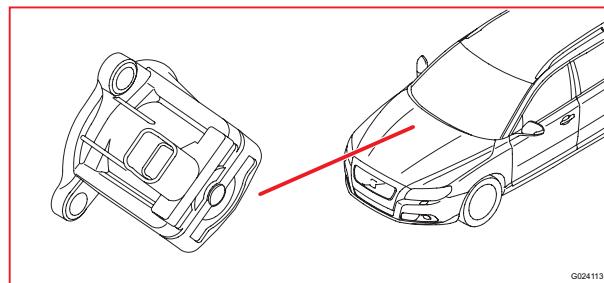


8/61 Driver's side airbag igniter, stage 2

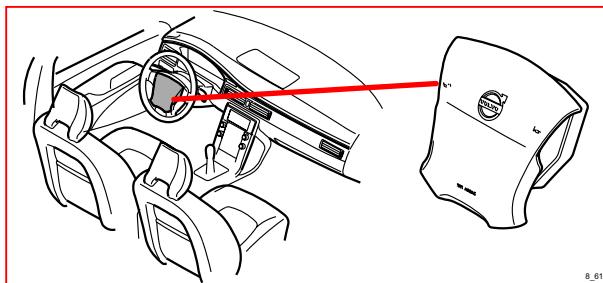


8/71 Throttle solenoid

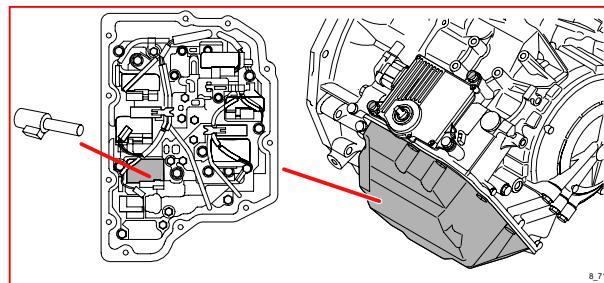


8/62 Belt tensioner igniter, center rear seat

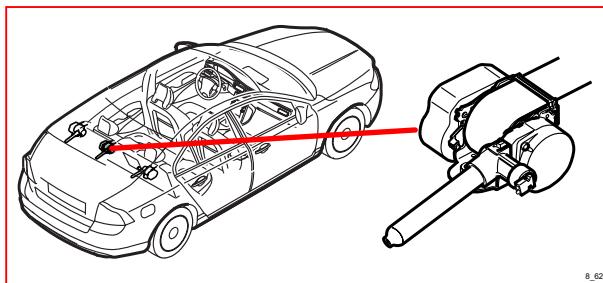


8/81 Solenoid, variable valve timing, exhaust, 5 Cyl.

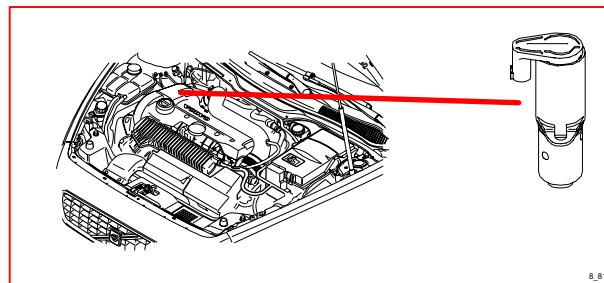


8/66 Left-hand inflatable curtain igniter

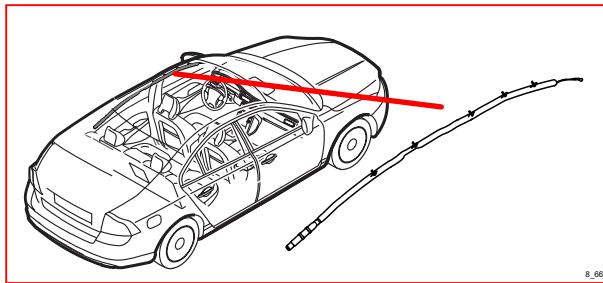


8/81 Solenoid, variable valve timing, exhaust, bank 2, 8 cyl.

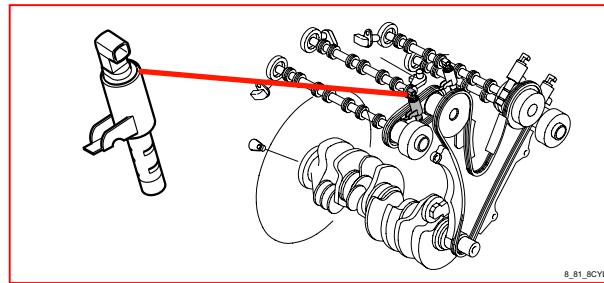

8/67 Right-hand inflatable curtain igniter

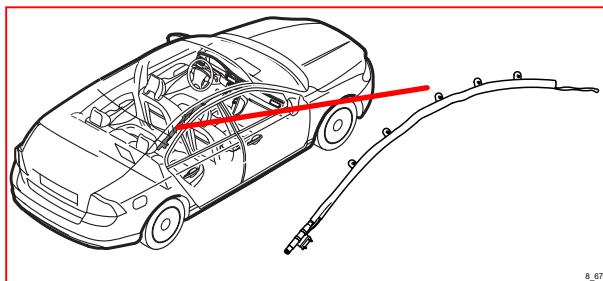


8/84 Switch, vacuum pump

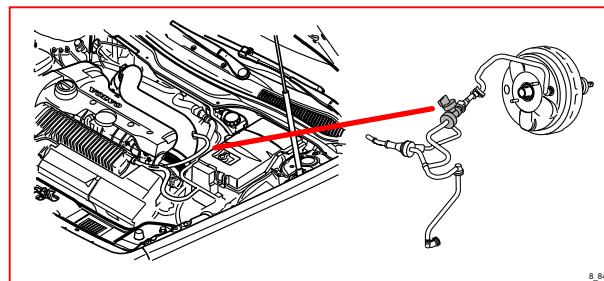


Component illustrations

8/ 92 - 8/117 8 Cyl.


8/92 Lap belt tensioner, driver

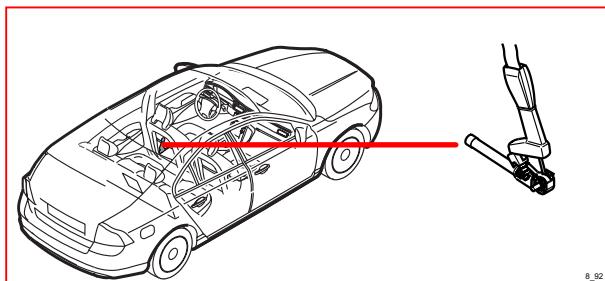


8/98 Fuel pressure control valve

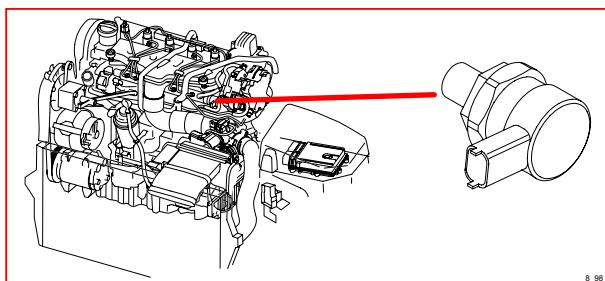


8/99 Steering column igniter

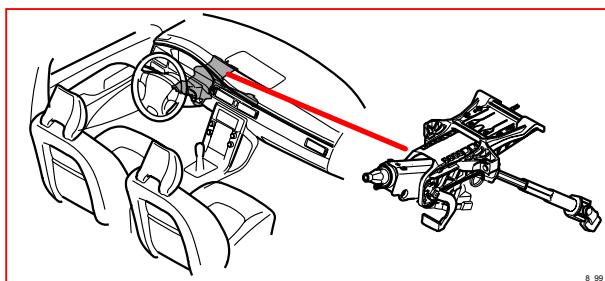


8/107 Variable intake valve

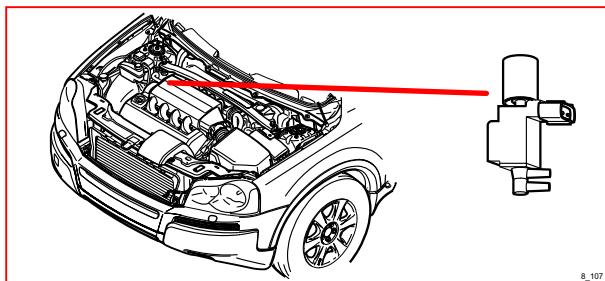

8/111 Control valve, fuel flow

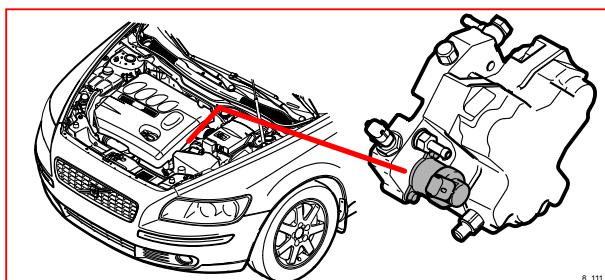


8/113 Bypass valve, EGR cooling

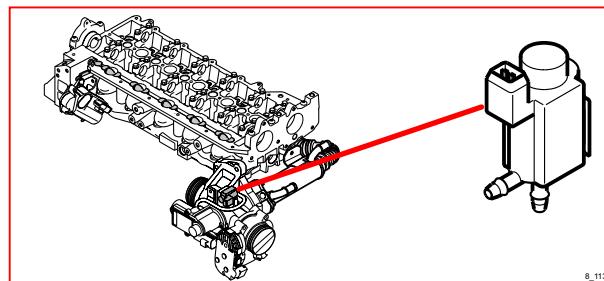


8/115-


8/116 Injector, 8 cyl.

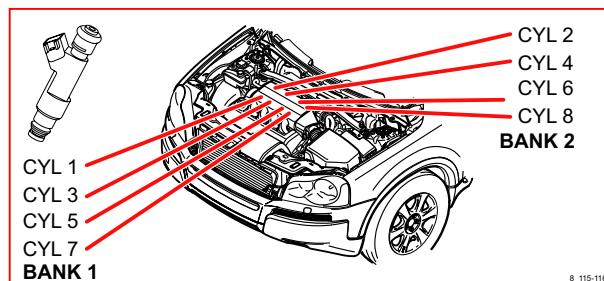


8/117 Solenoid, variable valve timing, intake, 5 Cyl.

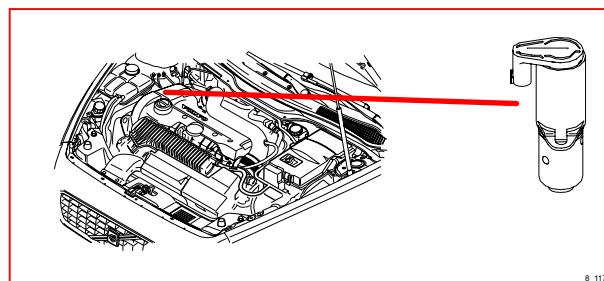

8/117 Solenoid, variable valve timing, intake, 6 Cyl.

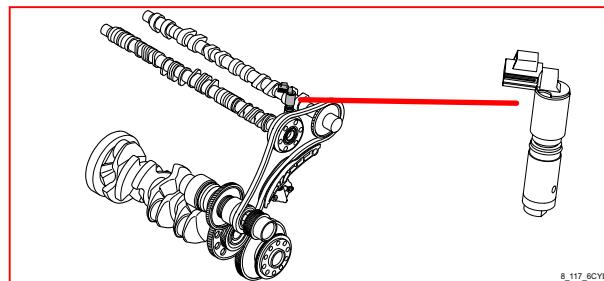


8/117 Solenoid, variable valve timing, intake, bank 1, 8 cyl.

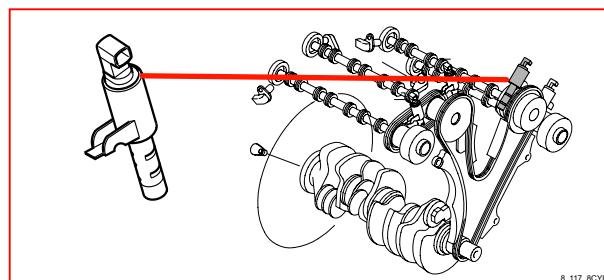


Component illustrations

8/ 118 8 Cyl. - 8/143


8/118 Solenoid, variable valve timing,
exhaust, bank 1, 8 cyl.

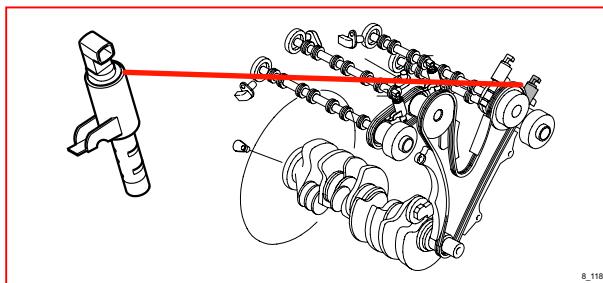


8/120 EGR valve

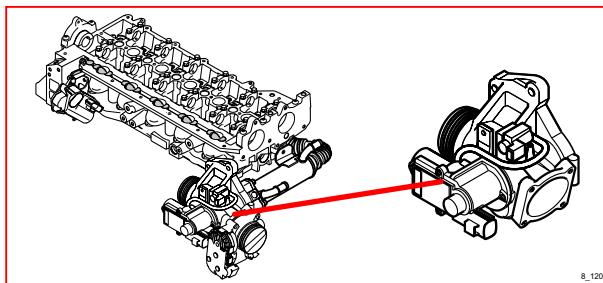


8/124 Passenger side airbag igniter, stage 3

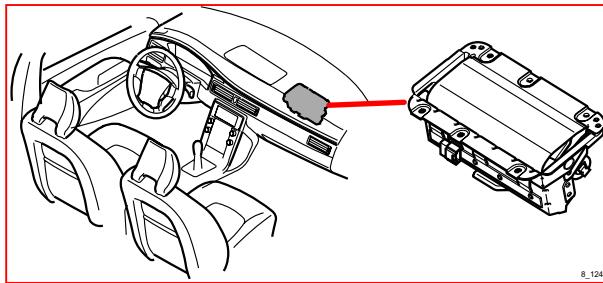


8/125 Solenoid front cam profile

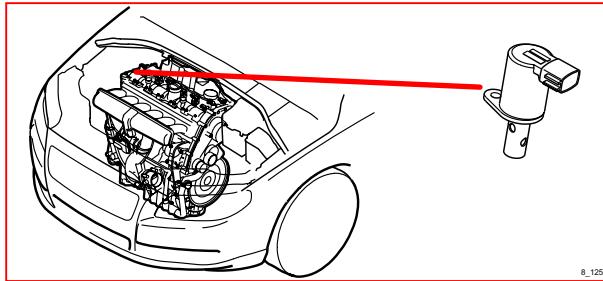


8/126 Solenoid rear cam profile

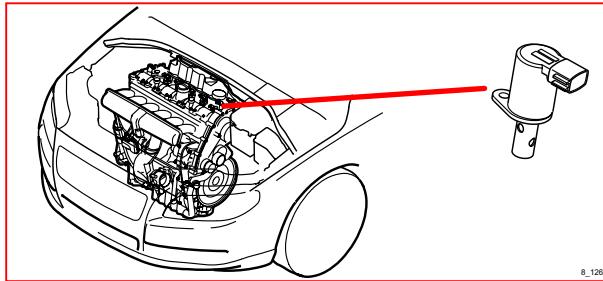


8/128 Belt force limiter, driver

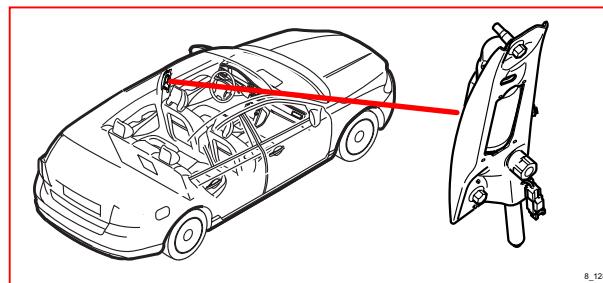


8/129 Belt force limiter, passenger

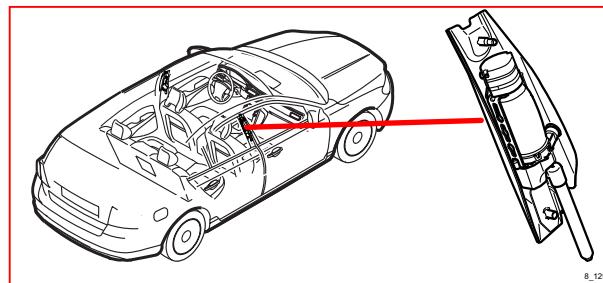


8/134 Solenoid, reverse interlock, manual

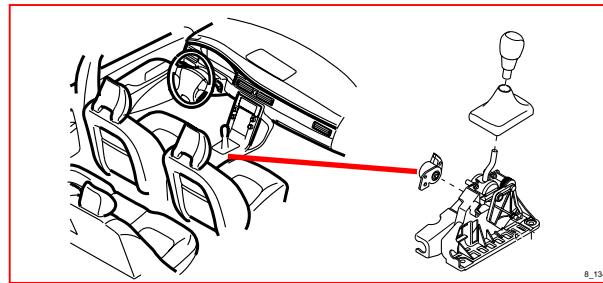

8/142 Linear pressure solenoid SLB1

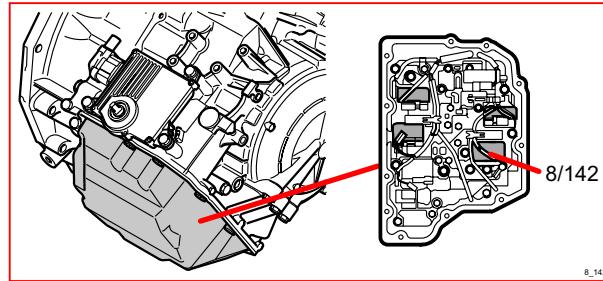


8/143 Linear pressure solenoid SLC1

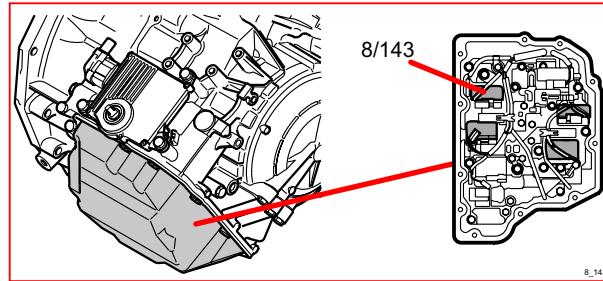


Component illustrations

8/144 - 9/13


8/144 Linear pressure solenoid SLC2

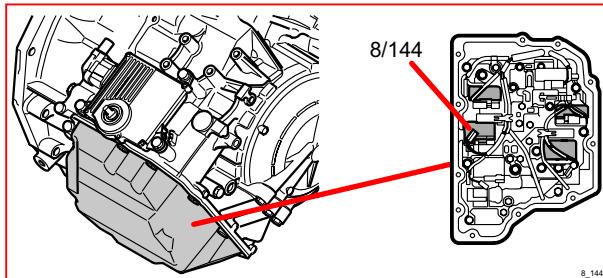


9/9 Heating element, LH rear seat backrest

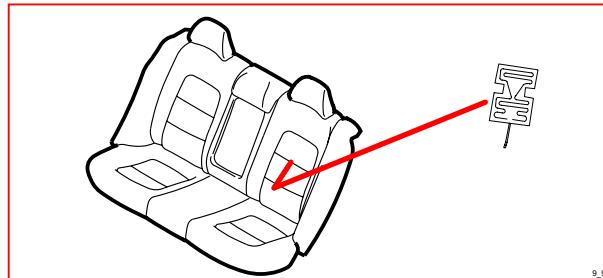


8/145 Linear pressure solenoid SLC3

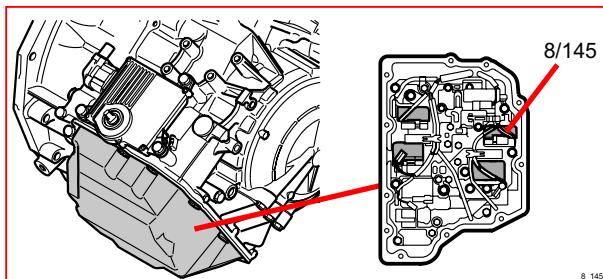


9/10 Heating element, RH rear seat cushion

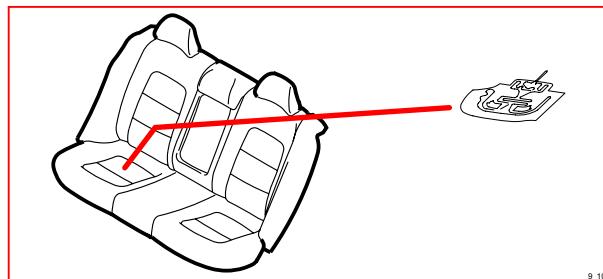


9/1 Front 12V outlet

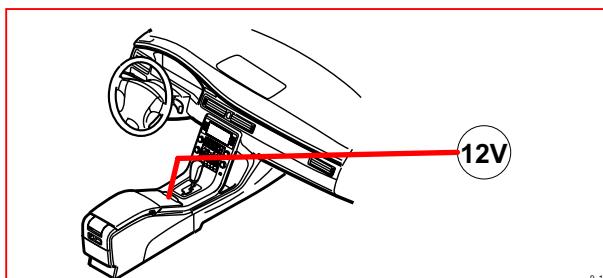


9/11 Heating element, RH rear seat backrest

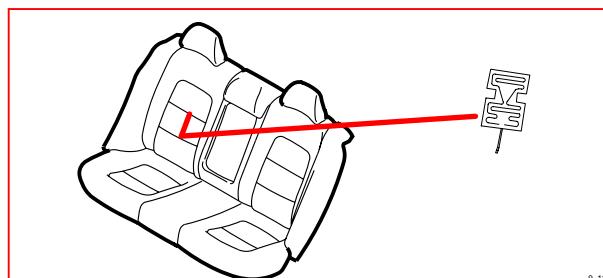


9/2 Rear window defroster

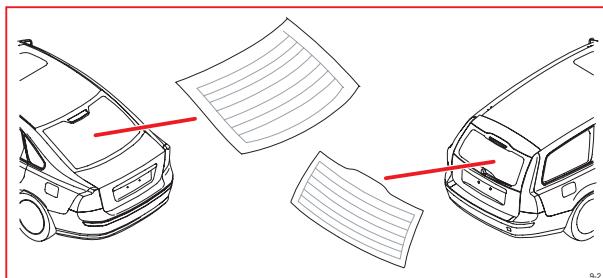


9/12 Seat Heating Module (SHM), driver's side

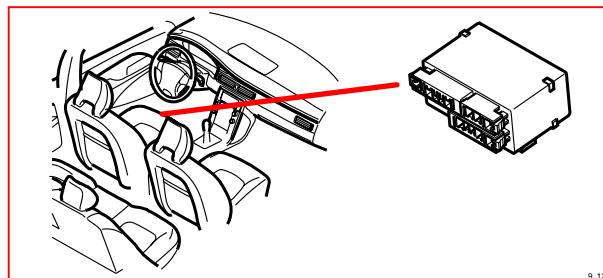

9/8 Heating element, LH rear seat cushion

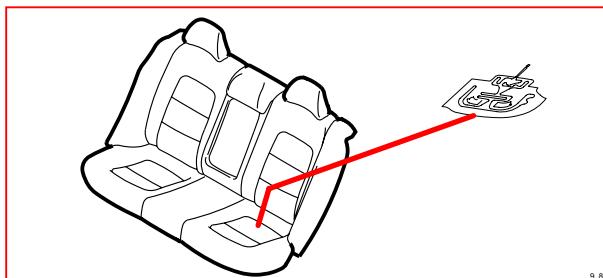


9/13 Seat Heating Module (SHM), passenger side

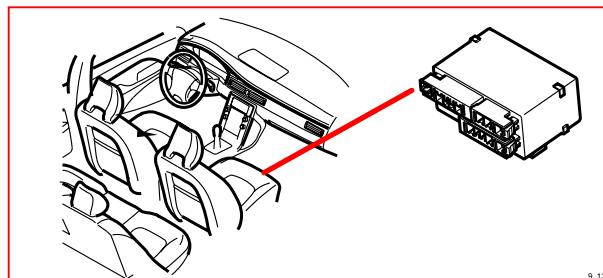


Component illustrations

9/14 - 9/32


9/14 Control module, rear left seat heater

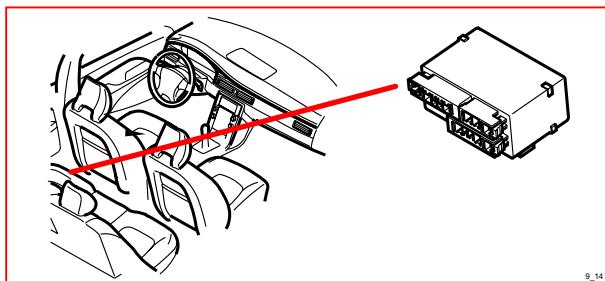


9/15 Control module, RH rear seat heater

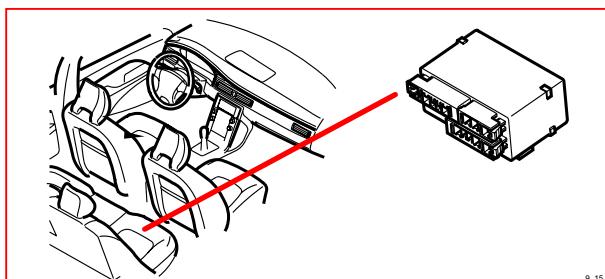


9/16 Heating element, driver's seat back-rest

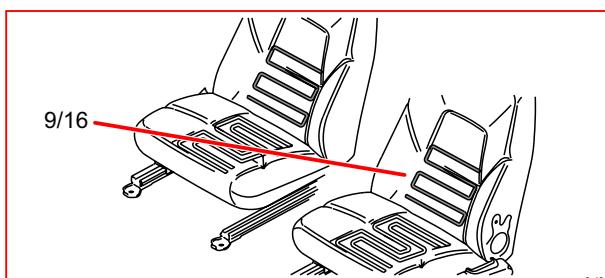


9/17 Heating element, passenger seat backrest

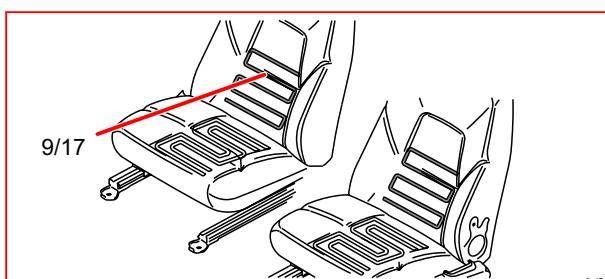


9/18 Heating element, driver's seat cushion

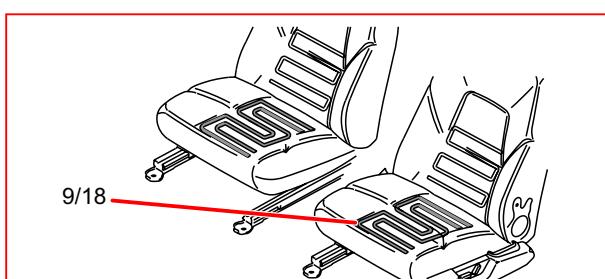


9/19 Heating element, passenger seat cushion

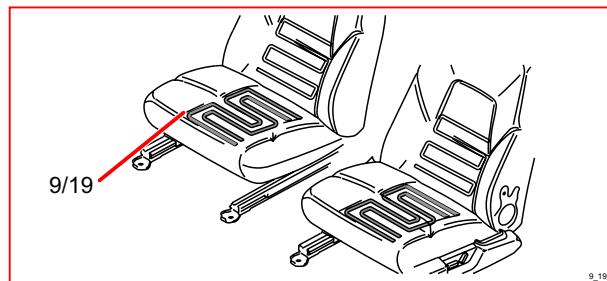


9/24 Refrigeration box

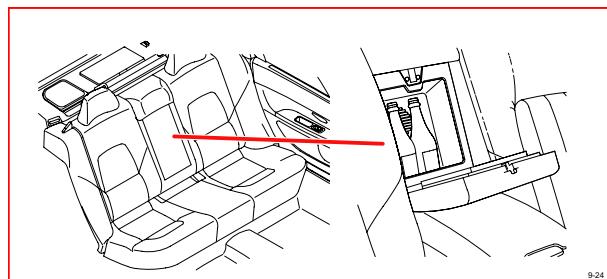


9/25 Rear 12V outlet

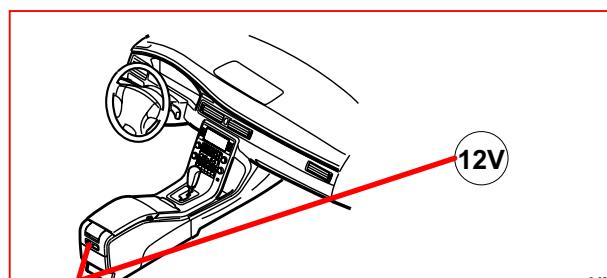

9/30 Auxiliary heater

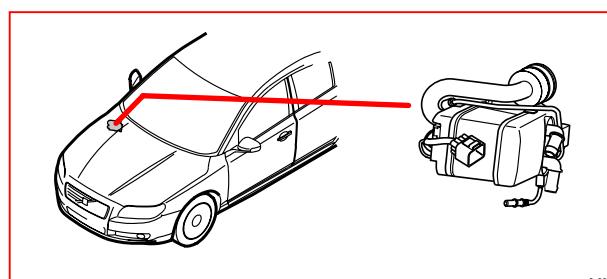


9/32 PTC resistor, crankcase ventilation

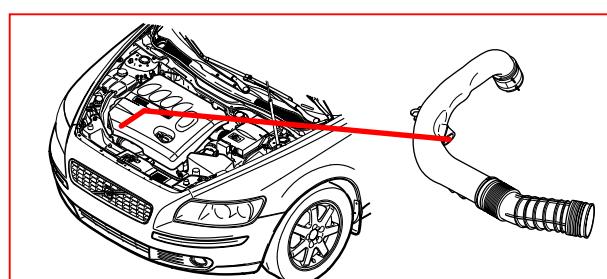


Component illustrations

9/38 - 10/5


9/38 Heated fuel filter

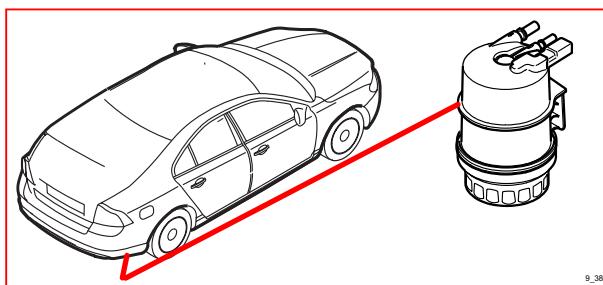


10/1 Left-hand front lamp housing

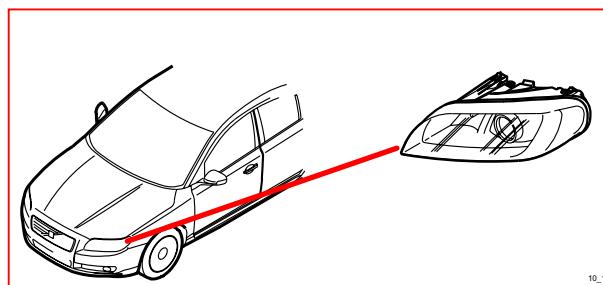


9/42 PTC element

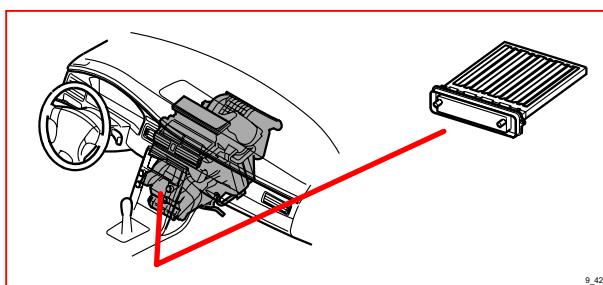


10/2 Right-hand front lamp housing

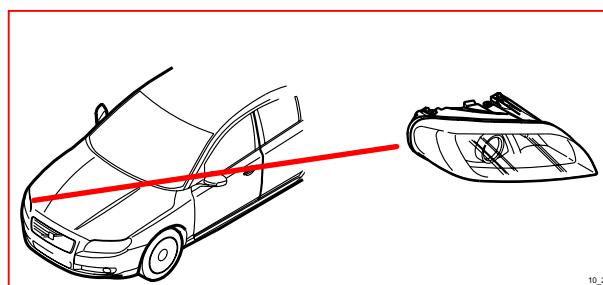


9/43 Heated windshield washer nozzle, left

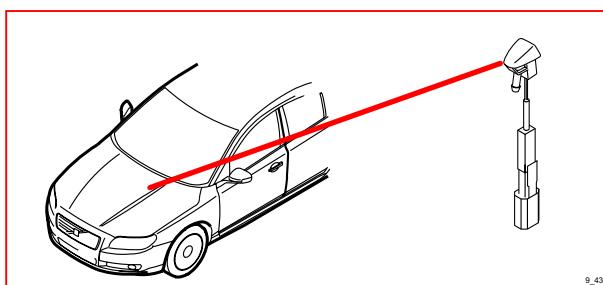


10/3 License plate lighting, V70

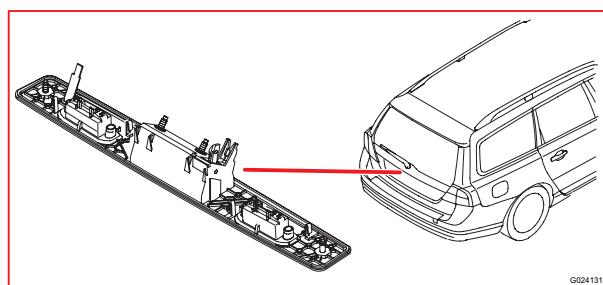


9/44 Heated windshield washer nozzle, right

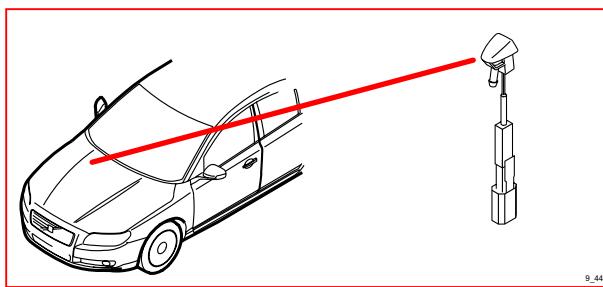


10/3 License plate lighting, S80

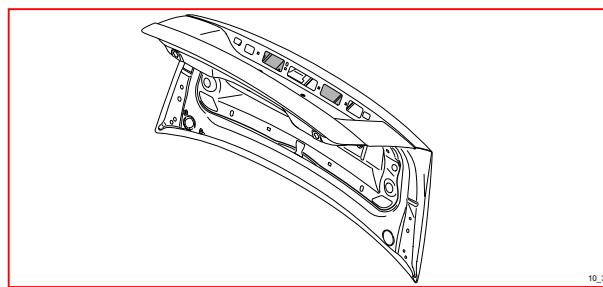

9/47 PTC resistor crankcase ventilation in hose

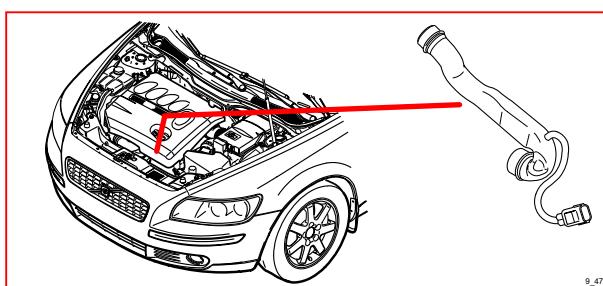


10/5 Front left fog light

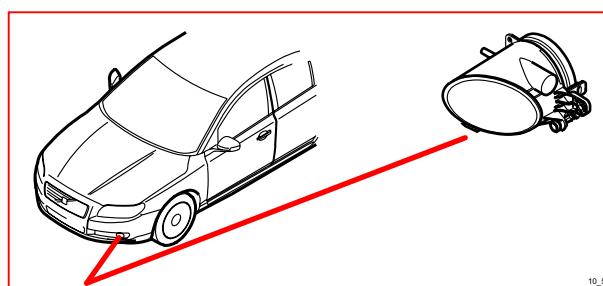


Component illustrations

10/6 - 10/18 V70


10/6 Front right fog light

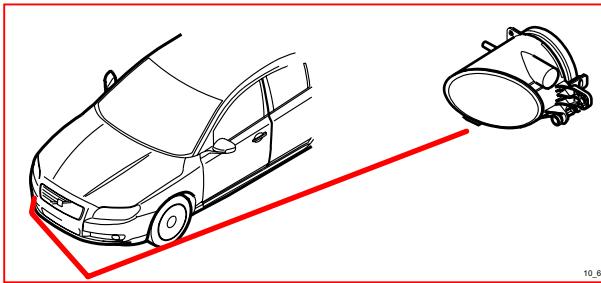


10/11 Front left running/parking light

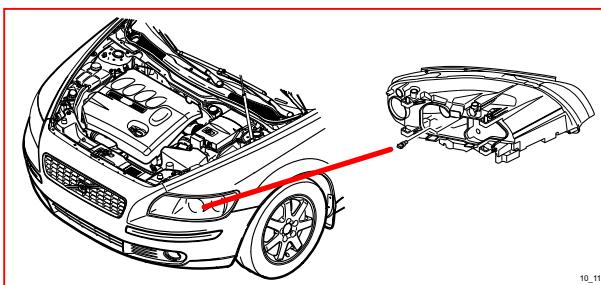


10/12 Front right running/parking light

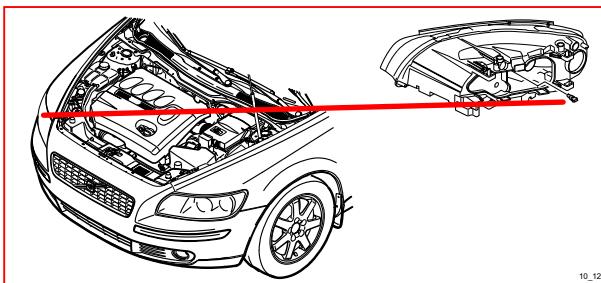


10/13 Front left direction indicator

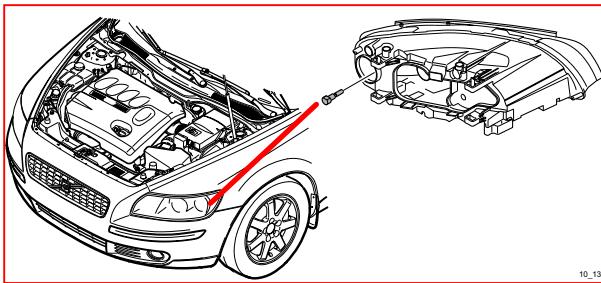


10/14 Front right direction indicator

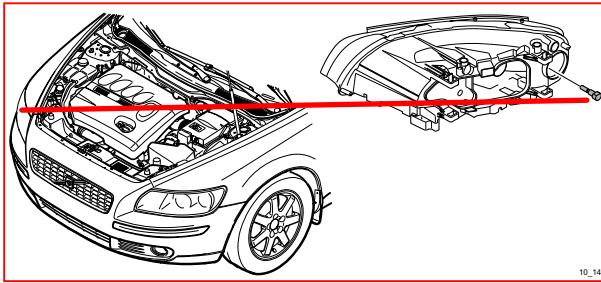


10/15 Direction indicator rear-view mirror left

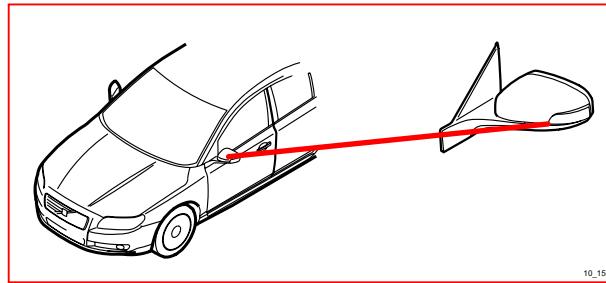


10/16 Direction indicator rear-view mirror, right

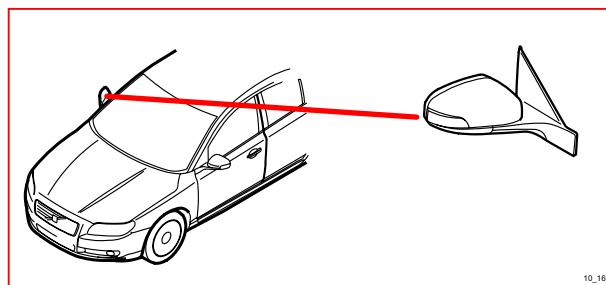


10/17 Lamp housing, rear right V70

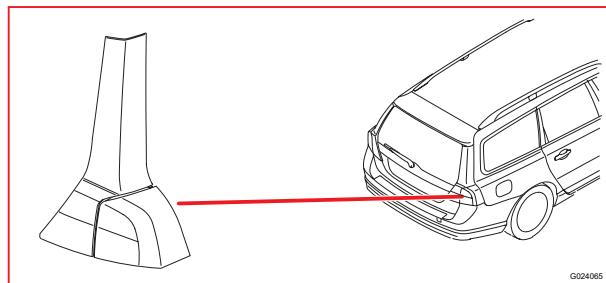

10/17 Lamp housing, rear right, S80

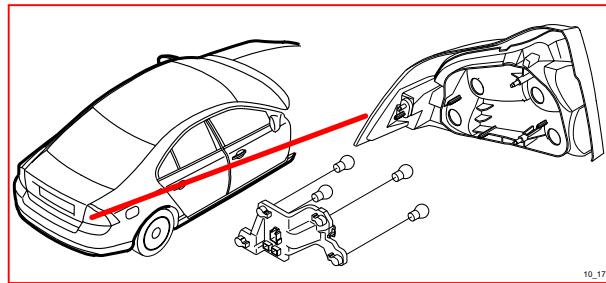


10/18 Lamp housing, rear left, V70

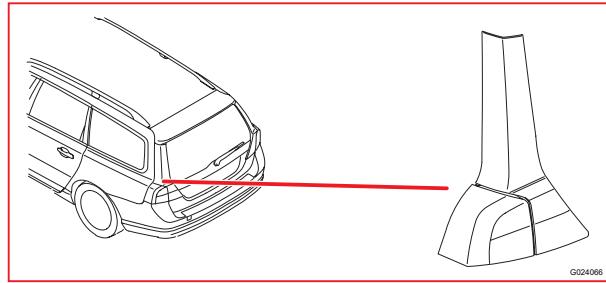


Component illustrations

10/18 S80 - 10/44 S80


10/18 Lamp housing, rear left, S80

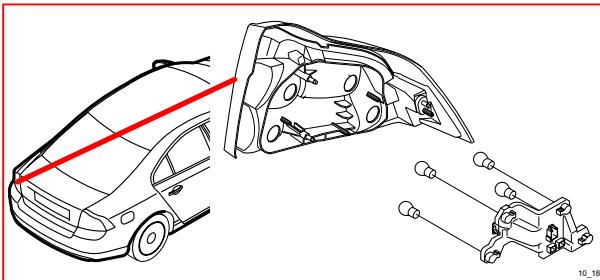


10/29 Glove compartment lighting

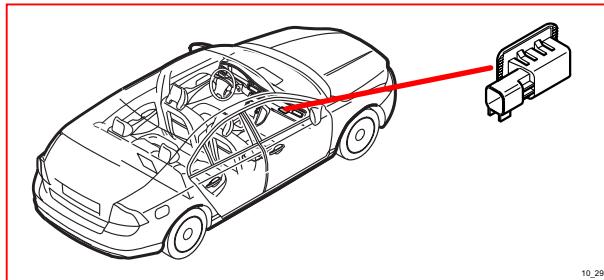


10/19 Auxiliary brake light V70

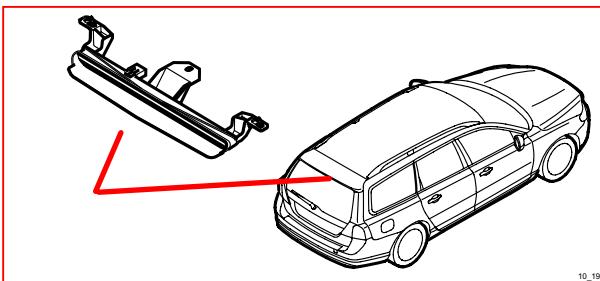


10/43 Brake light right, V70

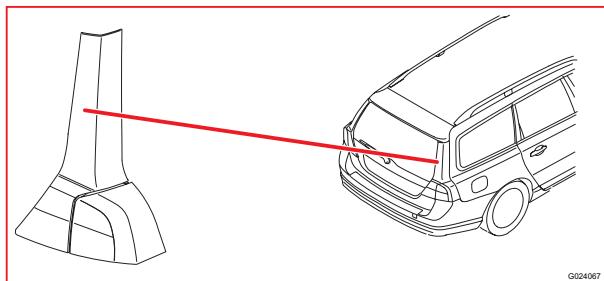


10/19 Auxiliary brake light, S80

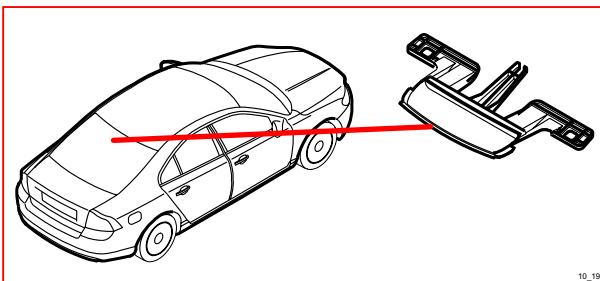


10/43 Brake light right, S80

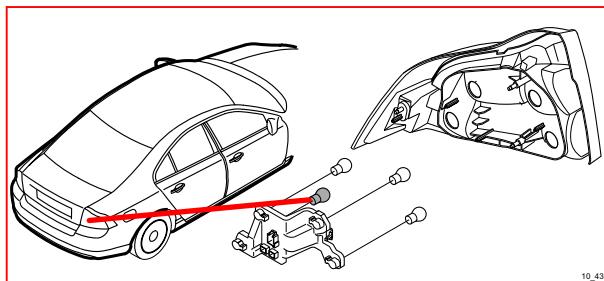


10/22 Ceiling light

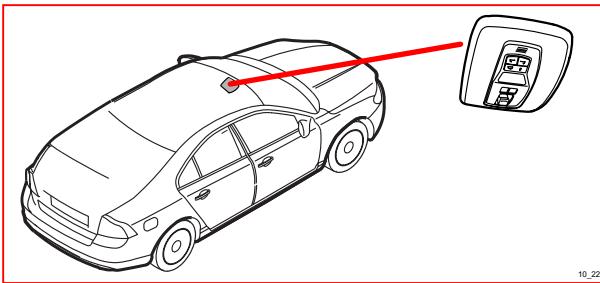


10/44 Tail lamp 1 right, V70

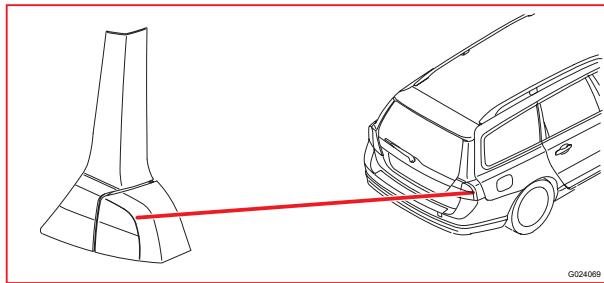

10/25 Ceiling light, cargo compartment, V70

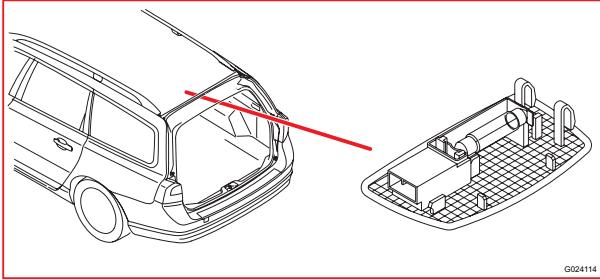


10/44 Tail lamp 1 right, S80

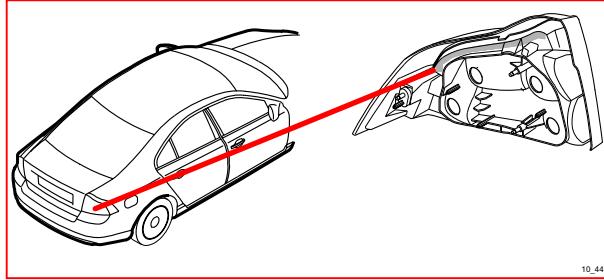


Component illustrations

10/45 V70 - 10/50 S80


10/45 Tail lamp 2 right, V70

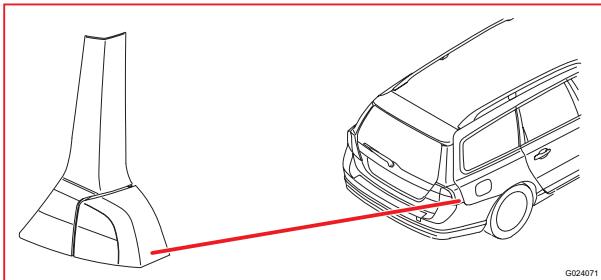


10/47 Direction indicator, right rear, S80

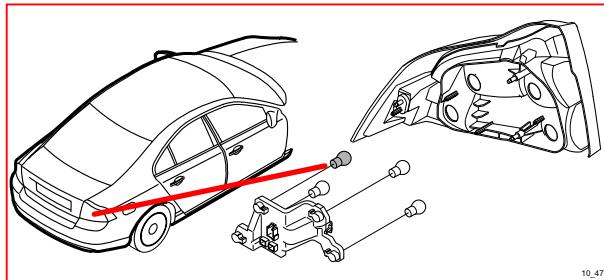


10/45 Tail lamp 2 right, S80

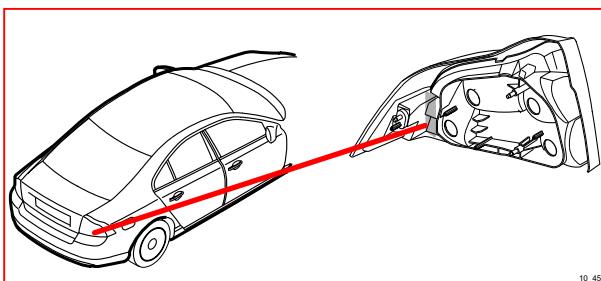


10/48 Reversing light, right, V70

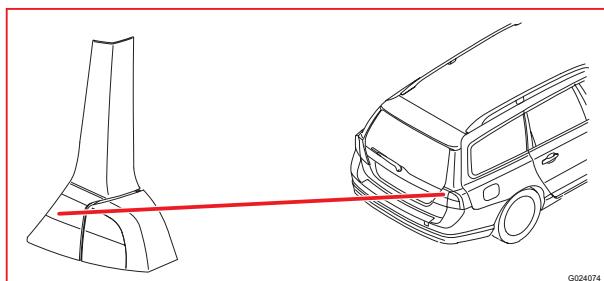


10/46 Fog light, rear right, V70

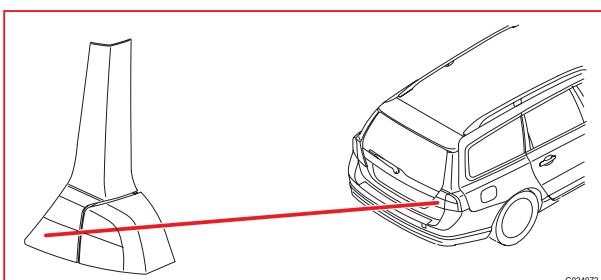


10/48 Reversing light right, S80

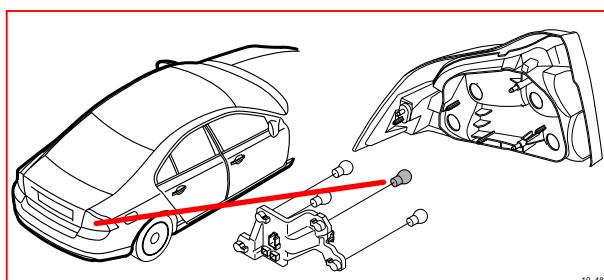


10/46 Fog light, right rear, S80

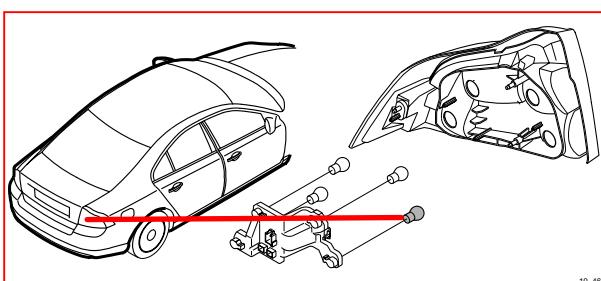


10/50 Brake light, left, V70

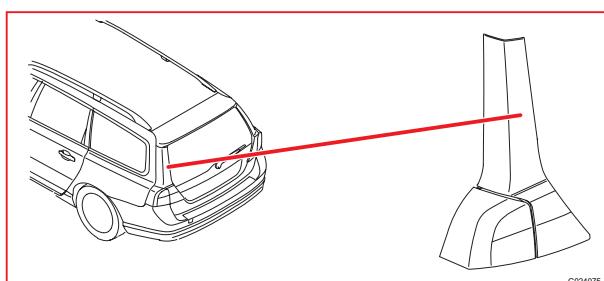

10/47 Direction indicator, rear right, V70

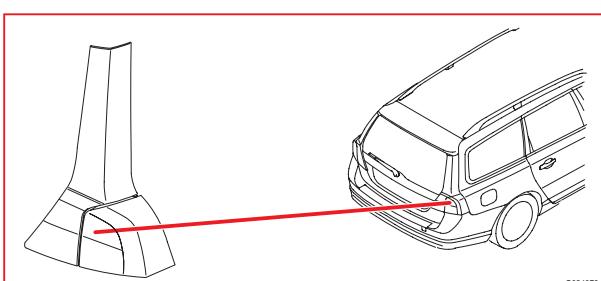


10/50 Brake light left, S80

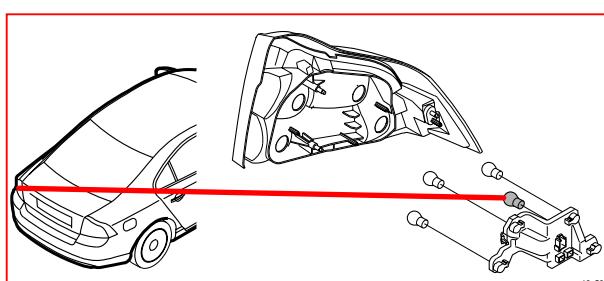


Component illustrations

10/51 V70 - 10/55 S80


10/51 Tail lamp 1 left, V70

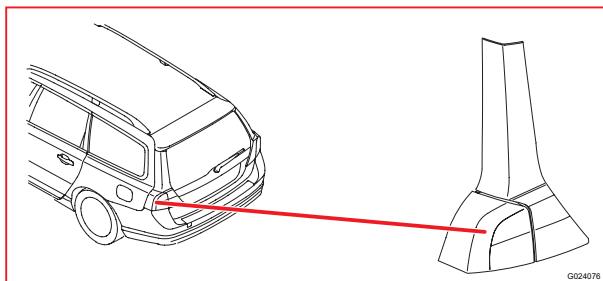


10/53 Fog light, rear left, S80

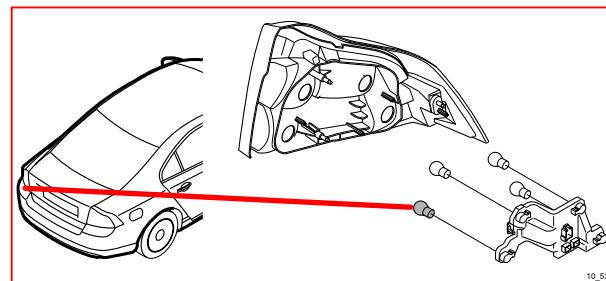


10/51 Tail lamp 1 left, S80

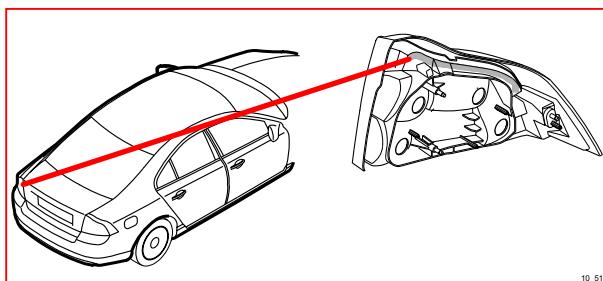


10/54 Direction indicator, left rear, V70

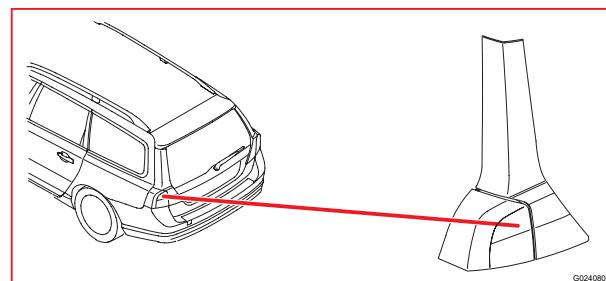


10/52 Tail lamp 2 left, V70

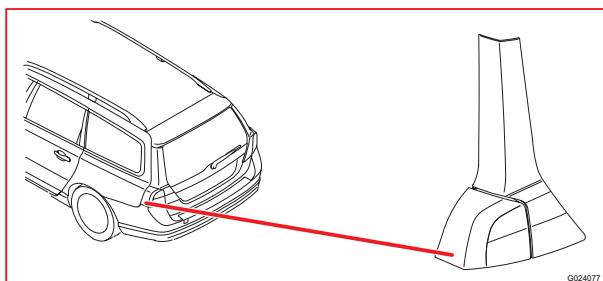


10/54 Direction indicator, rear left, S80

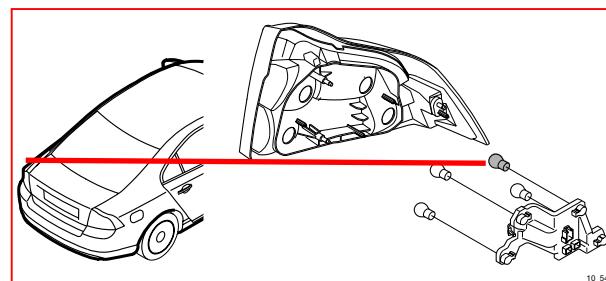


10/52 Tail lamp 2 left, S80

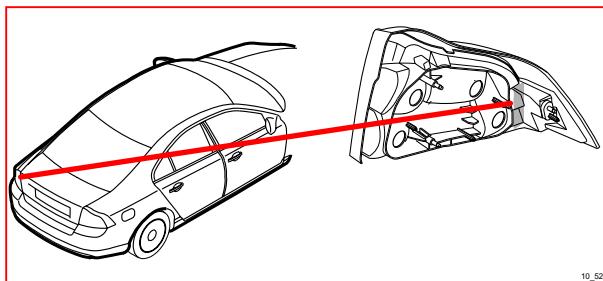


10/55 Reversing light left, V70

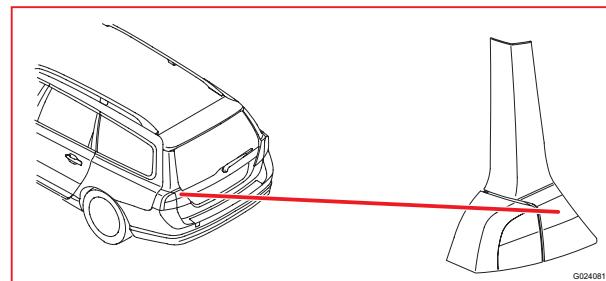

10/53 Fog light, left rear, V70

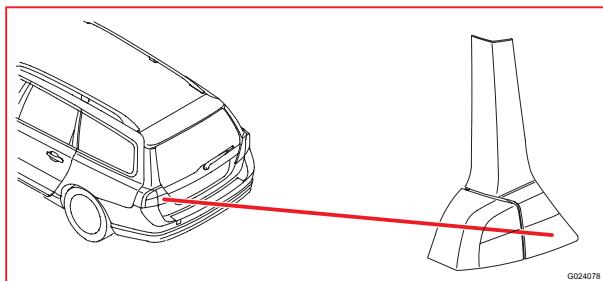


10/55 Reversing light left, S80

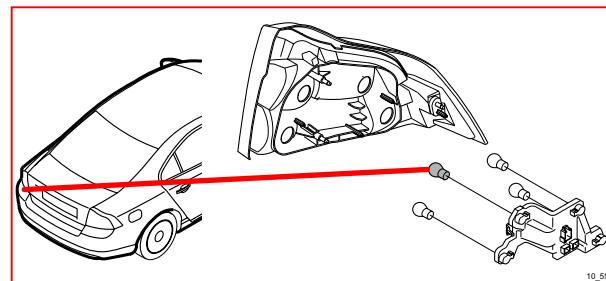


Component illustrations

10/64 - 10/125


10/64 Right-hand high beam

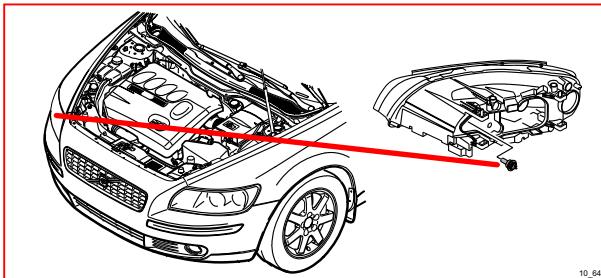


10/70 Left-hand low beam

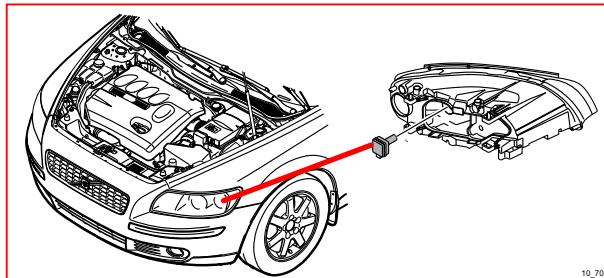


10/65 Auxiliary light, front right

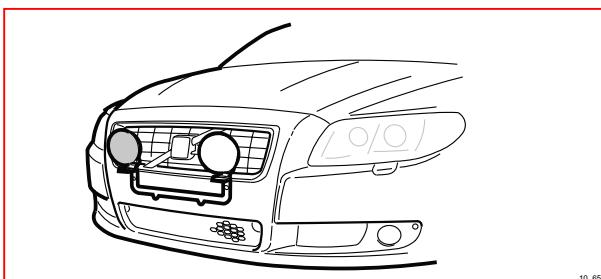


10/72 Front ashtray lighting

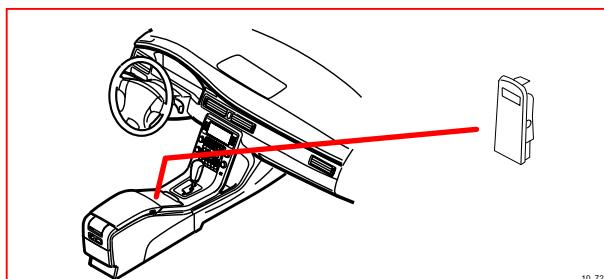


10/66 Right-hand low beam

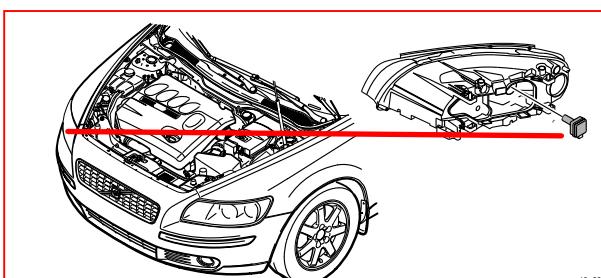


10/114 Left-hand vanity mirror lighting

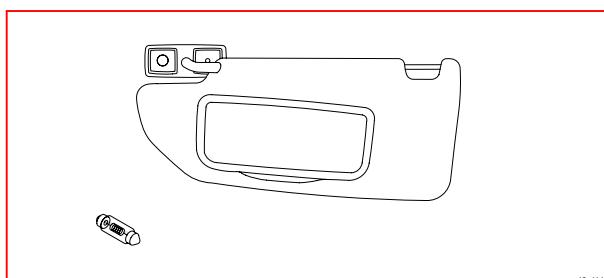


10/68 Left-hand high beam

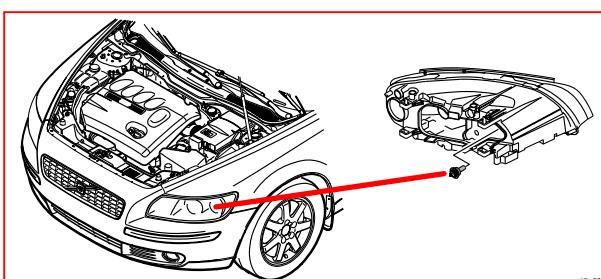


10/115 Right-hand vanity mirror lighting

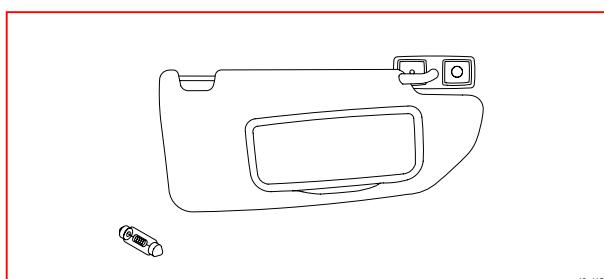

10/69 Auxiliary light, front left

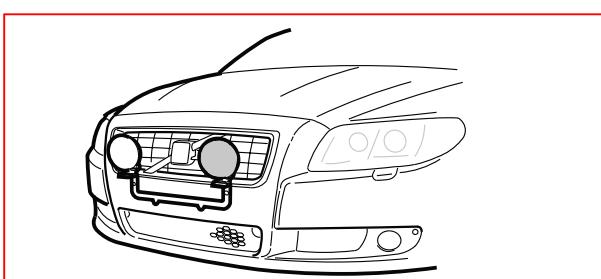


10/125 Left-hand front courtesy lighting

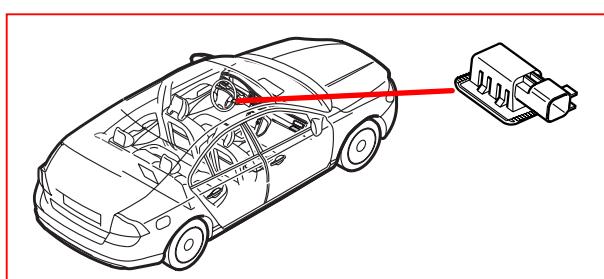


Component illustrations

10/126 - 10/250


10/126 Right-hand front courtesy lighting

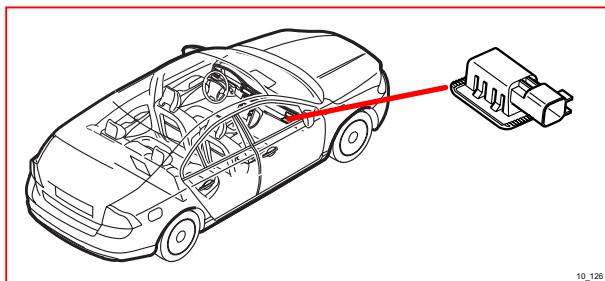


10/127 Lighting, cargo compartment, left-hand side, V70

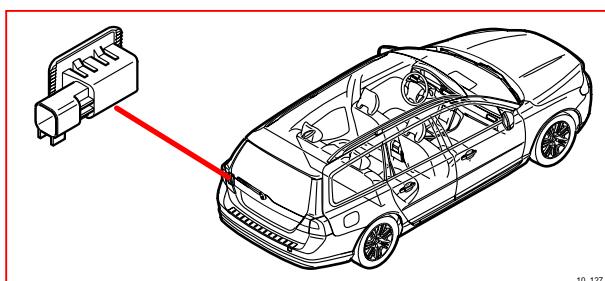


10/127 Lighting, cargo compartment, left-hand side, S80

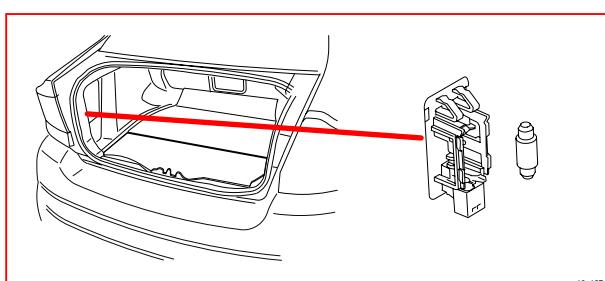


10/128 Lighting, cargo compartment, right-hand side, V70

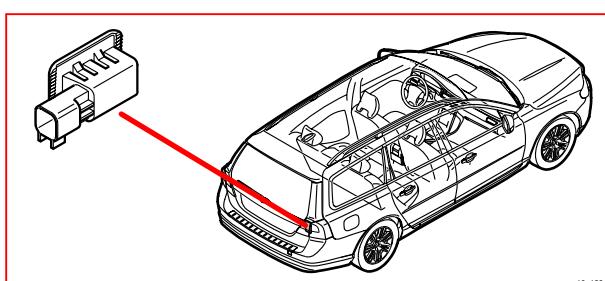


10/128 Lighting, cargo compartment, right-hand side, S80

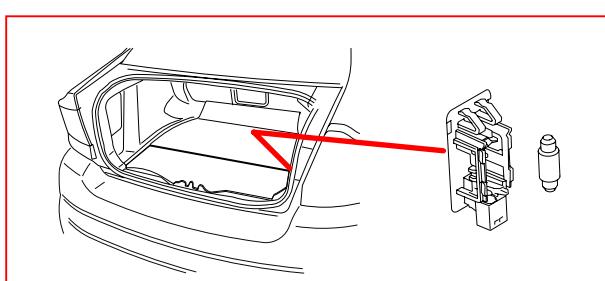


10/148 Lighting, left front door mirror

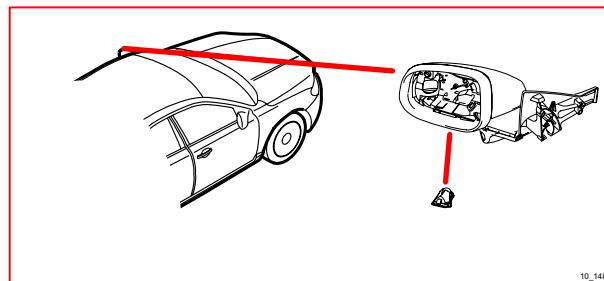


10/149 Lighting, right front door mirror

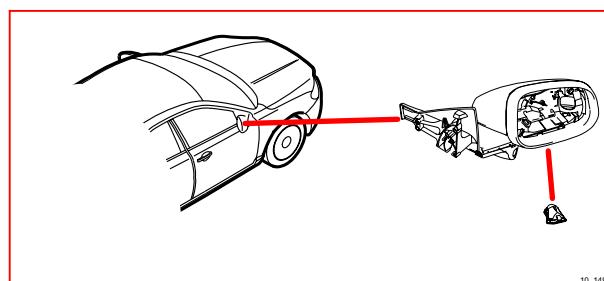


10/150 Rear reading light

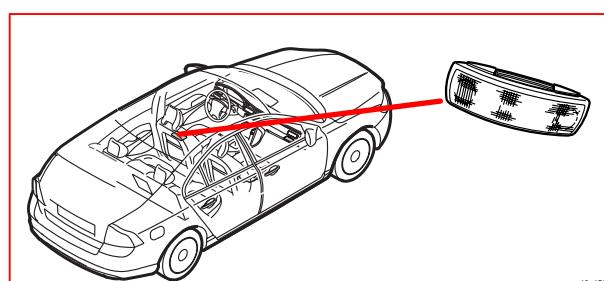

10/249 Sill lighting, front driver's side

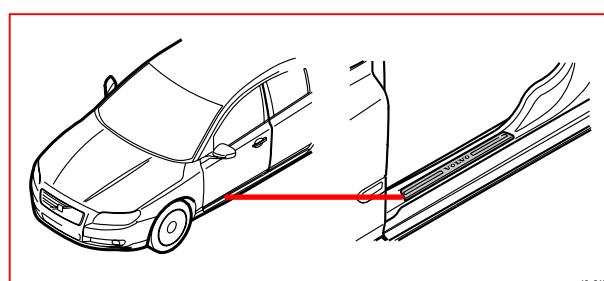


10/250 Sill lighting, front passenger side

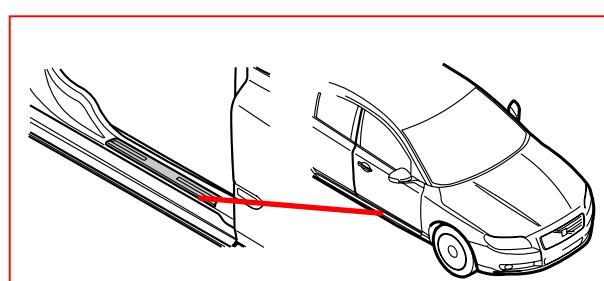


Component illustrations

10/251 - 15/33


10/251 Sill lighting, rear driver's side, S80

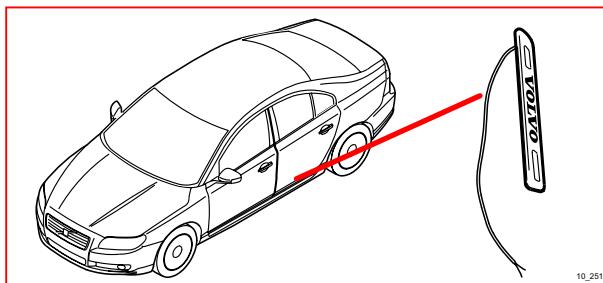


10/252 Sill lighting, rear passenger side, S80

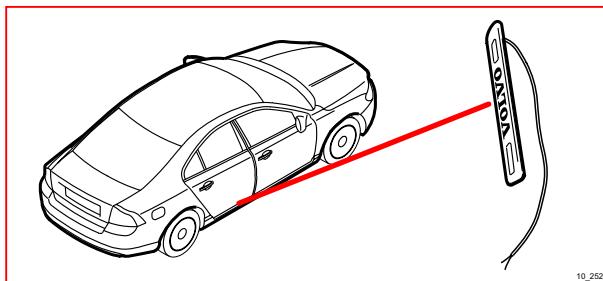


11A/no.Main fuses in the engine compartment fuse box

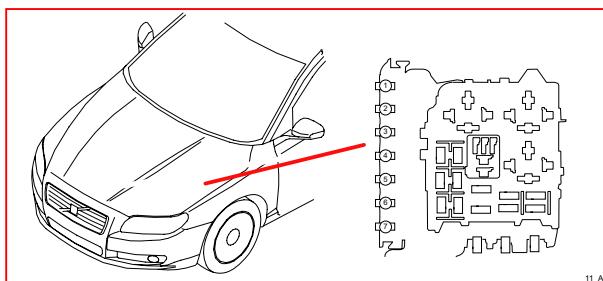


11B/no.Fuses in the engine compartment fuse box

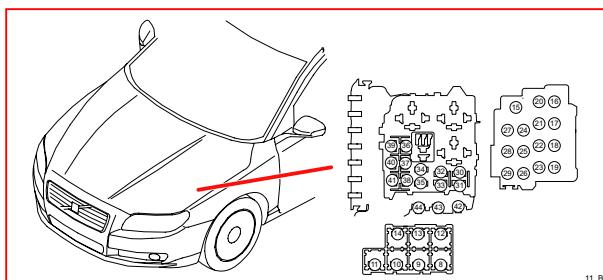


11D/A Fuses in cargo compartment fuse box

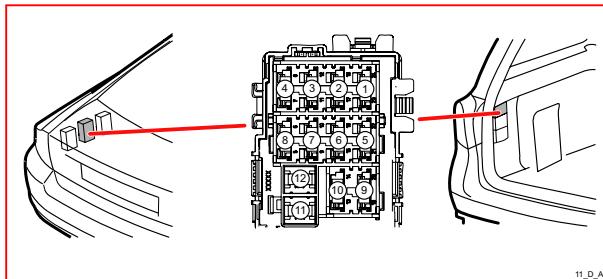


11D/B Fuses in cargo compartment fuse box

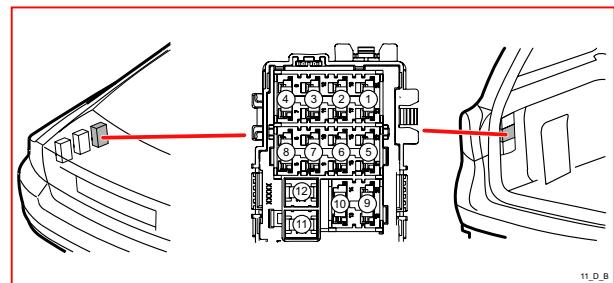


11D/D Fuses in cargo compartment fuse box

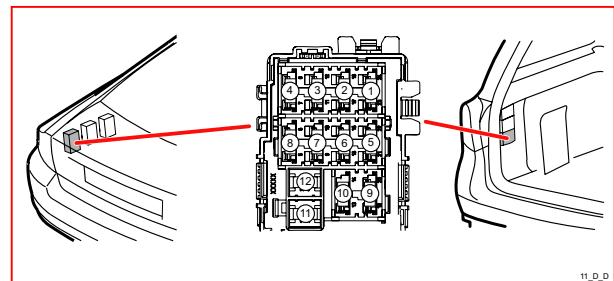


15/31 Distribution box in engine compartment

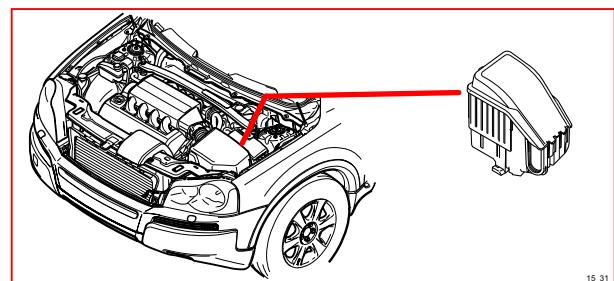

15/32 Rear electrical center

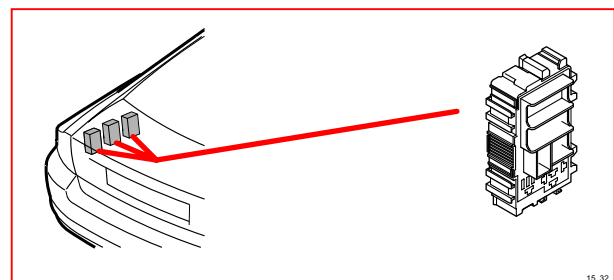


15/33 Engine compartment cold zone

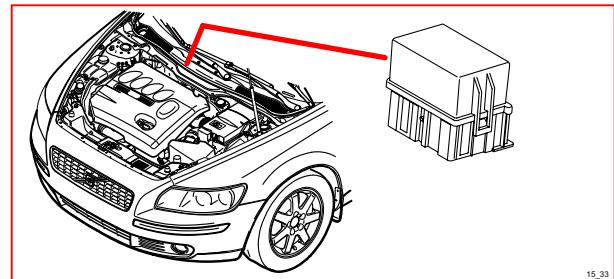


Component illustrations

16/1 - 16/16


16/1 Integrated Audio Module (IAM)

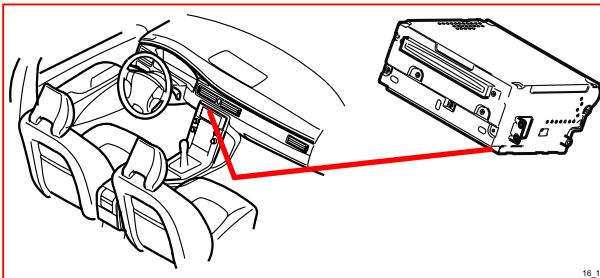


16/5 Right-hand rear door speaker

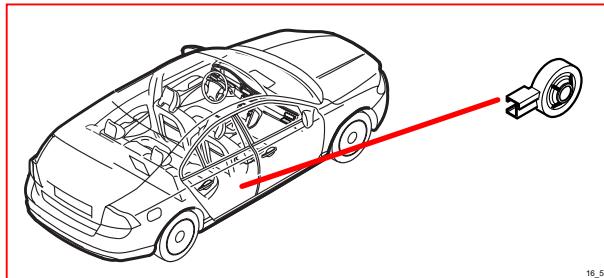


16/3.1 Right-hand front door speaker

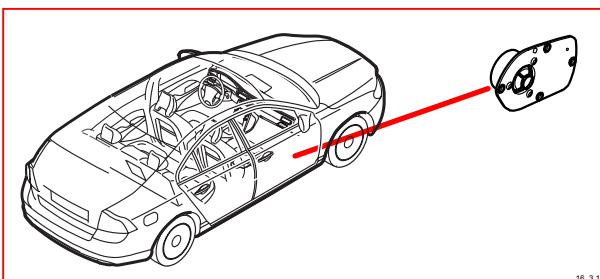


16/6 Left-hand rear door speaker

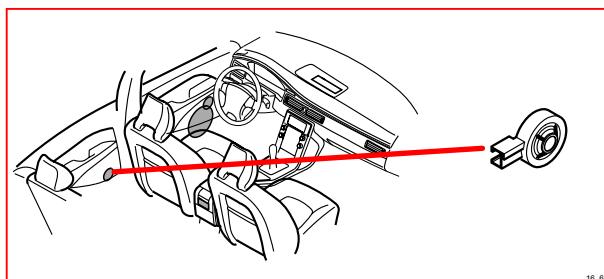


16/3.2 Right-hand front door speaker

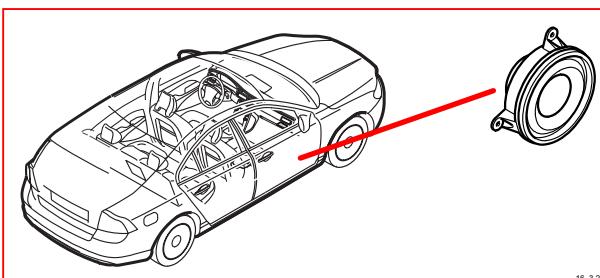


16/10 Horn 1

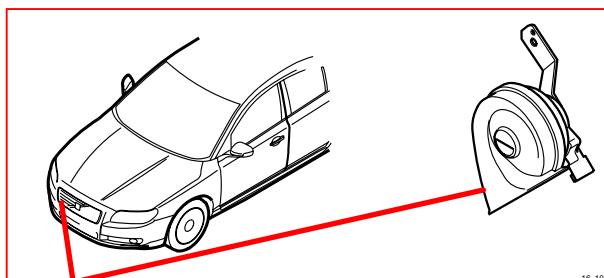


16/4.1 Left-hand front door speaker

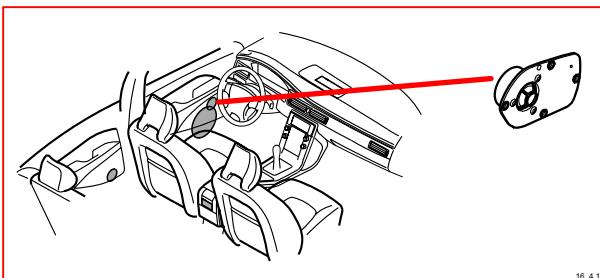


16/11 Horn 2

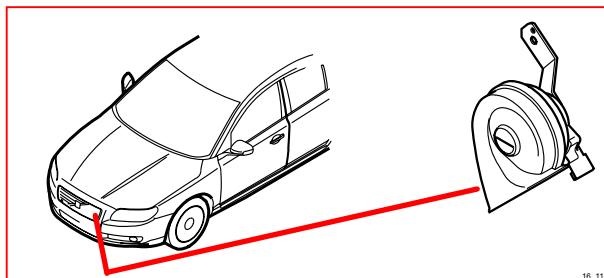

16/4.2 Left-hand front door speaker

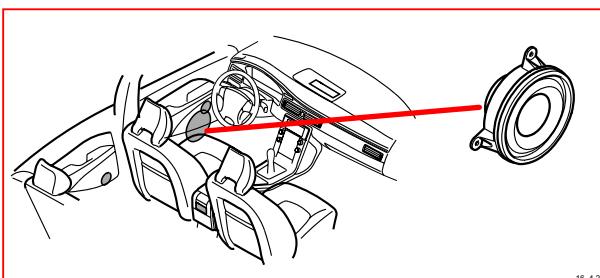


16/16 Window antenna amplifier

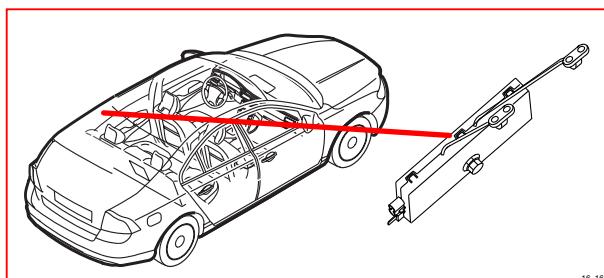


Component illustrations

16/26 - 16/79 V70


16/26 Center dashboard speaker

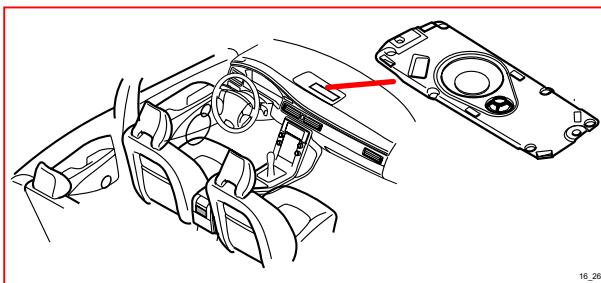


16/55 Left-hand front tweeter

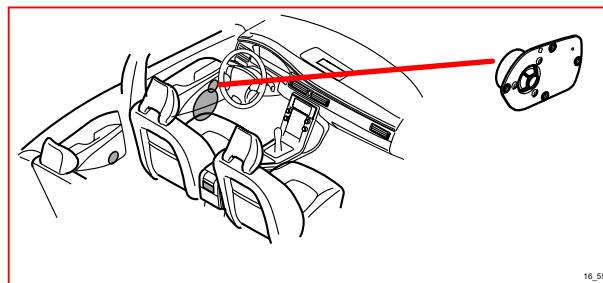


16/35 Siren Control Module (SCM)

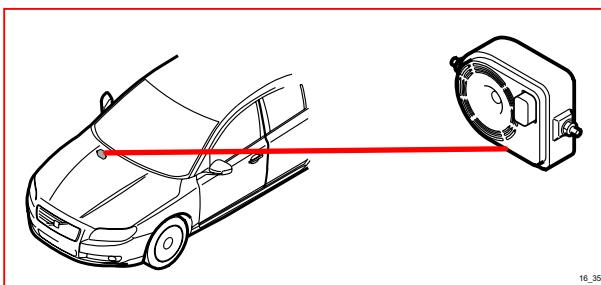


16/56 Right-hand front tweeter

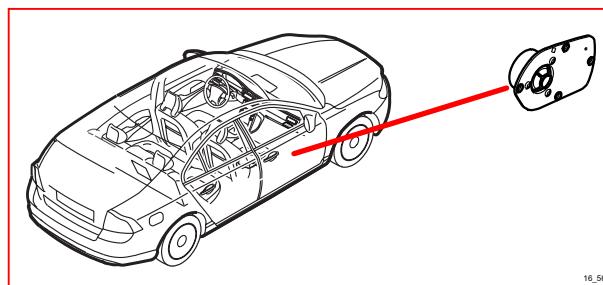


16/45 Navigation system portable

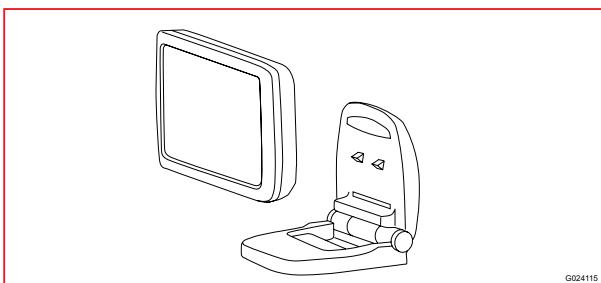


16/60 Phone Module (PHM)

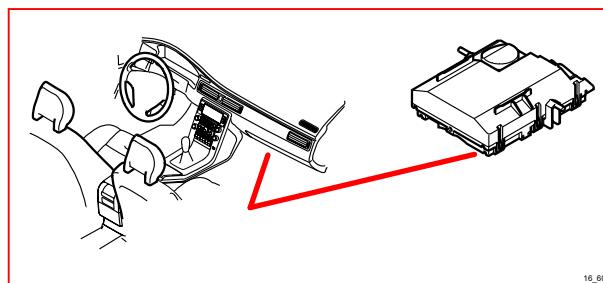


16/46 High Level Display Front module (HLDF)

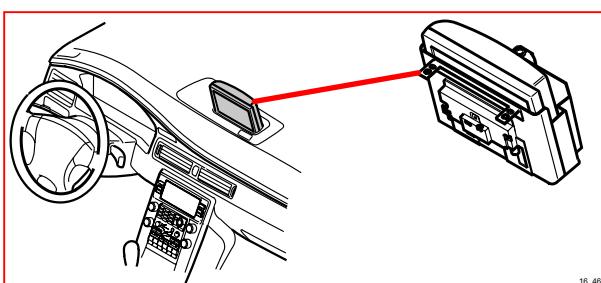


16/62 Hand unit, mobile phone

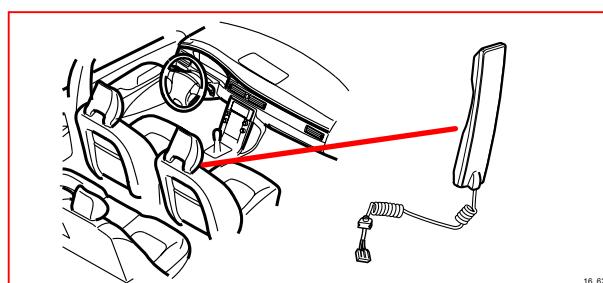

16/47 Antenna GSM/GPS/RDAR

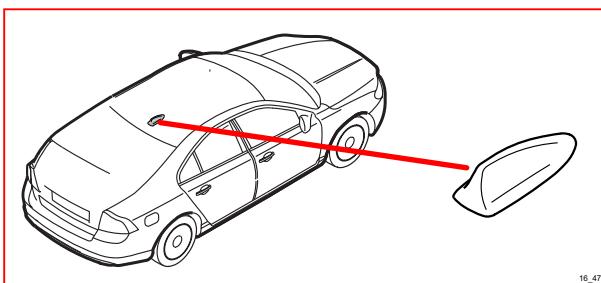


16/79 Subwoofer Module (SUB), V70

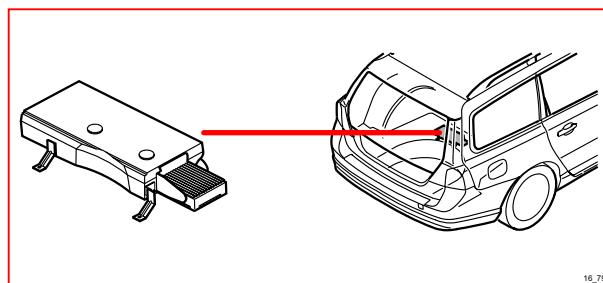

Component illustrations


16/81A - 16/123.3

16/81A Screen, LH head restraint

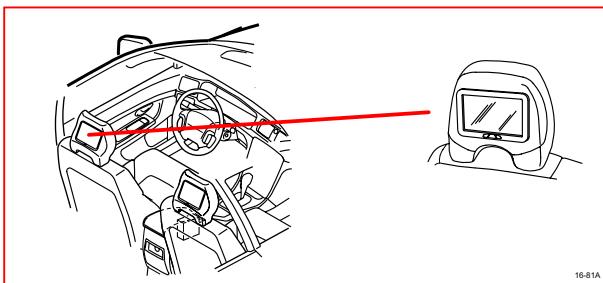


16-81A

16/109 DVD player/control module

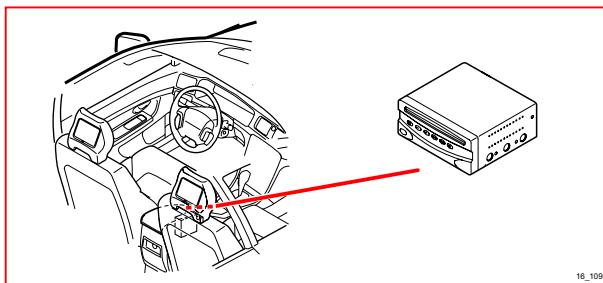


16_109

16/81B Screen, RH head restraint

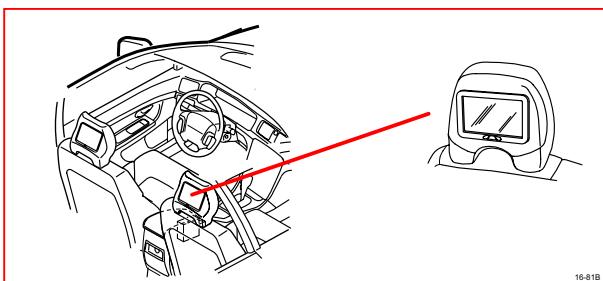


16-81B

16/111 Rear headphone sockets

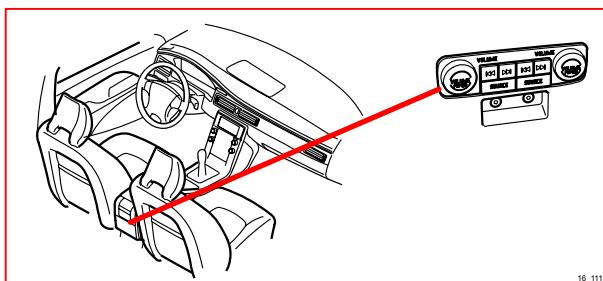


16_111

16/98 Microphone

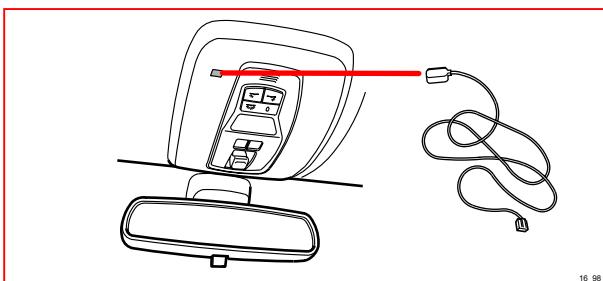


16_98

16/123 Auxiliary equipment input (AUX)

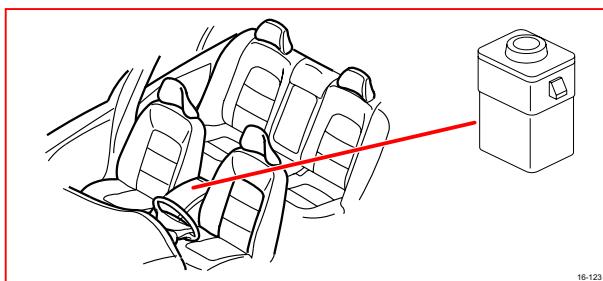


16-123

16/105 Audio module (AUD)

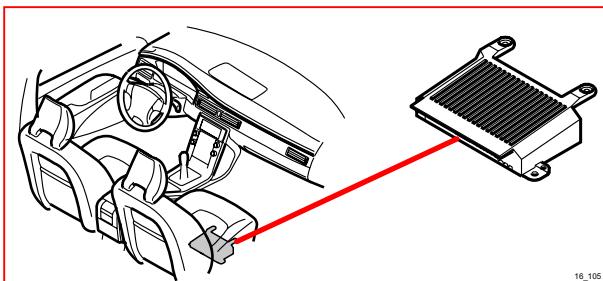


16_105

16/123.2 Auxiliary equipment input (AUX)

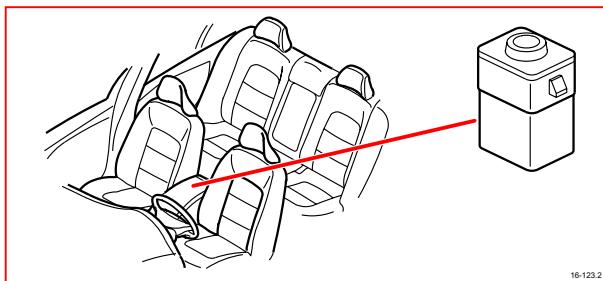


16-123.2

16/108 Multimedia Module (MMM)

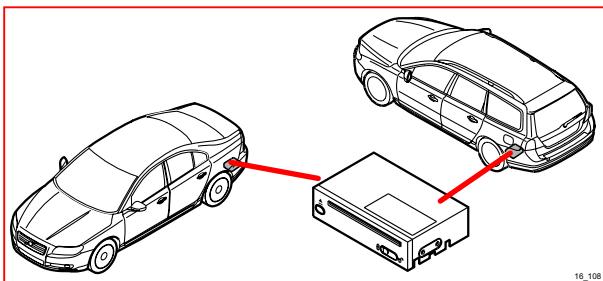

16_108

16/123.3 RSE-AUX input

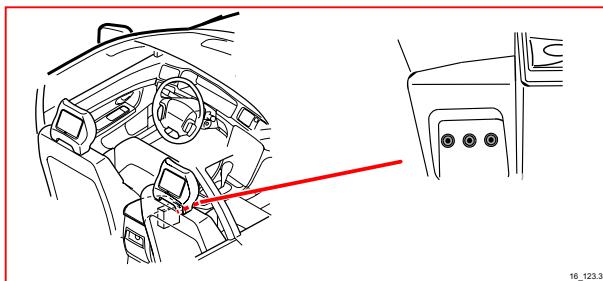


16_123.3


Component illustrations

16/127 - 16/140


16/127 Microphone, mobile phone handsfree

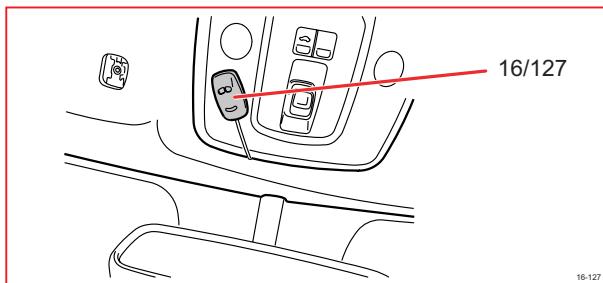


16/132 Antenna door lock trunk lid/tailgate, V70

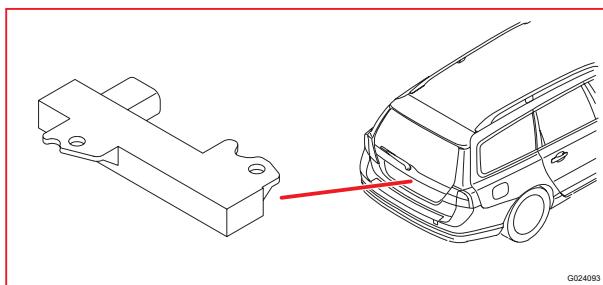


16/132 Antenna, door lock, bumper, S80

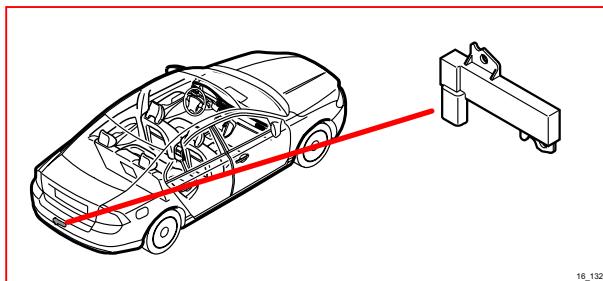


16/133 Antenna, door lock, cargo compartment

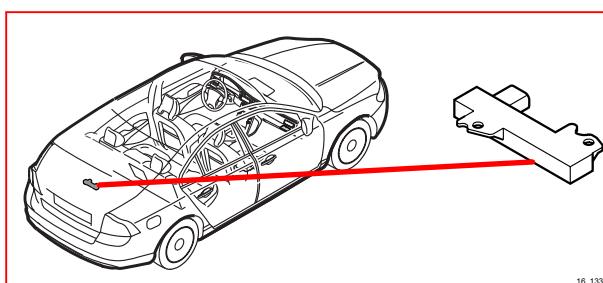


16/134 Antenna, door lock, passenger compartment 2

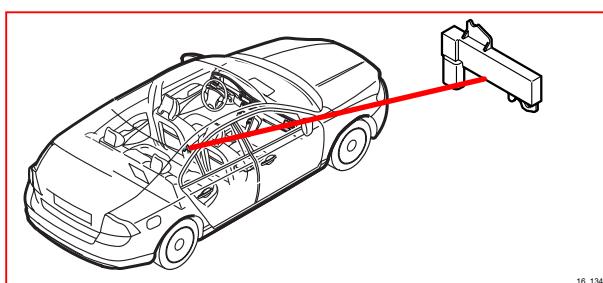


16/135 Antenna, door lock, passenger compartment 3

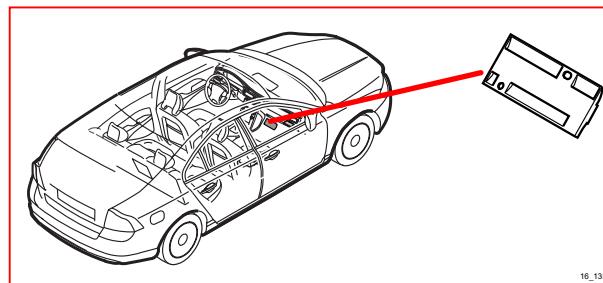


16/136 LH rear door tweeter

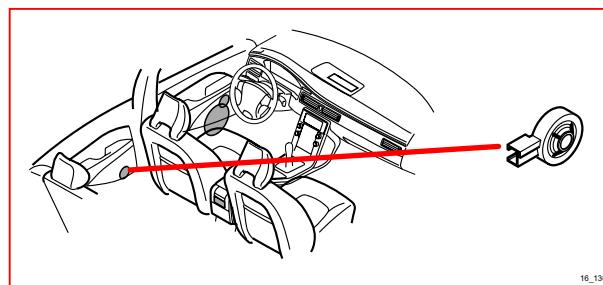


16/137 RH rear door tweeter

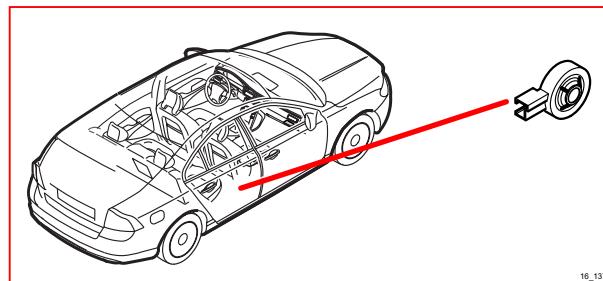

16/138 Right-hand rear window antenna

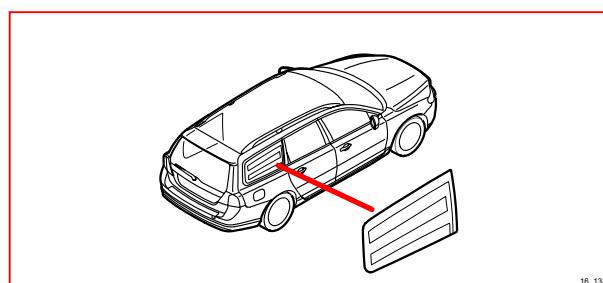


16/140 SIM card reader

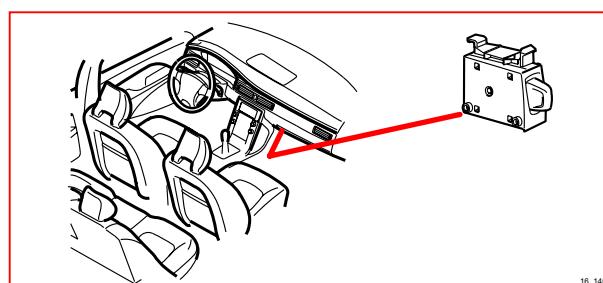

Component illustrations


16/141 - 17/39

16/141 Interference filter, rear window, LH

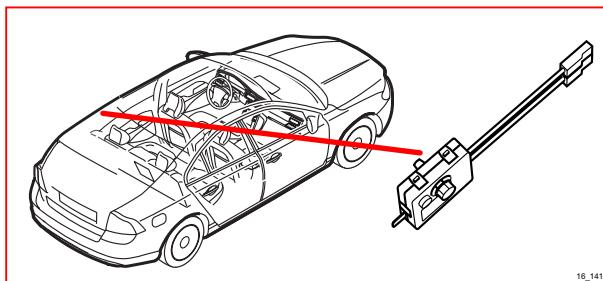


16_141

17/19 12V outlet, cargo compartment, V70

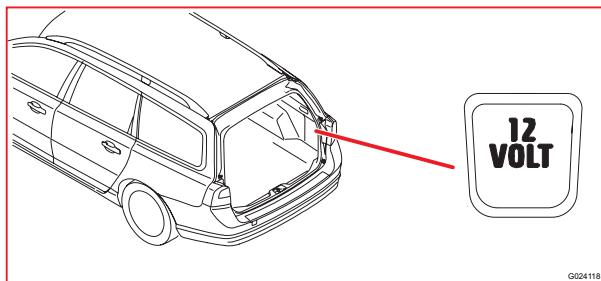


G024118

16/145 Remote digital audio receiver (RDAR)

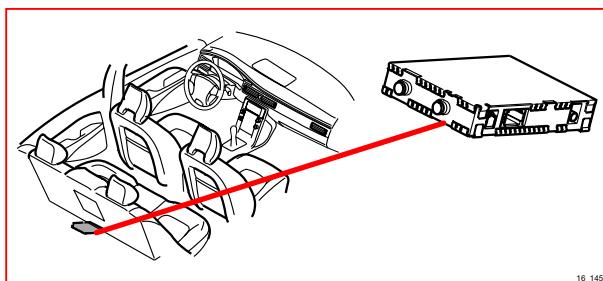


16_145

17/19 12V outlet, cargo compartment, S80

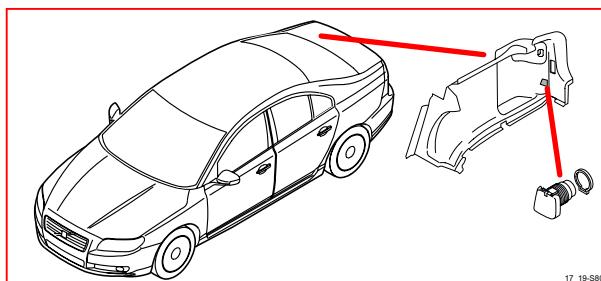


17_19-S80

16/147 Bluetooth Phone Module (BPM)

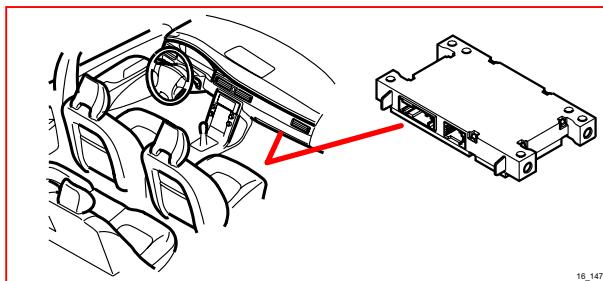


16_147

17/37 4-pin outlet, tow hitch cable harness

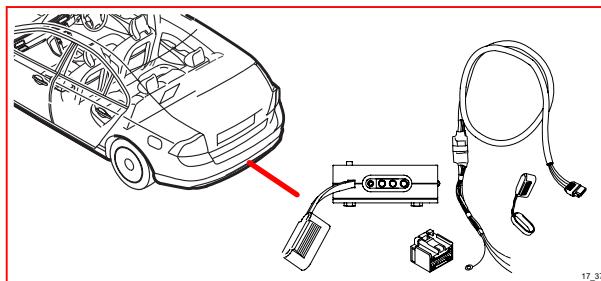


17_37

16/159 Control module, mobile phone hands-free

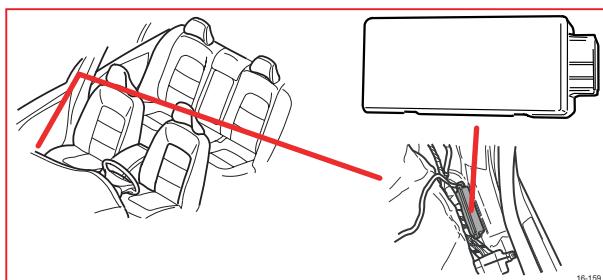


16_159

17/38 7-pin outlet, tow hitch cable harness

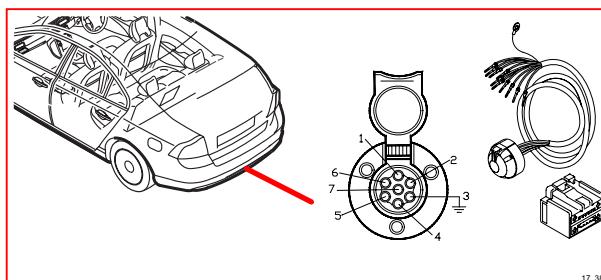


17_38

17/13 Data link connector

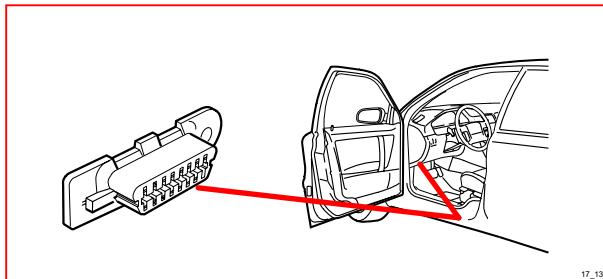

17_13

17/39 13-pin outlet, tow hitch cable harness

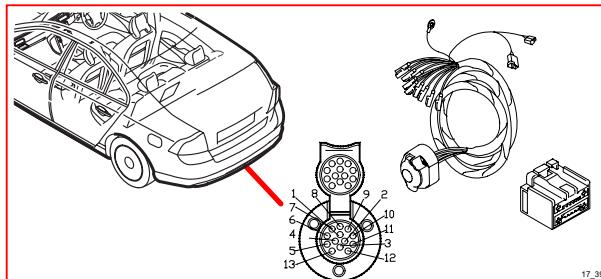


17_39


Component illustrations

17/42 - 27/3


17/42 USB-port

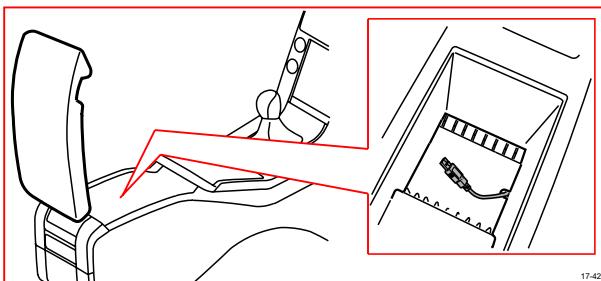


20/22-26 Glow plug

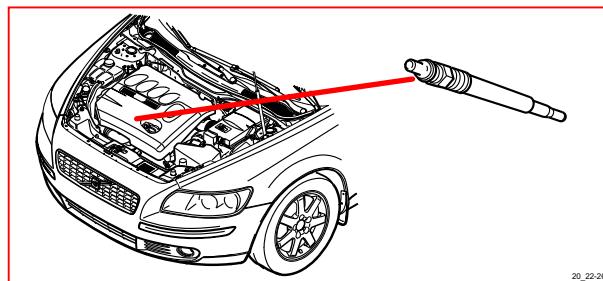


18/4 Contact reel

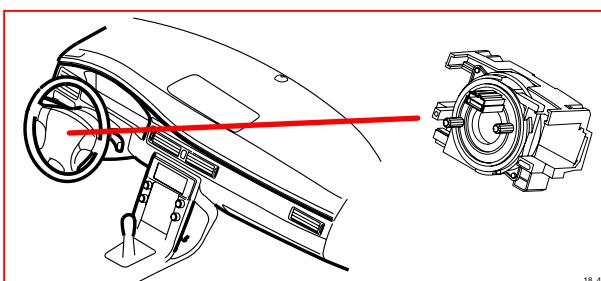


26/6 Converter/control module, sill moldings, driver's side

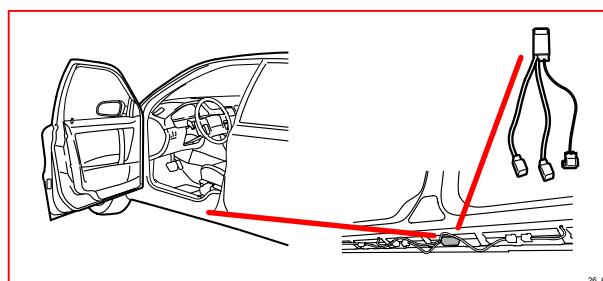


20/3-8 Spark plug and ignition coil

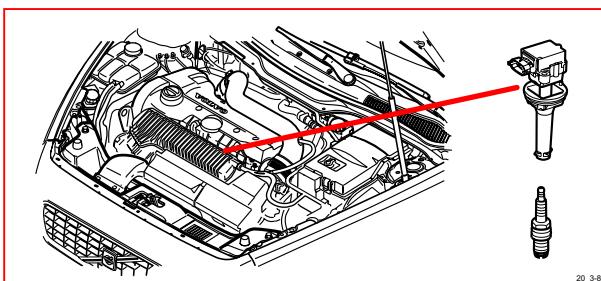


26/7 Converter/control module, sill moldings, passenger side

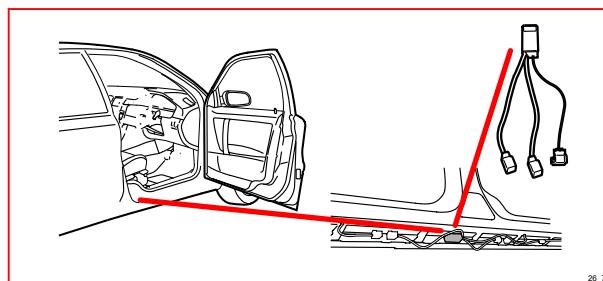


20/12-13 Spark plug and ignition coil

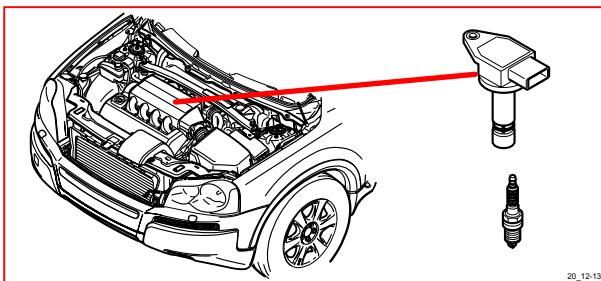


27/2 Indicator, visual collision warning

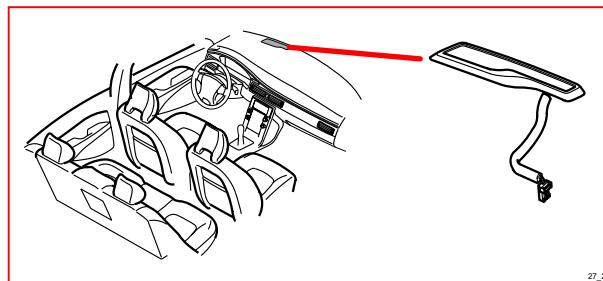

20/16 Capacitor

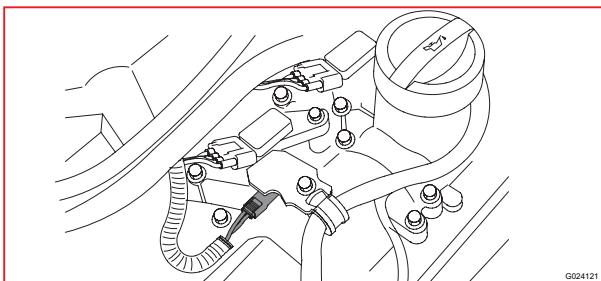


27/3 Left Camera Module (LCM)

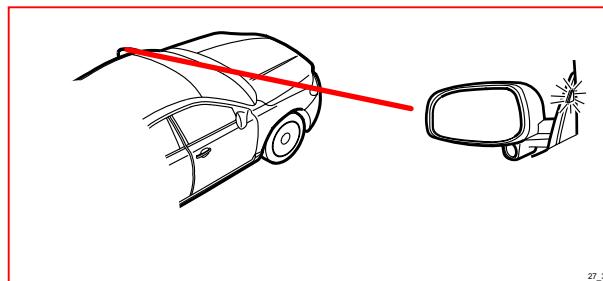


Component illustrations

27/4 - 31/15


27/4 Right-hand Camera Module (RCM)

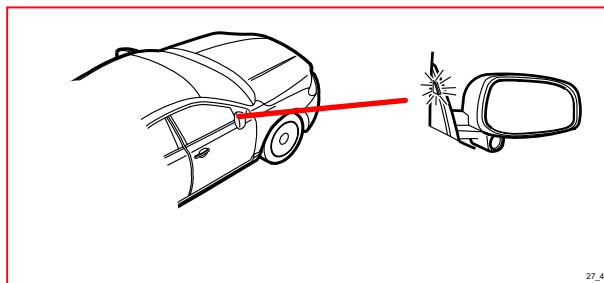


27/6 Camera

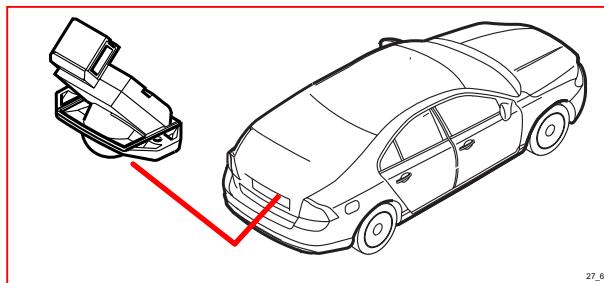


31/1 Ground connection, PTC

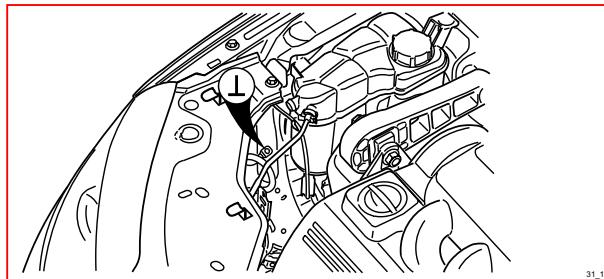


31/2 Ground connection, Left wheel housing

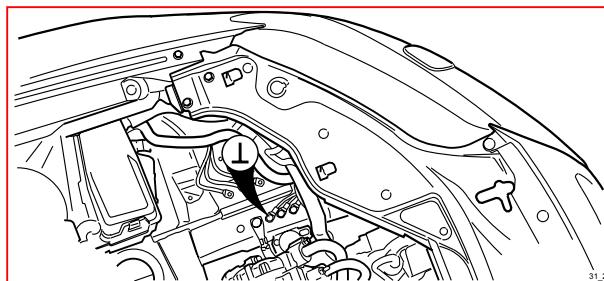


31/3 Ground connection, Body battery

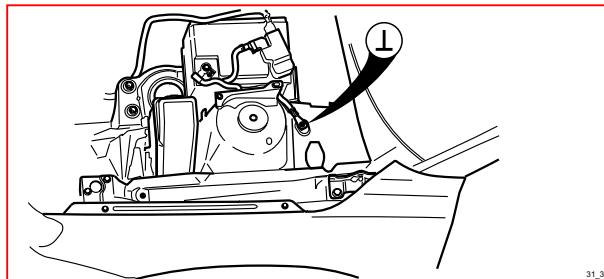


31/4 Ground connection, Engine

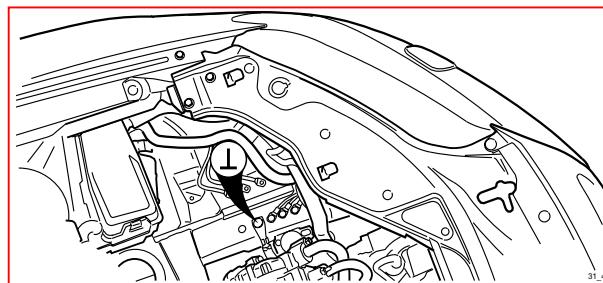


31/6 Ground connection, Left bottom rail

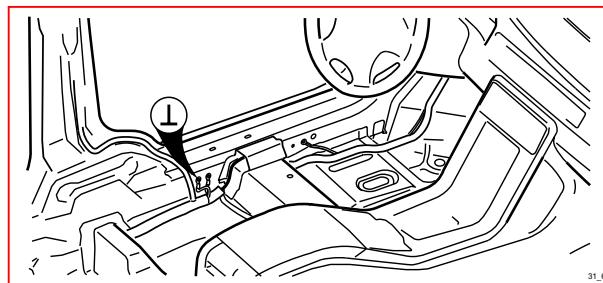


31/7 Ground connection, Left bottom rail

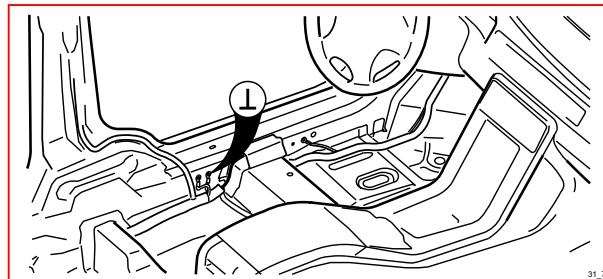

31/10 Ground connection, Left bottom rail

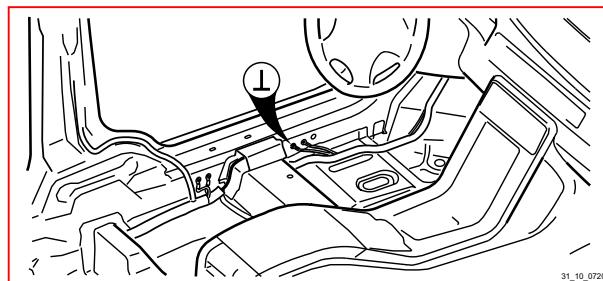


31/15 Ground connection, Right bottom rail

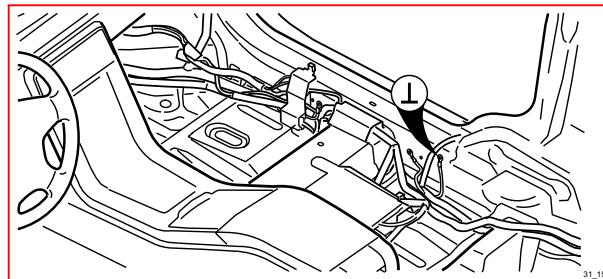


Component illustrations

31/ 47 - 31/89 5 Cyl.


31/47 Ground connection, Left rear bumper abutment

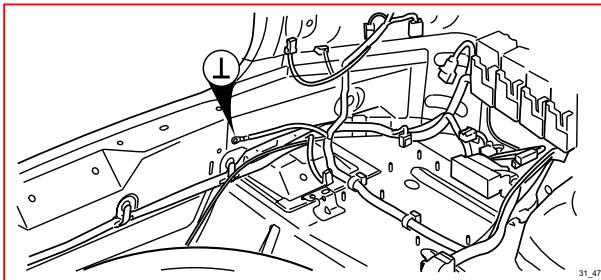


31/48 Ground connection, Right rear bumper abutment

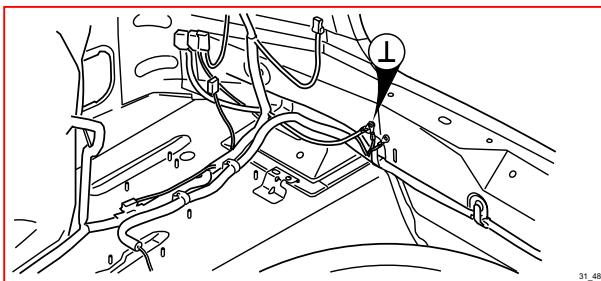


31/65 Ground connection, Rear seat riser, left side

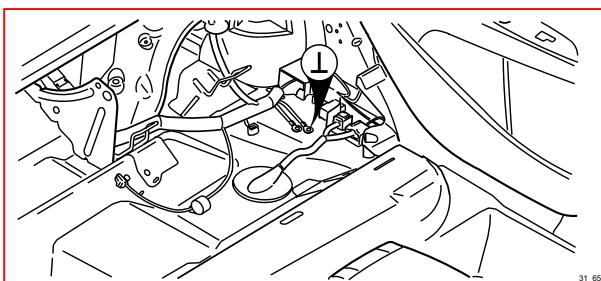


31/67 Ground connection, Rear seat riser, right side 1

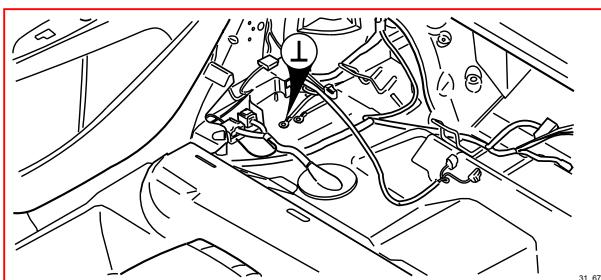


31/68 Ground connection, Rear seat riser, right side 2

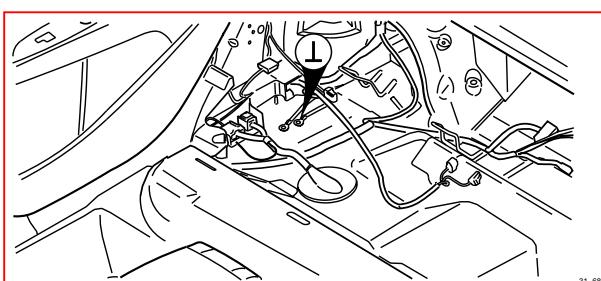


31/83 Ground connection, Left bottom rail

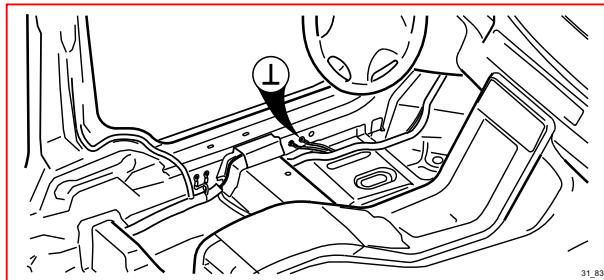


31/84 Ground connection, Right bottom rail

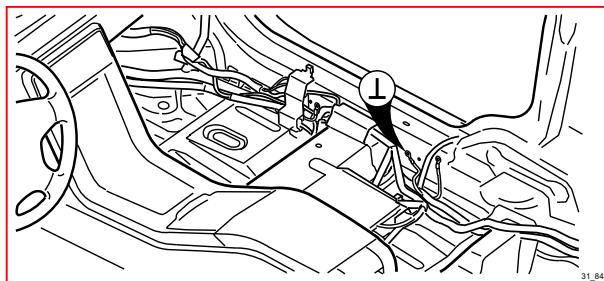


31/88 Ground connection, Engine ignition coils, 5 cyl.

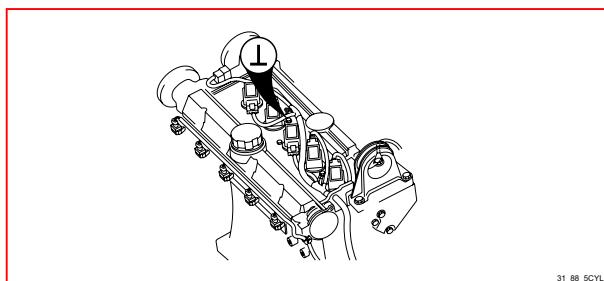

31/88 Ground connection, Engine ignition coils, 6 cyl.

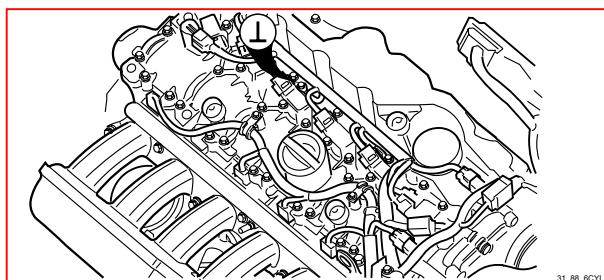


31/89 Ground connection, Engine ignition coils, 5 cyl.

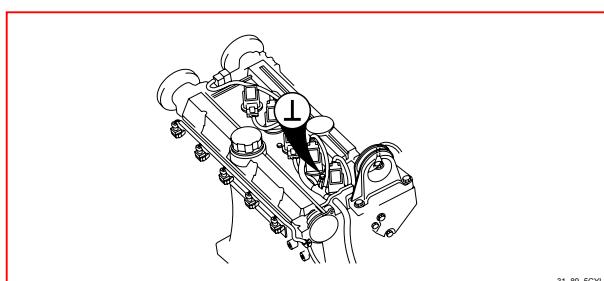


Component illustrations

31/89 6 Cyl. - 31/XX10


31/89 Ground connection, Engine ignition coils, 6 cyl.

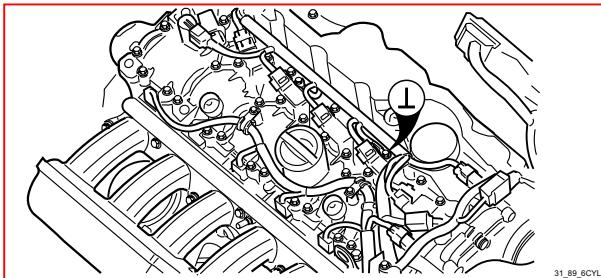


31/90 Ground connection, Engine ignition coils, 8 cyl.

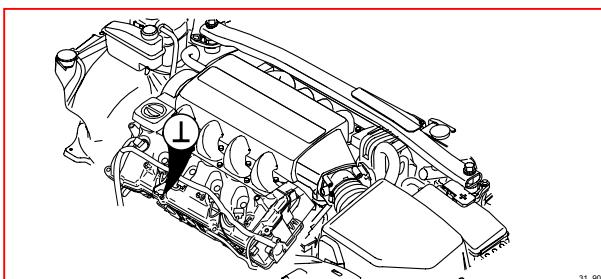


31/93 Ground connection, Left wheel housing 2

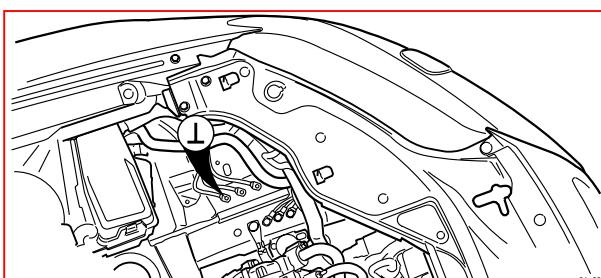


31/94 Ground connection, Right wheel housing 2

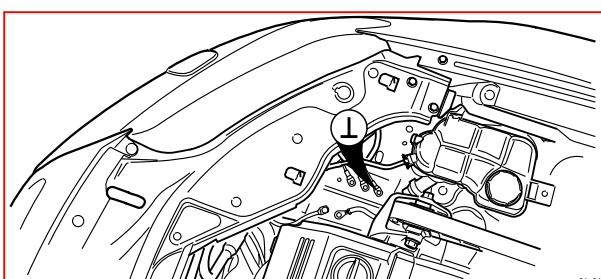


31/95 Ground connection, Left wheel housing

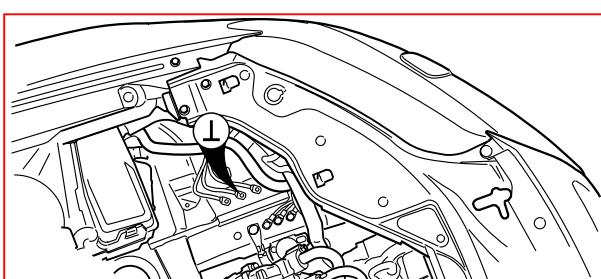


31/96 Ground connection, Right wheel housing 3

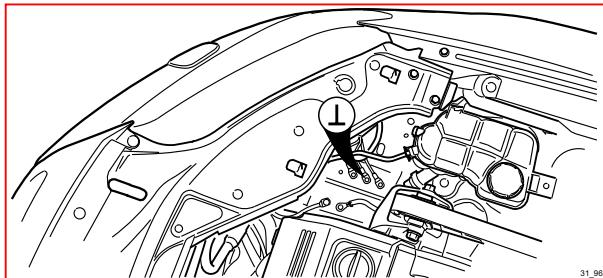


31/100 Ground connection, Engine ignition coils, 8 cyl.

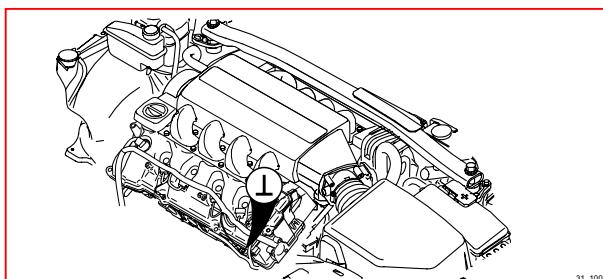


31/XX4 Ground connection, Engine-Body

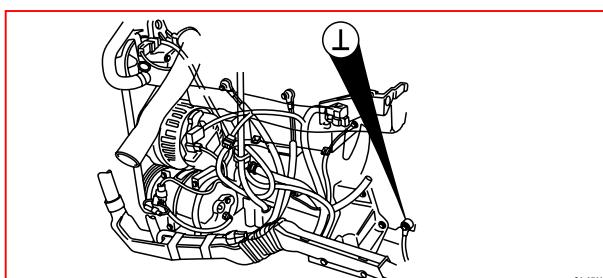

31/XX5 Ground connection, ECM

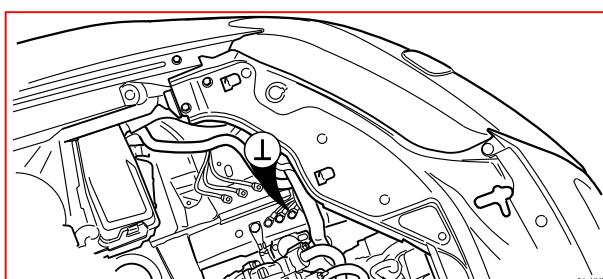


31/XX10 Ground connection, Left wheel housing 1

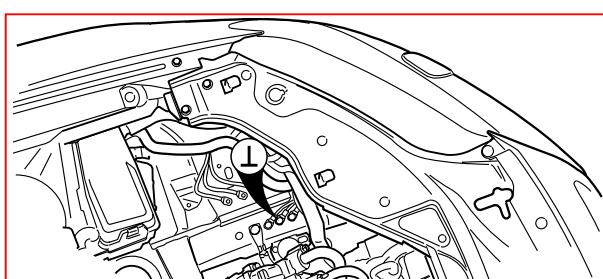


Component illustrations

31/XX14 - 74/99


31/XX14 Ground connection, Left wheel housing 3 (ABS)

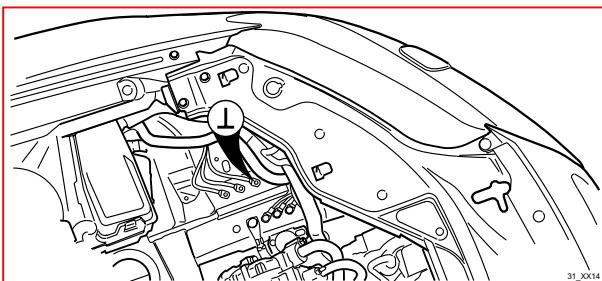


31/XX15 Ground connection, Right wheel housing

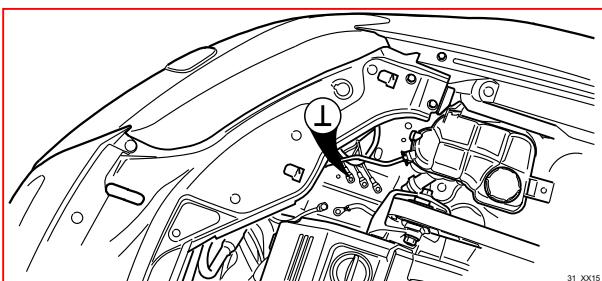


31/AL Ground connection, Auxiliary lights

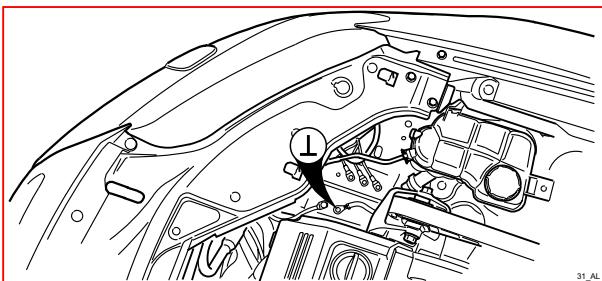


31/INFOT Ground connection, Infotainment

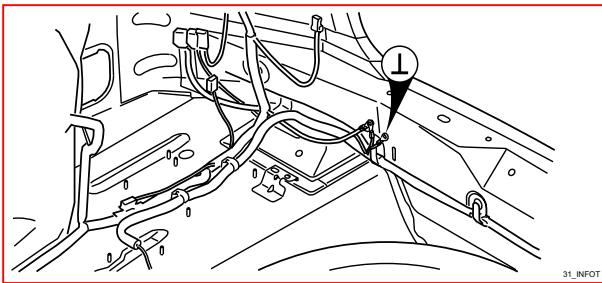


31/TRM Ground connection, Accessories

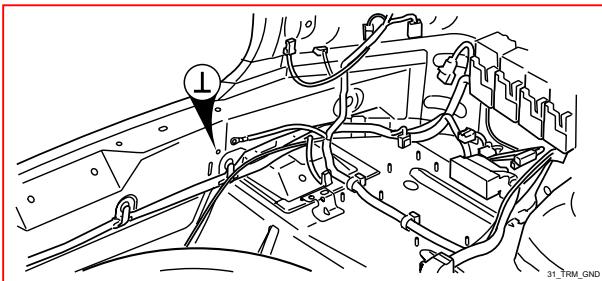


74/9 Connector

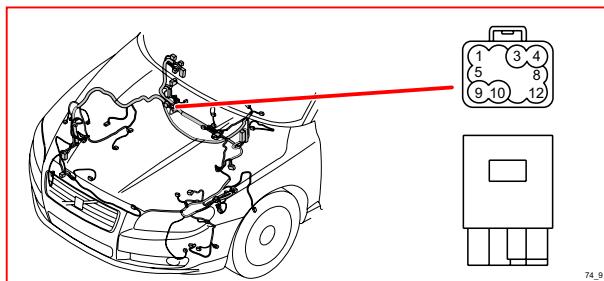


74/30 Connector

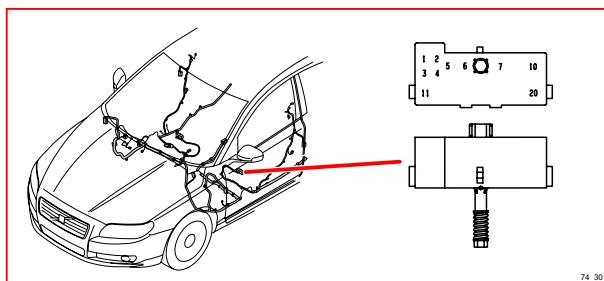


74/31 Connector

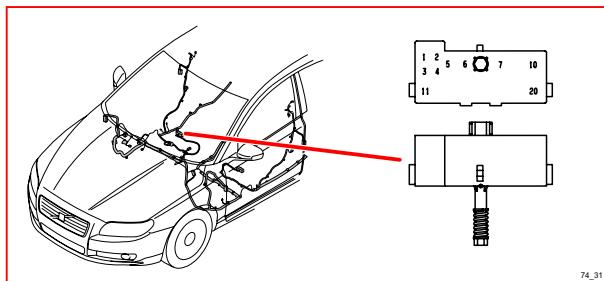

74/53 Connector

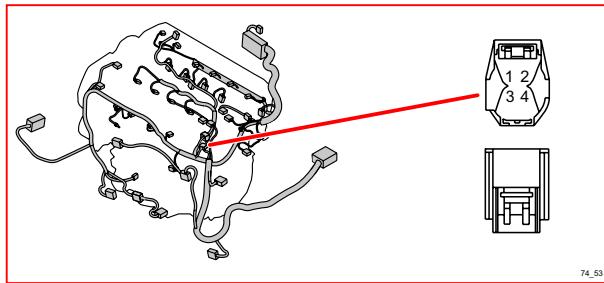


74/99 Connector

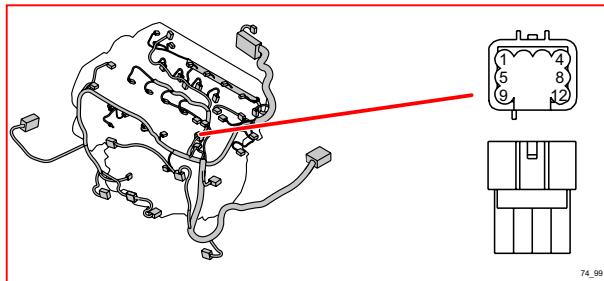


Component illustrations

74/133 - 74/403


74/133 Connector

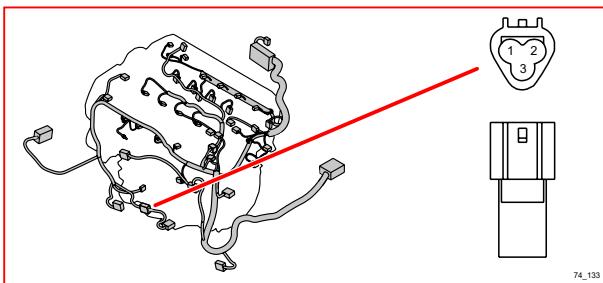


74/304 Connector

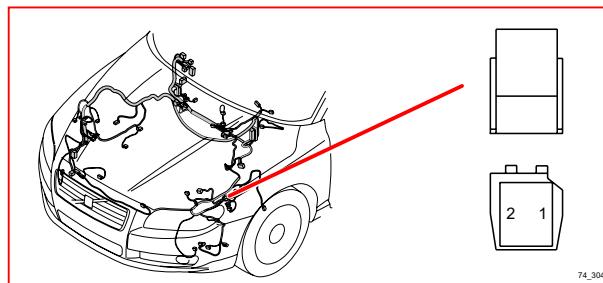


74/276 Connector

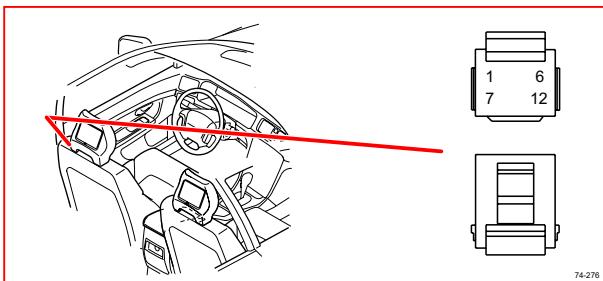


74/308 Connector

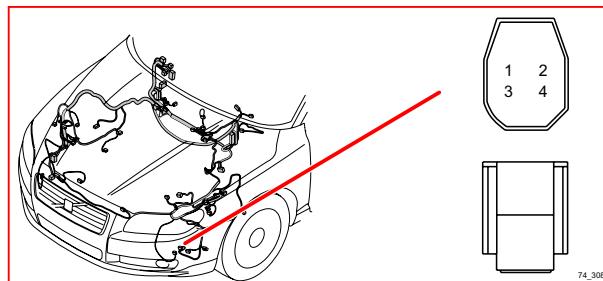


74/277 Connector

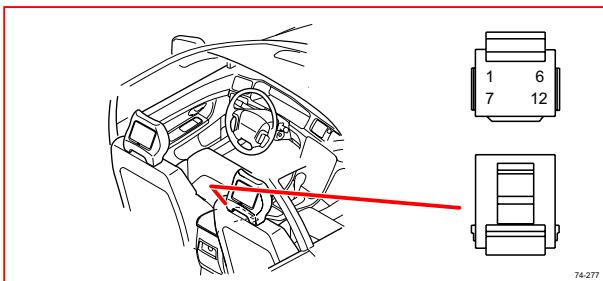


74/401 Connector

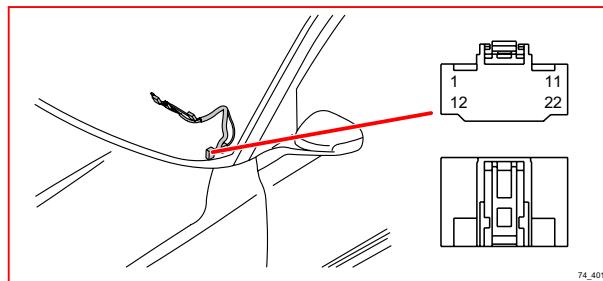


74/301 Connector

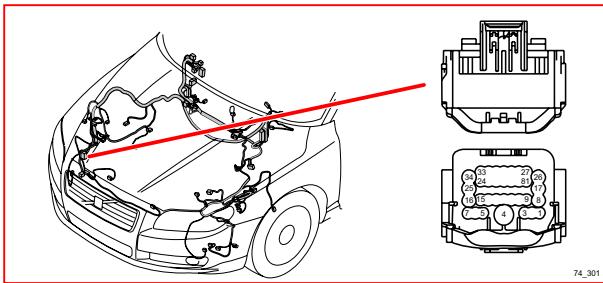


74/402 Connector

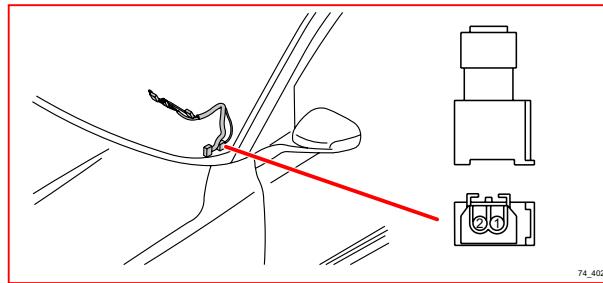

74/303 Connector

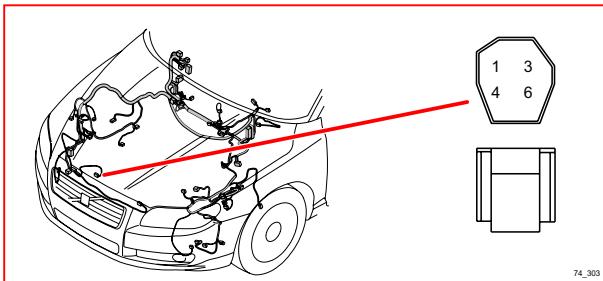


74/403 Connector

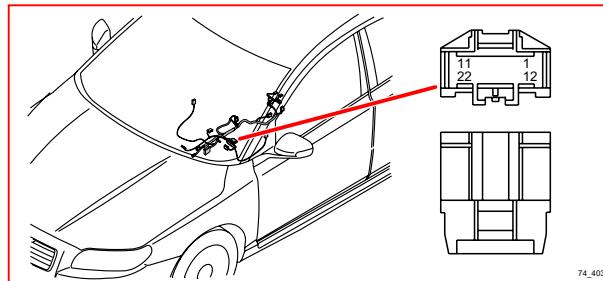


Component illustrations

74/404 - 74/413


74/404 Connector

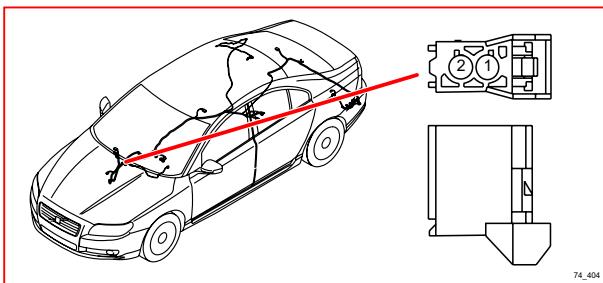


74/408 Connector

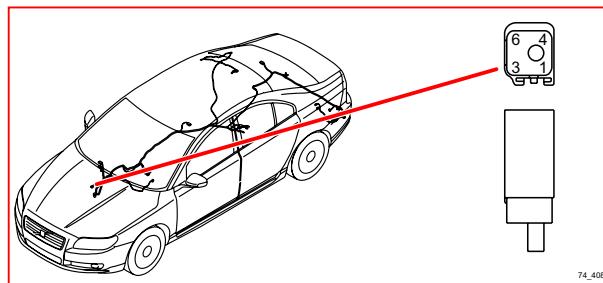


74/405 Connector

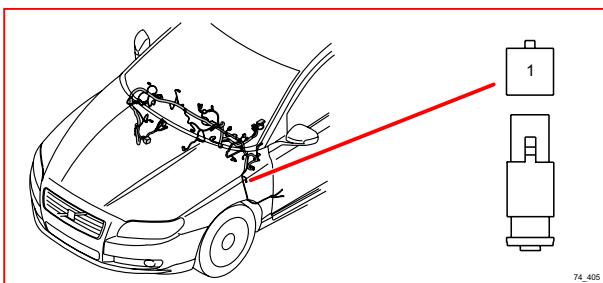


74/409 Connector

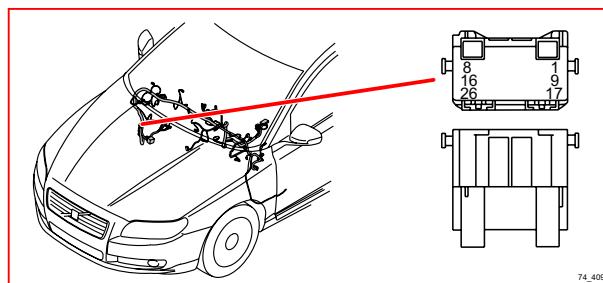


74/406 Connector

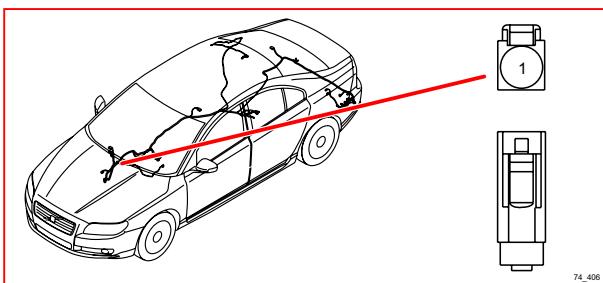


74/411 Connector

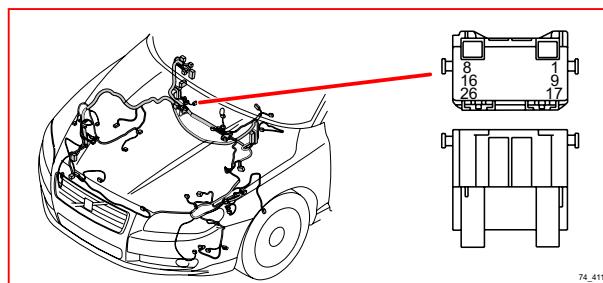


74/407 Connector

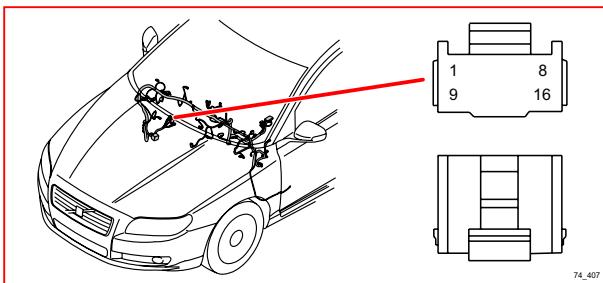


74/412 Connector

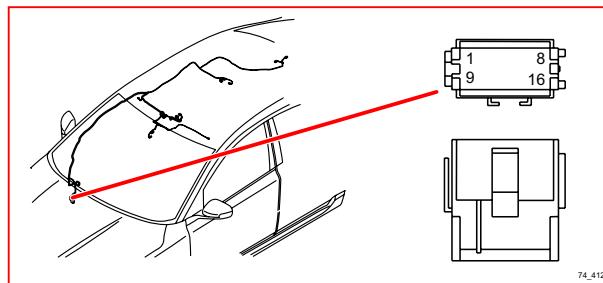

74/407B Connector

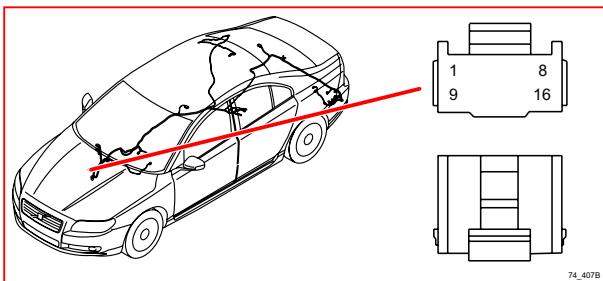


74/413 Connector

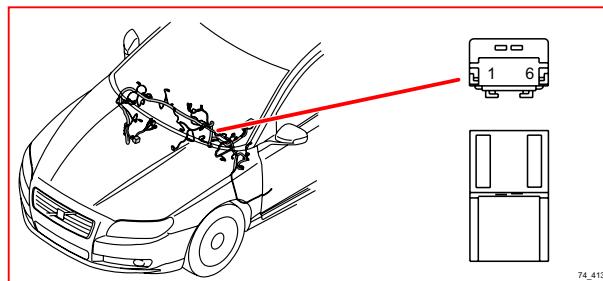


Component illustrations

74/414 - 74/509


74/414 Connector

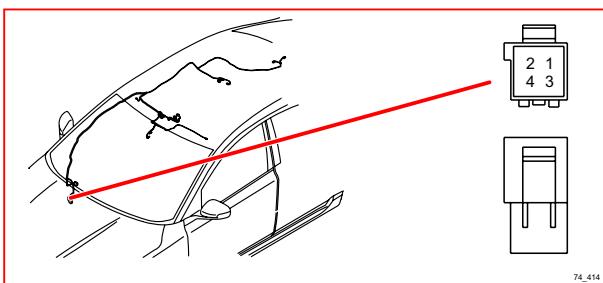


74/504B Connector

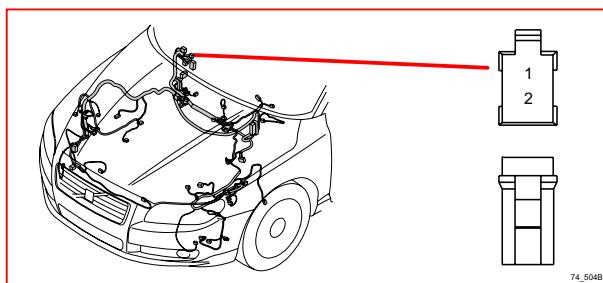


74/501 Connector

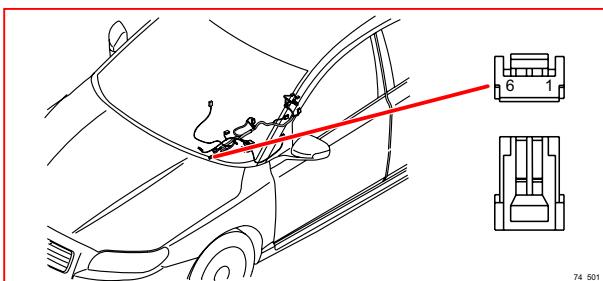


74/505 Connector

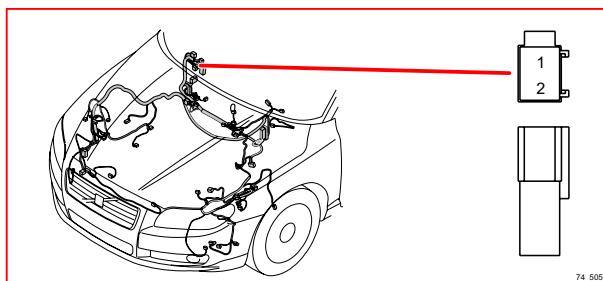


74/502 Connector

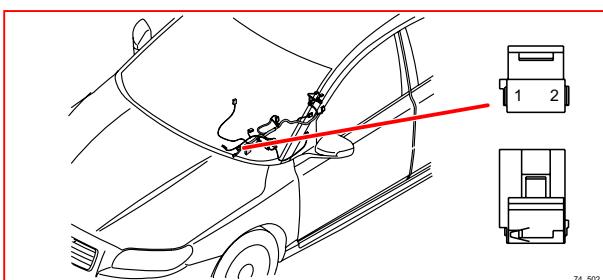


74/507 Connector

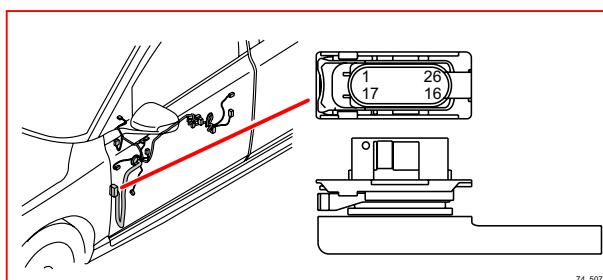


74/503 Connector

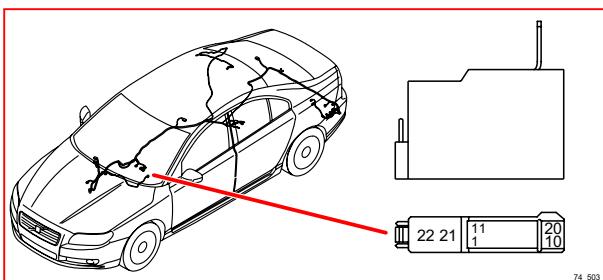


74/508 Connector

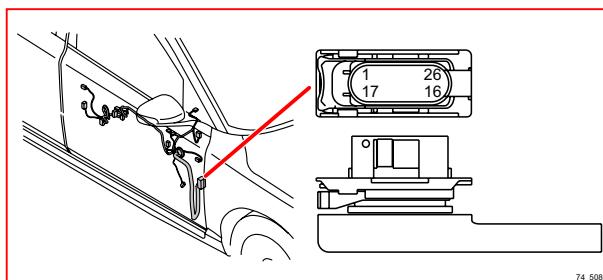

74/504 Connector

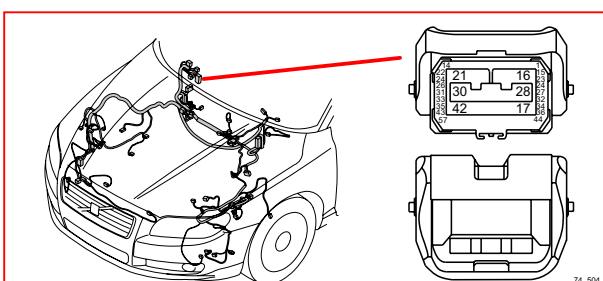


74/509 Connector

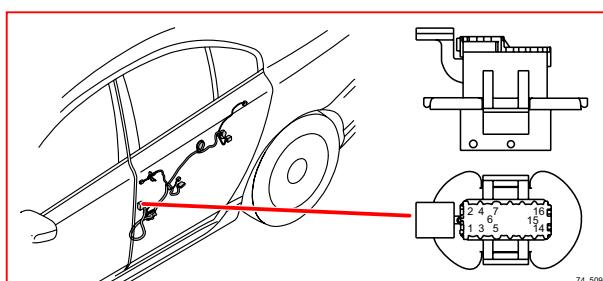


Component illustrations

74/510 - 74/524


74/510 Connector

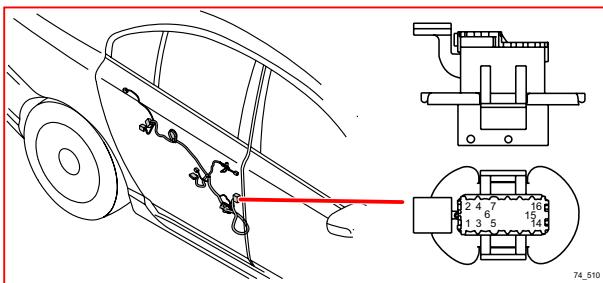


74/518 Connector

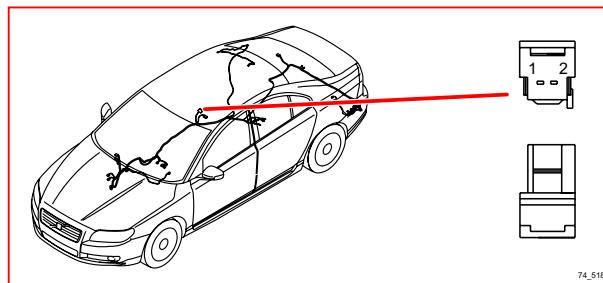


74/511 Connector

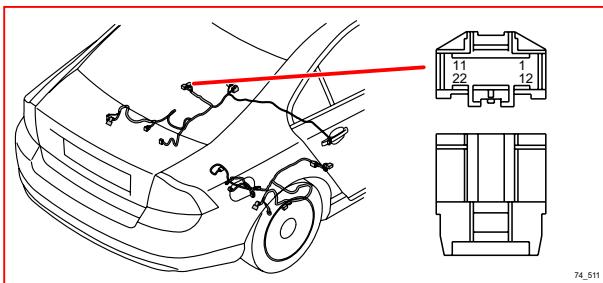


74/519 Connector

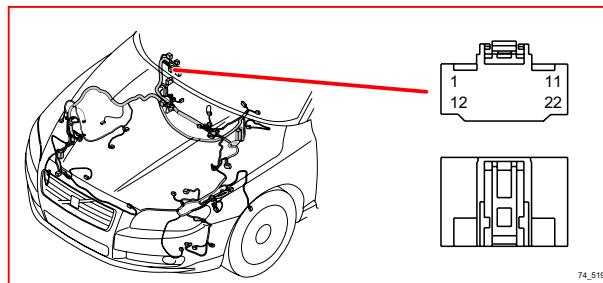


74/512 Connector

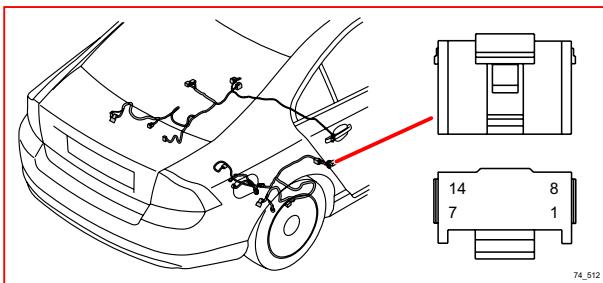


74/520 Connector

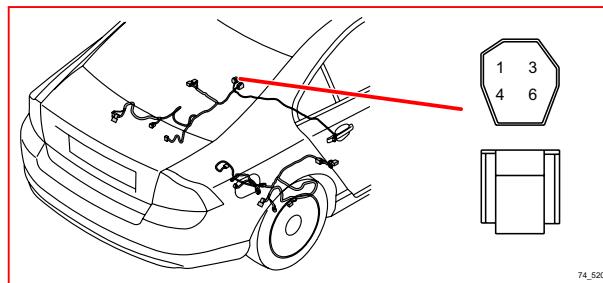


74/513 Connector

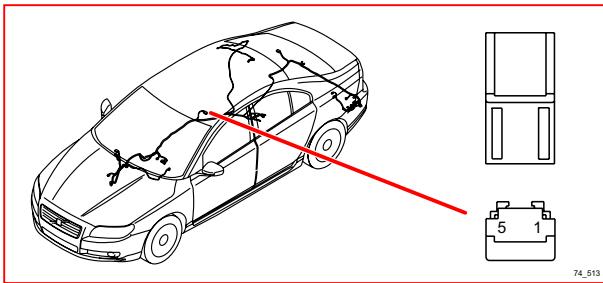


74/523 Connector

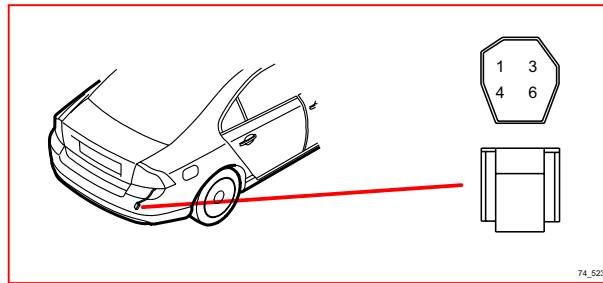

74/514 Connector

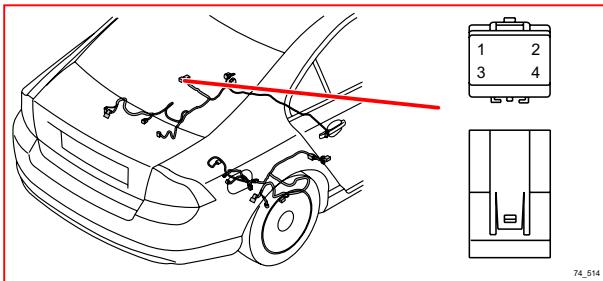


74/524 Connector

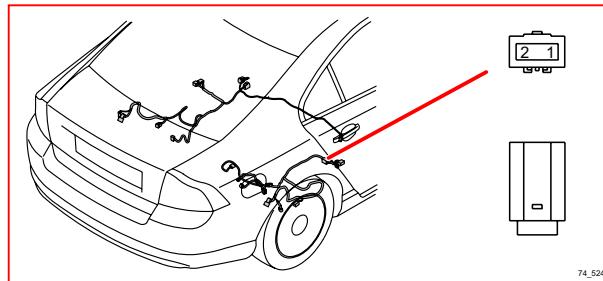


Component illustrations

74/525 - 74X/414


74/525 Connector

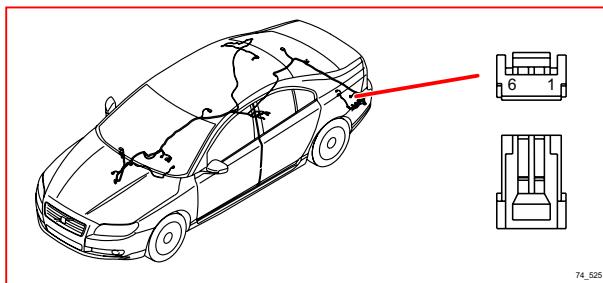


74/701 Connector

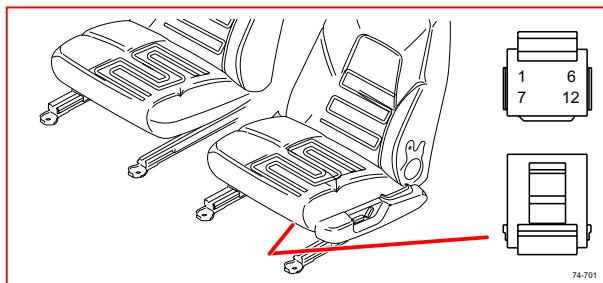


74/529 Connector

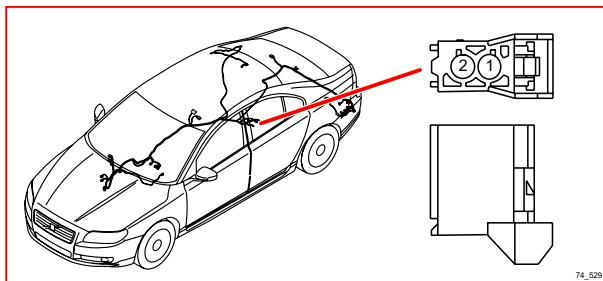


74/702 Connector

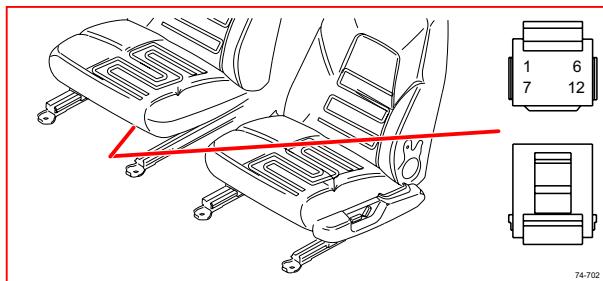


74/601 Connector

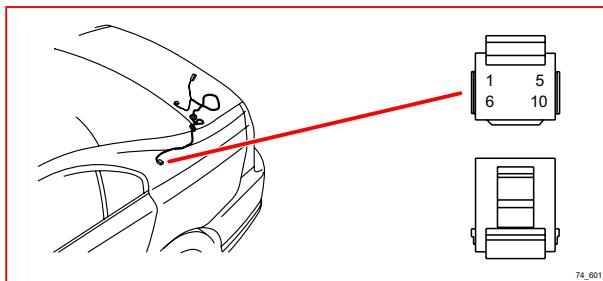


F/no. Fuses

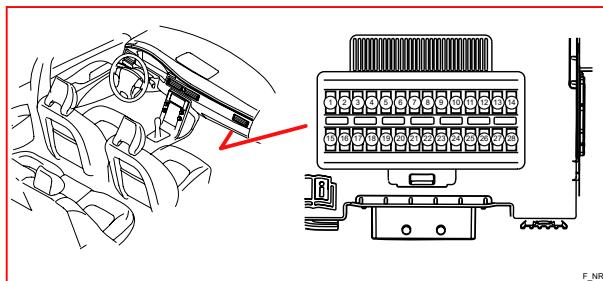


74/602 Connector

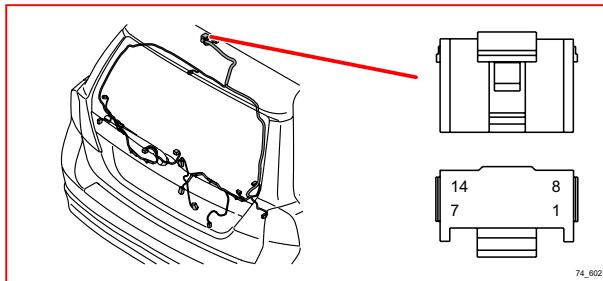

PF/no. Main fuse at battery

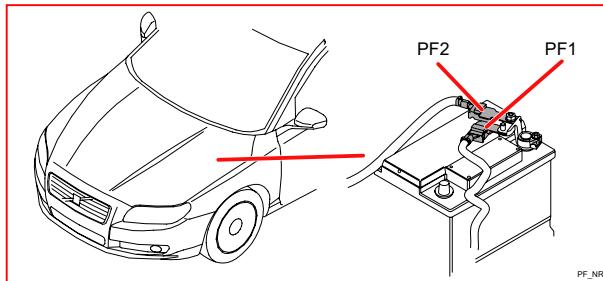

74/603 Connector

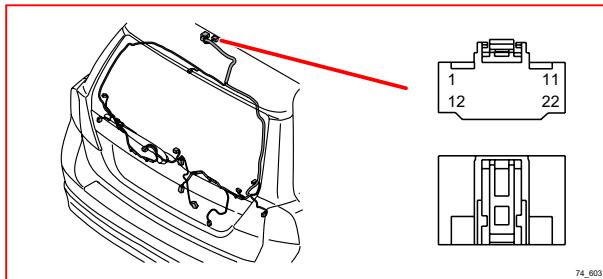

- 4X/110 Connector, original car interface
- 9X/1 Connector, original car interface
- 10X/125 Connector, original car interface
- 10X/126 Connector, original car interface
- 16X/1 Connector, original car interface
- 17X/19 Connector, original car interface
- 74X/9 Connector, original car interface
- 74X/401 Connector, original car interface
- 74X/402 Connector, original car interface
- 74X/414 Connector, original car interface

Index 1:2

12V outlet	109
A	
Abbreviations	7
Accessories 110,.....	111, 112, 113, 114, 115, 116, 127, 130, 131, 132, 171
Accessory USB unit	116
Active headlights	90
Additional electrical equipment, Group 36	93
Alternator and voltage regulator, Group 32	68
Anti-theft alarm	104
Audio	122
Audio Premium	119
Automatic anti-dazzle rearview mirror	173
Automatic transmission	134
Auxiliary lights	92

B

Beam length adjustment, automatic (Bi-Xenon)	73
Beam length adjustment, manual	72
Blind spot information system	155, 156
Bluetooth Handsfree	127
Bluetooth phone system	126
Brake control system & DSTC	137
Brake light	80, 81
Brake system, Group 59	137
Branching points	209

C

Cable harness routing in vehicle	225
Cellular phone	124
Central electronic module	38
Central locking, front doors	140, 141
Central locking, fuel filler flap	145
Central locking, rear doors	142
Central locking, trunk lid	143, 144
Climate control system	166, 168
Climate control system PTC elements	165
Climate control system, Group 87	165
Collision warning with brake servo	106
Color abbreviations	7
Component illustrations	245
Connectors	178
Control modules	36
Cooling fan	62, 63, 64
Cooling system, Group 26	62
Countries/Markets, abbreviations	7
Cruise control	65
Cruise control, 8 Cyl.	67
Cruise control, Diesel	66

D

Dashboard harness	229, 230
Data communication high speed CAN	41
Data communication LIN	44
Data communication MOST	46
Diagnostics system	108
Differential Electronic Module (DEM)	135
Direction indicator	94, 95, 96, 97
Doors and openings, Group 83	140
Driver information module	118

E

Electrical distribution overview	10
Electrically adjustable head restraint	176
Electrically heated rear seat	164

Electronic parking brake	136
Electronic power steering	138
Emission control 5 Cyl. 2.5l Turbo	59
Emission control, 6 cyl.	60
Emission control, 8 cyl.	61
Engine controls, Group 27	65
Engine harness 5 cyl.	225
Engine harness 6 cyl.	225
Engine harness 6 cyl. Turbo	226
Engine harness 8 cyl.	226
Engine harness, Diesel	227
Engine management system 5 Cyl. 2.4l Diesel	56
Engine management system 5 Cyl. 2.5l Turbo	48
Engine management system, 6 cyl.	50
Engine management system, 6-cyl. Turbo	52
Engine management system, 8 cyl.	54
Exterior decorative elements etc., Group 84	151

F

Fog lights	78, 79
Follow-me-home-lighting	84, 85
Four-C	139
Front door power windows	147, 148
Fuel system, Group 23	48
Fuses	12
Fuses at the battery	22
Fuses in cargo compartment distribution box	19, 20, 21
Fuses in Central Electronic Module (CEM)	17, 18
Fuses in engine compartment distribution box	12
Fuses in engine compartment electrical center	13, 14, 15, 16

G

Ground connections, overview	28
Group number, abbreviations	7

H

Harness Ceiling	239
Harness center console	240
Harness engine compartment	228
Harness floor S80	231, 232
Harness floor V70	233, 234
Harness front door	241
Harness Infotainment S80	235, 236
Harness Infotainment V70	237, 238
Harness rear door	242
Harness trunk lid/tailgate	243
Harness tunnel	240
Harnesses rear axle	244
Hazard warning flashers	94, 95, 96, 97
Heated door mirrors	153, 154
Heated power front seats with fan	162
Heated power front seats without fan	163
High and low beam	70
High and low beam (Bi-Xenon)	71
High-pressure headlight washer	99
Horn	101
How to use the wiring diagrams	8

I

Ignition switch symbols	7
Instruments, Group 38	117
Interior equipment, Group 85	158
Interior lighting, LHD	86
Interior lighting, RHD	88
Internal equipment, Group 88	173

Index 2:2

K

Keyless vehicle (KVM) 102

L

Lighting in sill moldings 91

Lighting, Group 35 70

List of symbols 9

M

M66 transmission 133

Memory function driver's seat 158, 159

Midspeed CAN data communication 42, 43

MOST 46

Multimedia 128

N

Navigation system, portable 132

O

Other, abbreviations 7

Other, Group 39 119

Overview of control module designations 37

Overview of control module locations 36

P

Parking assistance 105

Parking brake, Group 55 136

Parking camera 131

Parking heater, auxiliary heater 170

Parking heater, remote start 171

Power door mirrors 151, 152

Power driver's seat with memory function 158, 159

Power passenger seat 160

Power passenger seat, RHD 161

Power sunroof 150

Power supply 68

PTC element 165

R

Rain sensor 93

Rear door power windows 149

Rear seat entertainment 129

Rear window defroster 157

Refrigeration box rear seat 172

Relays 23

Relays in the Central Electronic Module (CEM) 27

Relays in the engine compartment electrical

center 24, 25

Remote garage door opener 177

Reversing lights 82, 83

Running/parking lights 74, 75

Running/parking lights, (Bi-Xenon) 76, 77

S

Satellite radio 130

Seat belt reminder 117

Shock absorbers, Group 76 139

Signal receiver, central locking 146

SRS 174

Starting system 69

Starting system, Group 33 69

Steering Wheel Module (SWM) 47

Steering, Group 64 138

Supplemental Restraint System (SRS) 174

T

Table of Contents 3

Tail lights 74, 75

Tail lights (Bi-Xenon) 76, 77

Tire pressure warning (TPMS) 107

Tow hitch cable harness, 13-pin 114, 115

Tow hitch cable harness, 4-pin 110, 111

Tow hitch cable harness, 7-pin 112, 113

Traffic information 128

Transmission, Group 43 133

W

Windshield wiper/washer 98

Wiper/washer rear window 100

Wiring and fuses, Group 37 108

List of components 1:7

1/1	Battery	3/117	Switch unit, dome light
2/16	Rear window wiper relay, V70	3/126	Driver's Door Module (DDM)
2/17	Relay, horn	3/127	Passenger Door Module (PDM)
2/22	Relay, climate control system	3/128	Left rear Door Module (LDM)
2/31	Relay, 15-feed	3/129	Right rear Door Module (RDM)
2/32	Main relay, engine management system	3/130	Steering Wheel Module (SWM)
2/35	Starter motor relay	3/131	Steering wheel switch right (SWSR)
2/64	Auxiliary light relay, accessory	3/132	Start Control Unit (SCU)
2/75	Rear adjustable head restraint relay, V70	3/135	RTI switch
2/75	Rear adjustable head restraint relay, S80	3/156	Gear Selector Module (GSM)
2/82	Relay, rear window defroster, V70	3/157	Switch, passenger side airbag
2/82	Relay, rear window defroster, S80	3/173	Switch, trunk lid private lock
2/88	Relay, 15-feed rear, V70	3/176	Switch, front door power window
2/88	Relay, 15-feed rear, S80	3/217	Contact, LH rear belt buckle
2/141	Refrigeration box relay	3/218	Contact, center rear belt buckle
2/193	Relay, comfort functions	3/219	Contact, LH right belt buckle
2/239	Relay, coolant pump, 8 cyl.	3/225	Switch unit, Continuously Controlled Damping (CCD)
3/4	Steering wheel switch left (SWSL)	3/255	Position sensor, driver's seat
3/6	Hazard warning flasher switch	3/256	Position sensor, passenger seat
3/8	Switch, rear window/door mirror defroster	3/267	Switch unit, telematics
3/9	Brake light contact	3/271	Contact, immobilizer, clutch pedal
3/10	Reversing light contact	3/272	Switch, parking brake
3/19	Power window switch, left rear door	3/273	Lock contact, LH front door
3/21	Power window switch, right rear door	3/274	Lock contact, RH front door
3/25	Power sunroof switch	3/275	Lock contact, LH rear door
3/26	Switch unit, power driver's seat	3/276	Lock contact, RH rear door
3/27	Switch unit, power passenger seat	3/281	Infotainment Control Module (ICM)
3/35	Trunk handle switch, V70	3/282	Switch indicator 1st gear
3/35	Trunk handle switch, S80	3/284	Diagnostic contact, brake light
3/37	Horn contact	3/291	Trunk lid/tailgate closing switch, V70
3/47	Parking brake contact	3/293	Handsfree control panel cellular phone
3/60	Switch, auxiliary lights	4/6	Climate Control Module (CCM)
3/62	Hood alarm contact	4/7	Combustion Preheater Module (CPM)
3/65	Switch, heated rear seat	4/9	Supplemental restraint system module (SRS)
3/78	Lock unit, tailgate V70	4/16	Brake Control Module (BCM)
3/80	Switch, central locking system, driver's door	4/28	Transmission Control Module (TCM)
3/82	Switch, central locking system, passenger door	4/31	Fan control module
3/83	Switch, passenger door power window	4/33	Sunroof module
3/93	Contact, driver's seat belt buckle	4/46	Engine Control Module (ECM), 5 cyl.
3/94	Contact, passenger seat belt buckle	4/46	Engine Control Module (ECM), 6 cyl.
3/111	Light Switch Module (LSM)	4/46	Engine Control Module (ECM), 8 cyl.
3/112	Climate control system	4/46	Engine Control Module (ECM), diesel
3/113	Rear adjustable head restraint relay		

List of components 2:7

4/52	Power Seat Module (PSM)	6/36	Lock motor, central locking, LH front door
4/56	Central Electronic Module (CEM)	6/37	Lock motor, fuel filler cover
4/56:C1	Central Electronic Module (CEM)	6/38	Left-hand headlight level adjustment motor
4/56:C2	Central Electronic Module (CEM)	6/39	Right-hand headlight level adjustment motor
4/56:C3	Central Electronic Module (CEM)	6/48	Damper Motor Module (DMM), recirculation
4/56:C4	Central Electronic Module (CEM)	6/55	Lock motor, central locking, RH front door
4/56:C5	Central Electronic Module (CEM)	6/56	Lock motor, central locking, RH rear door
4/68	Steering Wheel Angle Sensor Module (SAS)	6/57	Lock motor, central locking, LH rear door
4/71	Cooling fan control module	6/58	Motor, front driver's door power window
4/76	Remote control unit for garage door opener	6/59	Motor, rear left power window
4/80	Forward Sensing Module (FSM)	6/60	Motor, front passenger door power window
4/82	Differential Electronic Module (DEM)	6/61	Motor, rear right power window
4/83	Fuel pump control module	6/62	Power door mirror, left
4/84	Suspension Module (SUM)	6/63	Power door mirror, right
4/86	Parking Assistance Module (PAM)	6/64	Passenger seat motor, backrest angle
4/93	Keyless Vehicle Module (KVM)	6/65	Passenger seat motor, up/down front edge
4/99	Electronic power steering control module	6/66	Passenger seat motor, up/down rear edge
4/102	Steering Column Lock module (SCL)	6/67	Pump, fuel leakage control
4/106	Control module parking heater remote start	6/71	Valve, speed-dependent power steering
4/109	Glow plug control module	6/73	Coolant pump
4/110	Trailer Module (TRM)	6/95	Damper Motor Module (DMM), temperature, left side
4/115	Parking Brake Module (PBM)	6/96	Damper Motor Module (DMM), temperature, right side
4/116	Power Operated Tailgate Module (POT), V70	6/102	Damper Motor Module (DMM), defroster
4/118	Headlamp Control Module (HCM)	6/103	Damper Motor Module (DMM), floor/ventilation
4/119	Remote Keyless Entry (RKE)	6/104	High pressure headlight washer motor
4/119.2	Remote Receiver Module (RRX)	6/114	Vacuum pump
4/120	Parking Assistance Camera module (PAC)	6/118	Regulator motor, swirl throttle
4/121	Cooling fan control module 2	6/120	Electronic throttle actuator, 5 cyl.
4/124	Accessory USB unit (AUU)	6/120	Electronic throttle actuator, 6 cyl.
5/1	Driver Information Module (DIM)	6/120	Electronic throttle actuator, 8 cyl.
6/1	Wiper Motor Module (WMM)	6/120	Electronic throttle actuator, diesel
6/8	Lock motor central locking, trunk lid/tailgate, S80	6/127	Washer motor
6/16	Driver seat motor, backrest angle	6/139	Upper actuating motor, intake manifold
6/17	Driver seat motor, up/down front edge	6/140	Lower actuating motor, intake manifold
6/18	Driver seat motor, up/down rear edge	6/143	Regulator motor, turbo
6/19	Driver seat motor, forward/backward	6/144	Telescopic nozzle, left
6/20	Passenger seat motor, forward/backward	6/145	Telescopic nozzle, right
6/25	Starter motor	6/146	Lock motor, rear left brake disc
6/26	Alternator Control Module (ACM)	6/147	Lock motor, rear right brake disc
6/28	Motor, passenger compartment fan	6/148	Hydraulic pump trunk lid/tailgate operation, V70
6/32	Rear window wiper motor, V70	6/149	Tailgate closing motor, V70
6/33	Fuel pump		
6/35	Fuel pump, auxiliary heater		

List of components 3:7

7/4	Brake fluid level sensor	7/115	Side impact sensor, left B-post
7/5	Washer fluid level sensor	7/116	Side impact sensor, right B-post
7/6	Oil pressure sensor	7/118	Height sensor, suspension, front left
7/8	Pressure sensor, climate control system	7/119	Height sensor, suspension, front right
7/10	Interior temperature sensor	7/120	Height sensor, suspension, rear left
7/12	Solar sensor, twilight sensor and indicator alarm	7/121	Height sensor, suspension, rear right
7/15	Front heated oxygen sensor, 5 cyl.	7/123	Clutch pedal sensor
7/15	Front oxygen sensor, bank 1, 6 Cyl.	7/124	Brake pedal sensor
7/15	Front oxygen sensor, bank 2, 8 cyl.	7/130	Fuel level sensor, ejector side
7/15	Front heated oxygen sensor, diesel	7/131-	
7/16	Coolant temperature sensor	7/138	7/134 Rear parking assistance sensor
7/17	Mass air flow sensor (MAF)	7/143	Exhaust pressure sensor
7/23	Rear knock sensor	7/149	Fuel level sensor, pump side
7/23	Rear knock sensor, 8 cyl.	7/154	Rain Sensor Module (RSM)
7/24	Front knock sensor	7/156	Fuel temperature sensor
7/24	Front knock sensor, 8 cyl.	7/159	Pressure and temperature sensor, fuel
7/25	Impulse sensor, 5 Cyl. & Diesel	7/160	Air Quality Sensor (AQS)
7/25	Impulse sensor, 6 cyl.	7/162	Brake vacuum sensor
7/25	Impulse sensor, 8 cyl.	7/164	Pressure sensor, fuel line
7/31	Left-hand front ABS sensor	7/165	Body Sensor Cluster Stability Sensor (BSC)
7/32	Right-hand front ABS sensor	7/165	Pressure and temperature sensor, intake manifold, 5 Cyl.
7/35	Oil level sensor	7/165	Pressure and temperature sensor, intake manifold, Diesel
7/41	Temperature sensor, evaporator	7/165	Pressure and temperature sensor, intake manifold, 6 Cyl.
7/51	Accelerator pedal sensor	7/166	Oil level sensor, 5 cyl.
7/56	Left-hand rear ABS sensor	7/166	Oil level sensor, 6 cyl.
7/57	Right-hand rear ABS sensor	7/166	Oil level sensor, diesel
7/61	Input speed sensor	7/172	Camshaft position sensor, intake side, 5 cyl.
7/62	Output speed sensor	7/172	Camshaft position sensor, intake side, 6 cyl.
7/69	Outside temperature sensor	7/172	Intake camshaft position sensor, bank 2, 8 cyl.
7/73	Coolant level sensor	7/173	Camshaft position sensor, exhaust side, 5 Cyl.
7/74	Fluid temperature sensor, automatic transmission	7/173	Camshaft position sensor, exhaust side, 6 Cyl.
7/81	Pressure sensor, intake manifold, 6 cyl.	7/173	Exhaust camshaft position sensor, exhaust bank 2, 8 Cyl.
7/81	Pressure sensor, intake manifold, 8 cyl.	7/173	Camshaft position sensor, exhaust side, Diesel
7/82	Rear oxygen sensor, bank 1, 6 cyl.	7/175	Occupant weight sensor, seat belt reminder
7/82	Front oxygen sensor, bank 1, 8 cyl.	7/178	Front impact sensor, right
7/87	Acceleration sensor, Four-C, front left	7/179	Front impact sensor, left
7/88	Acceleration sensor, Four-C, front right	7/188	Camshaft position sensor, intake bank 1, 8 Cyl.
7/89	Acceleration sensor, Four-C, rear left	7/189	Camshaft position sensor, exhaust bank 1, 8 Cyl.
7/91	Steering angle sensor	7/190	Temperature sensor catalytic converter
7/93	Occupant Weight Sensor (OWS)	7/191	Temperature sensor particle filter
7/100	Inclination Sensor Module (ISM)	7/194	Belt retractor sensor, driver
7/103	Rear heated oxygen sensor, 5 cyl.	7/195	Belt retractor sensor, passenger
7/103	Front oxygen sensor, bank 2, 6 Cyl.	7/199	Ultrasonic sensor (IMS)
7/103	Rear oxygen sensor, bank 2, 8 cyl.		
7/104	Rear oxygen sensor, bank 2, 6 cyl.		
7/104	Rear oxygen sensor, bank 1, 8 cyl.		
7/108	Left-hand rear side impact sensor		
7/109	Right-hand rear side impact sensor		
7/110	Temperature sensor, driver's seat		
7/111	Temperature sensor, passenger seat		
7/112	Seat temperature sensor, LH rear		
7/113	Seat temperature sensor, RH rear		

List of components 4:7

7/203	Forward-aimed radar (FLR)	8/84	Switch, vacuum pump
7/204-		8/92	Lap belt tensioner, driver
7/208	7/207Front parking assistance sensor	8/98	Fuel pressure control valve
7/209	Side impact sensor, left front door	8/99	Steering column igniter
7/210-	Side impact sensor, right front door	8/107	Variable intake valve
7/213	Tire pressure sensor	8/111	Control valve, fuel flow
7/214	Heartbeat sensor	8/113	Bypass valve, EGR cooling
7/220	Load sensor hydraulic pump	8/115-	
7/227A	Tailgate pinch sensor, right	8/116	Injector, 8 cyl.
7/227B	Tailgate pinch sensor, left	8/117	Solenoid, variable valve timing, intake, 5 Cyl.
8/3	Electromagnetic clutch, climate control system	8/117	Solenoid, variable valve timing, intake, 6 Cyl.
8/6-11	Injectors	8/117	Solenoid, variable valve timing, intake, bank 1, 8 cyl.
8/18	EVAP valve, 5 cyl.	8/118	Solenoid, variable valve timing, exhaust, bank 1, 8 cyl.
8/18	EVAP valve, 6 cyl.	8/120	EGR valve
8/18	EVAP valve, 8 cyl.	8/124	Passenger side airbag igniter, stage 3
8/19	Solenoid, variable valve timing, intake, bank 2, 8 Cyl.	8/125	Solenoid front cam profile
8/20	Shock absorber, Four-C, front left	8/126	Solenoid rear cam profile
8/21	Shock absorber, Four-C, front right	8/128	Belt force limiter, driver
8/22	Shock absorber, Four-C, rear left	8/129	Belt force limiter, passenger
8/23	Shock absorber, Four-C, rear right	8/134	Solenoid, reverse interlock, manual
8/28	Turbo control valve	8/142	Linear pressure solenoid SLB1
8/30	Driver's side airbag igniter, stage 1	8/143	Linear pressure solenoid SLC1
8/31	Passenger side airbag igniter, stage 1	8/144	Linear pressure solenoid SLC2
8/32	Passenger side airbag igniter, stage 2	8/145	Linear pressure solenoid SLC3
8/33	Driver's belt tensioner igniter	9/1	Front 12V outlet
8/34	Passenger belt tensioner igniter	9/2	Rear window defroster
8/36	Shift lock solenoid	9/8	Heating element, LH rear seat cushion
8/37	Automatic transmission	9/9	Heating element, LH rear seat backrest
8/38	Shift solenoid 1	9/10	Heating element, RH rear seat cushion
8/39	Shift solenoid 2	9/11	Heating element, RH rear seat backrest
8/40	Lock-up solenoid	9/12	Seat Heating Module (SHM), driver's side
8/46	Archive unit, DSTC	9/13	Seat Heating Module (SHM), passenger side
8/48	Automatic anti-dazzle rearview mirror	9/14	Control module, rear left seat heater
8/51	Igniter side airbag front driver's seat	9/15	Control module, RH rear seat heater
8/52	Igniter side airbag front passenger seat	9/16	Heating element, driver's seat backrest
8/55	Rear left belt tensioner igniter	9/17	Heating element, passenger seat backrest
8/56	Rear right belt tensioner igniter	9/18	Heating element, driver's seat cushion
8/59	Rear left head restraint solenoid	9/19	Heating element, passenger seat cushion
8/60	Rear right head restraint solenoid	9/24	Refrigeration box
8/61	Driver's side airbag igniter, stage 2	9/25	Rear 12V outlet
8/62	Belt tensioner igniter, center rear seat	9/30	Auxiliary heater
8/66	Left-hand inflatable curtain igniter	9/32	PTC resistor, crankcase ventilation
8/67	Right-hand inflatable curtain igniter	9/38	Heated fuel filter
8/68	Relief valve	9/42	PTC element
8/71	Throttle solenoid	9/43	Heated windshield washer nozzle, left
8/81	Solenoid, variable valve timing, exhaust, 5 Cyl.	9/44	Heated windshield washer nozzle, right
8/81	Solenoid, variable valve timing, exhaust, bank 2, 8 cyl.	9/47	PTC resistor crankcase ventilation in hose

List of components 5:7

10/1	Left-hand front lamp housing	10/54	Direction indicator, left rear, V70
10/2	Right-hand front lamp housing	10/54	Direction indicator, rear left, S80
10/3	License plate lighting, V70	10/55	Reversing light left, V70
10/3	License plate lighting, S80	10/55	Reversing light left, S80
10/5	Front left fog light	10/64	Right-hand high beam
10/6	Front right fog light	10/65	Auxiliary light, front right
10/11	Front left running/parking light	10/66	Right-hand low beam
10/12	Front right running/parking light	10/68	Left-hand high beam
10/13	Front left direction indicator	10/69	Auxiliary light, front left
10/14	Front right direction indicator	10/70	Left-hand low beam
10/15	Direction indicator rear-view mirror left	10/72	Front ashtray lighting
10/16	Direction indicator rear-view mirror, right	10/114	Left-hand vanity mirror lighting
10/17	Lamp housing, rear right V70	10/115	Right-hand vanity mirror lighting
10/17	Lamp housing, rear right, S80	10/125	Left-hand front courtesy lighting
10/18	Lamp housing, rear left, V70	10/126	Right-hand front courtesy lighting
10/18	Lamp housing, rear left, S80	10/127	Lighting, cargo compartment, left-hand side, V70
10/19	Auxiliary brake light V70	10/127	Lighting, cargo compartment, left-hand side, S80
10/19	Auxiliary brake light, S80	10/128	Lighting, cargo compartment, right-hand side, V70
10/22	Ceiling light	10/128	Lighting, cargo compartment, right-hand side, S80
10/25	Ceiling light, cargo compartment, V70	10/148	Lighting, left front door mirror
10/29	Glove compartment lighting	10/149	Lighting, right front door mirror
10/43	Brake light right, V70	10/150	Rear reading light
10/43	Brake light right, S80	10/249	Sill lighting, front driver's side
10/44	Tail lamp 1 right, V70	10/250	Sill lighting, front passenger side
10/44	Tail lamp 1 right, S80	10/251	Sill lighting, rear driver's side, S80
10/45	Tail lamp 2 right, V70	10/252	Sill lighting, rear passenger side, S80
10/45	Tail lamp 2 right, S80	11A/no.	Main fuses in the engine compartment fuse box
10/46	Fog light, rear right, V70	11B/no.	Fuses in the engine compartment fuse box
10/46	Fog light, right rear, S80	11D/A	Fuses in cargo compartment fuse box
10/47	Direction indicator, rear right, V70	11D/B	Fuses in cargo compartment fuse box
10/47	Direction indicator, right rear, S80	11D/D	Fuses in cargo compartment fuse box
10/48	Reversing light, right, V70	15/31	Distribution box in engine compartment
10/48	Reversing light right, S80	15/32	Rear electrical center
10/50	Brake light, left, V70	15/33	Engine compartment cold zone
10/50	Brake light left, S80		
10/51	Tail lamp 1 left, V70		
10/51	Tail lamp 1 left, S80		
10/52	Tail lamp 2 left, V70		
10/52	Tail lamp 2 left, S80		
10/53	Fog light, left rear, V70		
10/53	Fog light, rear left, S80		

List of components 6:7

16/1	Integrated Audio Module (IAM)	20/12-13	Spark plug and ignition coil
16/3.1	Right-hand front door speaker	20/16	Capacitor
16/3.2	Right-hand front door speaker	20/22-26	Glow plug
16/4.1	Left-hand front door speaker	26/6	Converter/control module, sill moldings, driver's side
16/4.2	Left-hand front door speaker	26/7	Converter/control module, sill moldings, passenger side
16/5	Right-hand rear door speaker	27/2	Indicator, visual collision warning
16/6	Left-hand rear door speaker	27/3	Left Camera Module (LCM)
16/10	Horn 1	27/4	Right-hand Camera Module (RCM)
16/11	Horn 2	27/6	Camera
16/16	Window antenna amplifier	31/1	Ground connection, PTC
16/26	Center dashboard speaker	31/2	Ground connection, Left wheel housing
16/35	Siren Control Module (SCM)	31/3	Ground connection, Body battery
16/45	Navigation system portable	31/4	Ground connection, Engine
16/46	High Level Display Front module (HLDF)	31/6	Ground connection, Left bottom rail
16/47	Antenna GSM/GPS/RDAR	31/7	Ground connection, Left bottom rail
16/55	Left-hand front tweeter	31/10	Ground connection, Left bottom rail
16/56	Right-hand front tweeter	31/15	Ground connection, Right bottom rail
16/60	Phone Module (PHM)	31/47	Ground connection, Left rear bumper abutment
16/62	Hand unit, mobile phone	31/48	Ground connection, Right rear bumper abutment
16/79	Subwoofer Module (SUB), V70	31/65	Ground connection, Rear seat riser, left side
16/81A	Screen, LH head restraint	31/67	Ground connection, Rear seat riser, right side 1
16/81B	Screen, RH head restraint	31/68	Ground connection, Rear seat riser, right side 2
16/98	Microphone	31/83	Ground connection, Left bottom rail
16/105	Audio module (AUD)	31/84	Ground connection, Right bottom rail
16/108	Multimedia Module (MMM)	31/88	Ground connection, Engine ignition coils, 5 cyl.
16/109	DVD player/control module	31/88	Ground connection, Engine ignition coils, 6 cyl.
16/111	Rear headphone sockets	31/89	Ground connection, Engine ignition coils, 5 cyl.
16/123	Auxiliary equipment input (AUX)	31/89	Ground connection, Engine ignition coils, 6 cyl.
16/123.2	Auxiliary equipment input (AUX)	31/90	Ground connection, Engine ignition coils, 8 cyl.
16/123.3	RSE-AUX input	31/93	Ground connection, Left wheel housing 2
16/127	Microphone, mobile phone handsfree	31/94	Ground connection, Right wheel housing 2
16/132	Antenna door lock trunk lid/tailgate, V70	31/95	Ground connection, Left wheel housing
16/132	Antenna, door lock, bumper, S80	31/96	Ground connection, Right wheel housing 3
16/133	Antenna, door lock, cargo compartment	31/100	Ground connection, Engine ignition coils, 8 cyl.
16/134	Antenna, door lock, passenger compartment 2	31/XX4	Ground connection, Engine-Body
16/135	Antenna, door lock, passenger compartment 3	31/XX5	Ground connection, ECM
16/136	LH rear door tweeter	31/XX10	Ground connection, Left wheel housing 1
16/137	RH rear door tweeter	31/XX14	Ground connection, Left wheel housing 3 (ABS)
16/138	Right-hand rear window antenna	31/XX15	Ground connection, Right wheel housing
16/140	SIM card reader	31/AL	Ground connection, Auxiliary lights
16/141	Interference filter, rear window, LH	31/INFOT	Ground connection, Infotainment
16/145	Remote digital audio receiver (RDAR)	31/TRM	Ground connection, Accessories
16/147	Bluetooth Phone Module (BPM)		
16/159	Control module, mobile phone handsfree		
17/13	Data link connector		
17/19	12V outlet, cargo compartment, V70		
17/19	12V outlet, cargo compartment, S80		
17/37	4-pin outlet, tow hitch cable harness		
17/38	7-pin outlet, tow hitch cable harness		
17/39	13-pin outlet, tow hitch cable harness		
17/42	USB-port		
18/4	Contact reel		
20/3-8	Spark plug and ignition coil		

List of components 7:7

74/9	Connector	74/511	Connector
74/30	Connector	74/512	Connector
74/31	Connector	74/513	Connector
74/53	Connector	74/514	Connector
74/99	Connector	74/518	Connector
74/133	Connector	74/519	Connector
74/276	Connector	74/520	Connector
74/277	Connector	74/523	Connector
74/301	Connector	74/524	Connector
74/303	Connector	74/525	Connector
74/304	Connector	74/529	Connector
74/308	Connector	74/601	Connector
74/401	Connector	74/602	Connector
74/402	Connector	74/603	Connector
74/403	Connector	74/701	Connector
74/404	Connector	74/702	Connector
74/405	Connector	F/no.	Fuses
74/406	Connector	PF/no.	Main fuse at battery
74/407	Connector	4X/110	Connector, original car interface
74/407B	Connector	9X/1	Connector, original car interface
74/408	Connector	10X/125	Connector, original car interface
74/409	Connector	16X/1	Connector, original car interface
74/411	Connector	17X/19	Connector, original car interface
74/412	Connector	74X/9	Connector, original car interface
74/413	Connector	74X/401	Connector, original car interface
74/414	Connector	74X/402	Connector, original car interface
74/501	Connector	74X/414	Connector, original car interface
74/502	Connector		
74/503	Connector		
74/504	Connector		
74/504B	Connector		
74/505	Connector		
74/507	Connector		
74/508	Connector		
74/509	Connector		
74/510	Connector		